



## CLI Commands

---

This chapter provides detailed information for the following types of CLI commands for the Cisco 4700 Series Application Control Engine (ACE) appliance:

- Commands that you can enter after you log in to the ACE.
- Configuration mode commands that allow you to access configuration mode and its subset of modes after you log in to the ACE.

The description of each command includes the following:

- The syntax of the command
- Any related commands, when appropriate