

CSR Parameters Configuration Mode Commands

CSR parameters configuration mode commands allow you to define the distinguished name attributes for a Certificate Signing Request (CSR) parameter set. The ACE applies the CSR parameter set attributes during the CSR-generating process. The distinguished name attributes provide the Certificate Authority (CA) with the information that it needs to authenticate your site. The CA then applies the information that you provide in the CSR parameter set to your Secure Sockets Layer (SSL) certificate. Creating a CSR parameter set allows you to generate multiple CSRs with the same distinguished name attributes.

To create a new CSR parameter set (or modify an existing CSR parameter set) and access the CSR parameters configuration mode, use the **crypto csr-params** command. The CLI prompt changes to (config-csr-params). Use the **no** form of this command to remove an existing CSR parameter set.

```
crypto csr-params csr_param_name
```

```
no crypto csr-params csr_param_name
```

Syntax Description

csr_param_name Name that designates a CSR parameter set. Enter the CSR parameter set name as a alphanumeric string from 1 to 64 characters.

Command Modes

Configuration mode
Admin and user contexts

Command History

Release	Modification
A1(7)	This command was introduced.

Usage Guidelines

The commands in this mode require the SSL feature in your user role. For details about role-based access control (RBAC) and user roles, see the *Cisco 4700 Series Application Control Engine Appliance Virtualization Configuration Guide*.

When you specify a CSR parameter set, you define the following distinguished name attributes:

- Common name—See the **(config-csr-params) common-name** command. This distinguished name attribute is required.
- Country name—See the **(config-csr-params) country-name** command. This distinguished name attribute is required.
- E-mail address—See the **(config-csr-params) email** command.
- Locality—See the **(config-csr-params) locality** command.
- Organization name (certificate subject)—See the **(config-csr-params) organization-name** command.
- Organization unit—See the **(config-csr-params) organization-unit** command.
- Serial number—See the **(config-csr-params) serial-number** command. This distinguished name attribute is required.
- State—See the **(config-csr-params) state** command. This distinguished name attribute is required.

If you do not define the required distinguished name attributes, the ACE displays an error message when you attempt to generate a CSR using the CSR parameter set.

You can create up to eight CSR parameter sets per context.

To generate a Certificate Signing Request (CSR) file using the CSR parameter set, use the **crypto generate csr** command in the Exec mode.

Examples

To create the CSR parameter set CSR_PARAMS_1, enter:

```
host1/Admin(config)# crypto csr-params CSR_PARAMS_1  
host1/Admin(config-csr-params)
```

Related Commands

crypto generate csr
(config-csr-params) common-name
(config-csr-params) country-name
(config-csr-params) email
(config-csr-params) locality
(config-csr-params) organization-name
(config-csr-params) organization-unit
(config-csr-params) serial-number
(config-csr-params) state

(config-csr-params) common-name

To define the common name parameter in the Certificate Signing Request (CSR) parameter set, use the **common-name** command. Use the **no** form of the command to delete an existing common name from the CSR parameter set.

common-name *name*

no common-name

Syntax Description

<i>name</i>	Name that designates the common name in a CSR parameter set. Enter the common name as an alphanumeric string from 1 to 64 characters.
-------------	---------------------------------------------------------------------------------------------------------------------------------------

Command Modes

CSR parameters configuration mode

Command History

Release	Modification
A1(7)	This command was introduced.

Usage Guidelines

The common name is a required distinguished name attribute. If you do not configure this attribute (and all other required attributes), the ACE displays an error message when you try to generate a CSR using the CSR parameter set.

The common name should be the domain name or individual hostname of the Secure Sockets Layer (SSL) site.

Examples

To specify the common name WWW.ABC123.COM, enter:

```
host1/Admin(config-csr-params) # common-name WWW.ABS123.COM
```

Related Commands

(config) [crypto csr-params](#)
 (config-csr-params) [country-name](#)
 (config-csr-params) [email](#)
 (config-csr-params) [locality](#)
 (config-csr-params) [organization-name](#)
 (config-csr-params) [organization-unit](#)
 (config-csr-params) [serial-number](#)
 (config-csr-params) [state](#)

(config-csr-params) country-name

To define the country name parameter in the Certificate Signing Request (CSR) parameter set, use the **country** command. Use the **no** form of the command to delete an existing country name from the CSR parameter set.

country *name*

no country

Syntax Description

<i>name</i>	Name of the country where the Secure Sockets Layer (SSL) site resides. Enter the country name as an alphanumeric string from 1 to 2 characters.
-------------	-------------------------------------------------------------------------------------------------------------------------------------------------

Command Modes

CSR parameters configuration mode

Command History

Release	Modification
A1(7)	This command was introduced.

Usage Guidelines

The country name is a required distinguished name attribute. If you do not configure this attribute (and all other required attributes), the ACE displays an error message when you try to generate a CSR using the CSR parameter set.

Examples

To specify the country US (United States), enter:

```
host1/Admin(config-csr-params)# country-name US
```

Related Commands

- [\(config\) crypto csr-params](#)
- [\(config-csr-params\) common-name](#)
- [\(config-csr-params\) email](#)
- [\(config-csr-params\) locality](#)
- [\(config-csr-params\) organization-name](#)
- [\(config-csr-params\) organization-unit](#)
- [\(config-csr-params\) serial-number](#)
- [\(config-csr-params\) state](#)

(config-csr-params) email

To define the e-mail address parameter in the Certificate Signing Request (CSR) parameter set, use the **email** command. Use the **no** form of the command to delete an existing e-mail address from the CSR parameter set.

email *address*

no email

Syntax Description	<i>address</i>	Address that designates the site e-mail address in a CSR parameter set. Enter an unquoted text string with no spaces and a maximum of 40 alphanumeric characters.
---------------------------	----------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------

Command Modes	CSR parameters configuration mode
----------------------	-----------------------------------

Command History	Release	Modification
	A1(7)	This command was introduced.

Usage Guidelines	The e-mail address is an optional distinguished name attribute.
-------------------------	-----------------------------------------------------------------

Examples	To specify the e-mail address WEBADMIN@ABC123.COM, enter: <pre>host1/Admin(config-csr-params)# email WEBADMIN@ABC123.COM</pre>
-----------------	------------------------------------------------------------------------------------------------------------------------------------------

Related Commands	<p>(config) crypto csr-params</p> <p>(config-csr-params) common-name</p> <p>(config-csr-params) country-name</p> <p>(config-csr-params) locality</p> <p>(config-csr-params) organization-name</p> <p>(config-csr-params) organization-unit</p> <p>(config-csr-params) serial-number</p> <p>(config-csr-params) state</p>
-------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

(config-csr-params) locality

To define the locality name parameter in the Certificate Signing Request (CSR) parameter set, use the **locality** command. Use the **no** form of the command to delete an existing locality from the CSR parameter set.

locality *name*

no locality

Syntax Description

<i>name</i>	Name that designates the locality (a county, for example) in a CSR parameter set. Enter an unquoted text string with no spaces and a maximum of 40 alphanumeric characters.
-------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Command Modes

CSR parameters configuration mode

Command History

Release	Modification
A1(7)	This command was introduced.

Usage Guidelines

The locality name is an optional distinguished name attribute.

Examples

To specify the locality ATHENS, enter:

```
host1/Admin(config-csr-params)# locality ATHENS
```

Related Commands

- [\(config\) crypto csr-params](#)
- [\(config-csr-params\) common-name](#)
- [\(config-csr-params\) country-name](#)
- [\(config-csr-params\) email](#)
- [\(config-csr-params\) organization-name](#)
- [\(config-csr-params\) organization-unit](#)
- [\(config-csr-params\) serial-number](#)
- [\(config-csr-params\) state](#)

(config-csr-params) organization-name

To define the organization name parameter in the Certificate Signing Request (CSR) parameter set, use the **organization-name** command. Use the **no** form of the command to delete an existing organization name from the CSR parameter set.

organization-name *name*

no organization-name

Syntax Description

<i>name</i>	Name that designates the organization in a CSR parameter set. Enter the organization name as an alphanumeric string from 1 to 64 characters.
-------------	----------------------------------------------------------------------------------------------------------------------------------------------

Command Modes

CSR parameters configuration mode

Command History

Release	Modification
A1(7)	This command was introduced.

Usage Guidelines

The organization name is an optional distinguished name attribute.

Examples

To specify the organization ABC123 SYSTEMS INC, enter:

```
host1/Admin(config-csr-params) # organization-name ABC123 SYSTEMS INC
```

Related Commands

- [\(config\) crypto csr-params](#)
- [\(config-csr-params\) common-name](#)
- [\(config-csr-params\) country-name](#)
- [\(config-csr-params\) email](#)
- [\(config-csr-params\) locality](#)
- [\(config-csr-params\) organization-unit](#)
- [\(config-csr-params\) serial-number](#)
- [\(config-csr-params\) state](#)

(config-csr-params) organization-unit

To define the organization unit parameter in the Certificate Signing Request (CSR) parameter set, use the **organization-unit** command. Use the **no** form of the command to delete an existing organization unit from the CSR parameter set.

organization-unit *unit*

no organization-unit

Syntax Description

<i>unit</i>	Name that designates the unit (within an organization) in a CSR configuration file. Enter the organization unit as an alphanumeric string from 1 to 64 characters.
-------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------

Command Modes

CSR parameters configuration mode

Command History

Release	Modification
A1(7)	This command was introduced.

Usage Guidelines

The organization unit is an optional distinguished name attribute.

Examples

To specify the organization unit SSL ACCELERATOR, enter:

```
host1/Admin(config-csr-params)# organization-unit SSL ACCELERATOR
```

Related Commands

- [\(config\) crypto csr-params](#)
- [\(config-csr-params\) common-name](#)
- [\(config-csr-params\) country-name](#)
- [\(config-csr-params\) email](#)
- [\(config-csr-params\) locality](#)
- [\(config-csr-params\) organization-name](#)
- [\(config-csr-params\) serial-number](#)
- [\(config-csr-params\) state](#)

(config-csr-params) serial-number

To define the serial number parameter in the Certificate Signing Request (CSR) parameter set, use the **serial-number** command. Use the **no** form of the command to delete an existing serial number from the CSR parameter set.

serial-number *number*

no serial-number

Syntax Description

<i>number</i>	Number that designates the serial number in a CSR parameter set. Enter the serial number as an alphanumeric string from 1 to 16 characters.
---------------	---------------------------------------------------------------------------------------------------------------------------------------------

Command Modes

CSR parameters configuration mode

Command History

Release	Modification
A1(7)	This command was introduced.

Usage Guidelines

The serial number is a required distinguished name attribute. If you do not configure this attribute (and all other required attributes), the ACE displays an error message when you try to generate a CSR using the CSR parameter set.

The CA may choose to overwrite the serial number that you provide with its own serial number.

Examples

To specify the serial number 1001, enter:

```
(config-csr-params)# serial-number 1001
```

Related Commands

- [\(config\) crypto csr-params](#)
- [\(config-csr-params\) common-name](#)
- [\(config-csr-params\) country-name](#)
- [\(config-csr-params\) email](#)
- [\(config-csr-params\) locality](#)
- [\(config-csr-params\) organization-name](#)
- [\(config-csr-params\) organization-unit](#)
- [\(config-csr-params\) state](#)

(config-csr-params) state

To define the state name parameter in the Certificate Signing Request (CSR) parameter set, use the **state** command. Use the **no** form of the command to delete an existing state name from the CSR parameter set.

state *name*

no state

Syntax Description	<i>name</i>	Name that designates the state or province in a CSR configuration file. Enter an unquoted text string with no spaces and a maximum of 40 alphanumeric characters.
---------------------------	-------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------

Command Modes	CSR parameters configuration mode
----------------------	-----------------------------------

Command History	Release	Modification
	A1(7)	This command was introduced.

Usage Guidelines	The state name is a required distinguished name attribute. If you do not configure this attribute (and all other required attributes), the ACE displays an error message when you try to generate a CSR using the CSR parameter set.
-------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Examples	To specify the state GA (Georgia), enter: <pre>host1/Admin(config-csr-params)# state GA</pre>
-----------------	---------------------------------------------------------------------------------------------------------

Related Commands	<p>(config) crypto csr-params</p> <p>(config-csr-params) common-name</p> <p>(config-csr-params) country-name</p> <p>(config-csr-params) email</p> <p>(config-csr-params) locality</p> <p>(config-csr-params) organization-name</p> <p>(config-csr-params) organization-unit</p> <p>(config-csr-params) serial-number</p>
-------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------