

- A**
- Archive Server
    - copying media files 4-4
    - setting up 4-4
- B**
- Broadcast Server
    - connecting capture cards 5-10
    - setting up 4-5
- C**
- capture settings
    - high bit rate 5-6
    - low bit rate 5-8
    - medium bit rate 5-7
  - Cisco Connection Online (CCO) xi
  - Cisco documentation CD-ROM xii
  - Control Server
    - setting up 4-1
  - copying media files 4-4
  - customizing
    - the server configuration 3-1
  - customizing the network configuration 3-2
  - customizing the SNMP configuration 3-3
- D**
- Domain Name System (DNS) 3-2
- H**
- hardware specifications A-1
  - high bit rate capture settings 5-6
  - Hosts file, sample B-1
- I**
- installing the 3400 Series 2-2
  - IP/TV Viewer 6-1
    - network installation 6-1
    - setting up network installations 6-1
    - using 6-1
- L**
- live-capture programs, defining 5-5
  - low bit rate capture settings 5-8
- M**
- medium bit rate capture settings 5-7
- O**
- on-demand programs 6-1
  - on-demand programs, defining 5-2
  - optional expansion for storage 2-6
  - overview of Cisco IP/TV 3400 Series Servers 1-1

## **P**

proximity groups 1-3

## **R**

related documentation viii

removing SNMP Service 3-3

## **S**

safety warnings ix

sample network configuration 1-3

scheduled programs 6-1

scheduled programs, defining 5-4

server rebuild instructions C-1

setting date, time and time zone 3-1

SNMP 3-3

## **U**

Ultra Wide SCSI port 2-6

using IP/TV Viewer 6-1

## **W**

watching a sample program 6-1