

Global Configuration Mode Commands

Use global configuration mode for setting, viewing, and testing configuration of WAAS software features for the entire device. To enter this mode, enter the **configure** command from privileged EXEC mode. The prompt for global configuration mode consists of the hostname of the WAE followed by (config) and the pound sign (#). You must be in global configuration mode to enter global configuration commands.

```
WAE# configure
WAE(config)#
```

Commands entered in global configuration mode update the running configuration file as soon as they are entered. These changes are not saved into the startup configuration file until you enter the **copy running-config startup-config** EXEC mode command. Once the configuration is saved, it is maintained across WAE reboots.

You also can use global configuration mode to enter specific configuration modes. From global configuration mode you can enter the interface configuration mode, standard ACL configuration mode, or the extended ACL configuration mode.

To exit global configuration mode and return to privileged-level EXEC mode, use either the **exit** or **end** global configuration command:

```
WAE(config)# exit
WAE#
```

(config) aaa accounting

To configure AAA accounting on a WAAS device, use the **aaa accounting** global configuration command. To unconfigure AAA, use the **no** form of this command.

aaa accounting commands {0 | 15} default {start-stop | stop-only | wait-start} tacacs

no aaa accounting commands {0 | 15} default {start-stop | stop-only | wait-start} tacacs

aaa accounting exec default {start-stop | stop-only | wait-start} tacacs

no aaa accounting exec default {start-stop | stop-only | wait-start} tacacs

aaa accounting system default {start-stop | stop-only} tacacs

no aaa accounting system default {start-stop | stop-only} tacacs

Syntax Description

commands	Configures accounting for all commands at the specified privilege level.
0	Specifies user privilege level for a normal user.
15	Specifies user privilege level for an administrative user.
default	Sets AAA accounting to use the default accounting list.
start-stop	Sends a start accounting notice at the beginning of a process and a stop accounting notice at the end of a process. The start accounting record is sent in the background. The requested user process begins regardless of whether the start accounting notice was received by the accounting server.
stop-only	Sends a stop accounting notice at the end of the process requested by the user.
wait-start	Sends both a start and a stop accounting notice to the accounting server. However, the requested user service does not begin until the start accounting notice is acknowledged. The user cannot execute a CLI command or login until the user is on record. A stop accounting notice is also sent but does not need acknowledgement.
tacacs	Enables use of TACACS+ for accounting.
exec	Enables accounting for user EXEC processes (user shells). When enabled, the EXEC shell accounting reports EXEC terminal session (user shell) events and login and logout by an administrator to the EXEC shell.
system	Enables accounting for all system-level events not associated with users, such as reloads.

Defaults

AAA accounting is disabled by default.

Command Modes

global configuration

Device Modes

application-accelerator
central-manager

Examples

The following example shows how to configure TACACS+ on the WAAS device, specify that a start accounting notice should be sent at the beginning of the process and a stop accounting notice at the end of the process, and request that the user process should begin regardless of whether the start accounting notice was received by the accounting server:

```
WAE(config)# tacacs key abc
WAE(config)# tacacs server 192.168.50.1 primary
WAE(config)# aaa accounting system default start-stop tacacs
WAE# show aaa accounting
```

Accounting Type	Record event(s)	Protocol
Exec shell	unknown	unknown
Command level 0	unknown	unknown
Command level 15	unknown	unknown
System	start-stop	TACACS+

The following example shows that the WAAS device is set to record all user EXEC sessions. The command also specifies that a stop accounting notice should be sent to the TACACS+ server at the end of the session.

```
WAE(config)# aaa accounting exec default stop-only tacacs
```

The following example shows that the WAAS device is set to record all CLI commands executed by a normal user. The command also specifies that a stop accounting notice should be sent to the TACACS+ server at the end of each CLI command executed by a normal user.

```
WAE(config)# aaa accounting commands 0 default stop-only tacacs
```

The following example shows that the WAAS device is set to record all CLI commands executed by an administrative user. The command also specifies that a start accounting notice should be sent to the TACACS+ server at the beginning of the process and a stop accounting notice at the end of the process. The CLI command executed by the administrative user does not proceed until the start accounting notice has been acknowledged.

```
WAE(config)# aaa accounting commands 15 default wait-start tacacs
```

The following example shows the EXEC shell accounting report that is available on the TACACS+ server:

```
Wed Apr 14 11:19:19 2004 172.16.0.0 super10 pts/0 172.31.0.0 start
start_time=1081919558 task_id=3028 timezone=PST service=shell
Wed Apr 14 11:19:23 2004 172.16.0.0 super10 pts/0 172.31.0.0
stop stop_time=1081919562 task_id=3028 timezone=PST service=shell
Wed Apr 14 11:22:13 2004 172.16.0.0 normal20 pts/0 via5.abc.com start
start_time=1081919732 task_id=3048 timezone=PST service=shell
Wed Apr 14 11:22:16 2004 172.16.0.0 normal20 pts/0 via5.abc.com stop
stop_time=1081919735 task_id=3048 timezone=PST service=shell
Wed Apr 14 11:25:29 2004 172.16.0.0 admin ftp via5.abc.com start start_time=1081919928
task_id=3069 timezone=PST service=shell
Wed Apr 14 11:25:33 2004 172.16.0.0 admin ftp via5.abc.com stop stop_time=1081919931
task_id=3069 timezone=PST service=shell
```

The following example shows the system accounting report that is available on the TACACS+ server:

```
Wed Apr 14 08:37:14 2004 172.16.0.0 unknown unknown 0.0.0.0 start start_time=1081909831
task_id=2725 timezone=PST service=system event=sys_acct reason=reload
Wed Apr 14 10:19:18 2004 172.16.0.0 admin ttyS0 0.0.0.0 stop stop_time=1081915955
```

```
task_id=5358 timezone=PST service=system event=sys_acct reason=shutdown
```

The following example shows the command accounting report that is available on the TACACS+ server:

```
Wed Apr 14 12:35:38 2004 172.16.0.0 admin ttyS0 0.0.0.0 start start_time=1081924137
task_id=3511 timezone=PST service=shell -lvl=0 cmd=logging console enable
Wed Apr 14 12:35:39 2004 172.16.0.0 admin ttyS0 0.0.0.0 stop stop_time=1081924137
task_id=3511 timezone=PST service=shell priv-lvl=0 cmd=logging console enable
```

In addition to command accounting, the WAAS device records any executed CLI command in the system log (*syslog.txt*). The message format is as follows:

```
ce_syslog(LOG_INFO, CESM_PARSER, PARSER_ALL, CESM_350232,
"CLI_LOG %s: %s \n", __FUNCTION__, pd->command_line);
```

Related Commands

[show aaa accounting](#)

(config) aaa authorization commands

To authorize commands issued through the CLI by a user on a WAAS device, use the **aaa authorization commands** global configuration command. To disable command authorization, use the **no** form of this command.

aaa authorization commands *level* **default tacacs+**

no aaa authorization commands *level* **default tacacs+**

Syntax Description	<p>level default tacacs+ Configures command authorization for commands issued by the CLI user. Commands at the specified privilege level (0 or 15) are authorized. Level 0 authorizes EXEC commands, level 15 authorizes both EXEC and global configuration commands.</p>
Defaults	AAA command authorization is disabled by default.
Command Modes	global configuration
Device Modes	application-accelerator central-manager
Usage Guidelines	<p>Command authorization enforces authorization through an external AAA server for each command executed by the user. All commands executed by a CLI user are authorized before they are executed.</p> <p>When command authorization is configured for level 0, only EXEC commands are authorized, regardless of user level (normal or super).</p> <p>When command authorization is configured for level 15, EXEC and global configuration commands are authorized, regardless of user level (normal or super).</p> <p>Once it is configured, command authorization configuration is displayed in the running config. When the running config is copied to the startup config, command authorization is configured as the last config so that during the reload, the startup config need not be authorized.</p> <p>Only commands executed through the CLI interface are subject to command authorization.</p>
Examples	<p>The following example shows how to configure command authorization for level 15 (authorization for both EXEC and global configuration commands) on the WAAS device:</p> <pre>WAE(config)# aaa authorization commands 15 default tacacs+</pre>
Related Commands	show aaa authorization

(config) accelerator cifs

To enable the CIFS application accelerator, use the **accelerator cifs** global configuration command. To disable the CIFS application accelerator, use the **no** form of this command.

accelerator cifs {[**double-byte-unicode**] | **enable** | **dynamic-share** *share* | **clear cache** | **cache server-rename** *oldname newname* | **exception** {**coredump** | **debug** | **no-coredump**}}

no accelerator cifs {[**double-byte-unicode**] | **enable** | **dynamic-share** *share* | **clear cache** | **cache server-rename** *oldname newname* | **exception** {**coredump** | **debug** | **no-coredump**}}

Syntax Description	
double-byte-unicode	Enables support for double-byte Unicode languages for Windows 98 clients.
enable	Enables the CIFS traffic accelerator.
dynamic-share <i>share</i>	Enables support for CIFS dynamic shares and specifies a path in the format: cifs://server/share
clear cache	Clears the CIFS application accelerator cache and restarts the accelerator.
cache server-rename <i>oldname newname</i>	Renames a CIFS file server for the cached data.
exception	(Optional) Configures the action to be taken if an exception occurs.
coredump	Writes a core file (default).
debug	Hangs the system until it is explicitly restarted.
no-coredump	Restarts the accelerator and does not write a core file.

Defaults The CIFS accelerator is enabled by default and will start automatically if the Enterprise license is installed. The default exception action is coredump.

Command Modes global configuration

Device Modes application-accelerator

Usage Guidelines Use the **accelerator cifs enable** command to enable the acceleration of CIFS traffic with the transparent CIFS accelerator (not the legacy mode of acceleration).

The CIFS application accelerator requires that the WINS server be configured. Use the **windows-domain wins-server** global configuration command to configure the WINS server.

To configure prepositioning directives, use the **accelerator cifs preposition** global configuration command.

Use the **accelerator cifs dynamic-share** command to define a dynamic share, which allows multiple users to access the same share but then be automatically mapped to a different directory based on the user's credentials. Defining a dynamic share allows each user to see a different view of the share, and allows the operation of Access Based Enumeration, if configured on Windows Server.

**Note**

We recommend that you use the WAAS Central Manager GUI to configure dynamic shares because the dynamic share CLI configuration can be overwritten by the Central Manager. For more information, see the [“Creating Dynamic Shares” section](#) in the *Cisco Wide Area Application Services Configuration Guide*.

Use the **accelerator cifs cache server-rename** command to rename the data in the cache if the name of a file server changed and you do not want to lose the cached data for the server. The renaming applies to prepositioned files and files cached on demand.

**Note**

Do not specify the name of another existing cached file server as the new name. If you do specify an existing name as the new name, the cached contents of this file server are overwritten with the cached contents of the file server you are renaming.

Examples

The following example shows how to enable the CIFS application accelerator:

```
WAE(config)# accelerator cifs enable
```

Related Commands

[show accelerator](#)

[show statistics accelerator](#)

[\(config\) windows-domain](#)

(config) accelerator cifs preposition

To configure a CIFS application accelerator preposition directive, use the **accelerator cifs preposition** global configuration command. To disable the application accelerator, use the **no** form of this command.

accelerator cifs preposition [**remove**] *directive_id*

no accelerator cifs preposition [**remove**] *directive_id*

Syntax Description	remove	(Optional) Deletes a preposition directive.
	<i>directive_id</i>	ID of an existing preposition directive that you want to change or delete, or a new directive that you want to create.

Defaults	No default behavior or values.
----------	--------------------------------

Command Modes	global configuration
---------------	----------------------

Device Modes	application-accelerator
--------------	-------------------------

Usage Guidelines	Use the accelerator cifs preposition command to create and edit preposition directives to be used with the transparent CIFS accelerator. A preposition directive defines a set of files that are to be prepositioned about the WAE device.
------------------	---

The **accelerator cifs preposition** command invokes the preposition configuration submode. For details on the commands available in this submode to configure a preposition directive, see the [“Preposition Configuration Mode Commands”](#) section.

**Note**

We recommend that you use the WAAS Central Manager GUI to configure preposition directives. For more information, see the [“Creating a Preposition Directive”](#) section in the *Cisco Wide Area Application Services Configuration Guide*.

**Note**

If you create a preposition directive from the CLI before the secure store on the WAE is initialized, you must wait at least two datafeed poll cycles (10 minutes by default) before initializing the secure store; otherwise, the preposition directive will not propagate to the Central Manager because the credentials will not be able to be decrypted on the WAE.

Examples	The following example shows how to create a new CIFS preposition directive with ID 3:
----------	---

```
WAE(config)# accelerator cifs preposition 3
WAE(config-preposition)
```


■ (config) accelerator cifs preposition

Related Commands

[show accelerator](#)

[show statistics accelerator](#)

[\(config\) windows-domain](#)

(config) accelerator epm

To enable the Endpoint Mapper (EPM) application accelerator, use the **accelerator epm** global configuration command. To disable the EPM application accelerator, use the **no** form of this command.

accelerator cifs preposition [**remove**] *directive_id*

no accelerator cifs preposition [**remove**] *directive_id*

Syntax Description	enable	(Optional) Enables the EPM application accelerator.
	exception	(Optional) Configures the action to be taken if an exception occurs.
	coredump	Writes a core file (default).
	debug	Hangs the system until it is explicitly restarted.
	no-core dump	Restarts the accelerator and does not write a core file.

Defaults The EPM accelerator is enabled by default and will start automatically if the Enterprise license is installed. The default exception action is coredump.

Command Modes global configuration

Device Modes application-accelerator

Usage Guidelines Use the **accelerator epm enable** command to enable the acceleration of EPM traffic. The EPM accelerator must be enabled for the MAPI accelerator to operate.

Examples The following example shows how to enable the EPM application accelerator:

```
WAE(config)# accelerator epm enable
```

Related Commands

- (config) [accelerator mapi](#)
- [show accelerator](#)
- [show statistics accelerator](#)

(config) accelerator http

To enable the HTTP application accelerator, use the **accelerator http** global configuration command. To disable the HTTP application accelerator, use the **no** form of this command.

```
accelerator http {enable | exception {coredump | debug | no-coredump} | metadatacache
    {enable | conditional-response enable | redirect-response enable | unauthorized-response
    enable | max-age seconds | min-age seconds | filter-extension extension-list} |
    suppress-server-encoding enable}
```

```
no accelerator http {enable | exception {coredump | debug | no-coredump}}
```

Syntax Description	
enable	(Optional) Enables the HTTP application accelerator.
exception	(Optional) Configures the action to be taken if an exception occurs.
coredump	Writes a core file (default).
debug	Hangs the system until it is explicitly restarted.
no-coredump	Restarts the accelerator and does not write a core file.
metadatacache	(Optional) Configures metadata caching.
enable	(Optional) Enables metadata caching.
conditional-response enable	(Optional) Enables caching of HTTP 304 messages.
redirect-response enable	(Optional) Enables caching of HTTP 301 messages.
unauthorized-response enable	(Optional) Enables caching of HTTP 401 messages.
max-age <i>seconds</i>	(Optional) Maximum number of seconds to retain HTTP header information in the cache. The default is 86400 seconds (24 hours). Valid time periods range from 5–2592000 seconds (30 days).
min-age <i>seconds</i>	(Optional) Minimum number of seconds to retain HTTP header information in the cache. The default is 60 seconds. Valid time periods range from 5–86400 seconds (24 hours).
filter-extension <i>extension-list</i>	(Optional) String containing a comma-separated list of file extensions to which metadata caching is to be applied. Do not include the dot at the beginning of the file extension. You can specify a maximum of 20 file extensions.
suppress-server-encoding enable	(Optional) Enables suppression of Accept-Encoding compress, gzip, and deflate request-headers between the client and the server.

Defaults

The HTTP accelerator is enabled by default and will start automatically if the Enterprise license is installed. The default exception action is coredump.

The metadata caching feature is disabled by default for all response types. The default max-age is 86400 seconds (24 hours), the default min-age is 60 seconds, and the default filter extension list is empty (meaning that metadata caching is applied to all extension types).

The suppress-server-encoding feature is disabled by default.

Command Modes global configuration

Device Modes application-accelerator

Usage Guidelines

Use the **accelerator http enable** command to enable the acceleration of HTTP traffic.

You can enable or disable each of three metadata caches (conditional-response, redirect-response, and unauthorized-response) separately. By default they are all enabled when you enable HTTP metadata caching. If you disable the HTTP accelerator, metadata caching is also disabled.

When you enable the suppress-server-encoding feature, the WAE removes the Accept-Encoding header from HTTP requests, preventing the web server from compressing HTTP data that it sends to the client. This allows the WAE to apply its own compression to the HTTP data, typically resulting in much better compression than the web server.

Examples The following example shows how to enable the HTTP application accelerator:

```
WAE(config)# accelerator http enable
```

The following example shows how to enable and configure the metadata cache to operate only on specific file types:

```
WAE(config)# accelerator http metadatacache enable  
WAE(config)# accelerator http metadatacache filter-extension html,css,jpg,gif
```

Related Commands

- [clear cache](#)
- [show accelerator](#)
- [show cache http-metadatacache](#)
- [show statistics accelerator](#)

(config) accelerator mapi

To enable the MAPI application accelerator, use the **accelerator mapi** global configuration command. To disable the MAPI application accelerator, or one of its options, use the **no** form of this command.

accelerator mapi { **enable** | **read-opt** | **write-opt** | **reserved-pool-size maximum-percent max_percent** | **exception** { **coredump** | **debug** | **no-coredump** } }

no accelerator mapi { **enable** | **read-opt** | **write-opt** | **reserved-pool-size maximum-percent max_percent** | **exception** { **coredump** | **debug** | **no-coredump** } }

Syntax Description	enable	Enables the MAPI traffic accelerator.
	read-opt	Enables the read-ahead optimization of the MAPI traffic for mail reading.
	write-opt	Enables the asynchronous write optimization of the MAPI traffic for mail sending.
	reserved-pool-size maximum-percent max_percent	Configures the maximum reserved connection pool percent, specified as the percent of the device TFO connection limit, to restrict the maximum connections reserved for MAPI optimization during TFO overload. Range is from 5 to 50. Default is 15.
	exception	(Optional) Configures the action to be taken if an exception occurs.
	coredump	Writes a core file (default).
	debug	Hangs the system until it is explicitly restarted.
	no-coredump	Restarts the accelerator and does not write a core file.

Defaults

The MAPI accelerator is enabled by default and will start automatically if the Enterprise license is installed. The read optimization (**read-opt**) and write optimization (**write-opt**) features are enabled by default when the MAPI accelerator is enabled. The default maximum reserved connection pool percent is 15. The default exception action is coredump.

Command Modes

global configuration

Device Modes

application-accelerator

Usage Guidelines

Use the **accelerator mapi enable** command to enable MAPI acceleration. This feature supports Microsoft Outlook 2000–2007 clients. Secure connections that use message authentication (signing) or encryption are not accelerated and MAPI over HTTP is not accelerated.

You must enable the EPM accelerator before the MAPI accelerator can operate.

Use the **reserved-pool-size** keyword to restrict the maximum number of connections reserved for MAPI optimization during TFO overload. It is specified as a percent of the TFO connection limit of the platform. Valid percent ranges from 5%-50%. The default is 15% which would reserve approximately 0.5 connection for each client-server Association Group (AG) optimized by MAPI accelerator.

The client maintains at least one AG per server it connects to with an average of about 3 connections per AG. For deployments that observe a greater average number of connections per AG, or where TFO overload is a frequent occurrence, a higher value for the reserved pool size maximum percent is recommended.

Reserved connections would remain unused when the device is not under TFO overload. Reserved connections are released when the AG terminates.

Examples

The following example shows how to enable the MAPI application accelerator:

```
WAE(config)# accelerator mapi enable
```

Related Commands

[\(config\) accelerator epm](#)

[show accelerator](#)

[show statistics accelerator](#)

(config) accelerator nfs

To enable the NFS application accelerator, use the **accelerator nfs** global configuration command. To disable the NFS application accelerator, use the **no** form of this command.

accelerator nfs {enable | exception {coredump | debug | no-coredump}}

no accelerator nfs {enable | exception {coredump | debug | no-coredump}}

Syntax Description

enable	(Optional) Enables the EPM application accelerator.
exception	(Optional) Configures the action to be taken if an exception occurs.
coredump	Writes a core file (default).
debug	Hangs the system until it is explicitly restarted.
no-coredump	Restarts the accelerator and does not write a core file.

Defaults

The NFS accelerator is enabled by default and will start automatically if the Enterprise license is installed. The default exception action is coredump.

Command Modes

global configuration

Device Modes

application-accelerator

Examples

The following example shows how to enable the NFS application accelerator:

```
WAE(config)# accelerator nfs enable
```

Related Commands

[show accelerator](#)

[show statistics accelerator](#)

(config) accelerator ssl

To enable the SSL application accelerator, use the **accelerator ssl** global configuration command. To disable the SSL application accelerator, use the **no** form of this command.

accelerator ssl {enable | exception {coredump | debug | no-coredump}}

no accelerator ssl {enable | exception {coredump | debug | no-coredump}}

Syntax Description	enable	(Optional) Enables the EPM application accelerator.
	exception	(Optional) Configures the action to be taken if an exception occurs.
	coredump	Writes a core file (default).
	debug	Hangs the system until it is explicitly restarted.
	no-coredump	Restarts accelerator and does not write a core file.

Defaults The SSL accelerator is enabled by default and will start automatically if the Enterprise license is installed. The default exception action is coredump.

Command Modes global configuration

Device Modes application-accelerator

Usage Guidelines Use the **accelerator ssl enable** command to enable the acceleration of SSL traffic. To undo this command, for example to disable SSL acceleration after you have enabled it, use the **no** version of this command.

Examples The following example shows how to enable the SSL application accelerator:

```
WAE(config)# accelerator ssl enable
```

Related Commands

- [show accelerator](#)
- [show statistics accelerator](#)
- [crypto delete](#)
- [crypto export](#)
- [crypto generate](#)
- [crypto import](#)
- [\(config\) crypto pki](#)
- [\(config\) crypto ssl](#)

■ (config) accelerator ssl

(config-ca) ca-certificate

(config-ca) description

(config-ca) revocation-check

(config) accelerator video

To enable the video application accelerator, use the **accelerator video** global configuration command. To disable the video application accelerator, use the **no** form of this command.

```
accelerator video {enable | unaccelerated-traffic type {all | overload} action drop |
max-initial-setup-delay seconds |
windows-media {client idle-timeout seconds | log-forwarding enable}}
```

```
no accelerator video {enable | unaccelerated-traffic type {all | overload} action drop |
max-initial-setup-delay seconds |
windows-media {client idle-timeout seconds | log-forwarding enable}}
```

```
accelerator video exception {coredump | debug | no-coredump}
```

```
no accelerator video exception {coredump | debug | no-coredump}
```

Syntax Description

enable	Enables the video traffic accelerator.
unaccelerated-traffic type	Configures the handling of video traffic that is not being accelerated due to overload or unsupported transport or format, including Windows Media video on demand traffic and all RTSP traffic that is not for Windows Media.
all	Selects all video traffic that is not being accelerated due to overload or unsupported transport or format, including Windows Media video on demand traffic and all RTSP traffic that is not for Windows Media.
overload	Selects video traffic that is not being accelerated due to an overload condition.
action drop	Drops the specified type of video traffic that is not being accelerated. The connection is actually reset. If you do not specify this action, the default is to handle such traffic with the negotiated TCP optimization policy.
max-initial-setup-delay seconds	Sets the maximum number of seconds to wait for the first message from the client and the first response from the server, after the connection is accepted by the video accelerator, and before timing out the connection. Valid values range from 10–180 seconds. The default is 60.
windows-media	Configures Windows Media-specific settings.
client idle-timeout seconds	Sets the maximum number of seconds to wait after the initial client request, while the client connection is idle, before timing out the connection. Valid values range from 30–300 seconds. The default is 60.
log-forwarding enable	Enables forwarding of Windows Media logs to the upstream Windows Media Server. Log forwarding is enabled by default.
exception	(Optional) Configures the action to be taken if an exception occurs.
coredump	Writes a core file (default).
debug	Hangs the system until it is explicitly restarted.
no-coredump	Restarts the accelerator and does not write a core file.

Defaults

The video accelerator is enabled by default and will start automatically if both the Enterprise and Video licenses are installed. The default exception action is coredump.

Command Modes global configuration

Device Modes application-accelerator

Usage Guidelines Use the **accelerator video enable** command to enable the acceleration of Windows Media live streaming video traffic that uses the RTSP.

You can configure the video accelerator to discard unaccelerated video traffic by using the **unaccelerated-traffic type {all | overload} action drop** option. If you do not specify this option, the unaccelerated video traffic is handled with the negotiated TCP optimization policy.

Examples The following example shows how to enable the video application accelerator:

```
WAE(config)# accelerator video enable
```

Related Commands [show accelerator](#)
[show statistics accelerator](#)

(config) accelerator windows-print

To enable the Windows print accelerator, use the **accelerator windows-print** global configuration command. To disable the Windows print accelerator, use the **no** form of this command.

accelerator windows-print enable

no accelerator windows-print enable

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Defaults	The Windows print accelerator is enabled by default and will start automatically if the Enterprise license is installed.
-----------------	--

Command Modes	global configuration
----------------------	----------------------

Device Modes	application-accelerator
---------------------	-------------------------

Examples	The following example shows how to enable the Windows print accelerator:
-----------------	--

```
WAE(config)# accelerator windows-print enable
```

Related Commands	show statistics windows-print requests
-------------------------	--

(config) alarm overload-detect

To detect alarm overload situations, use the **alarm overload-detect** global configuration command. To unconfigure alarm parameters, use the **no** form of this command.

alarm overload-detect { **clear** *1-999* [**raise** *10-1000*] | **enable** | **raise** *10-1000* [**clear** *1-999*]}

no alarm overload-detect { **clear** *1-999* [**raise** *10-1000*] | **enable** | **raise** *10-1000* [**clear** *1-999*]}

Syntax Description		
clear <i>1-999</i>		Specifies the number of alarms per second at which the alarm overload state on the WAAS device is cleared. When the alarm drops below this threshold, the alarm is cleared and the SNMP traps and alarm notifications are again sent to your NMS.
	Note	The alarm overload-detect clear value must be less than the alarm overload-detect raise value.
raise <i>10-1000</i>		(Optional) Specifies the number of alarms per second at which the WAAS device enters an alarm overload state and SNMP traps and alarm notifications to your network management station (NMS) are suspended.
enable		Enables the detection of alarm overload situations.

Defaults

clear: 1 alarm per second

raise: 10 alarms per second

Command Modes

global configuration

Device Modes

application-accelerator

central-manager

Usage Guidelines

In the alarm overload state, applications continue to raise alarms and these alarms are recorded within the WAAS device. Use the **show alarms** and **show alarms history EXEC** commands to display all the alarms in the alarm overload state.

Examples

The following example shows how to enable detection of alarm overload:

```
WAE(config)# alarm overload-detect enable
```

The following example shows how to set the threshold for triggering the alarm overload at 100 alarms per second:

```
WAE(config)# alarm overload-detect raise 100
```

The following example shows how to set the level for clearing the alarm overload at 10 alarms per second:

```
WAE(config)# alarm overload-detect clear 10
```

Related Commands [show alarms](#)

(config) asset

To set the tag name for the asset tag string, use the **asset** global configuration command. To remove the asset tag name, use the **no** form of this command.

asset tag *name*

no asset tag *name*

Syntax Description

tag <i>name</i>	Sets the asset tag name.
------------------------	--------------------------

Defaults

No default behaviors or values.

Command Modes

global configuration

Device Modes

application-accelerator
central-manager

Examples

The following example shows how to configure a tag name for the asset tag string on a WAAS device:

```
WAE(config)# asset tag entitymib
```

(config) authentication configuration

To specify administrative login authorization parameters for a WAAS device, use the **authentication configuration** global configuration mode command. To selectively disable options, use the **no** form of this command.

```
authentication {configuration {local | radius | tacacs | windows-domain}
enable [primary | secondary | tertiary | quaternary]
```

```
no authentication {configuration {local | radius | tacacs | windows-domain}
enable [primary | secondary | tertiary | quaternary]
```

Syntax Description		
configuration		Sets the administrative login authorization (configuration) parameters for the WAAS device.
local		Selects the local database method for the WAAS device.
radius		Selects the RADIUS method for the WAAS device.
tacacs		Selects the TACACS+ method for the WAAS device.
windows-domain		Selects the Windows domain controller method for the WAAS device.
enable		Enables the specified methods for the WAAS device.
primary		(Optional) Specifies the first method that the WAAS device should use.
secondary		(Optional) Specifies the second method that the WAAS device should use.
tertiary		(Optional) Specifies the third method that the WAAS device should use if the primary and secondary methods fail.
quaternary		(Optional) Specifies the fourth method that the WAAS device should use if the primary, secondary, and tertiary methods all fail.

Defaults

The local authentication method is enabled by default.

Command Modes

global configuration

Device Modes

application-accelerator
central-manager

Usage Guidelines

The **authentication** command configures both the authentication and authorization methods that govern login and configuration access to the WAAS device.



Note

We strongly recommend that you use the WAAS Central Manager GUI instead of the WAAS CLI to configure administrative login authentication and authorization for your WAAS devices, if possible. For information about how to use the WAAS Central Manager GUI to centrally configure administrative login authentication and authorization on a single WAE or group of WAEs, which are registered with a WAAS Central Manager, see the *Cisco Wide Area Application Services Configuration Guide*.

The **authentication login** command determines whether the user has any level of permission to access the WAAS device. The **authentication configuration** command authorizes the user with privileged access (configuration access) to the WAAS device.

The **authentication login local** and the **authentication configuration local** commands use a local database for authentication and authorization.

The **authentication login tacacs** and **authentication configuration tacacs** commands use a remote TACACS+ server to determine the level of user access. The WAAS software supports only TACACS+ and not TACACS or Extended TACACS.

To configure TACACS+, use the **authentication** and **tacacs** commands. To enable TACACS+, use the **tacacs enable** command. For more information on TACACS+ authentication, see the [\(config\) tacacs](#) command.

The **authentication login radius** and **authentication configuration radius** commands use a remote RADIUS server to determine the level of user access.

By default, the local method is enabled, with TACACS+ and RADIUS both disabled for login and configuration. Whenever TACACS+ and RADIUS are disabled the local method is automatically enabled. TACACS+, RADIUS, and local methods can be enabled at the same time.

The **primary** option specifies the first method to attempt for both login and configuration; the **secondary** option specifies the method to use if the primary method fails. The **tertiary** option specifies the method to use if both primary and secondary methods fail. The **quaternary** option specifies the method to use if the primary, secondary, and tertiary methods fail. If all methods of an **authentication login** or **authentication configuration** command are configured as primary, or all as secondary or tertiary, local is attempted first, then TACACS+, and then RADIUS.

Enforcing Authentication with the Primary Method

The **authentication fail-over server-unreachable** global configuration command allows you to specify that a failover to the secondary authentication method should occur only if the primary authentication server is unreachable. This feature ensures that users gain access to the WAAS device using the local database only when remote authentication servers (TACACS+ or RADIUS) are unreachable. For example, when a TACACS+ server is enabled for authentication with a user authentication failover configured and the user tries to log in to the WAAS device using an account defined in the local database, login fails. Login succeeds only when the TACACS+ server is unreachable.

You can configure multiple TACACS+ or RADIUS servers; authentication is attempted on the primary server first. If the primary server is unreachable, then authentication is attempted on the other servers in the TACACS+ or RADIUS farm, in order. If authentication fails for any reason other than a server is unreachable, authentication is not attempted on the other servers in the farm. This process applies regardless of the setting of the **authentication fail-over server-unreachable** command.

Login Authentication and Authorization Through the Local Database

Local authentication and authorization uses locally configured login and passwords to authenticate administrative login attempts. The login and passwords are local to each WAAS device and are not mapped to individual usernames.

By default, local login authentication is enabled first. You can disable local login authentication only after enabling one or more of the other administrative login authentication methods. However, when local login authentication is disabled, if you disable all other administrative login authentication methods, local login authentication is reenabled automatically.

Specifying RADIUS Authentication and Authorization Settings

To configure RADIUS authentication on a WAAS device, you must first configure a set of RADIUS authentication server settings on the WAAS device by using the **radius-server** global configuration command. (See the (config) **radius-server** command.)

Use the **authentication login radius** global configuration command to enable RADIUS authentication for normal login mode.

Use the **authentication configuration radius** global configuration command to enable RADIUS authorization.

To disable RADIUS authentication and authorization on a WAAS device, use the **no** form of the **authentication** global configuration command (for example, use the **no authentication login radius enable** command to disable RADIUS authentication).

Specifying TACACS+ Authentication and Authorization Settings

To configure TACACS+ authentication on WAAS devices, you must configure a set of TACACS+ authentication settings on the WAAS device by using the **tacacs** global configuration command. (See the (config) **tacacs** command.)

Server Redundancy

Authentication servers can be specified with the **tacacs host** or **radius-server host** global configuration commands. In the case of TACACS+ servers, the **tacacs host hostname** command can be used to configure additional servers. These additional servers provide authentication redundancy and improved throughput, especially when WAAS device load-balancing schemes distribute the requests evenly between the servers. If the WAAS device cannot connect to any of the authentication servers, no authentication takes place and users who have not been previously authenticated are denied access. Secondary authentication servers are queried in order only if the primary server is unreachable. If authentication fails for any other reason, alternate servers are not queried.

Specifying the Windows Domain Login Authentication

You can enable the Windows domain as an administrative login authentication and authorization method for a device or device group. Before you enable Windows authentication, you must first configure the Windows domain controller by using the **windows-domain wins-server** global configuration command. (See the (config) **windows-domain** command.)



Note

WAAS supports authentication by a Windows domain controller running only on Windows Server 2000 or Windows Server 2003.

Examples

The following example shows how to query the secondary authentication database if the primary authentication server is unreachable. This feature is referred to as the failover server-unreachable feature.

```
WAE(config)# authentication fail-over server-unreachable
```

If you enable the failover server-unreachable feature on the WAAS device, only two login authentication schemes (a primary and secondary scheme) can be configured on the WAAS device. The WAAS device fails over from the primary authentication scheme to the secondary authentication scheme only if the specified authentication server is unreachable.

To enable authentication privileges using the local, TACACS+, RADIUS, or Windows databases, and to specify the order of the administrative login authentication, use the **authentication login** global configuration command. In the following example, RADIUS is specified as the primary method, TACACS+ as the secondary method, Windows as the third method, and the local database as the fourth method. In this example, four login authentication methods are specified because the failover server-unreachable feature is not enabled on the WAAS device.

```
WAE(config)# authentication login radius enable primary
WAE(config)# authentication login tacacs enable secondary
WAE(config)# authentication login windows-domain enable tertiary
WAE(config)# authentication login local enable quaternary
```



Note If you enable the failover server unreachable feature on the WAAS device, make sure that you specify either **TACACS+** or **RADIUS** as the primary scheme for authentication, and specify **local** as the secondary scheme for authentication.

To enable authorization privileges using the local, TACACS+, RADIUS, or Windows databases, and to specify the order of the administrative login authorization (configuration), use the **authentication configuration** global configuration command.



Note Authorization privileges apply to console and Telnet connection attempts, secure FTP (SFTP) sessions, and Secure Shell (SSH, Version 1 and Version 2) sessions.

We strongly recommend that you set the administrative login authentication and authorization methods in the same order. For example, configure the WAAS device to use RADIUS as the primary login method, TACACS+ as the secondary login method, Windows as the tertiary method, and the local method as the quaternary method for both administrative login authentication and authorization.

The following example shows that RADIUS is specified as the primary method, TACACS+ as the secondary method, Windows as the third method, and the local database as the fourth method. In this example, four login authorization (configuration) methods are specified because the failover server-unreachable feature is not enabled on the WAAS device.

```
WAE(config)# authentication configuration radius enable primary
WAE(config)# authentication configuration tacacs enable secondary
WAE(config)# authentication configuration windows-domain enable tertiary
WAE(config)# authentication configuration local enable quaternary
```



Note If you enable the failover server unreachable feature on the WAAS device, make sure that you specify either **TACACS+** or **RADIUS** as the primary scheme for authorization (configuration), and specify **local** as the secondary scheme for authorization (configuration).

The following example shows the resulting output of the **show authentication** command:

```
WAE# show authentication user
```

```
Login Authentication:      Console/Telnet/Ftp/SSH Session
-----
local                      enabled (primary)
Windows domain             enabled
Radius                     disabled
Tacacs+                    disabled
```

```
Configuration Authentication: Console/Telnet/Ftp/SSH Session
-----
local                enabled (primary)
Radius               disabled
Tacacs+              disabled
```

Related Commands

(config) radius-server
show authentication
show statistics radius
show statistics tacacs
(config) tacacs
windows-domain
(config) windows-domain

(config) authentication content-request

To authenticate a request for content, use the **authentication content-request** global configuration mode command. To selectively disable options, use the **no** form of this command.

authentication content-request windows-domain-ctrl disconnected-mode enable

no authentication content-request windows-domain-ctrl disconnected-mode enable

Syntax Description

content-request	Authenticates a request for content.
Note	This option is available in the application-accelerator device mode only.
windows-domain-ctrl	Selects a Windows domain controller for domain server authentication.
disconnected-mode enable	Enables authentication in the disconnected mode.

Defaults

The local authentication method is enabled by default.

Command Modes

global configuration

Device Modes

application-accelerator

Usage Guidelines

The **authentication** command configures both the authentication and authorization methods that govern login and configuration access to the WAAS device.



Note

We strongly recommend that you use the WAAS Central Manager GUI instead of the WAAS CLI to configure administrative login authentication and authorization for your WAAS devices, if possible. For information about how to use the WAAS Central Manager GUI to centrally configure administrative login authentication and authorization on a single WAE or group of WAEs, which are registered with a WAAS Central Manager, see the *Cisco Wide Area Application Services Configuration Guide*.

The **authentication login** command determines whether the user has any level of permission to access the WAAS device. The **authentication configuration** command authorizes the user with privileged access (configuration access) to the WAAS device.

The **authentication login local** and the **authentication configuration local** commands use a local database for authentication and authorization.

The **authentication login tacacs** and **authentication configuration tacacs** commands use a remote TACACS+ server to determine the level of user access. The WAAS software supports only TACACS+ and not TACACS or Extended TACACS.

To configure TACACS+, use the **authentication** and **tacacs** commands. To enable TACACS+, use the **tacacs enable** command. For more information on TACACS+ authentication, see the [\(config\) tacacs](#) command.

The **authentication login radius** and **authentication configuration radius** commands use a remote RADIUS server to determine the level of user access.

By default, the local method is enabled, with TACACS+ and RADIUS both disabled for login and configuration. Whenever TACACS+ and RADIUS are disabled the local method is automatically enabled. TACACS+, RADIUS, and local methods can be enabled at the same time.

The **primary** option specifies the first method to attempt for both login and configuration; the **secondary** option specifies the method to use if the primary method fails. The **tertiary** option specifies the method to use if both primary and secondary methods fail. The **quaternary** option specifies the method to use if the primary, secondary, and tertiary methods fail. If all methods of an **authentication login** or **authentication configuration** command are configured as primary, or all as secondary or tertiary, local is attempted first, then TACACS+, and then RADIUS.

Enforcing Authentication with the Primary Method

The **authentication fail-over server-unreachable** global configuration command allows you to specify that a failover to the secondary authentication method should occur only if the primary authentication server is unreachable. This feature ensures that users gain access to the WAAS device using the local database only when remote authentication servers (TACACS+ or RADIUS) are unreachable. For example, when a TACACS+ server is enabled for authentication with a user authentication failover configured and the user tries to log in to the WAAS device using an account defined in the local database, login fails. Login succeeds only when the TACACS+ server is unreachable.

You can configure multiple TACACS+ or RADIUS servers; authentication is attempted on the primary server first. If the primary server is unreachable, then authentication is attempted on the other servers in the TACACS+ or RADIUS farm, in order. If authentication fails for any reason other than a server is unreachable, authentication is not attempted on the other servers in the farm. This process applies regardless of the setting of the **authentication fail-over server-unreachable** command.

Login Authentication and Authorization Through the Local Database

Local authentication and authorization uses locally configured login and passwords to authenticate administrative login attempts. The login and passwords are local to each WAAS device and are not mapped to individual usernames.

By default, local login authentication is enabled first. You can disable local login authentication only after enabling one or more of the other administrative login authentication methods. However, when local login authentication is disabled, if you disable all other administrative login authentication methods, local login authentication is reenabled automatically.

Specifying RADIUS Authentication and Authorization Settings

To configure RADIUS authentication on a WAAS device, you must first configure a set of RADIUS authentication server settings on the WAAS device by using the **radius-server** global configuration command. (See the [\(config\) radius-server](#) command.)

Use the **authentication login radius** global configuration command to enable RADIUS authentication for normal login mode.

Use the **authentication configuration radius** global configuration command to enable RADIUS authorization.

To disable RADIUS authentication and authorization on a WAAS device, use the **no** form of the **authentication** global configuration command (for example, use the **no authentication login radius enable** command to disable RADIUS authentication).

Specifying TACACS+ Authentication and Authorization Settings

To configure TACACS+ authentication on WAAS devices, you must configure a set of TACACS+ authentication settings on the WAAS device by using the **tacacs** global configuration command. (See the (config) **tacacs** command.)

Server Redundancy

Authentication servers can be specified with the **tacacs host** or **radius-server host** global configuration commands. In the case of TACACS+ servers, the **tacacs host hostname** command can be used to configure additional servers. These additional servers provide authentication redundancy and improved throughput, especially when WAAS device load-balancing schemes distribute the requests evenly between the servers. If the WAAS device cannot connect to any of the authentication servers, no authentication takes place and users who have not been previously authenticated are denied access. Secondary authentication servers are queried in order only if the primary server is unreachable. If authentication fails for any other reason, alternate servers are not queried.

Specifying the Windows Domain Login Authentication

You can enable the Windows domain as an administrative login authentication and authorization method for a device or device group. Before you enable Windows authentication, you must first configure the Windows domain controller by using the **windows-domain wins-server** global configuration command. (See the (config) **windows-domain** command.)



Note

WAAS supports authentication by a Windows domain controller running only on Windows Server 2000 or Windows Server 2003.

Examples

The following example shows how to query the secondary authentication database if the primary authentication server is unreachable. This feature is referred to as the failover server-unreachable feature.

```
WAE(config)# authentication fail-over server-unreachable
```

If you enable the failover server-unreachable feature on the WAAS device, only two login authentication schemes (a primary and secondary scheme) can be configured on the WAAS device. The WAAS device fails over from the primary authentication scheme to the secondary authentication scheme only if the specified authentication server is unreachable.

To enable authentication privileges using the local, TACACS+, RADIUS, or Windows databases, and to specify the order of the administrative login authentication, use the **authentication login** global configuration command. In the following example, RADIUS is specified as the primary method, TACACS+ as the secondary method, Windows as the third method, and the local database as the fourth method. In this example, four login authentication methods are specified because the failover server-unreachable feature is not enabled on the WAAS device.

```
WAE(config)# authentication login radius enable primary
WAE(config)# authentication login tacacs enable secondary
WAE(config)# authentication login windows-domain enable tertiary
WAE(config)# authentication login local enable quaternary
```



Note

If you enable the failover server unreachable feature on the WAAS device, make sure that you specify either **TACACS+ or RADIUS** as the primary scheme for authentication, and specify **local** as the secondary scheme for authentication.

To enable authorization privileges using the local, TACACS+, RADIUS, or Windows databases, and to specify the order of the administrative login authorization (configuration), use the **authentication configuration** global configuration command.



Note Authorization privileges apply to console and Telnet connection attempts, secure FTP (SFTP) sessions, and Secure Shell (SSH, Version 1 and Version 2) sessions.

We strongly recommend that you set the administrative login authentication and authorization methods in the same order. For example, configure the WAAS device to use RADIUS as the primary login method, TACACS+ as the secondary login method, Windows as the tertiary method, and the local method as the quaternary method for both administrative login authentication and authorization.

The following example shows that RADIUS is specified as the primary method, TACACS+ as the secondary method, Windows as the third method, and the local database as the fourth method. In this example, four login authorization (configuration) methods are specified because the failover server-unreachable feature is not enabled on the WAAS device.

```
WAE(config)# authentication configuration radius enable primary
WAE(config)# authentication configuration tacacs enable secondary
WAE(config)# authentication configuration windows-domain enable tertiary
WAE(config)# authentication configuration local enable quaternary
```



Note If you enable the failover server unreachable feature on the WAAS device, make sure that you specify either **TACACS+** or **RADIUS** as the primary scheme for authorization (configuration), and specify **local** as the secondary scheme for authorization (configuration).

The following example shows the resulting output of the **show authentication** command:

```
WAE# show authentication user
```

```
Login Authentication:      Console/Telnet/Ftp/SSH Session
-----
local                      enabled (primary)
Windows domain             enabled
Radius                     disabled
Tacacs+                    disabled

Configuration Authentication: Console/Telnet/Ftp/SSH Session
-----
local                      enabled (primary)
Radius                     disabled
Tacacs+                    disabled
```

Related Commands

(config) radius-server
 show authentication
 show statistics radius
 show statistics tacacs
 (config) tacacs
 windows-domain
 (config) windows-domain

(config) authentication fail-over

To specify authentication failover if the primary authentication server is unreachable, use the **authentication fail-over** global configuration mode command. To disable this feature, use the **no** form of this command.

authentication fail-over server-unreachable

no authentication fail-over server-unreachable

Syntax Description	fail-over server-unreachable	Specifies that the WAAS device is to query the secondary authentication database only if the primary authentication server is unreachable.
--------------------	---	--

Defaults	This feature is disabled by default. This means that the WAAS device tries the other authentication methods if the primary method fails for any reason, not just if the server is unreachable.	
----------	--	--

Command Modes	global configuration	
---------------	----------------------	--

Device Modes	application-accelerator central-manager	
--------------	--	--

Usage Guidelines	The authentication command configures both the authentication and authorization methods that govern login and configuration access to the WAAS device.	
------------------	---	--



Note

We strongly recommend that you use the WAAS Central Manager GUI instead of the WAAS CLI to configure administrative login authentication and authorization for your WAAS devices, if possible. For information about how to use the WAAS Central Manager GUI to centrally configure administrative login authentication and authorization on a single WAE or group of WAEs, which are registered with a WAAS Central Manager, see the *Cisco Wide Area Application Services Configuration Guide*.

The **authentication fail-over server-unreachable** global configuration command allows you to specify that a failover to the secondary authentication method should occur only if the primary authentication server is unreachable. This feature ensures that users gain access to the WAAS device using the local database only when remote authentication servers (TACACS+ or RADIUS) are unreachable. For example, when a TACACS+ server is enabled for authentication with a user authentication failover configured and the user tries to log in to the WAAS device using an account defined in the local database, login fails. Login succeeds only when the TACACS+ server is unreachable.

You can configure multiple TACACS+ or RADIUS servers; authentication is attempted on the primary server first. If the primary server is unreachable, then authentication is attempted on the other servers in the TACACS+ or RADIUS farm, in order. If authentication fails for any reason other than a server is unreachable, authentication is not attempted on the other servers in the farm. This process applies regardless of the setting of the **authentication fail-over server-unreachable** command.

Examples

The following example shows how to query the secondary authentication database if the primary authentication server is unreachable. This feature is referred to as the failover server-unreachable feature.

```
WAE(config)# authentication fail-over server-unreachable
```

If you enable the failover server-unreachable feature on the WAAS device, only two login authentication schemes (a primary and secondary scheme) can be configured on the WAAS device. The WAAS device fails over from the primary authentication scheme to the secondary authentication scheme only if the specified authentication server is unreachable.

**Note**

If you enable the failover server unreachable feature on the WAAS device, make sure that you specify either **TACACS+** or **RADIUS** as the primary scheme for authentication, and specify **local** as the secondary scheme for authentication.

Related Commands

(config) radius-server

show authentication

show statistics radius

show statistics tacacs

(config) tacacs

windows-domain

(config) windows-domain

(config) authentication login

To set the administrative login authentication parameters for a WAAS device, use the **authentication login** global configuration mode command. To selectively disable options, use the **no** form of this command.

```
authentication login {local | radius | tacacs | windows-domain}
    enable [primary | secondary | tertiary| quaternary]
```

```
no authentication login {local | radius | tacacs | windows-domain}
    enable [primary | secondary | tertiary| quaternary]
```

Syntax Description		
login		Sets the administrative login authentication parameters for the WAAS device.
local		Selects the local database method for the WAAS device.
radius		Selects the RADIUS method for the WAAS device.
tacacs		Selects the TACACS+ method for the WAAS device.
windows-domain		Selects the Windows domain controller method for the WAAS device.
enable		Enables the specified methods for the WAAS device.
primary		(Optional) Specifies the first method that the WAAS device should use.
secondary		(Optional) Specifies the second method that the WAAS device should use.
tertiary		(Optional) Specifies the third method that the WAAS device should use if the primary and secondary methods fail.
quaternary		(Optional) Specifies the fourth method that the WAAS device should use if the primary, secondary, and tertiary methods all fail.

Defaults The local authentication method is enabled by default.

Command Modes global configuration

Device Modes application-accelerator
central-manager

Usage Guidelines The **authentication** command configures both the authentication and authorization methods that govern login and configuration access to the WAAS device.



Note

We strongly recommend that you use the WAAS Central Manager GUI instead of the WAAS CLI to configure administrative login authentication and authorization for your WAAS devices, if possible. For information about how to use the WAAS Central Manager GUI to centrally configure administrative login authentication and authorization on a single WAE or group of WAEs, which are registered with a WAAS Central Manager, see the *Cisco Wide Area Application Services Configuration Guide*.

The **authentication login** command determines whether the user has any level of permission to access the WAAS device. The **authentication configuration** command authorizes the user with privileged access (configuration access) to the WAAS device.

The **authentication login local** and the **authentication configuration local** commands use a local database for authentication and authorization.

The **authentication login tacacs** and **authentication configuration tacacs** commands use a remote TACACS+ server to determine the level of user access. The WAAS software supports only TACACS+ and not TACACS or Extended TACACS.

To configure TACACS+, use the **authentication** and **tacacs** commands. To enable TACACS+, use the **tacacs enable** command. For more information on TACACS+ authentication, see the [\(config\) tacacs](#) command.

The **authentication login radius** and **authentication configuration radius** commands use a remote RADIUS server to determine the level of user access.

By default, the local method is enabled, with TACACS+ and RADIUS both disabled for login and configuration. Whenever TACACS+ and RADIUS are disabled the local method is automatically enabled. TACACS+, RADIUS, and local methods can be enabled at the same time.

The **primary** option specifies the first method to attempt for both login and configuration; the **secondary** option specifies the method to use if the primary method fails. The **tertiary** option specifies the method to use if both primary and secondary methods fail. The **quaternary** option specifies the method to use if the primary, secondary, and tertiary methods fail. If all methods of an **authentication login** or **authentication configuration** command are configured as primary, or all as secondary or tertiary, local is attempted first, then TACACS+, and then RADIUS.

Enforcing Authentication with the Primary Method

The **authentication fail-over server-unreachable** global configuration command allows you to specify that a failover to the secondary authentication method should occur only if the primary authentication server is unreachable. This feature ensures that users gain access to the WAAS device using the local database only when remote authentication servers (TACACS+ or RADIUS) are unreachable. For example, when a TACACS+ server is enabled for authentication with a user authentication failover configured and the user tries to log in to the WAAS device using an account defined in the local database, login fails. Login succeeds only when the TACACS+ server is unreachable.

You can configure multiple TACACS+ or RADIUS servers; authentication is attempted on the primary server first. If the primary server is unreachable, then authentication is attempted on the other servers in the TACACS+ or RADIUS farm, in order. If authentication fails for any reason other than a server is unreachable, authentication is not attempted on the other servers in the farm. This process applies regardless of the setting of the **authentication fail-over server-unreachable** command.

Login Authentication and Authorization Through the Local Database

Local authentication and authorization uses locally configured login and passwords to authenticate administrative login attempts. The login and passwords are local to each WAAS device and are not mapped to individual usernames.

By default, local login authentication is enabled first. You can disable local login authentication only after enabling one or more of the other administrative login authentication methods. However, when local login authentication is disabled, if you disable all other administrative login authentication methods, local login authentication is reenabled automatically.

Specifying RADIUS Authentication and Authorization Settings

To configure RADIUS authentication on a WAAS device, you must first configure a set of RADIUS authentication server settings on the WAAS device by using the **radius-server** global configuration command. (See the (config) **radius-server** command.)

Use the **authentication login radius** global configuration command to enable RADIUS authentication for normal login mode.

Use the **authentication configuration radius** global configuration command to enable RADIUS authorization.

To disable RADIUS authentication and authorization on a WAAS device, use the **no** form of the **authentication** global configuration command (for example, use the **no authentication login radius enable** command to disable RADIUS authentication).

Specifying TACACS+ Authentication and Authorization Settings

To configure TACACS+ authentication on WAAS devices, you must configure a set of TACACS+ authentication settings on the WAAS device by using the **tacacs** global configuration command. (See the (config) **tacacs** command.)

Server Redundancy

Authentication servers can be specified with the **tacacs host** or **radius-server host** global configuration commands. In the case of TACACS+ servers, the **tacacs host hostname** command can be used to configure additional servers. These additional servers provide authentication redundancy and improved throughput, especially when WAAS device load-balancing schemes distribute the requests evenly between the servers. If the WAAS device cannot connect to any of the authentication servers, no authentication takes place and users who have not been previously authenticated are denied access. Secondary authentication servers are queried in order only if the primary server is unreachable. If authentication fails for any other reason, alternate servers are not queried.

Specifying the Windows Domain Login Authentication

You can enable the Windows domain as an administrative login authentication and authorization method for a device or device group. Before you enable Windows authentication, you must first configure the Windows domain controller by using the **windows-domain wins-server** global configuration command. (See the (config) **windows-domain** command.)



Note

WAAS supports authentication by a Windows domain controller running only on Windows Server 2000 or Windows Server 2003.

Examples

The following example shows how to query the secondary authentication database if the primary authentication server is unreachable. This feature is referred to as the failover server-unreachable feature.

```
WAE(config)# authentication fail-over server-unreachable
```

If you enable the failover server-unreachable feature on the WAAS device, only two login authentication schemes (a primary and secondary scheme) can be configured on the WAAS device. The WAAS device fails over from the primary authentication scheme to the secondary authentication scheme only if the specified authentication server is unreachable.

To enable authentication privileges using the local, TACACS+, RADIUS, or Windows databases, and to specify the order of the administrative login authentication, use the **authentication login** global configuration command. In the following example, RADIUS is specified as the primary method, TACACS+ as the secondary method, Windows as the third method, and the local database as the fourth method. In this example, four login authentication methods are specified because the failover server-unreachable feature is not enabled on the WAAS device.

```
WAE(config)# authentication login radius enable primary
WAE(config)# authentication login tacacs enable secondary
WAE(config)# authentication login windows-domain enable tertiary
WAE(config)# authentication login local enable quaternary
```



Note If you enable the failover server unreachable feature on the WAAS device, make sure that you specify either **TACACS+** or **RADIUS** as the primary scheme for authentication, and specify **local** as the secondary scheme for authentication.

To enable authorization privileges using the local, TACACS+, RADIUS, or Windows databases, and to specify the order of the administrative login authorization (configuration), use the **authentication configuration** global configuration command.



Note Authorization privileges apply to console and Telnet connection attempts, secure FTP (SFTP) sessions, and Secure Shell (SSH, Version 1 and Version 2) sessions.

We strongly recommend that you set the administrative login authentication and authorization methods in the same order. For example, configure the WAAS device to use RADIUS as the primary login method, TACACS+ as the secondary login method, Windows as the tertiary method, and the local method as the quaternary method for both administrative login authentication and authorization.

The following example shows that RADIUS is specified as the primary method, TACACS+ as the secondary method, Windows as the third method, and the local database as the fourth method. In this example, four login authorization (configuration) methods are specified because the failover server-unreachable feature is not enabled on the WAAS device.

```
WAE(config)# authentication configuration radius enable primary
WAE(config)# authentication configuration tacacs enable secondary
WAE(config)# authentication configuration windows-domain enable tertiary
WAE(config)# authentication configuration local enable quaternary
```



Note If you enable the failover server unreachable feature on the WAAS device, make sure that you specify either **TACACS+** or **RADIUS** as the primary scheme for authorization (configuration), and specify **local** as the secondary scheme for authorization (configuration).

The following example shows the resulting output of the **show authentication** command:

```
WAE# show authentication user
```

```
Login Authentication:      Console/Telnet/Ftp/SSH Session
-----
local                      enabled (primary)
Windows domain             enabled
Radius                     disabled
Tacacs+                   disabled
```

Configuration Authentication: Console/Telnet/Ftp/SSH Session

```
-----  
local                enabled (primary)  
Radius               disabled  
Tacacs+              disabled
```

Related Commands

[\(config\) radius-server](#)

[show authentication](#)

[show statistics radius](#)

[show statistics tacacs](#)

[\(config\) tacacs](#)

[windows-domain](#)

[\(config\) windows-domain](#)

(config) authentication strict-password-policy

To activate the strong password policy on a WAAS device, use the **authentication strict-password-policy** global configuration command. To deactivate the strong password policy and use the standard password policy on a WAAS device, use the **no** form of this command.

authentication strict-password-policy [**max-retry-attempts** *number*]

no authentication strict-password-policy [**max-retry-attempts** *number*]

Syntax Description

max-retry-attempts <i>number</i>	Specifies the maximum number of failed login attempts allowed before the user is locked out. The range is 1–25; the default is 3.
---	---

Defaults

The strong password policy is enabled on the WAAS device.

Command Modes

global configuration

Device Modes

application-accelerator
central-manager

Usage Guidelines

When you enable the strong password policy, your user passwords must meet the following requirements:

- The password must be 8 to 31 characters long.
- The password can include both uppercase and lowercase letters (A–Z and a–z), numbers (0–9), and special characters including ~`!@#%&*()_+=[\] ; , < / > .
- The password cannot contain all the same characters (for example, 99999).
- The password cannot contain consecutive characters (for example, 12345).
- The password cannot be the same as the username.
- Each new password must be different from the previous 12 passwords. User passwords expire within 90 days.
- The password cannot contain the characters ' " | (apostrophe, double quote, or pipe) or any control characters.
- The password cannot contain dictionary words.

When you disable the strong password policy, user passwords must meet the following requirements:

- The password must have 1 to 31 characters.
- The password can include both uppercase and lowercase letters (A–Z and a–z), and numbers (0–9).
- The password cannot contain the characters ' " | (apostrophe, double quote, or pipe) or any control characters.

**Note**

When you enable the strong password policy, existing standard-policy passwords will still work. However, these passwords are subject to expiration under the strong password policy.

Examples

The following example shows how to enable the strong password policy:

```
WAE(config)# authentication strict-password-policy
```

The following example shows how to enable the strong password policy and set the maximum retry attempts to 5:

```
WAE(config)# authentication strict-password-policy max-retry-attempts 5
```

The following example shows how to disable the strong password policy:

```
WAE(config)# no authentication strict-password-policy
```

Related Commands

[clear users](#)

[show authentication](#)

[\(config\) authentication configuration](#)

(config) auto-discovery

To configure a WAE to automatically discover origin servers (such as those servers behind firewalls) that cannot receive TCP packets with setup options and add these server IP addresses to a blacklist for a specified number of minutes, use the **auto-discovery** global configuration command. To disable auto-discovery, use the **no** form of this command.

auto-discovery blacklist { **enable** | **hold-time** *minutes* }

no auto-discovery blacklist { **enable** | **hold-time** *minutes* }

Syntax Description	blacklist	Specifies the TFO auto-discovery blacklist server configuration.
	enable	Enables the TFO auto-discovery blacklist operation.
	hold-time <i>minutes</i>	Specifies the maximum time to hold the blacklisted server address in the cache. The range is 1–10080 minutes. The default is 60 minutes.

Defaults The default auto-discovery blacklist hold time is 60 minutes.

Command Modes global configuration

Device Modes application-accelerator

Usage Guidelines Use the **auto-discovery blacklist hold-time** command to adjust the blacklist hold time for the TFO auto-discovery feature. With auto-discovery, the WAE keeps track of origin servers (such as those servers behind firewalls) that cannot receive TCP packets with options and learns not to send out TCP packets with options to these blacklisted servers. When a server IP address is added to the blacklist, it remains on the blacklist for the configured number of minutes. After the hold time expires, subsequent connection attempts will again include TCP options so that the WAE can redetermine if the server can receive them. Resending TCP options periodically is useful because network packet loss could cause a server to be blacklisted erroneously.

Examples The following example shows how to enable TFO auto-discovery blacklist using the **auto-discovery** command:

```
WAE(config)# auto-discovery blacklist enable
```

Related Commands [show statistics auto-discovery](#)

(config) auto-register

To enable the discovery of a Fast Ethernet or Gigabit Ethernet WAE and its automatic registration with the WAAS Central Manager through the Dynamic Host Configuration Protocol (DHCP), use the **auto-register** global configuration command. To disable the autoregistration feature on a WAE, use the **no** form of this command.

auto-register enable [**FastEthernet** *slot/port* | **GigabitEthernet** *slot/port*]

no auto-register enable [**FastEthernet** *slot/port* | **GigabitEthernet** *slot/port*]

Syntax Description	enable	Enables the automatic registration of devices using DHCP with the WAAS Central Manager.
	FastEthernet <i>slot/port</i>	(Optional) Selects a Fast Ethernet interface for automatic registration using DHCP. Slot number and port number of the Fast Ethernet interface. Valid slot values are from 0 to 3.
	GigabitEthernet <i>slot/port</i>	(Optional) Selects a Gigabit Ethernet interface for automatic registration using DHCP. Slot number and port number of the Gigabit Ethernet interface. Valid slot values are 1 or 2.

Defaults Automatic registration using DHCP is enabled on a WAE by default.

Command Modes global configuration

Device Modes application-accelerator

Usage Guidelines Autoregistration automatically configures network settings and registers WAEs with the WAAS Central Manager. On bootup, devices that run the WAAS software (with the exception of the WAAS Central Manager) automatically discover the WAAS Central Manager and register with it. You do not have to do any manual configuration on the device. Once the WAE is registered, you can approve the device and configure it remotely using the WAAS Central Manager GUI.

You can use the **auto-register enable** command to allow a Fast Ethernet or Gigabit Ethernet WAE to discover the hostname of the WAAS Central Manager through DHCP and to automatically register the device with the WAAS Central Manager. Discovery and registration occur at bootup.



Note

You must disable autoregistration when both device interfaces are configured as port-channel interfaces.

For autoregistration to work, you must have a DHCP server that is configured with the hostname of the WAAS Central Manager and that is capable of handling vendor class option 43.



Note

The DHCP that is used for autoregistration is *not* the same as the interface-level DHCP that is configurable through the **ip address dhcp** interface configuration command.

To assign a static IP address using the **interface GigabitEthernet *slot/port*** command, you must first disable the automatic registration of devices through DHCP by using the **no auto-register enable** command.

Examples

The following example shows how to enable autoregistration on GigabitEthernet port 2/0:

```
WAE(config)# auto-register enable GigabitEthernet 2/0
```

The following example shows how to disable autoregistration on all configured interfaces on the WAE:

```
WAE(config)# no auto-register enable
```

Related Commands

[show auto-register](#)

[show running-config](#)

[show startup-config](#)

(config) banner

To configure the EXEC, login, and message-of-the-day (MOTD) banners, use the **banner** global configuration command. To disable the banner feature, use the **no** form of this command.

```
banner {enable | {{exec | login | motd} [message text]}}
```

```
no banner {enable | {{exec | login | motd} [message text]}}
```

Syntax Description

enable	Enables banner support on the WAE.
exec	Configures an EXEC banner.
message text	(Optional) Specifies a message to be displayed when an EXEC process is created. The message text is on a single line (980 characters maximum). The WAE translates the \n portion of the message to a new line when the banner is displayed to the user.
login	Configures a login banner.
motd	Configures an MOTD banner.

Defaults

Banner support is disabled by default.

Command Modes

global configuration

Usage Guidelines

The **message** keyword is optional. If you enter a carriage return without specifying the **message** keyword, you will be prompted to enter your message text. For message text on one or more lines, press the **Return** key or enter delimiting characters (\n) to specify a message to appear on a new line. You can enter up to a maximum of 980 characters, including new-line characters (\n). Enter a period (.) at the beginning of a new line to save the message and return to the prompt for the global configuration mode.



Note

The EXEC banner content is obtained from the command-line input that you enter when prompted for the input.

After you configure the banners, enter the **banner enable** global configuration command to enable banner support on the appliance. Enter the **show banner EXEC** command to display information about the configured banners.



Note

When you run an SSH version 1 client and log in to the WAE, the MOTD and login banners are not displayed. You need to use SSH version 2 to display the banners when you log in to the WAE.

Examples

The following example shows how to use the **banner motd message** global configuration command to configure the MOTD banner. In this example, the MOTD message consists of a single line of text.

```
WAE(config)# banner motd message This is a WAAS 4.0.7 device
```

The following example shows how to use the **banner motd message** global command to configure a MOTD message that is longer than a single line. In this case, the WAE translates the \n portion of the message to a new line when the MOTD message is displayed to the user.

```
WAE(config)# banner motd message "This is the motd message.
\nThis is a WAAS 4.0.7 device\n"
```

The following example shows how to use the **banner login message** global configuration command to configure a login message that is longer than a single line. In this case, WAE A translates the \n portion of the message to a new line in the login message that is displayed to the user.

```
WAE(config)# banner login message "This is login banner.
\nUse your password to login\n"
```

The following example shows how to enable banner support:

```
WAE(config)# banner enable
```

The following example shows how to use the **banner exec** global configuration command to configure an interactive banner. The **banner exec** command is similar to the **banner motd message** commands except that for the **banner exec** command, the banner content is obtained from the command-line input that the user enters after being prompted for the input.

```
WAE(config)# banner exec
Please type your MOTD messages below and end it with '.' at beginning of line:
(plain text only, no longer than 980 bytes including newline)
This is the EXEC banner.\nUse your WAAS username and password to log in to this WAE.\n
.
Message has 99 characters.
WAE(config)#
```

Assume that a WAE has been configured with the MOTD, login, and EXEC banners as shown in the previous examples. When a user uses an SSH session to log in to the WAE, the user will see a login session that includes a MOTD banner and a login banner that asks the user to enter a login password as follows:

```
This is the motd banner.
This is a WAAS 4.0.7 device
This is login banner.
Use your password to login.

Cisco Wide Area Application Services Engine

admin@wae's password:
```

After the user enters a valid login password, the EXEC banner is displayed, and the user is asked to enter the WAAS username and password as follows:

```
Last login: Fri Oct 1 14:54:03 2004 from client
System Initialization Finished.
This is the EXEC banner.
Use your WAAS username and password to log in to this WAE.
```

After the user enters a valid WAAS username and password, the WAE CLI is displayed. The CLI prompt varies depending on the privilege level of the login account. In the following example, because the user entered a username and password that had administrative privileges (privilege level of 15), the EXEC mode CLI prompt is displayed:

```
WAE#
```

■ (config) banner

Related Commands [show banner](#)

(config) bypass

To configure static bypass lists on a WAE, use the **bypass** global configuration command. To disable the bypass feature (clear the static bypass lists), use the **no** form of this command.

bypass static {*clientip* | **any-client**} {*serverip* | **any-server**}

no bypass static {*clientip* | **any-client**} {*serverip* | **any-server**}

Syntax Description	static	Adds a static entry to the bypass list.
	<i>clientip</i>	Requests from this IP address bypass the WAE.
	any-client	Bypasses the traffic from any client destined to a particular server.
	<i>serverip</i>	Requests from this IP address bypass the WAE.
	any-server	Requests from a specified client to any server bypass the WAE.

Defaults No default behaviors or values.

Command Modes global configuration

Device Modes application-accelerator

Usage Guidelines The **bypass static** command permits traffic from specified sources to bypass the WAE. Wildcards in either the client or server IP addresses are not supported.



Note

We recommend that you use IP access lists on the WCCP-enabled router or an interception access list on the WAE, rather than using the static bypass feature, because access lists are more flexible and give better statistics about passed-through connections.

A static bypass list is mutually exclusive with an interception ACL (configured by the **interception access-list** global configuration command). If you have configured an interception ACL, you must remove it before using this command.

Examples The following example shows how to force traffic from a specified client to a specified server to bypass the WAE:

```
WAE(config)# bypass static 10.1.17.1 172.16.7.52
```

The following example shows how to force all traffic destined to a specified server to bypass the WAE:

```
WAE(config)# bypass static any-client 172.16.7.52
```

The following example shows how to force all traffic from a specified client to any file server to bypass the WAE:


```
WAE(config)# bypass static 10.1.17.1 any-server
```

A static list of source and destination addresses helps to isolate instances of problem-causing clients and servers. To display static configuration list items, use the **show bypass list** command as follows:

```
WAE# show bypass list
```

Client	Server	Entry type
-----	-----	-----
10.1.17.1:0	172.16.7.52:0	static-config
any-client:0	172.16.7.52:0	static-config
10.1.17.2:0	any-server:0	static-config

Related Commands

[show bypass](#)

[\(config\) interception access-list](#)

(config) cdp

To configure the Cisco Discovery Protocol (CDP) options globally on all WAAS device interfaces, use the **cdp** global configuration command. To disable CDP, use the **no** form of this command.

cdp { **enable** | **holdtime** *seconds* | **timer** *seconds* }

no cdp { **enable** | **holdtime** *seconds* | **timer** *seconds* }

Syntax Description	enable	Enables CDP globally.
	holdtime <i>seconds</i>	Sets the length of time in seconds (10–255) that a receiver keeps CDP packets before they are discarded. The default is 180 seconds.
	timer <i>seconds</i>	Interval between the CDP advertisements in seconds (5–254). The default is 60 seconds.

Defaults	holdtime: 180 seconds timer: 60 seconds
----------	--

Command Modes	global configuration
---------------	----------------------

Device Modes	application-accelerator central-manager
--------------	--

Examples	The following example shows that when CDP is first enabled, the hold time is set to 10 seconds for keeping CDP packets, and then the rate at which CDP packets are sent (15 seconds) is set: WAE(config)# cdp enable WAE(config)# cdp holdtime 10 WAE(config)# cdp timer 15
----------	---

Related Commands	(config-if) cdp clear arp-cache show cdp
------------------	--

(config) central-manager

To specify the WAAS Central Manager role and port number, use the **central-manager** global configuration command in central-manager device mode. To specify the IP address or hostname of the WAAS Central Manager with which a WAE is to register, use the **central-manager** global configuration command in application-accelerator device mode. To negate these actions, use the **no** form of this command.

central-manager {**address** {*hostname* | *ip-address*} | **role** {**primary** | **standby**} | **ui port** *port-num*}

no central-manager {**address** {*hostname* | *ip-address*} | **role** {**primary** | **standby**} | **ui port** *port-num*}

Syntax Description		
address		Specifies the hostname or IP address of the WAAS Central Manager with which the WAE should register.
<i>hostname</i>		Hostname of the WAAS Central Manager with which the WAE should register.
<i>ip-address</i>		IP address of the WAAS Central Manager with which the WAE should register.
role		Configures the WAAS Central Manager role to either primary or standby.
primary		Configures the WAAS Central Manager to be the primary WAAS Central Manager for the WAEs that are registered with it.
standby		Configures the WAAS Central Manager to be the standby WAAS Central Manager for the WAEs that are registered with it.
ui		Configures the WAAS Central Manager GUI port address.
port <i>port-num</i>		Configures the WAAS Central Manager GUI port (1–65535). The default is port 8443.



Note

The **address** option works in the application-accelerator device mode only. The **role** and **ui port** options work in the central-manager device mode only.

Defaults

The WAAS Central Manager GUI is preconfigured to use port 8443.

Command Modes

global configuration

Device Modes

application-accelerator
central-manager

Examples

The following example shows how to specify that the WAAS device named waas-cm is to function as the primary WAAS Central Manager for the WAAS network:

```
waas-cm(config)# central-manager role primary
```

The following example shows how to specify that the WAE should register with the WAAS Central Manager that has an IP address of 10.1.1.1. This command associates the WAE with the primary WAAS Central Manager so that the WAE can be approved as a part of the WAAS network.

```
WAE(config)# central-manager address 10.1.1.1
```

The following example shows how to configure a new GUI port to access the WAAS Central Manager GUI:

```
WAE(config)# central-manager ui port 8550
```

The following example shows how to configure the WAAS Central Manager as the standby WAAS Central Manager:

```
WAE(config)# central-manager role standby
```

Switching CDM to standby will cause all configuration settings made on this CDM to be lost.

Please confirm you want to continue [no]?yes

Restarting CMS services

(config) clock

To set the summer daylight saving time and time zone for display purposes, use the **clock** global configuration command. To disable this function, use the **no** form of this command.

clock { **timezone** *timezone* *houroffset* [*minutesoffset*] } |
summertime *timezone* { **date** *startday* *startmonth* *startyear* *starthour* *endday* *endmonth* *endyear* *offset* | **recurring** { **1-4** *startweekday* *startmonth* *starthour* *endweekday* *endmonth* *endhour* *offset* | **first** *startweekday* *startmonth* *starthour* *endweekday* *endmonth* *endhour* *offset* | **last** *startweekday* *startmonth* *starthour* *endweekday* *endmonth* *endhour* *offset* } }

no clock { **timezone** *timezone* *houroffset* [*minutesoffset*] } |
summertime *timezone* { **date** *startday* *startmonth* *startyear* *starthour* *endday* *endmonth* *endyear* *offset* | **recurring** { **1-4** *startweekday* *startmonth* *starthour* *endweekday* *endmonth* *endhour* *offset* | **first** *startweekday* *startmonth* *starthour* *endweekday* *endmonth* *endhour* *offset* | **last** *startweekday* *startmonth* *starthour* *endweekday* *endmonth* *endhour* *offset* } }

Syntax Description

timezone <i>timezone</i>	Configures the name of the standard time zone and hours offset from UTC (–23 to +23). See the Usage Guidelines section for offset.
<i>houroffset</i>	
<i>minutesoffset</i>	(Optional) Minutes offset from UTC (0–59). See the Usage Guidelines section for offset.
summertime <i>timezone</i>	Configures the name of the summer or daylight saving time zone.
date	Configures the absolute summer time.
<i>startday</i>	Date (1–31) to start.
<i>startmonth</i>	Month (January through December) to start.
<i>startyear</i>	Year (1993–2032) to start.
<i>starthour</i>	Hour (0–23) to start in hour:minute (hh:mm) format.
<i>endday</i>	Date (1–31) to end.
<i>endmonth</i>	Month (January through December) to end.
<i>endyear</i>	Year (1993–2032) to end.
<i>endhour</i>	Hour (0–23) to end in hour:minute (hh:mm) format.
<i>offset</i>	Minutes offset from UTC (0–59). See the Usage Guidelines section for offset.
recurring	Configures the recurring summer time.
1-4	Configures the starting week number 1–4.
<i>startweekday</i>	Day of the week (Monday–Friday) to start.
<i>endweekday</i>	Weekday (Monday–Friday) to end.
first	Configures the summer time to recur beginning the first week of the month.
last	Configures the summer time to recur beginning the last week of the month.

Defaults

No default behavior or values.

Command Modes

global configuration

Device Modes

application-accelerator
central-manager

Usage Guidelines

To set and display the local and UTC current time of day without an NTP server, use the **clock timezone** command with the **clock set** command. The **clock timezone** parameter specifies the difference between UTC and local time, which is set with the **clock set EXEC** command. The UTC and local time are displayed with the **show clock detail EXEC** command.

**Note**

Unexpected time changes can result in unexpected system behavior. We recommend reloading the system after changing the system clock.

Use the **clock timezone offset** command to specify a time zone, where *timezone* is the desired time zone entry listed in the table below and *0 0* is the offset (ahead or behind) UTC is in hours and minutes. (UTC was formerly known as Greenwich mean time [GMT]).

```
WAE(config)# clock timezone timezone 0 0
```

**Note**

The time zone entry is case sensitive and must be specified in the exact notation listed in [Table 3-1](#). When you use a time zone entry from the time zone table, the system is automatically adjusted for daylight saving time.

Table 3-1 Time Zone—Offsets from UTC

Time Zone	Offset from UTC
Africa/Algiers	+1
Africa/Cairo	+2
Africa/Casablanca	0
Africa/Harare	+2
Africa/Johannesburg	+2
Africa/Nairobi	+3
America/Buenos_Aires	-3
America/Caracas	-4
America/Mexico_City	-6
America/Lima	-5
America/Santiago	-4
Atlantic/Azores	-1
Atlantic/Cape_Verde	-1
Asia/Almaty	+6
Asia/Baghdad	+3
Asia/Baku	+4
Asia/Bangkok	+7
Asia/Colombo	+6

Table 3-1 *Time Zone—Offsets from UTC (continued)*

Time Zone	Offset from UTC
Asia/Dacca	+6
Asia/Hong_Kong	+8
Asia/Irkutsk	+8
Asia/Jerusalem	+2
Asia/Kabul	+4.30
Asia/Karachi	+5
Asia/Katmandu	+5.45
Asia/Krasnoyarsk	+7
Asia/Magadan	+11
Asia/Muscat	+4
Asia/New_Delhi	+5.30
Asia/Rangoon	+6.30
Asia/Riyadh	+3
Asia/Seoul	+9
Asia/Singapore	+8
Asia/Taipei	+8
Asia/Tehran	+3.30
Asia/Vladivostok	+10
Asia/Yekaterinburg	+5
Asia/Yakutsk	+9
Australia/Adelaide	+9.30
Australia/Brisbane	+10
Australia/Darwin	+9.30
Australia/Hobart	+10
Australia/Perth	+8
Australia/Sydney	+10
Canada/Atlantic	−4
Canada/Newfoundland	−3.30
Canada/Saskatchewan	−6
Europe/Athens	+2
Europe/Berlin	+1
Europe/Bucharest	+2
Europe/Helsinki	+2
Europe/London	0
Europe/Moscow	+3
Europe/Paris	+1

Table 3-1 Time Zone—Offsets from UTC (continued)

Time Zone	Offset from UTC
Europe/Prague	+1
Europe/Warsaw	+1
Japan	+9
Pacific/Auckland	+12
Pacific/Fiji	+12
Pacific/Guam	+10
Pacific/Kwajalein	-12
Pacific/Samoa	-11
US/Alaska	-9
US/Central	-6
US/Eastern	-5
US/East-Indiana	-5
US/Hawaii	-10
US/Mountain	-7
US/Pacific	-8

Examples

The following example shows how to specify the local time zone as Pacific Standard Time with an offset of 8 hours behind UTC:

```
WAE(config)# clock timezone US/Pacific -8 0
```

The following example shows how to negate the time zone setting on the WAAS device:

```
WAE(config)# no clock timezone
```

The following example shows how to configure daylight saving time:

```
WAE(config)# clock summertime US/Pacific date 10 October 2005 23:59 29 April 2006 23:59 60
```

Related Commands

[clock](#)

[show clock](#)

(config) cms

To schedule maintenance and enable the Centralized Management System (CMS) on a WAAS device, use the **cms** global configuration command. To negate these actions, use the **no** form of this command.

```
cms {database maintenance {full {enable | schedule weekday at time}} |
    regular {enable | schedule weekday at time}} | enable
```

```
no cms {database maintenance {full {enable | schedule weekday at time}} |
    regular {enable | schedule weekday at time}} | enable
```

```
cms rpc timeout {connection 5-1800 | incoming-wait 10-600 | transfer 10-7200}
```

```
no cms rpc timeout {connection 5-1800 | incoming-wait 10-600 | transfer 10-7200}
```

Syntax Description	
database maintenance	Configures the embedded database clean or reindex maintenance routine.
full	Configures the full maintenance routine and cleans the embedded database tables.
enable	Enables the specified routine or process to be performed on the embedded database tables.
schedule weekday	Sets the schedule for performing the maintenance routine to a day of the week. every-day Every day Mon every Monday Tue every Tuesday Wed every Wednesday Thu every Thursday Fri every Friday Sat every Saturday Sun every Sunday
at time	Sets the maintenance schedule time of day to start the maintenance routine (0–23:0–59) (hh:mm). at Maintenance time of day Mon every Monday Tue every Tuesday Wed every Wednesday Thu every Thursday Fri every Friday Sat every Saturday Sun every Sunday
regular	Configures the regular maintenance routine and reindexes the embedded database tables.
rpc timeout	Configures the timeout values for remote procedure call connections.
connection 5-1800	Specifies the maximum time to wait when making a connection. The timeout period is in seconds. The default for the WAAS Central Manager is 30 seconds; the default for a WAE is 180 seconds.

incoming-wait <i>10-600</i>	Specifies the maximum time to wait for a client response. The timeout period is in seconds. The default is 30 seconds.
transfer <i>10-7200</i>	Specifies the maximum time to allow a connection to remain open. The timeout period is in seconds. The default is 300 seconds.

Defaults

database maintenance regular: enabled
database maintenance full: enabled
connection: 30 seconds for WAAS Central Manager; 180 seconds for a WAE
incoming wait: 30 seconds
transfer: 300 seconds

Command Modes

global configuration

Device Modes

application-accelerator
central-manager

Usage Guidelines

Use the **cms database maintenance** global configuration command to schedule routine full maintenance cleaning (vacuuming) or a regular maintenance reindexing of the embedded database. The full maintenance routine runs only when the disk is more than 90 percent full and only runs once a week. Cleaning the tables returns reusable space to the database system.

The **cms enable** global configuration command automatically registers the node in the database management tables and enables the CMS process. The **no cms enable** global configuration command only stops the management services on the WAAS device. Use the **cms deregister EXEC** command to de-register (remove) a WAAS device from the WAAS network.

Examples


The following example shows how to schedule a regular (reindexing) maintenance routine to start every Friday at 11:00 p.m on the WAAS device:

```
WAE(config)# cms database maintenance regular schedule Fri at 23:00
```

The following example shows how to enable the CMS process on a WAAS device:

```
WAE(config)# cms enable
Generating new RPC certificate/key pair
Restarting RPC services

Creating database backup file emerg-debug-db-01-25-2006-15-31.dump
Registering Wide Area Central Manager...
Registration complete.
Please preserve running configuration using 'copy running-config startup-config'.
Otherwise management service will not be started on reload and node will be shown
'offline' in Wide Area Central Manager UI.
management services enabled
```

 (config) cms

Related Commands [cms](#)
 [show cms](#)

(config) crypto pki

To configure public key infrastructure (PKI) encryption parameters on a WAAS device, use the **crypto pki** global configuration command. To negate these actions, use the **no** form of this command.

crypto pki { *ca certificate-authority-name* | **global-settings** }

Syntax Description	<table> <tr> <td data-bbox="386 493 711 520">ca</td><td data-bbox="719 493 1523 590">Configures encryption certificate authority information. Using this command enables certificate authority configuration mode. See PKI Certificate Authority Configuration Mode Commands, page -743.</td></tr> <tr> <td data-bbox="386 600 711 627"><i>certificate-authority-name</i></td><td data-bbox="719 600 1523 627">The name of the certificate authority that you want to edit.</td></tr> <tr> <td data-bbox="386 638 711 665">global-settings</td><td data-bbox="719 638 1523 728">Configures PKI encryption global settings. Using this command enables PKI global settings configuration mode. See PKI Certificate Authority Configuration Mode Commands, page -743.</td></tr> </table>	ca	Configures encryption certificate authority information. Using this command enables certificate authority configuration mode. See PKI Certificate Authority Configuration Mode Commands, page -743 .	<i>certificate-authority-name</i>	The name of the certificate authority that you want to edit.	global-settings	Configures PKI encryption global settings. Using this command enables PKI global settings configuration mode. See PKI Certificate Authority Configuration Mode Commands, page -743 .
ca	Configures encryption certificate authority information. Using this command enables certificate authority configuration mode. See PKI Certificate Authority Configuration Mode Commands, page -743 .						
<i>certificate-authority-name</i>	The name of the certificate authority that you want to edit.						
global-settings	Configures PKI encryption global settings. Using this command enables PKI global settings configuration mode. See PKI Certificate Authority Configuration Mode Commands, page -743 .						

Defaults No default behavior or values.

Command Modes global configuration

Device Modes application-accelerator
central-manager

Usage Guidelines Use the **crypto pki** global configuration command to enter CA configuration mode or PKI global settings configuration mode.

Examples The following example puts WAAS into CA configuration mode, editing the “my-ca” certification authority. The mode change is indicated by the system prompt:

```
WAE(config)# crypto pki my-ca
WAE(config-ca)#
```

Related Commands [\(config\) crypto ssl](#)
[\(config-ca\) ca-certificate](#)
[\(config-ca\) description](#)
[\(config-ca\) revocation-check](#)

(config) crypto ssl

To configure secure sockets layer (SSL) encryption parameters on a WAAS device, use the **crypto ssl** global configuration command. To negate these actions, use the **no** form of this command.

```
crypto ssl { cipher-list cipher-list-name | management-service |
services { accelerated-service service-name | global-settings | host-service peering } }
```

```
no crypto ssl { cipher-list cipher-list-name | management-service |
services { accelerated-service service-name | global-settings | host-service peering } }
```

Syntax Description

cipher-list <i>cipher-list-name</i>	Configures the SSL cipher suite list. Using this command enables SSL cipher list configuration mode. See the SSL Cipher List Configuration Mode Commands chapter.
management-service	Configures SSL management services. Using this command enables SSL management service configuration mode. See the SSL Management Service Configuration Mode Commands chapter.
services	Configures other SSL services (accelerated, global, and host peering).
accelerated-service <i>service-name</i>	Configures SSL accelerated services. Using this command enables SSL accelerated service configuration mode. See the SSL Accelerated Service Configuration Mode Commands chapter.
global-settings	Configures SSL service global settings. Using this command enables SSL service global configuration mode. See the SSL Global Service Configuration Mode Commands chapter.
host-service peering	Configures SSL host peering services. Using this command enables SSL host peering service configuration mode. See the SSL Host Peering Service Configuration Mode Commands chapter.

Defaults

No default behavior or values.

Command Modes

global configuration

Device Modes

application-accelerator
central-manager

Usage Guidelines

Use the **crypto ssl** global configuration command to enter SSL cipher list configuration mode, SSL management service configuration mode, SSL accelerated service configuration mode, SSL service global configuration mode, or SSL host peering service configuration mode.

Examples

The following example puts the WAAS device into SSL cipher list configuration mode, editing the mylist cipher suite list. The mode change is indicated by the system prompt:

```
WAE(config)# crypto ssl cipher-list mylist  
WAE(config-cipher-list)#
```

The following example puts the WAAS device into SSL management service configuration mode. The mode change is indicated by the system prompt:

```
WAE(config)# crypto ssl management-service  
WAE(config-ssl-mgmt)#
```

The following example puts the WAAS device into SSL accelerated service configuration mode, editing the myservice accelerated service. The mode change is indicated by the system prompt:

```
WAE(config)# crypto ssl services accelerated-service myservice  
WAE(config-ssl-accelerated)#
```

The following example puts the WAAS device into SSL global service configuration mode. The mode change is indicated by the system prompt:

```
WAE(config)# crypto ssl services global-settings  
WAE(config-ssl-global)#
```

The following example puts the WAAS device into SSL host peering service configuration mode. The mode change is indicated by the system prompt:

```
WAE(config)# crypto ssl services host-service peering  
WAE(config-ssl-peering)#
```

Related Commands

[\(config\) crypto pki](#)

(config) device mode

To configure the device mode for the WAAS device, use the **device mode** global configuration command. To reset the mode of operation on your WAAS device, use the **no** form of this command.

device mode { **application-accelerator** | **central-manager** }

no device mode { **application-accelerator** | **central-manager** }

Syntax Description	application-accelerator	Configures the WAAS device to function as a WAAS Accelerator. All of your branch and data center WAEs should be operating in this mode.
	central-manager	Configures the WAAS device to function as a WAAS Central Manager.

Defaults The default device operation mode is application-accelerator.

Command Modes global configuration

Device Modes application-accelerator
central-manager

Usage Guidelines If the WAAS device is operating with an Accelerator only image, you will not be able to convert it to central-manager mode until after you update it with a Full image and reboot. You can use the **show version EXEC** command to check the type of software image the WAE is running.

Examples The following example shows how to specify central manager as the device mode of a WAAS device:

```
WAE(config)# device mode central-manager
```

The following example shows how to specify application accelerator as the device mode of a WAAS device:

```
WAE(config)# device mode application-accelerator
```

To change the device mode from central-manager to application-accelerator, you must first use the **cms deregister** command in EXEC mode to disable the Centralized Management System on the Central Manager, and then use the **device mode** command in global configuration mode, as shown in the following example:

```
WAE# cms deregister
WAE(config)# device mode application-accelerator
WAE# copy running-config startup-config
```

Related Commands [show device-mode](#)

(config) directed-mode

To configure the mode by which traffic is sent between two WAEs, use the **directed-mode** global configuration command. To configure the WAAS device not to use directed mode, use the **no** form of this command.

directed-mode enable [*port udp-port*]

no directed-mode enable [*port udp-port*]

Syntax Description	enable	Enables directed mode.
	port <i>udp-port</i>	Sets the UDP port number to use to send traffic between two WAEs. The default port is 4050.

Defaults The default communication mode to a peer WAE is transparent mode (not directed mode).

Command Modes global configuration

Device Modes application-accelerator

Examples The following example shows how to configure a WAE for directed mode on the default UDP port of 4050:

```
WAE(config)# directed-mode enable
```

Related Commands [show statistics auto-discovery](#)
[show statistics connection closed](#)

(config) disk disk-name

To disable the disk for online removal, use the **disk disk-name** global configuration command. To reenable the disk, use the **no** form of this command.

disk disk-name diskxx shutdown [force]

no disk disk-name diskxx shutdown [force]

Syntax Description	<i>diskxx</i>	Name of the disk (disk00-disk05).
	shutdown	Disables the disk for maintenance.
	force	(Optional) Forces a disk to be reenabled when used with the no form of this command.
		This option is not available on RAID-5 systems.

Defaults Disks are enabled.

Command Modes global configuration

Device Modes application-accelerator
central-manager

Usage Guidelines This command is not available on the WAE-7341 and WAE-7371 models. Instead, use the **disk disk-name diskxx replace EXEC** mode command.

You can replace a failed disk or perform a scheduled disk maintenance on the WAE-612 and WAE-7326. Use the **disk disk-name diskxx shutdown** global configuration command to manually shut down a disk for a scheduled disk maintenance, or on the WAE-7341 and WAE-7371, use the **disk disk-name diskxx replace EXEC** command to manually shut down a disk for scheduled disk maintenance. (For the schedule disk maintenance procedure, see the *Cisco Wide Area Application Services Configuration Guide*, Chapter 14.)



Note

The **show disks failed-disk-id EXEC** command is not available on WAE-7341 and WAE-7371 models.

Examples The following example shows how to disable disk00 for online removal using the **disk disk-name** command:

```
WAE(config)# disk disk-name disk00 shutdown
```

Related Commands (config) disk error-handling

■ (config) disk disk-name

(config) disk logical shutdown

disk

show disks

(config) disk encrypt

To enable disk encryption, use the **disk encrypt** global configuration command. To disable disk encryption, use the **no** form of this command.

disk encrypt enable

no disk encrypt enable

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Defaults	Disk encryption is disabled by default.
-----------------	---

Command Modes	global configuration
----------------------	----------------------

Device Modes	application-accelerator
---------------------	-------------------------

Usage Guidelines	To view the encryption status details, use the show disks details EXEC command. While the file system is initializing, you will see the following message: “System initialization is not finished, please wait...” You may also view the disk encryption status to check whether a disk is enabled or disabled in the Central Manager GUI, Device Home window.
-------------------------	---

Examples	The following example shows how to enable disk encryption using the disk encrypt command:
-----------------	--

```
WAE(config)# disk encrypt enable
```

Related Commands	disk show disks
-------------------------	--

(config) disk error-handling

To configure how disk errors are handled on a WAAS device, use the **disk error-handling** global configuration command. To disable automatic remapping of disk errors, use the **no** form of this command.

disk error-handling remap

no disk error-handling remap

Syntax Description	remap Sets the disk to attempt to remap disk errors automatically.
Defaults	The disk is configured to remap disk errors automatically.
Command Modes	global configuration
Device Modes	application-accelerator central-manager
Examples	The following example shows how to disable automatic remapping of disk errors: WAE(config)# no disk error-handling remap
Related Commands	disk show disks

(config) disk logical shutdown

To shut down the RAID-5 logical disk drive, use the **disk logical shutdown** global configuration command. To reenable the RAID-5 logical disk drive, use the **no** form of this command.

disk logical shutdown

no disk logical shutdown [force]

Syntax Description	force (Optional) Forces RAID Logical drive to be reenabled when used with the no form of this command.
Defaults	The RAID-5 array is configured by default.
Command Modes	global configuration
Device Modes	application-accelerator
Usage Guidelines	<p>This command is supported on WAE-7341, WAE-7371, and WAE-674 models only.</p> <p>Use this command to operate the WAE in diskless mode. In diskless mode, the partitions and disks are not mounted and cannot be used.</p> <p>You must reload the device for this command to take effect.</p> <p>After a multiple disk failure or RAID controller failure, and after the drives are replaced and the RAID disk is rebuilt, the logical disk may remain in the error state. To reenable the disk, use the no disk logical shutdown force command, then reload the WAE.</p>
Examples	<p>The following example shows how shutdown the RAID-5 logical disk drive using the disk logical shutdown command:</p> <pre>WAE(config)# disk logical shutdown</pre>
Related Commands	(config) disk disk-name

(config) disk object-cache extend

To enable extended object cache, use the **disk object-cache** global configuration command. To disable this feature, use the **no** form of this command.

disk object-cache extend

no disk object-cache extend

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Command Default	No default behavior or values.
------------------------	--------------------------------

Command Modes	global configuration
----------------------	----------------------

Device Modes	application-accelerator
---------------------	-------------------------

Usage Guidelines	When extended object cache is enabled, the object cache space is increased only after saving the configuration and performing a reload.
-------------------------	---

**Note**

If you have a virtual blade enabled using vbspace of greater than 30-GB, you must stop the virtual blade and remove the configuration before enabling extended object cache. If the virtual blade usage is less than 30-GB (including saved memory state) vbspace content will be preserved, otherwise vbspace content will be erased. In either case, after enabling extended object cache, the vbspace filesystem will be reduced to 30-GB if virtual blade is enabled.

The status of extended object cache can be displayed using the **show disk details** EXEC mode command. The output of this command states whether extended object cache is enabled or disabled.

This feature is only supported on 674-4G and 674-8G models.

Examples	The following example shows how to enable extended object cache using the disk object-cache extend command on a 674-4GB model:
-----------------	---

```
WAE(config)# disk object-cache extend
Cumulative disk space for all VBs will be reduced to 30GB.
Are you sure want to enable [yes/no]?
```

Related Commands	(config) disk logical shutdown
-------------------------	--

(config) egress-method

To configure the egress method for intercepted connections, use the **egress-method** global configuration command. To unconfigure the egress method, use the **no** form of this command.

egress-method { **ip-forwarding** | **negotiated-return** | **generic-gre** } **intercept-method** **wccp**

no egress-method { **ip-forwarding** | **negotiated-return** | **generic-gre** } **intercept-method** **wccp**

Syntax Description	ip-forwarding	Configures the IP forwarding egress method.
	negotiated-return	Configures the WCCP negotiated return egress method.
	generic-gre	Configures the generic GRE egress method.
	intercept-method	Chooses for which interception method the egress method is being configured.
	wccp	Configures the egress method for WCCP interception.

Defaults The default egress method is IP forwarding.

Command Modes global configuration

Device Modes application-accelerator

Examples The following example shows how to configure the interception and egress method for WCCP GRE packet return from the CLI:

```
WAE(config)# egress-method negotiated-return intercept-method wccp
```

The following example shows how to configure the interception and egress method for IP forwarding from the CLI:

```
WAE(config)# egress-method ip-forwarding intercept-method wccp
```

The following example shows how to configure the interception and egress method for the generic GRE egress method from the CLI by configuring an intercepting router list, and then configuring the generic GRE egress method:

```
WAE(config)# wccp router-list 1 192.168.68.98
WAE(config)# egress-method generic-gre intercept-method wccp
```

The router list must contain the IP address of each intercepting router. Multicast addresses are not supported. Additionally, you must configure a GRE tunnel interface on each router.

To view the egress method that is configured and that is being used on a particular WAE, use the **show egress-methods EXEC** command or the **show statistics connection egress-methods EXEC** command.

To view information about the generic GRE egress method, use the **show generic-gre EXEC** command. To clear statistics information for the generic GRE egress method, use the **clear statistics generic-gre EXEC** command.

Related Commands

[clear arp-cache](#)
[debug egress-method](#)
[show egress-methods](#)
[show tfo tcp](#)
[\(config\) wccp tcp-promiscuous mask](#)

(config) end

To exit global configuration mode, use the **end** global configuration command.

end

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Defaults	No default behavior or values.
-----------------	--------------------------------

Command Modes	global configuration
----------------------	----------------------

Device Modes	application-accelerator central-manager
---------------------	--

Usage Guidelines	Use the end command to exit global configuration mode after completing any changes to the running configuration. To save new configurations to NVRAM, use the write command. In addition, you can press Ctrl-Z to exit global configuration mode.
-------------------------	---

Examples	The following example shows how to exit global configuration mode on a WAAS device: WAE(config)# end WAE#
-----------------	--

Related Commands	(config) exit
-------------------------	-------------------------------

(config) exec-timeout

To configure the length of time that an inactive Telnet or SSH session remains open on a WAAS device, use the **exec-timeout** global configuration command. To revert to the default value, use the **no** form of this command.

exec-timeout *timeout*

no exec-timeout *timeout*

Syntax Description	<p><i>timeout</i> Timeout in minutes (0–44640). A value of 0 sets the logout timeout to infinite.</p>
Defaults	The default is 15 minutes.
Command Modes	global configuration
Device Modes	application-accelerator central-manager
Usage Guidelines	A Telnet session or Secure Shell (SSH) session with the WAAS device can remain open and inactive for the interval of time specified by the exec-timeout command. When the exec-timeout interval elapses, the WAAS device automatically closes the Telnet or SSH session.
Examples	<p>The following example shows how to configure a timeout of 100 minutes:</p> <pre>WAE(config)# exec-timeout 100</pre> <p>The following example shows how to negate the configured timeout of 100 minutes and revert to the default value of 15 minutes:</p> <pre>WAE(config)# no exec-timeout</pre>
Related Commands	(config) telnet enable

(config) exit

To terminate global configuration mode and return to the privileged-level EXEC mode, use the **exit** command.

exit

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Defaults	No default behavior or values.
-----------------	--------------------------------

Command Modes	All modes
----------------------	-----------

Device Modes	application-accelerator central-manager
---------------------	--

Usage Guidelines	This command is equivalent to pressing Ctrl-Z or entering the end command.
-------------------------	--

Examples	The following example shows how to terminate global configuration mode and return to the privileged-level EXEC mode:
-----------------	--

```
WAE(config)# exit  
WAE#
```

Related Commands	(config) end
-------------------------	------------------------------

(config) flow monitor

To enable network traffic flow monitoring and to register the WAE with the tcpstat-v1 collector for traffic analysis, use the **flow monitor** global configuration command. To disable the network traffic flow configuration, use the **no** form of this command.

```
flow monitor tcpstat-v1 {enable | host ip_address}

no flow monitor tcpstat-v1 {enable | host ip_address}
```

Syntax Description	tcpstat-v1	Sets the tcpstat-v1 collector configuration.
	enable	Enables flow monitoring.
	host ip_address	Specifies the IP address of the collection control agent.

Defaults The default configuration has no host address configured and the feature is disabled.

Command Modes global configuration

Device Modes application-accelerator

Usage Guidelines For information about how to configure flow monitoring on the WAE, see the *Cisco Wide Area Application Services Configuration Guide*, Chapter 15.

Examples The following example shows how to enable flow monitoring using the **flow monitor** command:

```
WAE(config)# flow monitor tcpstat-v1 enable
```

Related Commands [debug flow](#)

(config) help

To obtain online help for the command-line interface, use the **help** global configuration command. To disable help, use the **no help** form of this command.

help

no help

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Defaults	No default behavior or values.
-----------------	--------------------------------

Command Modes	EXEC and global configuration
----------------------	-------------------------------

Device Modes	application-accelerator central-manager
---------------------	--

Usage Guidelines	<p>You can obtain help at any point in a command by entering a question mark (?). If nothing matches, the help list will be empty, and you must use the backspace key until entering a ? shows the available options.</p> <p>Two styles of help are provided:</p> <ul style="list-style-type: none"> • Full help is available when you are ready to enter a command argument (for example, show ?) and describes each possible argument. • Partial help is provided when you enter an abbreviated command and you want to know what arguments match the input (for example, show stat?).
-------------------------	--

Examples	The following example shows the output of the help global configuration command:
-----------------	---

```
WAE# configure
WAE(config)# help
Help may be requested at any point in a command by entering a question mark '?'. If
nothing matches, the help list will be empty and you must backup until entering a '?'
shows the available options.
```

Two styles of help are provided:

1. Full help is available when you are ready to enter a command argument.
2. Partial help is provided when an abbreviated argument is entered.

The following example shows how to use full help to see what WCCP command arguments are available:

```
WAE# configure
WAE(config)# wccp ?
  access-list      Configure an IP access-list for inbound WCCP encapsulate
                   traffic
  flow-redirect     Redirect moved flows
  router-list       Router List for use in WCCP services
```

shutdown	Wccp Shutdown parameters
slow-start	accept load in slow-start mode
tcp-promiscuous	TCP promiscuous mode service
version	WCCP Version Number

The following example shows how to use partial help to determine the syntax of a WCCP argument:

```
WAE(config)# wccp tcp ?  
mask          Specify mask used for CE assignment  
router-list-num Router list number
```

Related Commands [show running-config](#)

(config) hostname

To configure the network hostname on a WAAS device, use the **hostname** global configuration command. To reset the hostname to the default setting, use the **no** form of this command.

hostname *name*

no hostname *name*

Syntax Description

<i>name</i>	New hostname for the WAAS device; the name is case sensitive. The name may be from 1 to 30 alphanumeric characters.
-------------	---

Defaults

The default hostname is the model number of the WAAS device (for example WAE-612 or WAE-7371).

Command Modes

global configuration

Device Modes

application-accelerator
central-manager

Usage Guidelines

Use this command to configure the hostname for the WAAS device. The hostname is used for the command prompts and default configuration filenames. This name is also used for routing, so it conforms to the following rules:

- It can use only alphanumeric characters and hyphens (-).
- The maximum length is 30 characters.
- The following characters are considered illegal and cannot be used when naming a device: @, #, \$, %, ^, &, *, (), |, \"/>, < >.

Examples

The following example shows how to change the hostname of the WAAS device to *sandbox*:

```
WAE-674(config)# hostname sandbox
Sandbox(config)#
```

The following example shows how to remove the hostname:

```
Sandbox(config)# no hostname
WAE-674(config)#
```

Related Commands

[dnslookup](#)
[\(config\) ip](#)
[\(config-if\) ip](#)

■ (config) hostname

show hosts

(config) inetd

To enable FTP and RCP services on a WAAS device, use the **inetd enable** global configuration command. To disable these same services, use the **no** form of this command.

inetd enable {ftp | rcp}

no inetd enable {ftp | rcp}

Syntax Description	enable	Enables services.
	ftp	Enables FTP services.
	rcp	Enables RCP services.

Defaults	FTP is enabled; RCP is disabled.
-----------------	----------------------------------

Command Modes	global configuration
----------------------	----------------------

Device Modes	application-accelerator central-manager
---------------------	--

Usage Guidelines	Inetd (an Internet daemon) is a program that listens for connection requests or messages for certain ports and starts server programs to perform the services associated with those ports. Use the inetd enable command with the ftp and rcp keywords to enable and disable services on the WAAS device. To disable the service, enter the no form of the inetd enable command. Use the show inetd EXEC command to see whether current inetd sessions are enabled or disabled.
-------------------------	---

Examples	The following example shows how to enable an FTP service session on the WAAS device:
-----------------	--

```
WAE(config)# inetd enable ftp
```

The following example shows how to disable FTP services:

```
WAE(config)# no inetd enable ftp
```

Related Commands	show inetd
-------------------------	----------------------------

(config) inline vlan-id-connection-check

To enable VLAN ID checking on intercepted traffic, use the **inline vlan-id-connection-check** global configuration command. To disable VLAN ID checking, use the **no** form of this command.

inline vlan-id-connection-check

no inline vlan-id-connection-check

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Defaults	VLAN ID checking is enabled.
-----------------	------------------------------

Command Modes	global configuration
----------------------	----------------------

Device Modes	application-accelerator central-manager
---------------------	--

Examples	The following example shows how to enable VLAN ID checking of the intercepted traffic on the WAAS device:
-----------------	---

```
WAE(config)# inline vlan-id-connection-check
```

The following example shows how to disable VLAN ID checking:

```
WAE(config)# no inline vlan-id-connection-check
```

Related Commands	(config) interface GigabitEthernet (config-if) encapsulation dot1Q
-------------------------	---

(config) interception access-list

To configure traffic interception with an access list, use the **interception access-list** global configuration command. To disable the interception access list, use the **no** form of this command.

interception access-list {*acl-num* | *acl_name*}

no interception access-list

Syntax Description	<i>acl_num</i>	Numeric identifier that identifies the ACL to apply to traffic interception. For standard ACLs, the valid range is 1–99; for extended ACLs, the valid range is 100–199.
	<i>acl_name</i>	Alphanumeric identifier of up to 30 characters, beginning with a letter that identifies the ACL to apply to traffic interception.

Defaults	No default behaviors or values.
-----------------	---------------------------------

Command Modes	global configuration
----------------------	----------------------

Device Modes	application-accelerator central-manager
---------------------	--

Usage Guidelines	<p>Use the interception access-list command to apply an access list (ACL) to traffic interception. Packets permitted by the ACL are intercepted for WAAS optimization. Packets denied by the ACL are passed through by WAAS. You can define ACLs by using the ip access-list standard or ip access-list extended configuration commands.</p>
-------------------------	---

You can configure only one interception ACL on a device.

If you specify an interception ACL that is not defined, it is considered to be a “permit any” ACL and all traffic is intercepted.

An interception ACL is mutually exclusive with a static bypass list (configured by the **bypass** global configuration command). If you have configured a static bypass list, you must remove it before using this command.

An interception ACL works both with WCCP and inline interception modes.

When used with interface ACLs and WCCP ACLs, the interface ACL is applied first, the WCCP ACL is applied second, and then the interception ACL is applied last.

Examples	<p>The following example shows how to define and apply an ACL that intercepts all traffic except WWW traffic from a particular client:</p>
-----------------	--

```
dc-wae(config)# ip access-list extended iacl
dc-wae(config-ext-nacl)# deny tcp host 10.74.2.132 any eq www
dc-wae(config-ext-nacl)# permit ip any any
```

(config) interception access-list

```
dc-wae(config-ext-nacl)# exit  
dc-wae(config)# interception access-list iacl
```

Related Commands
[\(config\) bypass](#)
[\(config\) ip access-list](#)

(config) interface GigabitEthernet

To configure a Gigabit Ethernet interface, use the **interface** global configuration command. To disable selected options, restore default values, or enable a shutdown interface, use the **no** form of this command.

```
interface GigabitEthernet slot/port [autosense | bandwidth {10 | 100 | 1000} | cdp enable |
channel-group 1 | description text | full-duplex | half-duplex |
ip {access-group {acl-num | acl_name} {in | out} |
address {ip_address netmask [secondary]} | dhcp [client-id id hostname name |
hostname name client-id id]] | mtu mtusize | shutdown |
standby 1 [primary]]
```

```
no interface GigabitEthernet slot/port [autosense | bandwidth {10 | 100 | 1000} | cdp enable |
channel-group 1 | description text | full-duplex | half-duplex |
ip {access-group {acl-num | acl_name} {in | out} |
address {ip_address netmask [secondary]} | dhcp [client-id id hostname name |
hostname name client-id id]] | mtu mtusize | shutdown |
standby 1 [primary]]
```

Syntax	Description
GigabitEthernet <i>slot/port</i>	Selects a Gigabit Ethernet interface to configure (slot and port number). The slot range is 0–2; the port range is 0–3. The slot number and port number are separated with a forward slash character (/).
autosense	(Optional) Sets the GigabitEthernet interface to automatically sense the interface speed.
bandwidth	(Optional) Sets the bandwidth of the specified interface.
10	Sets the bandwidth of the interface to 10 megabits per second (Mbps).
100	Sets the bandwidth of the interface to 100 Mbps.
1000	Sets the bandwidth of the interface to 1000 Mbps. This option is not available on all ports and is the same as autosense.
cdp enable	(Optional) Enables Cisco Discovery Protocol (CDP) on the specified interface.
channel-group 1	(Optional) Assigns the interface EtherChannel to group 1.
description text	Enters a description of the interface.
full-duplex	(Optional) Sets the interface to full-duplex operation.
half-duplex	(Optional) Sets the interface to half-duplex operation.
	Note We strongly recommend that you do not use half duplex on the WAE, routers, switches, or other devices.
ip	(Optional) Enables IP configuration commands for the interface.
access-group	Configures access control for IP packets on this interface using access control list (ACL).
<i>acl_num</i>	Numeric identifier that identifies the ACL to apply to the current interface. For standard ACLs, the valid range is 1–99; for extended ACLs, the valid range is 100–199.
<i>acl_name</i>	Alphanumeric identifier of up to 30 characters, beginning with a letter that identifies the ACL to apply to the current interface.

in	Applies the specified ACL to inbound packets on the current interface.
out	Applies the specified ACL to outbound packets on the current interface.
address <i>ip-address</i> <i>netmask</i>	Sets the interface IP address and netmask.
secondary	(Optional) Specifies that the configured address is a secondary IP address. If this keyword is omitted, the configured address is the primary IP address.
dhcp	(Optional) Sets the IP address to the address that is negotiated over Dynamic Host Configuration Protocol (DHCP).
client-id <i>id</i>	(Optional) Specifies the client identifier.
hostname <i>name</i>	(Optional) Specifies the hostname.
mtu <i>mtusize</i>	(Optional) Sets the interface Maximum Transmission Unit (MTU) size in bytes (88–1500).
shutdown	(Optional) Shuts down this interface.
standby 1	(Optional) Sets the standby group number to 1.
primary	(Optional) Sets this interface as the active interface in the standby group.

Defaults

The first attached interface in a standby group is defined as the active interface. There are no other default behaviors or values.

Command Modes

global configuration

Device Modes

application-accelerator
central-manager

Usage Guidelines

Although the CLI contains the **no interface** option, you cannot apply the **no** command to an interface. The software displays the following error message: Removing of physical interface is not permitted.

To configure an interface bandwidth on a WAAS device, use the **bandwidth** interface configuration command. The bandwidth is specified in megabits per second (Mbps). Using this option automatically enables autosense on the interface.

Using the **cdp enable** command in global configuration mode enables CDP globally on all the interfaces. If you want to control CDP behavior per interface, use the **cdp enable** command in interface configuration mode. The interface level control overrides the global control.

To display the interface identifiers (for example, interface GigabitEthernet 1/0), use the **show running-config** or **show startup-config** commands. The **autosense**, **bandwidth**, **full-duplex**, **half-duplex**, **ip**, and **shutdown** commands are listed separately in this command reference.

**Note**

When you use the **ip address** command to change the IP address of an interface that has been shut down, it automatically brings up that interface by default.

Configuring Multiple Secondary IP Addresses on a Single Physical Interface

Use the **interface secondary** global configuration command to configure more than one IP address on the same interface. By configuring multiple IP addresses on a single interface, the WAAS device can be present in more than one subnet. This configuration allows you to optimize the response time because the content goes directly from the WAAS device to the requesting client without being redirected through a router. The WAAS device becomes visible to the client because they are configured on the same subnet.

You can assign up to four secondary addresses to an interface. These addresses become active only after you configure the primary address. No two interfaces can have the same IP address in the same subnetwork. To set these secondary IP addresses, use the **ip address** command.

If a WAAS device has one physical interface that has multiple secondary IP addresses assigned to it, the egress traffic uses the source IP address that is chosen by IP routing. If the secondary IP addresses of a WAAS device in the same subnet as the primary IP address, then the egress traffic uses the primary IP address only. If the secondary IP addresses are in a different subnet than the primary IP address, then the destination IP address determines which IP address on the WAAS device is used for the egress traffic.

Configuring Interfaces for DHCP

When you configure a WAAS device initially, you can configure a static IP address or use interface-level DHCP to dynamically assign IP addresses to the interfaces on the WAAS device.

If you do not enable interface-level DHCP on the WAAS device, you must manually specify a static IP address and network mask for the WAAS device. If the WAAS device moves to another location in another part of the network, you must manually enter a new static IP address and network mask for this WAAS device.

You can enable an interface for DHCP using the **ip address dhcp** [*client_id* | *hostname*] interface configuration command. The client identifier is an ASCII value. The WAAS device sends its configured client identifier and hostname to the DHCP server when requesting network information. You can configure DHCP servers to identify the client identifier and the hostname that the WAAS device is sending and then send the specific network settings that are assigned to the WAAS device.



Note

You must disable autoregistration before you can manually configure an interface for DHCP. Autoregistration is enabled by default on the first interface of the device.

Defining Interface Descriptions

You can specify a one-line description for a specific interface on a WAAS device. Use the **description text** interface configuration command to enter the description for the specific interface. The maximum length of the description text is 240 characters. This feature is supported for the Gigabit Ethernet, port-channel, and Standby interfaces.



Note

This feature is not currently supported for the SCSI or IDE interfaces.

After you define the description for an interface, use the **show EXEC** commands to display the defined interface descriptions. Enter the **show interface interface type slot/port EXEC** command to display the defined description for a specific interface on the WAE.

Configuring a Standby Group

You can associate an interface with a standby group by using the **standby 1** interface configuration command. To make an interface the active interface in a standby group, use the **standby 1 primary** interface configuration command. If you have already associated an interface with a standby group but

have not made it the primary interface, you cannot specify the command again to add the primary designation. First, remove the interface from the standby group, then reassign it, specifying the **primary** option at the same time.

A physical interface can be a member of a standby group or a port channel, but not both.

You cannot assign an IP address to both a standby group and a port channel. Only one virtual interface can be configured with an IP address.

Examples

The following example shows how to configure an attribute of an interface with a single CLI command:

```
WAE(config)# interface GigabitEthernet 1/0 full-duplex
```

The following example shows that an interface can be configured in a sequence of CLI commands:

```
WAE(config)# interface GigabitEthernet 1/0
WAE(config-if)# full-duplex
WAE(config-if)# exit
WAE(config)#
```

The following example shows how to enable a shut down interface:

```
WAE(config)# no interface GigabitEthernet 1/0 shutdown
```

The following example shows how to create an EtherChannel. The port channel is port channel 1 and is assigned an IP address of 10.10.10.10 and a netmask of 255.0.0.0

```
WAE# configure
WAE(config)# interface PortChannel 1
WAE(config-if)# ip address 10.10.10.10 255.0.0.0
WAE(config-if)# exit
```

The following example shows how to remove an EtherChannel:

```
WAE(config)# interface PortChannel 1
WAE(config-if)# no ip address 10.10.10.10 255.0.0.0
WAE(config-if)# exit
WAE(config)# no interface PortChannel 1
```

The following example shows how to add an interface to a channel group:

```
WAE# configure
WAE(config)# interface GigabitEthernet 1/0
WAE(config-if)# channel-group 1
WAE(config-if)# exit
```

The following example shows how to remove an interface from a channel group:

```
WAE(config)# interface GigabitEthernet 1/0
WAE(config-if)# no channel-group 1
WAE(config-if)# exit
```

The following example shows how to assign a secondary IP address on a Gigabit Ethernet interface on a WAAS device:

```
WAE# configure
WAE(config)# interface GigabitEthernet 1/0
WAE(config-if)# ip address 10.10.10.10 255.0.0.0 secondary
```

The following example shows how to configure a description for a Gigabit Ethernet interface:

```
WAE(config)# interface GigabitEthernet 1/0
WAE(config-if)# description This is a GigabitEthernet interface.
```

Related Commands[show interface](#)[show running-config](#)[show startup-config](#)

(config) interface InlineGroup

To configure an InlineGroup interface, use the **interface** global configuration command. To disable selected options, restore default values, or enable a shutdown interface, use the **no** form of this command.

```
interface InlineGroup slotgrpnumber [autosense | bandwidth { 10 | 100 | 1000 } | cdp enable |
encapsulation dot1q VLAN | failover timeout { 1 | 3 | 5 } | full-duplex | half-duplex | inline
[vlan { all | native | vlan_list } ] | ip { access-group { acl-num | acl_name } } { in | out } | shutdown]
```

```
no interface InlineGroup slotgrpnumber [autosense | bandwidth { 10 | 100 | 1000 } | cdp enable
| encapsulation dot1q VLAN | failover timeout { 1 | 3 | 5 } | full-duplex | half-duplex | inline
[vlan { all | native | vlan_list } ] | ip { access-group { acl-num | acl_name } } { in | out } | shutdown]
```

Syntax Description

InlineGroup <i>slotgrpnumber</i>	Sets the slot and inline group number for the selected interface. The group number for the inline feature is either 0 or 1 (each adapter has 2 grouped pairs).
autosense	(Optional) Sets the Gigabit Ethernet interface to automatically sense the interface speed.
bandwidth	(Optional) Sets the bandwidth of the specified interface.
10	Sets the bandwidth of the interface to 10 megabits per second (Mbps).
100	Sets the bandwidth of the interface to 100 Mbps.
1000	Sets the bandwidth of the interface to 1000 Mbps. This option is not available on all ports and is the same as autosense.
cdp enable	(Optional) Enables Cisco Discovery Protocol (CDP) on the specified interface.
encapsulation dot1q <i>VLAN</i>	(Optional) Sets the 802.1Q VLAN ID to be assigned to traffic leaving the WAE through this interface. The VLAN ID can range from 1–4094.
failover	(Optional) Modifies failover parameters.
timeout	(Optional) Sets the maximum time for the inline group of interfaces to transfer traffic to another port in the group after a failover event.
1	Number of seconds before a failover occurs.
3	Number of seconds before a failover occurs.
5	Number of seconds before a failover occurs.
full-duplex	(Optional) Sets the interface to full duplex.
half-duplex	(Optional) Sets the interface to half duplex.
	Note We strongly recommend that you do not use half duplex on the WAE, routers, switches, or other devices.
inline	(Optional) Enables inline interception for an InlineGroup of interfaces.
vlan	(Optional) Modifies the VLAN list parameters.
all	Applies the command to all tagged and untagged packets.
native	Specifies untagged packets.
<i>vlan_list</i>	Comma-separated list of VLAN IDs. Restricts the inline feature to the specified set of VLANs.
ip	(Optional) Enables IP configuration commands for the interface.

access-group	Configures access control for IP packets on this interface using access control list (ACL).
<i>acl_num</i>	Numeric identifier that identifies the ACL to apply to the current interface. For standard ACLs, the valid range is 1–99; for extended ACLs, the valid range is 100–199.
<i>acl_name</i>	Alphanumeric identifier of up to 30 characters, beginning with a letter that identifies the ACL to apply to the current interface.
in	Applies the specified ACL to inbound packets on the current interface.
out	Applies the specified ACL to outbound packets on the current interface.
shutdown	(Optional) Shuts down this interface.

Defaults

No default behavior or values.

Command Modes

global configuration

Device Modes

application-accelerator
central-manager

Usage Guidelines

An InlineGroup interface is a logical grouping of a pair of Ethernet ports that are physically contained in the optional 4-port Cisco WAE Inline Network Adapter. The inline network adapter is supported on all WAAS appliance platforms beginning with the WAAS 4.0.7 release. Two Cisco WAE Inline Network Adapters are supported in the WAE-7341/7371/674 beginning with the WAAS 4.2.1 release.

You can have up to two (or four) InlineGroup interfaces, which allows for two (or four) bypass-enabled paths for traffic to pass through the WAE appliance, making multiple-router deployments possible. The InlineGroup interfaces provide failover capability and can be assigned to any set of VLANs. (For examples of InlineGroup interface configurations, see the [\(config-if\) inline](#) command.)

You can configure the InlineGroup interface for link speed (**bandwidth** or **autosense**) and mode of operation (**half-duplex** or **full-duplex**).

**Note**

If the VLAN ID that you set with the **encapsulation dot1q** option does not match the VLAN ID expected by the router subinterface, you may not be able to connect to the inline interface IP address.

The inline adapter supports only a single VLAN ID for each inline group interface. If you have configured a secondary address from a different subnet on an inline interface, you must have the same secondary address assigned on the router subinterface for the VLAN.

**Note**

We strongly recommend that you do not use half duplex on the WAE, routers, switches, or other devices. Use of half-duplex impedes system ability to improve performance and should not be used. Double-check each Cisco WAE interface as well as the port configuration on the adjacent device (router, switch, firewall, WAE) to verify that full-duplex is configured.

■ (config) interface InlineGroup

Related Commands

[show interface](#)

[show running-config](#)

[show startup-config](#)

(config) interface PortChannel

To configure a port-channel interface, use the **interface** global configuration command. To disable selected options, restore default values, or enable a shutdown interface, use the **no** form of this command.

```
interface PortChannel 1 [description text | ip {access-group {acl-num | acl_name} {in | out} | address ip-address netmask} | shutdown]
```

```
no interface PortChannel 1 [description text | ip {access-group {acl-num | acl_name} {in | out} | address ip-address netmask} | shutdown]
```

Syntax Description	PortChannel 1	Configures an EtherChannel.
	description <i>text</i>	(Optional) Enters a description of the interface.
	ip	(Optional) Enables IP configuration commands for the interface.
	access-group	Configures access control for IP packets on this interface using an access control list (ACL).
	<i>acl_num</i>	Numeric identifier that identifies the ACL to apply to the current interface. For standard ACLs, the valid range is 1–99; for extended ACLs, the valid range is 100–199.
	<i>acl_name</i>	Alphanumeric identifier of up to 30 characters, beginning with a letter that identifies the ACL to apply to the current interface.
	in	Applies the specified ACL to inbound packets on the current interface.
	out	Applies the specified ACL to outbound packets on the current interface.
	address <i>ip-address netmask</i>	Sets the interface IP address and netmask.
	shutdown	(Optional) Shuts down this interface.

Defaults No default behavior or values.

Command Modes global configuration

Device Modes application-accelerator
central-manager

Usage Guidelines EtherChannel for the WAAS software supports the grouping of two same-speed network interfaces into one virtual interface. This configuration allows you to set or remove a virtual interface that consists of the two integrated Gigabit Ethernet interfaces. EtherChannel also provides interoperability with Cisco routers, switches, and other networking devices or hosts supporting EtherChannel, load balancing, and automatic failure detection and recovery based on the current link status of each interface. You must configure EtherChannel on the switch or router if you configure it on the WAE.

You cannot remove an EtherChannel that is configured as the primary interface on a WAE.

**Note**

You cannot use the inline Ethernet interfaces that are located on the WAE inline network adapter to form an EtherChannel.

**Note**

No two interfaces can have IP addresses in the same subnet.

Examples

The following example shows how to create an EtherChannel. The port channel is port channel 1 and is assigned an IP address of 10.10.10.10 and a netmask of 255.0.0.0:

```
WAE# configure
WAE(config)# interface PortChannel 1
WAE(config-if)# ip address 10.10.10.10 255.0.0.0
WAE(config-if)# exit
```

The following example shows how to remove an EtherChannel:

```
WAE(config)# interface PortChannel 1
WAE(config-if)# no ip address 10.10.10.10 255.0.0.0
WAE(config-if)# exit
WAE(config)# no interface PortChannel 1
```

Related Commands

[show interface](#)
[show running-config](#)
[show startup-config](#)

(config) interface standby

To configure a standby interface, use the **interface standby** global configuration command. To disable selected options, restore default values, or enable a shutdown interface, use the **no** form of this command.

```
interface Standby 1 {description text | ip address ip_address netmask | shutdown}
```

```
no interface Standby 1 {description text | ip address ip_address netmask | shutdown}
```

Syntax Description

Standby 1	Configures a standby interface.
description <i>text</i>	Enters a description of the interface.
ip address <i>ip_address netmask</i>	Specifies the IP address and netmask of the interface.
shutdown	Shuts down this interface.

Defaults

No default behavior or values.

Command Modes

global configuration

Device Modes

application-accelerator
central-manager

Usage Guidelines

A standby interface cannot be removed if it is configured as the system primary interface.



Note

No two interfaces can have IP addresses in the same subnet.

Related Commands

[show interface](#)
[show running-config](#)
[show startup-config](#)

(config) ip

To change the initial network device configuration settings, use the **ip** global configuration command. To delete or disable these settings, use the **no** form of this command.

```
ip { default-gateway ip-address | domain-name name1 name2 name3 |
    ip host hostname ip-address | ip name-server ip-addresses |
    ip path-mtu-discovery enable | ip route dest_addrs net_addrs gateway_addrs }

no ip { default-gateway ip-address | domain-name name1 name2 name3 |
    ip host hostname ip-address | ip name-server ip-addresses |
    ip path-mtu-discovery enable | ip route dest_addrs net_addrs gateway_addrs }
```

Syntax Description	
default-gateway <i>ip-address</i>	Specifies the IP address of the default gateway (if not routing IP).
domain-name <i>name1</i> <i>name2</i> <i>name3</i>	Specifies domain names (up to three can be specified).
host <i>hostname ip-address</i>	Adds an entry to the /etc/hosts file on the device, mapping the specified hostname to the specified IP address of the host.
name-server <i>ip-addresses</i>	Specifies the address of the name server and IP addresses of the name servers (up to a maximum of eight).
path-mtu-discovery enable	Enables RFC 1191 Path Maximum Transmission Unit (MTU) discovery.
route <i>dest_addrs net_addrs</i> <i>gateway_addrs</i>	Specifies the net route (destination route address, netmask address, and gateway address).

Defaults No default behavior or values.

Command Modes global configuration

Device Modes application-accelerator
central-manager

Usage Guidelines To define a default gateway, use the **ip default-gateway** command. You can only configure one default gateway. To remove the IP default gateway, use the **no** form of this command. The WAAS device uses the default gateway to route IP packets when there is no specific route found to the destination.

To define a default domain name, use the **ip domain-name** command. To remove the IP default domain name, use the **no** form of this command. You can enter up to three domain names. If a request arrives without a domain name appended in its hostname, the proxy tries to resolve the hostname by appending *name1*, *name2*, and *name3* in that order until one of these names succeeds.

To add an entry to the `/etc/hosts` file on the device, mapping a hostname to an IP address, use the **ip host** command. A given hostname can be mapped only to a single IP address, while an IP address can have multiple hostnames mapped to it, each one through a separate issuance of this command. To remove the entry from the `/etc/hosts` file, use the **no** form of this command. You can use the **show hosts EXEC** command to display the contents of the `/etc/hosts` file.

To specify the address of one or more name servers to use for name and address resolution, use the **ip name-server ip-addresses** command. To disable IP name servers, use the **no** form of this command. For proper resolution of the hostname to the IP address or the IP address to the hostname, the WAAS device uses DNS servers. Use the **ip name-server** command to point the WAAS device to a specific DNS server. You can configure up to eight servers.

Path MTU autodiscovery discovers the MTU and automatically sets the correct value. Use the **ip path-mtu-discovery enable** command to start this autodiscovery utility. By default, this feature is disabled because the WAE does not receive ICMP packets. When this feature is disabled, the sending device uses a packet size that is smaller than 576 bytes and the next hop MTU. Existing connections are not affected when this feature is turned on or off.

Use the **ip route** command to add a specific static route for a network or host. Any IP packet designated for the specified destination uses the configured route.

To configure static IP routing, use the **ip route** command. To remove the route, use the **no** form of this command. Do not use the **ip route 0.0.0.0 0.0.0.0** command to configure the default gateway; use the **ip default-gateway** command instead.

Examples

The following example shows how to configure a default gateway for the WAAS device:

```
WAE(config)# ip default-gateway 192.168.7.18
```

The following example shows how to configure a static IP route for the WAAS device:

```
WAE(config)# ip route 172.16.227.128 255.255.255.0 172.16.227.250
```

The following example shows how to configure a default domain name for the WAAS device:

```
WAE(config)# ip domain-name cisco.com
```

The following example shows how to add an entry to the `/etc/hosts` file on the WAAS device:

```
WAE(config)# ip host corp-B7 10.11.12.140
```

The following example shows how to configure a name server for the WAAS device:

```
WAE(config)# ip name-server 10.11.12.13
```

Related Commands

[show hosts](#)

[show ip routes](#)

(config) ip access-list

To create and modify access lists on a WAAS device for controlling access to interfaces or applications, use the **ip access-list** global configuration command. To disable an access list, use the **no** form of this command.

ip access-list { **standard** { *acl-name* | *acl-num* } | **extended** { *acl-name* | *acl-num* } | **logging** }

no ip access-list { **standard** { *acl-name* | *acl-num* } | **extended** { *acl-name* | *acl-num* } | **logging** }

Syntax Description		
standard		<p>Enables standard ACL configuration mode. The CLI enters the standard ACL configuration mode in which all subsequent commands apply to the current standard access list. The (config-std-nacl) prompt appears:</p> <p>WAE(config-std-nacl)#</p> <p>See the “Standard ACL Configuration Mode Commands” section for details about working with entries in a standard access list and the commands available from the standard ACL configuration mode (config-std-nacl)#.</p>
extended		<p>Enables extended ACL configuration mode. The CLI enters the extended ACL configuration mode in which all subsequent commands apply to the current extended access list. The (config-ext-nacl) prompt appears:</p> <p>WAE(config-ext-nacl)#</p> <p>See the “Extended ACL Configuration Mode Commands” section for details about working with entries in an extended access list and the commands available from the extended ACL configuration mode (config-ext-nacl)#.</p>
<i>acl-name</i>		Access list to which all commands entered from ACL configuration mode apply, using an alphanumeric string of up to 30 characters, beginning with a letter.
<i>acl-num</i>		Access list to which all commands entered from access list configuration mode apply, using a numeric identifier. For standard access lists, the valid range is 1 to 99; for extended access lists, the valid range is 100 to 199.
logging		Enables logging for all IP access lists.

Defaults An access list drops all packets unless you configure at least one **permit** entry.

Command Modes global configuration

Device Modes application-accelerator
central-manager

Usage Guidelines

Within ACL configuration mode, you can use the editing commands (**list**, **delete**, and **move**) to display the current condition entries, to delete a specific entry, or to change the order in which the entries will be evaluated. To return to global configuration mode, use the **exit** command at the ACL configuration mode prompt.

To create an entry, use a the **deny** or **permit** keyword and specify the type of packets that you want the WAAS device to drop or to accept for further processing. By default, an access list denies everything because the list is terminated by an implicit **deny any** entry. You must include at least one **permit** entry to create a valid access list.



Note

IP ACLs that are defined on a router take precedence over the IP ACLs that are defined on the WAE. IP ACLs that are defined on a WAE take precedence over the WAAS application definition policies that are defined on the WAE.

After creating an access list, you can include the access list in an access group using the **access-group** command, which determines how the access list is applied. You can also apply the access list to a specific application using the appropriate command. A reference to an access list that does not exist is the equivalent of a **permit any** condition statement.

To work with access lists, enter either the **ip access-list standard** or **ip access-list extended** global configuration command. Identify the new or existing access list with a name up to 30 characters long beginning with a letter, or with a number. If you use a number to identify a standard access list, it must be between 1 and 99; for an extended access list, use a number from 100 to 199. You must use a standard access list for providing access to the SNMP server or to the TFTP gateway/server. However, you can use either a standard access list or an extended access list for providing access to the WCCP application.

After you identify the access list, the CLI enters the appropriate configuration mode and all subsequent commands apply to the specified access list. The prompt for each configuration mode is shown in the following examples.

```
WAE(config)# ip access-list standard test
WAE(config-std-nacl)# exit
WAE(config)# ip access-list extended test2
WAE(config-ext-nacl)#
```

Use the **ip access-list logging** command to log denied packets.

Examples

The following example shows how to create an access list on the WAAS device. You create this access list to allow the WAAS device to accept all web traffic that is redirected to it but limit host administrative access using SSH:

```
WAE(config)# ip access-list extended example
WAE(config-ext-nacl)# permit tcp any any eq www
WAE(config-ext-nacl)# permit tcp host 10.1.1.5 any eq ssh
WAE(config-ext-nacl)# exit
```

The following example shows how to activate the access list for an interface:

```
WAE(config)# interface gigabitethernet 1/0
WAE(config-if)# ip access-group example in
WAE(config-if)# exit
```

The following example shows how this configuration appears when you enter the **show running-configuration** command:

```
...
!
```

(config) ip access-list

```
interface GigabitEthernet 1/0
 ip address 10.1.1.50 255.255.0.0
 ip access-group example in
 exit
. . .
ip access-list extended example
 permit tcp any any eq www
 permit tcp host 10.1.1.5 any eq ssh
 exit
. . .
```

Related Commands[clear arp-cache](#)[\(config-if\) ip access-group](#)[show ip access-list](#)

(config) kerberos

To authenticate a user that is defined in the Kerberos database, use the **kerberos** global configuration command. To disable authentication, use the **no** form of this command.

```
kerberos {local-realm kerberos-realm | realm {dns-domain | host} kerberos-realm |  
          server kerberos-realm {hostname | ip-address} [port-number]}
```

```
no kerberos {local-realm kerberos-realm | realm {dns-domain | host} kerberos-realm |  
            server kerberos-realm {hostname | ip-address} [port-number]}
```

Syntax Description		
local-realm <i>kerberos-realm</i>		Displays the default Kerberos realm (IP address or name in uppercase letters) for WAAS. Configures a switch to authenticate users defined in the Kerberos database. The default value is a null string.
realm <i>dns-domain</i>		Maps a hostname or DNS domain name to a Kerberos realm.
		Note The name must begin with a leading dot (.).
<i>host</i>		Host IP address or name to map to Kerberos host realm.
<i>kerberos-realm</i>		Kerberos realm (IP address or name in uppercase letters). The default value is a null string.
server <i>hostname</i>		Specifies the Key Distribution Center (KDC) to use in a given Kerberos realm and, optionally, the port number that the KDC is monitoring.
<i>ip-address</i>		IP address of the host running the KDC.
<i>port-number</i>		(Optional) Number of the port on the KDC server.

Defaults	kerberos-realm: NULL string port-number: 88
----------	--

Command Modes	global configuration
---------------	----------------------

Device Modes	application-accelerator central-manager
--------------	--

Usage Guidelines	All Windows 2000 domains are also Kerberos realms. Because the Windows 2000 domain name is also a DNS domain name, the Kerberos realm name for the Windows 2000 domain name is always in uppercase letters. This capitalization follows the recommendation for using DNS names as realm names in the Kerberos Version 5 protocol document (RFC-1510) and affects only interoperability with other Kerberos-based environments.
------------------	--

**Note**

Your Windows domain server must have a Reverse DNS Zone configured for this command to execute successfully.

The KDC server and all hosts with Kerberos authentication configured must interact within a 5-minute window or authentication will fail. All hosts, especially the KDC, should be running NTP. For information about configuring NTP, see the [\(config\) ntp](#) command.

The KDC server and Admin server must have the same IP address. The default port number for both servers is port 88.

The **kerberos** command modifies the krb5.conf file.

Examples

The following example shows how to configure the WAAS device to authenticate with a specified KDC in a specified Kerberos realm. The configuration is then verified.

```
WAE(config)# kerberos ?
  local-realm  Set local realm name
  realm       Add domain to realm mapping
  server      Add realm to host mapping
WAE(config)# kerberos local-realm WAE.ABC.COM
WAE(config)# kerberos realm wae.abc.com WAE.ABC.COM
WAE(config)# kerberos server wae.abc.com 10.10.192.50
WAE(config)# exit
WAE# show kerberos
Kerberos Configuration:
-----
Local Realm: WAE.ABC.COM
DNS suffix: wae.abc.com
Realm for DNS suffix: WAE.ABC.COM
Name of host running KDC for realm:
Master KDC: 10.10.192.50
Port: 88
```

Related Commands

[show kerberos](#)

(config) kernel kdb

To enable access to the kernel debugger (kdb), use the **kernel kdb** global configuration command. To disable access to the kernel debugger, use the **no** form of this command.

kernel kdb

no kernel kdb

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Defaults	The kernel debugger is disabled by default.
-----------------	---

Command Modes	global configuration
----------------------	----------------------

Device Modes	application-accelerator central-manager
---------------------	--

Usage Guidelines	Once enabled, kdb is automatically activated if kernel problems occur, or you can manually activate it from the local console for the WAAS device. Once activated, all normal functioning of the WAAS device is suspended until kdb is manually deactivated. The kdb prompt looks like this:
-------------------------	--

[0] kdb>

To deactivate kdb, enter the **go** command at the kdb prompt. If kdb was automatically activated because of kernel problems, the system generates a core dump and restarts. If you activated kdb manually for diagnostic purposes, the system resumes normal functioning in whatever state it was when you activated kdb. In either case, if you enter the **reboot** command, the system restarts and normal operation resumes.

kdb is disabled by default and you must enter the **kernel kdb** command in global configuration mode to enable it. If kdb has been previously enabled, you can enter the **no kernel kdb** global configuration command to disable it. When kdb is enabled, you can activate it manually from the local console by pressing **Ctrl-_** followed by **Ctrl-B**.

The WAAS device is often unattended at many sites, and it is desirable for the WAAS device to automatically reboot after generating a core dump instead of requiring user intervention. Disabling the kernel debugger allows automatic recovery.

Examples	The following example shows how to enable, and then disable, access to the kernel debugger:
-----------------	---

```
WAE(config)# kernel kdb
WAE(config)# no kernel kdb
```

Related Commands	(config) kernel kdump
-------------------------	---------------------------------------

(config) kernel kdump

To enable the kernel crash dump mechanism, use the **kernel kdump enable** global configuration command. To disable the kernel crash dump mechanism, use the **no** form of this command.

kernel kdump enable

no kernel kdump enable

Syntax Description This command has no arguments or keywords.

Defaults The kernel crash dump mechanism is enabled by default.

Command Modes global configuration

Device Modes application-accelerator
central-manager

Usage Guidelines A kernel crash dump file is stored in the following disk location:
/local/local1/crash/*timestamp*/vmcore

The analysis of the kernel crash dump file is stored in the following file:
/local/local1/crash/*timestamp*/analysis.txt

Examples The following example shows how to enable, and then disable, the kernel crash dump mechanism:

```
WAE(config)# kernel kdump enable
WAE(config)# no kernel kdump enable
```

Related Commands [\(config\) kernel kdb](#)
[show kdump](#)

(config) line

To specify terminal line settings, use the **line** global configuration command. To configure the WAAS device to not check for the carrier detect signal, use the **no** form of this command.

line console carrier-detect

no line console carrier-detect

Syntax Description	console	Configures the console terminal line settings.
	carrier-detect	Sets the device to check the carrier detect signal before writing to the console.

Defaults	No default behavior or values.
-----------------	--------------------------------

Command Modes	global configuration
----------------------	----------------------

Device Modes	application-accelerator
	central-manager

Examples	The following example shows how to set the WAAS device to check for the carrier detect signal:
	WAE(config)# line console carrier-detect

(config) logging console

To set system logging to console, use the **logging console** global configuration command. To disable logging functions, use the **no** form of this command.

logging console {enable | priority *loglevel*}

no logging console {enable | priority *loglevel*}

Syntax Description	
console	Sets system logging to a console.
enable	Enables system logging.
priority <i>loglevel</i>	<p>Sets which priority level messages to send. Use one of the following keywords or you can specify the numeric priority:</p> <ul style="list-style-type: none"> • alert—Immediate action needed. Priority 1. • critical—Immediate action needed. Priority 2. • debug—Debugging messages. Priority 7. • emergency—System is unusable. Priority 0. • error—Error conditions. Priority 3. • information—Informational messages. Priority 6. • notice—Normal but significant conditions. Priority 5. • warning—Warning conditions. Priority 4.

Defaults	<p>Logging: on</p> <p>Priority of message for console: warning (4)</p> <p>Log file: /local1/syslog.txt</p>
----------	--

Command Modes	global configuration
---------------	----------------------

Device Modes	<p>application-accelerator</p> <p>central-manager</p>
--------------	---

Usage Guidelines	<p>Use the logging command to set specific parameters of the system log file.</p> <p>You can configure logging to send various levels of messages to the console using the logging console priority option.</p>
------------------	---

Examples	<p>The following example shows how to send messages that have a priority code of “error” (Level 3) to the console:</p> <pre>WAE(config)# logging console priority error</pre>
----------	---

The following example shows how to disable sending of messages that have a priority code of “error” (level 3) to the console:

```
WAE(config)# no logging console error
```

Related Commands

[clear arp-cache](#)

[show logging](#)

(config) logging disk

To system logging to a disk file, use the **logging disk** global configuration command. To disable logging functions, use the **no** form of this command.

logging disk { **enable** | **filename** *filename* | **priority** *loglevel* | **recycle** *size* }

no logging disk { **enable** | **filename** *filename* | **priority** *loglevel* | **recycle** *size* }

Syntax Description	
disk	Sets system logging to a disk file.
enable	Enables system logging.
filename <i>filename</i>	Sets the name of the syslog file.
priority <i>loglevel</i>	Sets which priority level messages to send. Use one of the following keywords or you can specify the numeric priority: <ul style="list-style-type: none"> • alert—Immediate action needed. Priority 1. • critical—Immediate action needed. Priority 2. • debug—Debugging messages. Priority 7. • emergency—System is unusable. Priority 0. • error—Error conditions. Priority 3. • information—Informational messages. Priority 6. • notice—Normal but significant conditions. Priority 5. • warning—Warning conditions. Priority 4.
recycle <i>size</i>	Overwrites <i>syslog.txt</i> when it surpasses the recycle size (1000000–50000000 bytes).

Defaults	
	Logging: on
	Priority of message for disk log file: debug (7)
	Log file: /local1/syslog.txt
	Log file recycle size: 10,000,000 bytes

Command Modes	
	global configuration

Device Modes	
	application-accelerator
	central-manager

Usage Guidelines	
	Use the logging command to set specific parameters of the system log file.

The **no logging disk recycle size** command sets the file size to the default value. Whenever the current log file size surpasses the recycle size, the log file is rotated. The log file cycles through at most five rotations, and they are saved as *[log file name].[1-5]* under the same directory as the original log. The rotated log file is the one configured using the **logging disk filename** command.

Examples

The following example shows how to send messages that have a priority code of “error” (level 3) to a file:

```
WAE(config)# logging disk priority error
```

Related Commands

[clear arp-cache](#)

[show logging](#)

(config) logging facility

To set the facility parameter for system logging, use the **logging facility** global configuration command. To disable logging functions, use the **no** form of this command.

logging facility *facility*

no logging facility *facility*

Syntax Description	facility <i>facility</i>	<p>Sets the facility parameter for syslog messages. Use one of the following keywords:</p> <ul style="list-style-type: none"> • auth—Authorization system • daemon—System daemons • kernel—Kernel • local0—Local use • local1—Local use • local2—Local use • local3—Local use • local4—Local use • local5—Local use • local6—Local use • local7—Local use • mail—Mail system • news—USENET news • syslog—Syslog itself • user—User process • uucp—UUCP system
Defaults	Logging: on	
Command Modes	global configuration	
Device Modes	application-accelerator central-manager	
Examples	<p>The following example shows how to set the facility parameter to authorization system for syslog messages:</p> <pre>WAE(config)# logging facility auth</pre>	

Related Commands[clear arp-cache](#)[show logging](#)

(config) logging host

To configure system logging to a remote host, use the **logging host** global configuration command. To disable logging functions, use the **no** form of this command.

logging host {*hostname* | *ip-address*} [**port** *port_num* | **priority** *loglevel* | **rate-limit** *message_rate*]

no logging host {*hostname* | *ip-address*} [**port** *port_num* | **priority** *loglevel* | **rate-limit** *message_rate*]

Syntax Description

host	Sets system logging to a remote host.
<i>hostname</i>	Hostname of the remote syslog host. Specify up to four remote syslog hosts. Note To specify more than one syslog host, use multiple command lines; specify one host per command.
<i>ip-address</i>	IP address of the remote syslog host. Specify up to four remote syslog hosts. Note To specify more than one syslog host, use multiple command lines; specify one host per command.
port <i>port_num</i>	(Optional) Specifies the port to be used when logging to a host. The default port is 514.
priority <i>loglevel</i>	Sets which priority level messages to send. Use one of the following keywords or you can specify the numeric priority: <ul style="list-style-type: none"> • alert—Immediate action needed. Priority 1. • critical—Immediate action needed. Priority 2. • debug—Debugging messages. Priority 7. • emergency—System is unusable. Priority 0. • error—Error conditions. Priority 3. • information—Informational messages. Priority 6. • notice—Normal but significant conditions. Priority 5. • warning—Warning conditions. Priority 4.
rate-limit <i>message_rate</i>	(Optional) Sets the rate limit (in messages per second) for sending messages to a host. Rate limit is 0-10000 (in messages per second). Setting the rate limit to 0 disables rate limiting.

Defaults

Logging: on
Priority of message for a host: warning (4)

Command Modes

global configuration

Device Modes

application-accelerator
central-manager

Usage Guidelines

Use the **logging** command to set specific parameters of the system log file.

To configure the WAAS device to send varying levels of event messages to an external syslog host, use the **logging host** option.

You can configure a WAAS device to send varying levels of messages to up to four remote syslog hosts using the **logging host hostname** command.

Examples

The following example shows how to send messages that have a priority code of “error” (level 3) to the remote syslog host that has an IP address of 172.31.2.160:

```
WAE(config)# logging host 172.31.2.160 priority error
```

Related Commands

[clear arp-cache](#)

[show logging](#)

(config) ntp

To configure the NTP server and to allow the system clock to be synchronized by a time server, use the **ntp** global configuration command. To disable this function, use the **no** form of this command.

```
ntp [authenticate | authentication-key key-num [md5 authentication-key] |
  server {ip-address | hostname} [ip-addresses | hostnames] |
  server-with-authentication {ip-address | hostname} key key-num]

ntp [authenticate | authentication-key authentication-key [md5 encryption-type] |
  server {ip-address | hostname} [ip-addresses | hostnames] |
  server-with-authentication {ip-address | hostname} key authentication-key]

no ntp [authenticate | authentication-key key-num [md5 authentication-key] |
  server {ip-address | hostname} [ip-addresses | hostnames] |
  server-with-authentication {ip-address | hostname} key key-num]
```

Syntax Description	
authenticate	(Optional) Authenticates the NTP server.
authentication-key <i>key-num</i>	(Optional) Sets the ID of the NTP authentication key. Maximum of 4 authentication keys can be configured. The ID must be a positive integer.
md5 <i>authentication-key</i>	(Optional) Sets the value for the NTP authentication key (type MD5). The key value must be from 0 to 4294967295.
server	(Optional) Sets the NTP server IP address for the WAAS device.
<i>ip-address</i>	NTP server IP address.
<i>hostname</i>	NTP server hostname.
<i>ip-addresses</i>	(Optional) IP address of the time server that provides the clock synchronization (maximum of 4).
<i>hostnames</i>	(Optional) Hostname of the time server that provides the clock synchronization (maximum of 4).
server-with-authentication	(Optional) Sets the authentication NTP server IP address for the WAAS device.
key <i>key-num</i>	(Optional) Sets the NTP authentication key ID for the authentication NTP server.

Defaults The default NTP version number is 3.

Command Modes global configuration

Device Modes application-accelerator
central-manager

Usage Guidelines**Note**

Unexpected time changes can result in unexpected system behavior. We recommend reloading the system after enabling an NTP server.

Examples

The following example shows how to specify the NTP server IP address as the time source for a WAAS device. It also removes this configuration.

```
WAE(config)# ntp 172.16.22.44  
WAE(config)# no ntp 172.16.22.44
```

clock

(config) clock

show clock

show ntp

(config) peer

To enable peer optimization, use the **peer** global configuration command. To disable peer optimization, use the **no** form of this command.

peer device-id *deviceid* [**description** *description*] **optimization enable**

no peer device-id *deviceid* [**description** *description*] **optimization enable**

Syntax Description	device-id <i>deviceid</i> Configures the device ID of the peer device with which to enable or disable optimization.
	description <i>hostname</i> Configures a string that is the device description of the peer device. We suggest using the hostname of the peer WAE for the description.
	optimization enable Enables optimization with the specified peer.

Defaults No default behavior or values.

Command Modes global configuration

Device Modes application-accelerator

Usage Guidelines

- Use the **no peer** command to disable optimization between peer devices in a serial cluster.
- Use the **peer** command to reenable optimization between peer devices if it has been disabled previously.
- The *deviceid* is a hexadecimal string (for example, d4:65:01:40:40:8a) that you can obtain with the **show device-id** or **show hardware EXEC** commands.
- You can configure optimization for only one peer device with this command.

Examples

The following example shows how to disable optimization with a serial peer device:

```
WAE(config)# no peer device-id d4:65:01:40:40:8a description wae-sj-dc2 optimization enable
```

Related Commands

- [show device-id](#)
- [show hardware](#)
- [\(config\) interception access-list](#)

(config) policy-engine application classifier

To create or edit an existing application classifier on a WAE, use the **policy-engine application classifier** global configuration command. To delete an application classifier or a condition, use the **no** form of this command.

policy-engine application

classifier *classifier-name* [**list** | **match**

{**all** | **dst** {**host** *hostname* | **ip** *ip_address* | **port** {**eq** *port* | **range** *port1 port2*}} |

src {**host** *hostname* | **ip** *ip_address* | **port** {**eq** *port* | **range** *port1 port2*}}}]

no policy-engine application classifier *classifier-name*

Syntax Description	
classifier <i>classifier-name</i>	Classifier name (up to 30 characters). The name must start with a letter representing the application class.
list	(Optional) Lists the conditions contained in the specified classifier.
match	(Optional) Specifies the criteria for matching traffic.
all	Matches any type of traffic.
dst	Specifies the criteria for identifying the destination host.
host <i>hostname</i>	Specifies the hostname of the system that is the source or destination of the traffic.
ip <i>ip_address</i>	Specifies the IP address of the system that is the source or destination of the traffic.
port	Specifies the criteria for identifying the port or ports used by the source or destination hosts.
eq <i>port</i>	Specifies the source or destination port number.
range <i>port1 port2</i>	Specifies a range of source or destination port numbers.
src	Specifies the criteria for identifying the source host.

Command Modes global configuration

Device Modes application-accelerator

Usage Guidelines You can use this command to add or modify rules, also known as match conditions, to identify specific types of traffic. You can also use this command to list the classifier match conditions.

You cannot delete a classifier if any policies are using it. When creating a new application classifier or adding an existing application classifier, the WAAS CLI enters into a submode allowing you to specify one or more conditions. However, if the condition specified matches an already existing condition in the classifier conditions list, no action is taken. You can delete a condition by using the **no** form of this command. When creating a new classifier, you must add at least one condition.



Note

You cannot have more than 512 different application classifiers.

The WAAS software comes with over 150 default application policies that help your WAAS system classify and optimize some of the most common traffic on your network. Before you create a new application policy, we recommend that you review the default policies and modify them as appropriate. It is usually easier to modify an existing policy than to create a new one. For a list of the default applications and classifiers that WAAS will either optimize or pass through based on the policies that come bundled with the system, see the *Cisco Wide Area Application Services Configuration Guide*.

**Note**

We strongly recommend that you use the WAAS Central Manager GUI to centrally configure application policies for your WAEs. For more information, see the *Cisco Wide Area Application Services Configuration Guide*.

Related Commands

(config) policy-engine application map adaptor EPM
(config) policy-engine application map adaptor WAFS transport
(config) policy-engine application map basic
(config) policy-engine application map other optimize DRE
(config) policy-engine application map other optimize full
(config) policy-engine application map other pass-through
(config) policy-engine application name

(config) policy-engine application map adaptor EPM

To configure the application policy with advanced policy map lists of the EndPoint Mapper (EPM) service on a WAE, use the **policy-engine application map adaptor EPM** global configuration command. To disable the EPM service in the application policy configuration, use the **no** form of this command.

```

policy-engine application map adaptor EPM epm-map {

    delete line-number |

    disable line-number |

    insert {first | last | pos line-number} name app-name {All | classifier classifier-name}
    [disable] action {optimize {DRE {yes | no} compression {LZ | none} | full} |
    pass-through} [accelerate {cifs | http | mapi | MS-port-mapper | nfs | video}]
    [set-dscp dscp-marking] |

    list [from line-number [to line-number] | to line-number [from line-number]] |

    move from line-number to line-number |

    name app-name {All | classifier classifier-name} [disable] action {optimize {DRE {yes | no}
    compression {LZ | none} | full} | pass-through} [accelerate {cifs | http | mapi |
    MS-port-mapper | nfs | video}] [set-dscp dscp-marking]}

no policy-engine application map adaptor EPM epm-map disable line-number

```

Syntax Description		
EPM <i>epm-map</i>		Specifies the messaging Application Programming Interface (MAPI) or Universal Unique ID (UUID).
delete <i>line-number</i>		Deletes the application policy map specified by the line number.
disable <i>line-number</i>		Disables the application policy map specified by the line number.
insert		Inserts or adds a new policy map at the specified position.
first		Inserts the new application policy map at the beginning of the list.
last		Inserts the new application policy map at the end of the list.
pos <i>line-number</i>		Inserts the new application policy map at the specified line number.
name <i>app-name</i>		Specifies the name of the application.
All		Specifies all traffic.
classifier <i>classifier-name</i>		Specifies the name of the application traffic classifier.
disable		(Optional) Disables optimization or pass through.
action		Specifies whether to optimize the traffic or let it pass through.
optimize		Applies general optimization.
DRE		Enables or disables DRE optimization.
yes		Enables DRE optimization.
no		Disables DRE optimization.
compression		Applies Lempel-Ziv (LZ) compression or no compression.

LZ	Applies LZ compression.
none	Applies no compression.
full	Applies full generic optimization.
pass-through	Allows traffic to pass through without any optimization.
accelerate	(Optional) Accelerates the traffic using a special adapter.
cifs	Accelerates the traffic using the CIFS accelerator.
http	Accelerates the traffic using the HTTP accelerator.
mapi	Accelerates the traffic using the MAPI accelerator.
MS-port-mapper	Accelerates the traffic using the Microsoft EndPoint Port Mapper (EPM).
nfs	Accelerates the traffic using the NFS accelerator.
video	Accelerates the traffic using the video accelerator.
set-dscp <i>dscp-marking</i>	(Optional) Sets the DSCP marking value (Table 3-2) to be applied to the traffic classified in the policy. Applies only if the action includes the optimize or accelerate keywords.
list	Lists the specified application policy maps.
from <i>line-number</i>	(Optional) Specifies the line number of the first application policy map to list.
to <i>line-number</i>	(Optional) Specifies the line number of the last application policy map to list.
move	Moves the specified application policy map from one line to another.

Command Modes

global configuration

Device Modes

application-accelerator

Usage Guidelines**Note**

We strongly recommend that you use the WAAS Central Manager GUI to centrally configure application policies for your WAEs. For more information, see the *Cisco Wide Area Application Services Configuration Guide*.

Related Commands

(config) policy-engine application classifier
 (config) policy-engine application map adaptor WAFS transport
 (config) policy-engine application map basic
 (config) policy-engine application map other optimize DRE
 (config) policy-engine application map other optimize full
 (config) policy-engine application name
 (config) policy-engine application set-dscp

(config) policy-engine application map adaptor WAFS transport

To configure application policies with the Wide Area File Services (WAFS) transport option, use the **policy-engine application map adaptor WAFS transport** global configuration command. To disable the WAFS transport policy map in the application policy configuration, use the **no** form of this command.

policy-engine application map adaptor WAFS transport {

delete *line-number* |

disable *line-number* |

insert {**first** | **last** | **pos** *line-number*} **name** *app-name* {**All** | **classifier** *classifier-name*} [**disable**] **action** {**optimize** {**DRE** {**yes** | **no**} **compression** {**LZ** | **none**} | **full**} | **pass-through**} [**accelerate** {**cifs** | **http** | **mapi** | **MS-port-mapper** | **nfs** | **video**}] [**set-dscp** *dscp-marking*] |

list [**from** *line-number* [**to** *line-number*] | **to** *line-number* [**from** *line-number*]] |

move from *line-number* **to** *line-number* |

name *app-name* {**All** | **classifier** *classifier-name*} [**disable**] **action** {**optimize** {**DRE** {**yes** | **no**} **compression** {**LZ** | **none**} | **full**} | **pass-through**} [**accelerate** {**cifs** | **http** | **mapi** | **MS-port-mapper** | **nfs** | **video**}] [**set-dscp** *dscp-marking*]

no policy-engine application map adaptor WAFS transport disable *line-number*

Syntax Description

delete <i>line-number</i>	Deletes the application policy map specified by the line number.
disable <i>line-number</i>	Disables the application policy map specified by the line number.
insert	Inserts or adds a new policy map at the specified position.
first	Inserts the new application policy map at the beginning of the list.
last	Inserts the new application policy map at the end of the list.
pos <i>line-number</i>	Inserts the new application policy map at the specified line number.
name <i>app-name</i>	Specifies the name of the application.
All	Specifies all traffic.
classifier <i>classifier-name</i>	Specifies the name of the application traffic classifier.
disable	(Optional) Disables optimization or pass through.
action	Specifies whether to optimize the traffic or let it pass through.
optimize	Applies general optimization.
DRE	Enables or disables DRE optimization.
yes	Enables DRE optimization.
no	Disables DRE optimization.
compression	Applies Lempel-Ziv (LZ) compression or no compression.
LZ	Applies LZ compression.
none	Applies no compression.
full	Applies full generic optimization.
pass-through	Allows traffic to pass through without any optimization.

accelerate	(Optional) Accelerates the traffic using a special adaptor.
cifs	Accelerates the traffic using the CIFS accelerator.
http	Accelerates the traffic using the HTTP accelerator.
mapi	Accelerates the traffic using the MAPI accelerator.
MS-port-mapper	Accelerates the traffic using the Microsoft EndPoint Port Mapper (EPM).
nfs	Accelerates the traffic using the NFS accelerator.
video	Accelerates the traffic using the video accelerator.
set-dscp <i>dscp-marking</i>	Sets the DSCP marking value (Table 3-2) to be applied to the traffic classified in the policy. Applies only if the action includes the optimize or accelerate keywords.
list	Lists the specified application policy maps.
from <i>line-number</i>	(Optional) Specifies the line number of the first application policy map to list.
to <i>line-number</i>	(Optional) Specifies the line number of the last application policy map to list.
move	Moves the specified application policy map from one line to another.

Command Modes

global configuration

Device Modes

application-accelerator

Usage Guidelines**Note**

We strongly recommend that you use the WAAS Central Manager GUI to centrally configure application policies for your WAEs. For more information, see the *Cisco Wide Area Application Services Configuration Guide*.

Related Commands

[\(config\) policy-engine application classifier](#)
[\(config\) policy-engine application map adaptor EPM](#)
[\(config\) policy-engine application map basic](#)
[\(config\) policy-engine application map other optimize DRE](#)
[\(config\) policy-engine application map other optimize full](#)
[\(config\) policy-engine application map other pass-through](#)
[\(config\) policy-engine application name](#)
[\(config\) policy-engine application set-dscp](#)

(config) policy-engine application map basic

To configure the application policy with the basic policy map, use the **policy-engine application map basic** global configuration command. To disable the EPM service in the application policy configuration, use the **no** form of this command.

policy-engine application map basic {

delete *line-number* |

disable *line-number* |

insert {**first** | **last** | **pos** *line-number*} **name** *app-name* **classifier** *classifier-name* [**disable**]
action {**optimize** {**DRE** {**yes** | **no**} **compression** {**LZ** | **none**} | **full**} | **pass-through**}
[**accelerate** {**cifs** | **http** | **mapi** | **MS-port-mapper** | **nfs** | **video**}] [**set-dscp** *dscp-marking*] |

list [**from** *line-number* [**to** *line-number*] | **to** *line-number* [**from** *line-number*]] |

move from *line-number* **to** *line-number* |

name *app-name* **classifier** *classifier-name* [{**disable**} **action** {**optimize** {**DRE** {**yes** | **no**}
compression {**LZ** | **none**} | **full**} | **pass-through**} [**accelerate** {**cifs** | **http** | **mapi** |
MS-port-mapper | **nfs** | **video**}] [**set-dscp** *dscp-marking*}]

no policy-engine application map basic disable *line-number*

Syntax Description

delete <i>line-number</i>	Deletes the application policy map specified by the line number.
disable <i>line-number</i>	Disables the application policy map specified by the line number.
insert	Inserts or adds a new policy map at the specified position.
first	Inserts the new application policy map at the beginning of the list.
last	Inserts the new application policy map at the end of the list.
pos <i>line-number</i>	Inserts the new application policy map at the specified line number.
name <i>app-name</i>	Specifies the name of the application traffic classifier.
classifier <i>classifier-name</i>	Specifies the name of the application traffic classifier.
disable	(Optional) Disables optimization or pass-through.
action	Specifies whether to optimize the traffic or let it pass through.
optimize	Applies general optimization.
DRE	Enables or disables DRE optimization.
yes	Enables DRE optimization.
no	Disables DRE optimization.
compression	Applies Lempel-Ziv (LZ) compression or no compression.
LZ	Applies LZ compression.
none	Applies no compression.
full	Applies full generic optimization.
pass-through	Allows traffic to pass through without any optimization.
accelerate	(Optional) Accelerates the traffic using a special adapter.

cifs	Accelerates the traffic using the CIFS accelerator.
http	Accelerates the traffic using the HTTP accelerator.
mapi	Accelerates the traffic using the MAPI accelerator.
MS-port-mapper	Accelerates the traffic using the Microsoft EndPoint Port Mapper (EPM).
nfs	Accelerates the traffic using the NFS accelerator.
video	Accelerates the traffic using the video accelerator.
set-dscp <i>dscp-marking</i>	(Optional) Sets the DSCP marking value (Table 3-2) to be applied to the traffic classified in the policy. Applies only if the action includes the optimize or accelerate keywords.
list	Lists the specified application policy maps.
from <i>line-number</i>	(Optional) Specifies the line number of the first application policy map to list.
to <i>line-number</i>	(Optional) Specifies the line number of the last application policy map to list.
move	Moves the specified application policy map from one line to another.

Command Modes

global configuration

Device Modes

application-accelerator

Usage Guidelines

A policy map consists of a set of application policies and the order in which they are checked.

Use the **policy-engine application map basic insert** global configuration command to insert a new basic (static) application policy map to the list of application policy maps on a WAE.

To view WAFS dynamic accept or deny list entries, use the **show policy-engine application dynamic** command.

**Note**

We strongly recommend that you use the WAAS Central Manager GUI to centrally configure application policies for your WAEs. For more information, see the *Cisco Wide Area Application Services Configuration Guide*.

Related Commands

(config) policy-engine application classifier
 (config) policy-engine application map adaptor EPM
 (config) policy-engine application map adaptor WAFS transport
 (config) policy-engine application map basic
 (config) policy-engine application map other optimize DRE
 (config) policy-engine application map other optimize full
 (config) policy-engine application map other pass-through
 (config) policy-engine application name

show policy-engine application

(config) policy-engine application map other optimize DRE

To configure the **optimize DRE** action on nonclassified traffic on a WAE, use the **policy-engine application map other optimize DRE** global configuration command.

policy-engine application map other optimize DRE {yes | no} **compression** {LZ | none}
[**set-dscp** dscp-marking]

Syntax Description	yes	Applies the optimize DRE action on nonclassified traffic.
	no	Specifies not to apply the optimize DRE action on nonclassified traffic.
	compression	Applies the specified compression.
	LZ	Applies the Lempel-Ziv (LZ) compression.
	none	Applies no compression.
	set-dscp dscp-marking	(Optional) Sets the DSCP marking value (Table 3-2) to be applied to the traffic classified in the policy.

Command Modes global configuration

Device Modes application-accelerator

Usage Guidelines Use the **policy-engine application map other optimize DRE** global configuration command to configure the **optimize DRE** action on nonclassified traffic on a WAE.



Note

We strongly recommend that you use the WAAS Central Manager GUI to centrally configure application policies for your WAEs. For more information, see the *Cisco Wide Area Application Services Configuration Guide*.

Examples The following example shows how to configure the **optimize DRE** action on nonclassified traffic with no compression:

```
WAE(config)# policy-engine application map other optimize DRE yes compression none
```

Related Commands

- (config) policy-engine application classifier
- (config) policy-engine application map adaptor EPM
- (config) policy-engine application map adaptor WAFS transport
- (config) policy-engine application map basic
- (config) policy-engine application map other optimize full
- (config) policy-engine application map other pass-through

(config) policy-engine application name

(config) policy-engine application set-dscp

(config) policy-engine application map other optimize full

To configure the application policy on nonclassified traffic with the **optimize full** action, use the **policy-engine application map other optimize full** global configuration command.

policy-engine application map other optimize full [**set-dscp** *dscp-marking*]

Syntax Description

set-dscp *dscp-marking* (Optional) Sets the DSCP marking value ([Table 3-2](#)) to be applied to the traffic classified in the policy.

Command Modes

global configuration

Device Modes

application-accelerator

Usage Guidelines

Use the **policy-engine application map other optimize full** global configuration command to configure the application policy on nonclassified traffic with the **optimize full** action.



Note

We strongly recommend that you use the WAAS Central Manager GUI to centrally configure application policies for your WAEs. For more information, see the *Cisco Wide Area Application Services Configuration Guide*.

Related Commands

(config) [policy-engine application classifier](#)
 (config) [policy-engine application map adaptor EPM](#)
 (config) [policy-engine application map adaptor WAFS transport](#)
 (config) [policy-engine application map basic](#)
 (config) [policy-engine application map other optimize DRE](#)
 (config) [policy-engine application map other pass-through](#)
 (config) [policy-engine application name](#)
 (config) [policy-engine application set-dscp](#)

(config) policy-engine application map other pass-through

To configure the application policy on nonclassified traffic with the **pass-through** action on a WAE, use the **policy-engine application map other pass-through** global configuration command.

policy-engine application map other pass-through

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Defaults	No default behavior or values.
-----------------	--------------------------------

Command Modes	global configuration
----------------------	----------------------

Device Modes	application-accelerator
---------------------	-------------------------

Usage Guidelines	Use the policy-engine application map other pass-through global configuration command to configure the application policy on nonclassified traffic with the pass-through action on a WAE.
-------------------------	---

**Note**

We strongly recommend that you use the WAAS Central Manager GUI to centrally configure application policies for your WAEs. For more information, see the *Cisco Wide Area Application Services Configuration Guide*.

Related Commands	(config) policy-engine application map basic (config) policy-engine application map other optimize full
-------------------------	--

(config) policy-engine application name

To create a new application definition that specifies general information about an application on a WAE, use the **policy-engine application name** global configuration command. To delete the application definition, use the **no** form of this command.

```
policy-engine application name app-name [set-dscp dscp-marking]

no policy-engine application name app-name [set-dscp dscp-marking]
```

Syntax Description

application name <i>app-name</i>	Application name (up to 30 characters). The name cannot contain spaces or special characters. Specify the reserved name Other to set the DSCP marking value on nonclassified traffic.
set-dscp <i>dscp-marking</i>	(Optional) Sets the DSCP marking value (Table 3-2) to be applied to the application traffic.

Defaults

No default behavior or values.

Command Modes

global configuration

Device Modes

application-accelerator

Usage Guidelines

Use this command to create a new application name that can be used later to gather statistics about an application or to apply a DSCP marking value to the application traffic. You cannot delete an application name if other policies are using this name. Successful deletion clears all statistics that were once associated with this application.



Note

There is a limitation of 255 different application names.

You cannot delete the application definition named Other.

A DSCP value that you specify in the **policy-engine application name** command applies to all traffic associated with the application, unless it is overridden by a DSCP marking value that you specify in a specific map by one of the **policy-engine application map** commands. If a DSCP marking value is not assigned or defined, the default DSCP marking value (defined by the **policy-engine application set-dscp** command) is applied to traffic.



Note

We strongly recommend that you use the WAAS Central Manager GUI to centrally configure application policies for your WAEs. For more information, see the *Cisco Wide Area Application Services Configuration Guide*.

Examples

The following example shows how to create an application definition for the Payroll application:

```
WAE(config)# policy-engine application name Payroll
```

The following example shows how to assign a DSCP marking value to traffic associated with the Payroll application:

```
WAE(config)# policy-engine application name Payroll set-dscp cs1
```

Related Commands

(config) policy-engine application classifier
(config) policy-engine application map adaptor EPM
(config) policy-engine application map adaptor WAFS transport
(config) policy-engine application map basic
(config) policy-engine application map other optimize DRE
(config) policy-engine application map other optimize full
(config) policy-engine application map other pass-through

(config) policy-engine application set-dscp

To set the default DSCP marking value for use with applications, use the **policy-engine application set-dscp** global configuration command. To set the default DSCP marking value to its default value, use the **no** form of this command.

policy-engine application set-dscp *dscp-marking*

no policy-engine application set-dscp *dscp-marking*

Syntax Description

set-dscp *dscp-marking* Specifies the DSCP marking value, as shown in [Table 3-2](#).

Defaults

No default behavior or values.

Command Modes

global configuration

Device Modes

application-accelerator

Usage Guidelines

The DSCP field in an IP packet enables different levels of service to be assigned to network traffic. Levels of service are assigned by marking each packet on the network with a DSCP code. DSCP is the combination of IP Precedence and Type of Service (ToS) fields. For more information, see RFC 2474.

A DSCP value is assigned in an application definition or an application policy map and applies to all traffic associated with the application or policy map. If a DSCP value is not assigned or defined, the default DSCP value is applied to traffic. The global default DSCP value is copy, which copies the DSCP value from the incoming packet and uses it for the outgoing packet.

[Table 3-2](#) lists the valid DSCP marking values that you can specify.

Table 3-2 DSCP Marking Values

DSCP Code	Description
0 - 63	Sets packets with a numeric dscp from 0 to 63.
af11	Sets packets with AF11 dscp (001010).
af12	Sets packets with AF11 dscp (001100).
af13	Sets packets with AF13 dscp (001110).
af21	Sets packets with AF21 dscp (010010).
af22	Sets packets with AF22 dscp (010100).
af23	Sets packets with AF23 dscp (010110).
af31	Sets packets with AF31 dscp (011010).
af32	Sets packets with AF32 dscp (011100).
af33	Sets packets with AF33 dscp (011110).
af41	Sets packets with AF41 dscp (100010).
af42	Sets packets with AF42 dscp (100100).

Table 3-2 DSCP Marking Values (continued)

DSCP Code	Description
af43	Sets packets with AF43 dscp (100110).
cs1	Sets packets with CS1 (precedence 1) dscp (001000).
cs2	Sets packets with CS2 (precedence 2) dscp (010000).
cs3	Sets packets with CS3 (precedence 3) dscp (011000).
cs4	Sets packets with CS4 (precedence 4) dscp (100000).
cs5	Sets packets with CS5 (precedence 5) dscp (101000).
cs6	Sets packets with CS6 (precedence 6) dscp (110000).
cs7	Sets packets with CS7 (precedence 7) dscp (111000).
copy	Copies the DSCP value from the incoming packet to the outgoing packet. (default)
default	Sets packets with default dscp (000000).
ef	Sets packets with EF dscp (101110).

Examples

The following example shows how to set the default DSCP marking value to copy:

```
WAE(config)# policy-engine application set-dscp copy
```

Related Commands

(config) policy-engine application name

(config) policy-engine config

To remove application policy configurations or replace application policy configurations with factory defaults on a WAE, use the **policy-engine config** global configuration command.

policy-engine config {remove-all | restore-predefined}

Syntax Description

remove-all	Removes the application policy configurations and resets other changed configurations. Note: This does not apply to applications defined in the WAAS Central Manager, which are global, including the applications defined in device/device group level. They will be propagated to all devices that are registered with the Central Manager.
restore-predefined	Replaces application policy configurations (including the application names, classifiers, and policy maps) with factory defaults.

Defaults

No default behavior or values.

Command Modes

global configuration

Device Modes

application-accelerator

Usage Guidelines

This action includes but is not limited to the following:

- Remove all application names except “other.”
- Remove all classifiers.
- Remove all policy maps.
- Reset the default action to **pass-through**.



Note

We strongly recommend that you use the WAAS Central Manager GUI to centrally configure application policies for your WAEs. For more information, see the *Cisco Wide Area Application Services Configuration Guide*.

Examples

The following example shows how to remove all application policy configurations on a WAE using the **policy-engine config** command:

```
WAE#(config) policy-engine config remove-all
```

Related Commands

[show policy-engine status](#)

```
show statistics auto-discovery
show statistics connection closed
```


(config) port-channel

To configure the port channel load-balancing options on a WAAS device, use the **port-channel** global configuration command. To set load balancing on the port channel to its default method, use the **no** form of this command.

port-channel load-balance {src-dst-ip-port | round-robin}

no port-channel load-balance {src-dst-ip-port | round-robin}

Syntax Description

load-balance	Configures the load-balancing method.
src-dst-ip-port	Specifies the load-balancing method based on a combination of source and destination IP addresses/ports. This load-balancing method has replaced the dst-ip method on devices running WAAS version 4.1.3 or later.
round-robin	Specifies the load-balancing method using a round-robin resource allocation.

Defaults

Round-robin is the default load-balancing method.

Command Modes

global configuration

Device Modes

application-accelerator
central-manager

Usage Guidelines

The **port-channel load-balance** command configures one of two load-balancing algorithms and provides flexibility in choosing interfaces when an Ethernet frame is sent. The **round-robin** option allows evenly balanced usage of identical network interfaces in a channel group. Because this command takes effect globally, if two channel groups are configured, they must use the same load-balancing option.

Examples

The following example shows how to configure IP load balancing on a port channel and then disable it:

```
WAE(config)# port-channel load-balance src-dst-ip-port
WAE(config)# no port-channel load-balance
```

(config) primary-interface

To configure the primary interface for a WAAS device, use the **primary-interface** global configuration command. To remove the configured primary interface, use the **no** form of this command.

primary-interface { **GigabitEthernet** *1-2/port* | **PortChannel** **1** | **Standby** **1** | **inlineGroup** *slot/grpnumber* }

no primary-interface { **GigabitEthernet** *1-2/port* | **PortChannel** **1** | **Standby** **1** | **inlineGroup** *slot/grpnumber* }

Syntax Description		
GigabitEthernet <i>1-2/port</i>		Selects a Gigabit Ethernet interface as the primary interface of the WAAS device. Slot number 1 or 2 and port number.
PortChannel 1		Selects a port channel interface as the primary interface of the WAAS device. (Only one port channel interface is supported.)
Standby 1		Selects a standby group as the primary interface of the WAAS device. (Only one standby group is supported.)
inlineGroup <i>slot/grpnumber</i>		Selects an interface on the Cisco WAE Inline Network Adapter as the primary interface of the WAAS device. The group number for the inline feature is either 0 or 1 (each adapter has 2 grouped pairs).

Defaults

The default primary interface is the Gigabit Ethernet 1/0 interface. If this interface is not configured, then the first operational interface on which a link beat is detected becomes the default primary interface. Interfaces with lower number IDs are polled first (for example, Gigabit Ethernet 1/0 is checked before 2/0). The Gigabit Ethernet interfaces are polled before the port-channel interfaces.

Command Modes

global configuration

Device Modes

application-accelerator
central-manager

Usage Guidelines

You can change the primary interface without disabling the WAAS device. To change the primary interface, reenter the command string and specify a different interface.



Note

If you use the **restore factory-default preserve basic-config** command, the configuration for the primary interface is not preserved. If you want to reenabling the WAAS device after using the **restore factory-default preserve basic-config** command, make sure to reconfigure the primary interface after the factory defaults are restored.

Setting the primary interface to be a Standby group does not imply that Standby functionality is available. You must configure Standby interfaces using the **interface standby** global configuration command.

Examples

The following example shows how to specify the Gigabit Ethernet slot 1, port 0 as the primary interface on a WAAS device:

```
WAE(config)# primary-interface GigabitEthernet 1/0
```

The following example shows how to specify the Gigabit Ethernet slot 2, port 0 as the primary interface on a WAAS device:

```
WAE(config)# primary-interface GigabitEthernet 2/0
```

The following example shows how to specify the inline interface slot 1, group 0 as the primary interface on a WAAS device:

```
WAE(config)# primary-interface inlineGroup 1/0
```

Related Commands

[\(config\) interface GigabitEthernet](#)

(config) print-services

To enable legacy print services and designate a group name for administrators who are allowed configuration access on a WAAS device, use the **print-services** global configuration command. To disable print services on a WAAS device or to clear the administrative group, use the **no** form of this command.

print-services { **enable** | **admin-group** *admin-group-name* | **guest-print enable** }

no print-services { **enable** | **admin-group** *admin-group-name* | **guest-print enable** }

Syntax Description	enable	Enables legacy print services on the WAAS device.
	admin-group <i>admin-group-name</i>	Configures a group of administrators with print services configuration privileges. You can enter a maximum of 127 characters. No spaces are allowed.
	guest-print enable	Enables the guest print service. Guest printing allows any user to print to the WAAS print server.
	Note	This option is available only in the application-accelerator device mode.

Defaults By default, legacy print services are disabled and no administrative group is defined (*admin-group-name* is null).

Command Modes global configuration

Device Modes application-accelerator
central-manager

Usage Guidelines Legacy print services are deprecated and no longer supported in WAAS 4.2.x and later. We recommend using the Windows print accelerator instead (see the [\(config\) accelerator windows-print](#) command).

Examples The following example shows how to enable print services on a WAAS device:

```
WAE(config)# print-services enable
```

The following example shows how to add a print services administrative group called printAdmins:

```
WAE(config)# print-services admin-group printAdmins
```

The new print-services administrator group is configured successfully. Please restart print services for the change to take effect.

```
WAE(config)# no print-services enable
```

```
WAE(config)# print-services enable
```

The following example removes the print service administrative group from the WAAS device:

```
WAE(config)# no print-services admin-group printAdmins
```

(config) print-services

The print-services administrator group is removed successfully. Please restart print services for the change to take effect.

```
WAE(config)# no print-services enable
```

```
WAE(config)# print-services enable
```

Related Commands

[\(config\) accelerator windows-print](#)

[show print-services](#)

[show running-config](#)

[show startup-config](#)

(config) radius-server

To configure a set of RADIUS authentication server settings on the WAAS device, use the **radius-server** global configuration command. To disable RADIUS authentication server settings, use the **no** form of this command.

```
radius-server {host hostname | hostipaddr [primary] | key keyword | retransmit retries |  
                timeout seconds}
```

```
no radius-server {host hostname | hostipaddr [primary] | key keyword | retransmit retries |  
                timeout seconds}
```

Syntax Description		
host <i>hostname</i>		Specifies a RADIUS server. You can have a maximum of 5 servers.
<i>hostipaddr</i>		IP address of the RADIUS server.
primary		(Optional) Sets the server as the primary server.
key <i>keyword</i>		Specifies the encryption key shared with the RADIUS servers. You can have a maximum of 15 characters.
retransmit <i>retries</i>		Specifies the number of transmission attempts (1–3) to an active server for a transaction. The default is 2.
timeout <i>seconds</i>		Specifies the time to wait for a RADIUS server to reply. The range is from 1 to 20 seconds. The default is 5 seconds.

Defaults	retransmit <i>retries</i> : 2 timeout <i>seconds</i> : 5
----------	---

Command Modes	global configuration
---------------	----------------------

Device Modes	application-accelerator central-manager
--------------	--

Usage Guidelines	<p>RADIUS authentication is disabled by default. You can enable RADIUS authentication and other authentication methods at the same time. You can also specify which method to use first. (See the (config) authentication configuration command.)</p> <p>You can configure multiple RADIUS servers; authentication is attempted on the primary server first. If the primary server is unreachable, then authentication is attempted on the other servers in the RADIUS farm, in the order in which they were configured. If authentication fails for any reason other than a server is unreachable, authentication is not attempted on the other servers in the farm. This process applies regardless of the setting of the authentication fail-over server-unreachable command.</p>
------------------	---

Examples	The following example shows how to specify a RADIUS server, specify the RADIUS key, and accept retransmit defaults. You can verify the configuration using the show radius-server command.
----------	---

```
WAE(config)# radius-server host 172.16.90.121
WAE(config)# radius-server key myradiuskey
WAE# show radius-server
Radius Configuration:
-----
Radius Authentication is on
  Timeout      = 5
  Retransmit   = 3
  Key          = ****
  Servers
  -----
```

Related Commands [show radius-server](#)

(config) smb-conf

To manually configure the parameters for a WAAS device Samba configuration file, *smb.conf*, use the **smb-conf** global configuration command. To return a parameter to its default value, use the **no** form of this command.

smb-conf section { **global** | **print\$** | **printers** } **name** *attr-name* **value** *attr-value* [**service print**]

no smb-conf section { **global** | **print\$** | **printers** } **name** *attr-name* **value** *attr-value* [**service print**]

Syntax Description

global	Specifies one of the global print parameters.
print\$	Specifies one of the print\$ parameters.
printers	Specifies the parameters for one of the printers.
name <i>attr-name</i>	Specifies the name of the parameter in the specified section that you want to manually configure (up to 80 characters).
value <i>attr-value</i>	Specifies the value of the parameter (up to 255 characters).
service print	(Optional) Updates the Samba configuration file for legacy print services. Without this option, the smb-conf command updates the Samba configuration file that is used for windows authentication.

See [Table 3-3](#) for a description of the parameters for the global, print\$, and printers, including the names and default values.

Defaults

No default behavior or values.

Command Modes

global configuration

Device Modes

application-accelerator
central-manager

Usage Guidelines

Legacy print services are deprecated and no longer supported in WAAS 4.2.x and later. We recommend using the Windows print accelerator (see the [\(config\) accelerator windows-print](#) command).

The *smb.conf* file contains a variety of print-related parameters. Global parameters apply to the server. Service level parameters, which define default settings for all other sections and shares, allow you to avoid the need to set the same value repeatedly. You can override these globally set share settings and specify other values for each individual section or share. Print\$ parameters apply to the printers. Printers parameters, which apply to the shares, make it possible to share all printers with a minimal configuration. These parameters apply as defaults to all printers.

[Table 3-3](#) describes the print-related parameters.

Table 3-3 *Print-Related Parameters*

Parameter Name	Default Value	Parameter Description
global parameters		
idmap uid	70000-200000	Range of user IDs allocated for mapping UNIX users to NT user SIDs.
idmap gid	70000-200000	Range of group IDs allocated for mapping UNIX groups to NT group SIDs.
winbind enum users	no	Parameter that does not enumerate domain users using MSRPC.
winbind enum groups	no	Parameter that does not enumerate domain groups using MSRPC.
winbind cache time	10	Time that a domain user or group information remains in the cache before expiring.
winbind use default domain	yes	Use the default domain for users and groups.
printcap name	cups	Use CUPS to determine available printer names.
load printers	yes	Automatically creates all available printer shares.
printing	cups	Parameter that uses CUPS-compatible print commands.
cups options	raw	Parameter that sets the format of the print output to raw.
force printername	yes	Parameter that enforces the same printer name specified in the CUPS GUI to be used as the printer name in Samba.
lpq cache time	0	Cache time for the results of the lpq command.
log file	/local/local1/errorlog/samba.log	Location where print-related errors are logged.
max log size	50	Maximum number of errors the log file can contain. After 50 errors, for each new error logged, the oldest error is removed.
socket options	TCP_NODELAY SO_RCVBUF=8192 SO_SNDBUF=8192	Controls on the network layer of the operating system that allows the connection with the client to be tuned. This option is typically used to tune your Samba server for optimal performance for your local network.
smb ports	50139	Available ports on the Samba server.
local master	no	Parameter that sets <i>nmbd</i> to be a local master browser on a subnet.
domain master	no	Parameter that sets <i>nmbd</i> to be a domain master browser for its given workgroup.
preferred master	no	Parameter that sets <i>nmbd</i> to be a preferred master browser for its workgroup.
dns proxy	no	DNS proxy that is not enabled.
template homedir	/local/local1/	Home directory on File Engine or WAE.
template shell	/admin-shell	Directory of the administrative shell.
comment	Comment:	Optional description of the print server (or share) that is visible when a client queries the server. This parameter can also be set by the windows-domain comment command.

Table 3-3 *Print-Related Parameters (continued)*

Parameter Name	Default Value	Parameter Description
netbios name	MYFILEENGINE	Name of the Samba server hosting print services. This parameter can also be set by the windows-domain netbios-name command.
realm	CISCO	Active Directory domain name. Always uppercase. This parameter can also be set by the windows-domain realm command.
wins server	10.10.10.1	IP address of the Windows domain server used to authenticate user access to print services. This parameter can also be set by the windows-domain wins-server command.
password server	10.10.10.10	Optional IP address of the password server used for authentication of users. This parameter can also be set by the windows-domain password-server command.
security	domain	Use Windows domain server for authentication. This parameter can also be set by the windows-domain security command.
client schannel	no	Secure channel indicator used for Windows domain server authentication.
ldap ssl	on	Defines whether or not Samba should use SSL when connecting to the LDAP server. The default is to always use SSL when contacting the LDAP server. If set to “off,” SSL is never used when querying the directory server. If set to “start_tls,” LDAPv3 StartTLS extended operation (RFC2830) is used for communicating with the directory server.
print\$ Parameters		
path	/state/samba/printers	Location of printer list.
guest ok	yes	Parameter that does not require a password to connect to the printer.
browseable	yes	Parameter that allows the printer to be visible in the list of printers.
read only	yes	Parameter that prevents users from creating or modifying the printer list.
write list	root	Parameter that allows the printer administrator (root user) to modify the printer list.
printers Parameters		
path	/local/local1/spool/samba	Location where incoming files are spooled for printing.
browseable	no	Parameter that always sets to no if printable = yes. It makes the printer share invisible in the list of available shares.
guest ok	yes	Parameter that does not require a password to connect to the printer's service.
writable	no	Parameter that prevents users from creating or modifying files in the print service directory.

Table 3-3 *Print-Related Parameters (continued)*

Parameter Name	Default Value	Parameter Description
printable	yes	Parameter that allows connected clients to open, write to and submit spool files into the directory specified with the path parameter for printing. Used by Samba to differentiate printer shares from file shares. If this is set to no, printing is not allowed.
printer admin	root	Parameter that allows the print administrator (root user) to add drivers and to set the printer properties.

Examples

The following example shows how to change the maximum size of the Samba error log file from the default of 50 errors to 75 errors:

```
WAE# smb-conf global max log size 75
```

The following example shows how to change the realm from the default of CISCO to MYCOMPANYNAME:

```
WAE# smb-conf global realm MYCOMPANYNAME
```

The following example shows how to enable and then disable LDAP server signing:

```
WAE# smb-conf global name "ldap ssl" value "start_tls"
```

Related Commands

[show smb-conf](#)
[windows-domain](#)
[\(config\) accelerator windows-print](#)
[\(config\) windows-domain](#)

(config) snmp-server access-list

To configure a standard access control list on a WAAS device to allow access through an SNMP agent, use the **snmp-server access-list** global configuration command. To remove a standard access control list, use the **no** form of this command.

snmp-server access-list {*num* | *name*}

no snmp-server access-list {*num* | *name*}

Syntax Description

<i>num</i>	Standard access list number (1–99).
<i>name</i>	Standard access list name. You can use a maximum of 30 characters.

Defaults

No default behavior or values.

Command Modes

global configuration

Device Modes

application-accelerator
central-manager

Usage Guidelines

If you are using an SNMP server ACL, you must permit the loopback interface.

Examples

The following example shows how to allow the SNMP agent to check against access control list 12 before accepting or dropping packets:

```
WAE(config)# snmp-server access-list 12
```



Note

You must first create access list 12 using the **ip access-list standard** global configuration command.

Related Commands

(config) [ip access-list](#)
[show running-config](#)

(config) snmp-server community

To enable the SNMP agent on a WAAS device and to set up the community access string to permit access to the SNMP agent, use the **snmp-server community** global configuration command. To disable the SNMP agent and remove the previously configured community string, use the **no** form of this command.

snmp-server community *string* [**group** *groupname* | **rw**]

no snmp-server community *string* [**group** *groupname* | **rw**]

Syntax Description

<i>string</i>	Community string that acts like a password and permits access to the SNMP agent. You can use up to a maximum of 64 characters.
group <i>groupname</i>	(Optional) Specifies the group name to which the community string belongs. You can use a maximum of 64 characters.
rw	(Optional) Enables read-write access to this community string.

Defaults

The SNMP agent is disabled and a community string is not configured. When configured, an SNMP community string by default permits read-only access to all objects.

Command Modes

global configuration

Device Modes

application-accelerator
central-manager

Examples

The following example shows how to enable the SNMP agent and assign the community string comaccess to SNMP:

```
WAE(config)# snmp-server community comaccess
```

The following example shows how to disable the SNMP agent and remove the previously defined community string:

```
WAE(config)# no snmp-server community
```

Related Commands

(config) [snmp-server community](#)
(config) [snmp-server contact](#)
(config) [snmp-server enable traps](#)
(config) [snmp-server group](#)
(config) [snmp-server host](#)
(config) [snmp-server location](#)
(config) [snmp-server mib](#)

(config) snmp-server notify inform

(config) snmp-server user

(config) snmp-server view

snmp trigger

(config) snmp-server contact

To set the system server contact string on a WAAS device, use the **snmp-server contact** global configuration command. To remove the system contact information, use the **no** form of this command.

snmp-server contact *line*

no snmp-server contact *line*

Syntax Description	contact <i>line</i> Specifies the text for MIB-II object <i>sysContact</i> . This is the identification of the contact person for this managed node.	
Command Modes	global configuration	
Device Modes	application-accelerator central-manager	
Defaults	No system contact string is set.	
Usage Guidelines	The system contact string is the value stored in the MIB-II system group <i>sysContact</i> object.	
Examples	<p>The following example shows how to set a system contact string and then remove it:</p> <pre>WAE(config)# snmp-server contact Dial System Operator at beeper # 27345</pre> <pre>WAE(config)# no snmp-server contact</pre>	
Related Commands	(config) snmp-server community (config) snmp-server enable traps (config) snmp-server group (config) snmp-server host (config) snmp-server location (config) snmp-server mib (config) snmp-server notify inform (config) snmp-server user (config) snmp-server view snmp trigger	

(config) snmp-server enable traps

To enable the WAAS device to send SNMP traps, use the **snmp-server enable traps** global configuration command. To disable all SNMP traps or only SNMP authentication traps, use the **no** form of this command.

snmp-server enable traps [**alarm** [**clear-critical** | **clear-major** | **clear-minor** | **raise-critical** | **raise-major** | **raise-minor**]

snmp-server enable traps **config** | **entity** | **event**

snmp-server enable traps content-engine [**disk-fail** | **disk-read** | **disk-write** | **overload-bypass** | **transaction-log**]

snmp-server enable traps snmp [**authentication** | **cold-start** | **linkdown** | **linkup**]

snmp-server enable traps wafs [**cslog** | **eslog** | **mgrlog**]

Syntax	Description
alarm	Enables WAAS alarm traps.
clear-critical	(Optional) Enables clear-critical alarm traps.
clear-major	(Optional) Enables clear-major alarm traps.
clear-minor	(Optional) Enables clear-minor alarm traps.
raise-critical	(Optional) Enables raise-critical alarm traps.
raise-major	(Optional) Enables raise-major alarm traps.
raise-minor	(Optional) Enables raise-minor alarm traps.
config	Enables CiscoConfigManEvent traps.
entity	Enables SNMP entity traps.
event	Enables Event MIB traps.
content-engine	Enables SNMP WAAS traps.
disk-fail	(Optional) Enables disk failure error traps.
disk-read	(Optional) Enables disk read error traps.
disk-write	(Optional) Enables disk write error traps.
overload-bypass	(Optional) Enables WCCP overload bypass error traps.
transaction-log	(Optional) Enables transaction log write error traps.
snmp	Enables SNMP-specific traps.
authentication	(Optional) Enables authentication trap.
cold-start	(Optional) Enables cold start trap.
linkdown	(Optional) Enables link down trap.
linkup	(Optional) Enables link up trap.
wafs	Enables all WAFS-specific traps.
cslog	(Optional) Enables the WAFS core server error log traps.
eslog	(Optional) Enables the WAFS edge server error log traps.
mgrlog	(Optional) Enables the WAFS Central Manager error log traps.

Defaults

This command is disabled by default. No traps are enabled.

Command Modes

global configuration

Device Modes

application-accelerator
central-manager

Usage Guidelines

In the WAAS software the following six generic alarm traps are available in the CISCO-CONTENT-ENGINE-MIB:

Name of Alarm Trap	Severity	Action
cceAlarmCriticalRaised	Critical	Raised
cceAlarmCriticalCleared	Critical	Cleared
cceAlarmMajorRaised	Major	Raised
cceAlarmMajorCleared	Major	Cleared
cceAlarmMinorRaised	Minor	Raised
cceAlarmMinorCleared	Minor	Cleared

**Note**

By default, these six general alarm traps are disabled.

These six general alarm traps provide SNMP and Node Health Manager integration. You can enable or disable each of these six alarm traps through the WAAS CLI.

To configure traps, you must enter the **snmp-server enable traps** command. If you do not enter the **snmp-server enable traps** command, no traps are sent.

The **snmp-server enable traps** command is used with the **snmp-server host** command. Use the **snmp-server host** command to specify which host or hosts receive SNMP traps. To send traps, you must configure at least one host using the **snmp-server host** command.

To allow a host to receive a trap, you must enable both the **snmp-server enable traps** command and the **snmp-server host** command for that host.

You must enable SNMP with the **snmp-server community** command.

To disable the sending of the MIB-II SNMP authentication trap, you must enter the command **no snmp-server enable traps snmp authentication**.

Examples

The following example shows how to enable the WAAS device to send all traps to the host 172.31.2.160 using the community string public:

```
WAE(config)# snmp-server enable traps
WAE(config)# snmp-server host 172.31.2.160 public
```

The following example shows how to disable all traps:

```
WAE(config)# no snmp-server enable traps
```

Related Commands

(config) snmp-server community
(config) snmp-server contact
(config) snmp-server group
(config) snmp-server host
(config) snmp-server location
(config) snmp-server mib
(config) snmp-server notify inform
(config) snmp-server user
(config) snmp-server view
snmp trigger

(config) snmp-server group

To define a user security model group for a WAAS device, use the **snmp-server group** global configuration command. To remove the specified group, use the **no** form of this command.

```
snmp-server group name { v1 [notify name] [read name] [write name] |
    v2c [notify name] [read name] [write name] |
    v3 {auth [notify name] [read name] [write name] |
        noauth [notify name] [read name] [write name] |
        priv [notify name] [read name] [write name]}}

no snmp-server group name { v1 [notify name] [read name] [write name] |
    v2c [notify name] [read name] [write name] |
    v3 {auth [notify name] [read name] [write name] |
        noauth [notify name] [read name] [write name] |
        priv [notify name] [read name] [write name]}}
```

Syntax Description

group name	Specifies the SNMP group. You can enter a maximum of 64 characters.
v1	Specifies the group using the Version 1 Security Model.
notify name	(Optional) Specifies a notify view name for the group that enables you to specify a notify, inform, or trap. You can enter a maximum of 64 characters.
read name	(Optional) Specifies a read view name for the group that enables you to view only the contents of the agent. You can enter a maximum of 64 characters.
write	(Optional) Specifies a write view name for the group that enables you to enter data and configure the contents of the agent. You can enter a maximum of 64 characters.
v2c	Specifies the group using the Version 2c Security Model.
v3	Specifies the group using the User Security Model (SNMPv3).
auth	Specifies the group using the AuthNoPriv Security Level.
noauth	Specifies the group using the noAuthNoPriv Security Level.
priv	Specifies the group using the AuthPriv Security Level.

Defaults

The default is that no user security model group is defined.

Command Modes

global configuration

Device Modes

application-accelerator
central-manager

Usage Guidelines

The maximum number of SNMP groups that can be created is 10.

Select one of three SNMP security model groups: Version 1 (**v1**) Security Model, Version 2c (**v2c**) Security Model, or the User Security Model (**v3** or SNMPv3). Optionally, you then specify a notify, read, or write view for the group for the particular security model chosen. The **v3** option allows you to specify the group using one of three security levels: **auth** (AuthNoPriv Security Level), **noauth** (noAuthNoPriv Security Level), or **priv** (AuthPriv Security Level).

Examples

The following example shows how to define a user security model group named acme that uses the SNMP version 1 security model and a view name of mymib for notifications:

```
WAE(config)# snmp-server group acme v1 notify mymib
```

Related Commands

(config) snmp-server community
(config) snmp-server contact
(config) snmp-server enable traps
(config) snmp-server host
(config) snmp-server location
(config) snmp-server mib
(config) snmp-server notify inform
(config) snmp-server user
(config) snmp-server view
snmp trigger

(config) snmp-server host

To specify the recipient of a host SNMP trap operation, use the **snmp-server host** global configuration command. To remove the specified host, use the **no** form of this command.

```
snmp-server host {hostname | ip-address} communitystring
                [v2c [retry number] [timeout seconds] |
                [v3 {auth [retry number] [timeout seconds] |
                noauth [retry number] [timeout seconds] |
                priv [retry number] [timeout seconds]}]]
```

```
no snmp-server host {hostname | ip-address} communitystring
                   [v2c [retry number] [timeout seconds] |
                   [v3 {auth [retry number] [timeout seconds] |
                   noauth [retry number] [timeout seconds] |
                   priv [retry number] [timeout seconds]}]]
```

Syntax Description

<i>hostname</i>	Hostname of the SNMP trap host that will be sent in the SNMP trap messages from the WAAS device.
<i>ip-address</i>	IP address of the SNMP trap host that will be sent in the SNMP trap messages from the WAAS device.
<i>communitystring</i>	Password-like community string sent in the SNMP trap messages from the WAE. You can enter a maximum of 64 characters.
v2c	(Optional) Specifies the Version 2c Security Model.
retry number	(Optional) Sets the count for the number of retries (1–10) for the inform request. (The default is 2 tries.)
timeout seconds	(Optional) Sets the timeout for the inform request (1–1000 seconds). The default is 15 seconds.
v3	(Optional) Specifies the User Security Model (SNMPv3).
auth	Sends a notification using the AuthNoPriv Security Level.
noauth	Sends a notification using the noAuthNoPriv Security Level.
priv	Sends a notification using the AuthPriv Security Level.

Defaults

This command is disabled by default. No traps are sent. If enabled, the default version of the SNMP protocol used to send the traps is SNMP Version 1.

retry number: 2 retries

timeout: 15 seconds

Command Modes

global configuration

Device Modes

application-accelerator

central-manager

Usage Guidelines

If you do not enter an **snmp-server host** command, no traps are sent. To configure the WAAS device to send SNMP traps, you must enter at least one **snmp-server host** command. To enable multiple hosts, you must enter a separate **snmp-server host** command for each host. The maximum number of **snmp-server host** commands is four.

When multiple **snmp-server host** commands are given for the same host, the community string in the last command is used.

The **snmp-server host** command is used with the **snmp-server enable traps** command to enable SNMP traps.

You must enable SNMP with the **snmp-server community** command.

Examples

The following example shows how to send the SNMP traps defined in RFC 1157 to the host specified by the IP address 172.16.2.160. The community string is comaccess:

```
WAE(config)# snmp-server enable traps
WAE(config)# snmp-server host 172.16.2.160 comaccess
```

The following example shows how to remove the host 172.16.2.160 from the SNMP trap recipient list:

```
WAE(config)# no snmp-server host 172.16.2.160
```

Related Commands

(config) [snmp-server community](#)
(config) [snmp-server contact](#)
(config) [snmp-server enable traps](#)
(config) [snmp-server group](#)
(config) [snmp-server location](#)
(config) [snmp-server mib](#)
(config) [snmp-server notify inform](#)
(config) [snmp-server user](#)
(config) [snmp-server view](#)
[snmp trigger](#)

(config) snmp-server location

To set the SNMP system location string on a WAAS device, use the **snmp-server location** global configuration command. To remove the location string, use the **no** form of this command.

snmp-server location *line*

no snmp-server location *line*

Syntax Description	<p>location <i>line</i> Specifies text for MIB-II object <i>sysLocation</i>. This string describes the physical location of this node.</p>
Defaults	No system location string is set.
Command Modes	global configuration
Device Modes	application-accelerator central-manager
Usage Guidelines	The system location string is the value stored in the MIB-II system group system location object. You can see the system location string with the show snmp EXEC command.
Examples	<p>The following example shows how configure a system location string:</p> <pre>WAE(config)# snmp-server location Building 3/Room 214</pre>
Related Commands	<p> (config) snmp-server community (config) snmp-server contact (config) snmp-server enable traps (config) snmp-server group (config) snmp-server host (config) snmp-server mib (config) snmp-server notify inform (config) snmp-server user (config) snmp-server view snmp trigger </p>

(config) snmp-server mib

To configure persistence for the SNMP Event MIB, use the **snmp-server mib** global configuration command. To disable the Event MIB, use the **no** form of this command.

snmp-server mib persist event

no snmp-server mib persist event

Syntax Description	persist	Configures MIB persistence.
	event	Enables MIB persistence for the Event MIB.

Defaults	No default behavior or values.
-----------------	--------------------------------

Command Modes	global configuration
----------------------	----------------------

Device Modes	application-accelerator
---------------------	-------------------------

Usage Guidelines	The Event MIB can set the threshold on any MIB variables supported by the WAAS software and store the threshold permanently on the disk.
-------------------------	--

The WAAS software implementation of SNMP supports the following MIBs:

- ACTONA-ACTASTORE-MIB
- CISCO-CONFIG-MAN-MIB
- CISCO-CDP-MIB
- CISCO-CONTENT-ENGINE-MIB (partial)
- CISCO-ENTITY-ASSET-MIB
- CISCO-SMI
- CISCO-TC
- ENTITY-MIB
- EVENT-MIB
- HOST-RESOURCES-MIB
- MIB-II
- SNMP-COMMUNITY-MIB
- SNMP-FRAMEWORK-MIB
- SNMP-NOTIFICATION-MIB
- SNMP-TARGET-MIB
- SNMP-USM-MIB

- SNMPv2
- SNMP-VACM-MIB

**Note**

The WAAS software supports six generic alarm traps in the CISCO-CONTENT-ENGINE-MIB for SNMP and Node Health Manager integration.

Examples

The following example shows how to set persistence for the Event MIB:

```
WAE(config)# snmp-server mib persist event
```

Related Commands

(config) snmp-server community
(config) snmp-server contact
(config) snmp-server enable traps
(config) snmp-server group
(config) snmp-server host
(config) snmp-server location
(config) snmp-server notify inform
(config) snmp-server user
(config) snmp-server view
snmp trigger

(config) snmp-server notify inform

To configure the SNMP notify inform request on a WAAS device, use the **snmp-server notify inform** global configuration command. To return the setting to the default value, use the **no** form of this command.

snmp-server notify inform

no snmp-server notify inform

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Defaults	If you do not enter the snmp-server notify inform command, the default is an SNMP trap request.
-----------------	--

Command Modes	global configuration
----------------------	----------------------

Device Modes	application-accelerator central-manager
---------------------	--

Examples	The following example shows how to configure an SNMP notify inform request versus the default SNMP trap: WAE(config)# snmp-server notify inform
-----------------	---

Related Commands	(config) snmp-server community (config) snmp-server contact (config) snmp-server enable traps (config) snmp-server group (config) snmp-server host (config) snmp-server location (config) snmp-server mib (config) snmp-server user (config) snmp-server view snmp trigger
-------------------------	---

(config) snmp-server trap-source

To set the source interface from which SNMP traps are sent on a WAAS device, use the **snmp-server trap-source** global configuration command. To remove the trap source configuration, use the **no** form of this command.

snmp-server trap-source { **GigabitEthernet** *slot/port* | **PortChannel 1** | **Standby** *grpnumber* }

no snmp-server trap-source { **GigabitEthernet** *slot/port* | **PortChannel 1** | **Standby** *grpnumber* }

Syntax Description	GigabitEthernet <i>slot/port</i>	Selects a Gigabit Ethernet interface to configure as the trap source. The slot range is 1–2; the port must be 0. The slot number and port number are separated with a forward slash character (/).
	PortChannel 1	Selects a port channel to configure as the trap source. There is only port channel 1.
	Standby <i>grpnumber</i>	Selects a standby group to configure as the trap source. The group number value is 1.

Defaults No system trap source is set.

Command Modes global configuration

Device Modes application-accelerator
central-manager

Examples The following example shows how to configure gigabit Ethernet interface 1/0 as the trap source:

```
WAE(config)# snmp-server trap-source gigabitethernet 1/0
```

Related Commands

- (config) snmp-server community
- (config) snmp-server contact
- (config) snmp-server enable traps
- (config) snmp-server group
- (config) snmp-server host
- (config) snmp-server mib
- (config) snmp-server notify inform
- (config) snmp-server user
- (config) snmp-server view
- snmp trigger

(config) snmp-server user

To define a user who can access the SNMP server, use the **snmp-server user** global configuration command. To remove access, use the **no** form of this command.

```
snmp-server user name group
    [auth {md5 password [priv password] |
    sha password [priv password]} |
    remote octetstring [auth {md5 password [priv password] |
    sha password [priv password]}]]

no snmp-server user name group
    [auth {md5 password [priv password] |
    sha password [priv password]} |
    remote octetstring [auth {md5 password [priv password] |
    sha password [priv password]}]]
```

Syntax Description

user <i>name group</i>	Specifies the name and group of the SNMP user. Use letters, numbers, dashes, and underscores, but no blanks. The name specifies the user on the SNMP host who wants to communicate with the SNMP agent on the WAAS device. You can enter a maximum of 32 characters for the name. The group specifies the group to which the SNMP user belongs. You can enter a maximum of 64 characters for the group.
auth	(Optional) Configures user authentication parameters.
md5 <i>password</i>	Configures HMAC MD5 user authentication password.
priv <i>password</i>	(Optional) Configures authentication HMAC-MD5 user private password. You can enter a maximum of 256 characters.
sha <i>password</i>	Configures the HMAC-SHA authentication password. You can enter a maximum of 256 characters.
remote <i>octetstring</i>	(Optional) Specifies the globally unique identifier (engineID) for a remote SNMP entity (for example, the SNMP network management station) for at least one of the SNMP users (10 to 64 characters, not counting colons). To send an SNMPv3 inform message, you must configure at least one SNMPv3 user with a remote SNMP ID option on the WAAS device. The SNMP ID is entered in octet string form. For example, if the IP address of a remote SNMP entity is 192.147.142.129, then the octet string would be 00:00:63:00:00:00:a1:c0:93:8e:81. (Colons will be removed in the show running-config command output.)

Defaults

No default behavior or values.

Command Modes

global configuration

Device Modes

application-accelerator

central-manager

Examples

The following example shows how to create an SNMPv3 user account on the WAAS device. The SNMPv3 user is named acme and belongs to the group named admin. Because this SNMP user account has been set up with no authentication password, the SNMP agent on the WAAS device does not perform authentication on SNMP requests from this user.

```
WAE(config)# snmp-server user acme admin
```

Related Commands

(config) snmp-server community
(config) snmp-server contact
(config) snmp-server enable traps
(config) snmp-server group
(config) snmp-server host
(config) snmp-server location
(config) snmp-server mib
(config) snmp-server notify inform
(config) snmp-server view
snmp trigger

(config) snmp-server view

To define an SNMPv2 MIB view on a WAAS device, use the **snmp-server view** global configuration command. To remove the MIB view definition, use the **no** form of this command.

snmp-server view *viewname MIBfamily* {**excluded** | **included**}

no snmp-server view *viewname MIBfamily* {**excluded** | **included**}

Syntax Description

<i>viewname MIBfamily</i>	Name of this family of view subtrees and a subtree of the MIB. You can enter a maximum of 64 characters.
excluded	Excludes the MIB family from the view.
included	Includes the MIB family in the view.

Defaults

No default behavior or values.

Command Modes

global configuration

Device Modes

application-accelerator
central-manager

Examples

The following example shows how to define an SNMPv2 MIB view:

```
WAE(config)# snmp-server view fileview ciscoFileEngineMIB included
```

Related Commands

(config) snmp-server community
(config) snmp-server contact
(config) snmp-server enable traps
(config) snmp-server group
(config) snmp-server host
(config) snmp-server location
(config) snmp-server mib
(config) snmp-server notify inform
(config) snmp-server user
snmp trigger

(config) sshd

To enable the SSH daemon on a WAAS device, use the **sshd** global configuration command. To disable the SSH daemon on a WAAS device, use the **no** form of this command.

```
sshd {allow-non-admin-users | enable | password-guesses number | timeout seconds |
      version {1 | 2}}
```

```
no sshd {allow-non-admin-users | enable | password-guesses number | timeout seconds |
         version {1 | 2}}
```

Syntax Description

allow-non-admin-users	Allows nonadministrative users to gain SSH access to the chosen device (or device group). By default, this option is disabled.
Note	Nonadministrative users are nonsuperuser administrators. All nonsuperuser administrators have restricted access to a WAAS device because their login accounts have a privilege level of 0. Superuser administrators have full access to a WAAS device because their login accounts have the highest level of privileges, a privilege level of 15.
enable	Enables the SSH daemon on a WAAS device.
password-guesses <i>number</i>	Specifies the maximum number of allowable password guesses per connection (1–99). The default is 3.
timeout <i>seconds</i>	Configures the number of seconds for which an SSH session will be active during the negotiation (authentication) phase between the client and server before it times out. The SSH login grace time value in seconds is 1–99999. The default is 300. If you have established an SSH connection to the WAAS device but have not entered the username when prompted at the login prompt, the connection will be terminated by the WAAS device if the grace period expires even after a successful login.
version	Configures the SSH version to be supported on the WAAS device.
1	Specifies that SSH Version 1 is supported on the WAAS device.
2	Specifies that SSH Version 2 is supported on the WAAS device.

Defaults

By default, the SSH daemon is disabled on a WAAS device. If you use the **sshd enable** command to enable the SSH daemon on a WAAS device, the following default settings are used:

password-guesses *number*: 3 guesses

timeout *seconds*: 300 seconds

version: Both SSH Version 1 and 2 are enabled.

Command Modes

global configuration

Device Modes

application-accelerator

central-manager

Usage Guidelines

Before you enable the **sshd** command, use the **ssh-key-generate** command to generate a private and a public host key, which the client uses to verify the server identity.

Although the **sshd password-guesses** command specifies the number of allowable password guesses from the SSH server side, the actual number of password guesses for an SSH login session is determined by the combined number of allowable password guesses of the SSH server and the SSH client. Some SSH clients limit the maximum number of allowable password guesses to three (or to one in some cases), even though SSH server side allows more than this number of guesses.

When you enter the **sshd password-guesses** command and specify *n* allowable password guesses, certain SSH clients interpret this *number* as *n*+1. For example, when configuring the number of guesses to two by issuing the command **sshd password-guesses 2** for a particular device, SSH sessions from some SSH clients will allow three password guesses.

You can enable both SSH Version 1 and Version 2, or you can enable one version and not the other. When you enable the SSH daemon using the **sshd enable** global configuration command, support for both SSH Version 1 and SSH Version 2 is enabled. If you want the WAAS device to support only one version of SSH (for example SSH version 2), you must disable the other version. For example, to disable SSH Version 1, enter the **no sshd version 1** command.

If the SSH daemon is currently enabled on a WAAS device, at least one version of SSH must be enabled on the device. Before you can disable both versions of SSH, you must enter the **no sshd enable** command to disable the SSH daemon on the WAAS device. If you attempt to disable both versions of SSH before you have disabled the SSH daemon, the following message will appear on your console informing you that you must disable the SSH daemon before you can disable both versions of SSH:

```
WAE(config)# no sshd version 1
WAE(config)# no sshd version 2
Atleast SSHv1 or SSHv2 must be enabled with sshd enabled.
Disable sshd to disable both SSHv1 and SSHv2.
Did not update ssh version support. Please retry.
```

When support for both SSH version 1 and SSH version 2 are enabled in the WAAS device, the **show running-config EXEC** command output does not display any SSHD configuration.

If you have disabled the support for one version of SSH, the **show running-config EXEC** command output contains the following line:

```
no sshd version version_number
```



Note

You can use the Telnet daemon with the WAAS device. SSH does not replace Telnet.

Examples

The following example shows how to enable and configure a Secure Shell daemon on the WAAS device:

```
WAE(config)# sshd enable
WAE(config)# sshd password-guesses 4
WAE(config)# sshd timeout 20
```

The following example shows how to disable the support for SSH Version 1 in the WAAS device:

```
WAE(config)# no sshd version 1
```


■ (config) sshd

Related Commands [\(config\) ssh-key-generate](#)

(config) ssh-key-generate

To generate the SSH host key for a WAAS device, use the **ssh-key-generate** global configuration command. To remove the SSH key, use the **no** form of this command.

ssh-key-generate [**key-length** *length*]

no ssh-key-generate [**key-length** *length*]

Syntax Description	key-length <i>length</i> (Optional) Configures the length of the SSH key. The number of bits is 512–2048.
Defaults	key-length <i>length</i> : 1024 bits
Command Modes	global configuration
Device Modes	application-accelerator central-manager
Usage Guidelines	<p>Before you enter the sshd enable command, enter the ssh-key-generate command to generate a private and a public host key, which the client programs use to verify a server identity.</p> <p>When you use an SSH client and log in to a WAAS device, the public key for the SSH daemon that is running on the device is recorded in the client machine known_hosts file in your home directory. If you regenerate the host key by specifying the number of bits in the key-length command option, you must delete the old public key entry associated with the WAAS device in the known_hosts file before running the SSH client program to log in to the WAAS device. When you use the SSH client program after deleting the old entry, the known_hosts file is updated with the new SSH public key for the WAAS device.</p>
Examples	<p>The following example shows how to generate an SSH public key and then enables the SSH daemon on the WAAS device:</p> <pre>WAE(config)# ssh-key-generate Ssh host key generated successfully Saving the host key to box ... Host key saved successfully WAE(config)# sshd enable Starting ssh daemon ... Ssh daemon started successfully</pre>
Related Commands	(config) sshd

(config) tacacs

To configure TACACS+ server parameters on a WAAS device, use the **tacacs** global configuration command. To disable individual options, use the **no** form of this command.

```
tacacs {host {hostname | ip-address} [primary] | key keyword | password ascii | retransmit retries | timeout seconds}
```

```
no tacacs {host {hostname | ip-address} [primary] | key keyword | password ascii | retransmit retries | timeout seconds}
```

Syntax Description

host	Specifies a server address.
<i>hostname</i>	Hostname of the TACACS+ server.
<i>ip-address</i>	IP address of the TACACS+ server.
primary	(Optional) Sets the server as the primary server.
key <i>keyword</i>	Sets the security word. An empty string is the default.
password <i>ascii</i>	Specifies ASCII as the TACACS+ password type.
retransmit <i>retries</i>	Sets the number of times that requests are retransmitted to a server. The number of retry attempts allowed is 1–3. The default is 2 retry attempts.
timeout <i>seconds</i>	Sets the number of seconds to wait before a request to a server is timed out. The timeout is in seconds (1–20). The default is 5 seconds.

Defaults

keyword: none (empty string)

timeout *seconds*: 5

retries: 2

password: The default password type is PAP.

Command Modes

global configuration

Device Modes

application-accelerator

central-manager

Usage Guidelines

To enable user authentication with a TACACS+ server, use the **authentication** global configuration command. (See the [\(config\) authentication configuration](#) command.)



Note

When AAA Command Authorization is enabled for a device through the Central Manager GUI, TACACS+ CLI configuration changes are not allowed and **tacacs** commands will fail.

You can use the TACACS+ remote database to maintain login and configuration privileges for administrative users. The **tacacs host** command allows you to configure the network parameters required to access the remote database.

Use the **tacacs key** command to specify the TACACS+ key, used to encrypt the packets transmitted to the server. This key must be the same as the one specified on the server daemon. The maximum number of characters in the key should not exceed 99 printable ASCII characters (except tabs). An empty key string is the default. All leading spaces are ignored; spaces within and at the end of the key string are not ignored. Double quotes are not required even if there are spaces in the key, unless the quotes themselves are part of the key.

The **tacacs timeout** is the number of seconds that the WAAS device waits before declaring a timeout on a request to a particular TACACS+ server. The range is from 1 to 20 seconds, with 5 seconds as the default. The number of times that the WAAS device repeats a retry-timeout cycle before trying the next TACACS+ server is specified by the **tacacs retransmit** command. The default is two retry attempts.

Three unsuccessful login attempts are permitted. TACACS+ logins may appear to take more time than local logins depending on the number of TACACS+ servers and the configured timeout and retry values.

Use the **tacacs password ascii** command to specify the TACACS+ password type as ASCII. The default password type is PAP (Password Authentication Protocol). When the **no tacacs password ascii** command is used to disable the ASCII password type, the password type is once again reset to PAP.

You can configure multiple TACACS+ servers; authentication is attempted on the primary server first. If the primary server is unreachable, then authentication is attempted on the other servers in the TACACS+, in the order in which they were configured. If authentication fails for any reason other than a server is unreachable, authentication is not attempted on the other servers in the farm. This process applies regardless of the setting of the **authentication fail-over server-unreachable** command.

Examples

The following example shows how to configure the key used in encrypting packets:

```
WAE(config)# tacacs key human789
```

The following example shows how to configure the host named spearhead as the primary TACACS+ server:

```
WAE(config)# tacacs host spearhead primary
```

The following example shows how to set the timeout interval for the TACACS+ server:

```
WAE(config)# tacacs timeout 10
```

The following example shows how to set the number of times that authentication requests are retried (retransmitted) after a timeout:

```
WAE(config)# tacacs retransmit 5
```

The following example shows the password type to be PAP by default:

```
WAE# show tacacs
Login Authentication for Console/Telnet Session: enabled (secondary)
Configuration Authentication for Console/Telnet Session: enabled (secondary)

TACACS+ Configuration:
-----
TACACS+ Authentication is off
Key           = *****
Timeout       = 5
Retransmit    = 2
Password type: pap
```

Server	Status
10.107.192.148	primary
10.107.192.168	
10.77.140.77	

You can configure the password type to be ASCII using the **tacacs password ascii** command. You can then verify the changes using the **show tacacs** command.

```
WAE(config)# tacacs password ascii
WAE(config)# exit
WAE# show tacacs
Login Authentication for Console/Telnet Session: enabled (secondary)
Configuration Authentication for Console/Telnet Session: enabled (secondary)

TACACS+ Configuration:
-----
TACACS+ Authentication is off
Key          = *****
Timeout      = 5
Retransmit   = 2
Password type: ascii

Server              Status
-----
10.107.192.148      primary
10.107.192.168
10.77.140.77
```

Related Commands

(config) authentication configuration

show authentication

show statistics authentication

show statistics tacacs

show tacacs

(config) tcp

To configure TCP parameters on a WAAS device, use the **tcp** global configuration command. To disable TCP parameters, use the **no** form of this command.

```
tcp { cwnd-base segments | ecn enable | increase-xmit-timer-value value |
    init-ss-threshold value | keepalive-probe-cnt count | keepalive-probe-interval seconds |
    keepalive-timeout seconds }
```

```
no tcp { cwnd-base segments | ecn enable | increase-xmit-timer-value value |
    init-ss-threshold value | keepalive-probe-cnt count | keepalive-probe-interval seconds |
    keepalive-timeout seconds }
```

Syntax Description		
cwnd-base <i>segments</i>		Sets initial send congestion window in segments (1–10).
ecn enable		Enables TCP explicit congestion notification.
increase-xmit-timer-value <i>value</i>		Specifies the factor (1-3) used to modify the length of the retransmit timer by 1 to 3 times the base value determined by the TCP algorithm.
	Note	Use this keyword with caution. The keyword can improve throughput when TCP is used over slow reliable connections but should never be changed in an unreliable packet delivery environment.
init-ss-threshold <i>value</i>		Sets initial slow-start threshold value (2-10).
keepalive-probe-cnt <i>count</i>		Specifies the length of time that the WAAS device keeps an idle connection open. The number of probe counts is 1–10.
keepalive-probe-interval <i>seconds</i>		Specifies the number of times that the WAAS device retries a connection. The keepalive probe interval is in seconds (1–300).
keepalive-timeout <i>seconds</i>		Specifies the length of time that the WAAS device keeps a connection open before disconnecting. The keepalive timeout is in seconds (1–3600).

Defaults

```
tcp cwnd-base: 2
tcp increase-xmit-timer-value: 1
tcp init-ss-threshold: 2 segments
tcp keepalive-probe-cnt: 4
tcp keepalive-probe-interval: 75 seconds
tcp keepalive-timeout: 90 seconds
```

Command Modes

global configuration

Device Modes

application-accelerator
central-manager

Usage Guidelines

The following are the usage guidelines for this command:

**Caution**

Be careful using these parameters. In nearly all environments, the default TCP settings are adequate. Fine tuning of TCP settings is for network administrators who are experienced and have a full understanding of TCP operation details. See the *Cisco Wide Area Application Services Configuration Guide* for more information.

Use the **tcp keepalive-probe-cnt** global configuration command to specify how many times the WAAS device should attempt to connect to the device before closing the connection. The count can be from 1 to 10. The default is 4 attempts.

Use the **tcp keepalive-probe-interval** global configuration command to specify how often the WAAS device is to send out a TCP keepalive. The interval can be from 1 to 120 seconds. The default is 75 seconds.

Use the **tcp keepalive-timeout** global configuration command to wait for a response (the device does not respond) before the WAAS device logs a miss. The timeout can be from 1 to 120 seconds. The default is 90 seconds.

Examples

The following example shows how to enable a TCP explicit congestion notification:

```
WAE(config)# tcp ecn enable
```

Related Commands

[clear arp-cache](#)

[show statistics tcp](#)

[show tcp](#)

(config) telnet enable

To enable Telnet on a WAAS device, use the **telnet enable** global configuration command. To disable this feature, use the **no** form of this command.

telnet enable

no telnet enable

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Defaults	By default, the Telnet service is enabled on a WAAS device.
-----------------	---

Command Modes	global configuration
----------------------	----------------------

Device Modes	application-accelerator central-manager
---------------------	--

Usage Guidelines	Use terminal emulation software to start a Telnet session with a WAAS device. You must use a console connection instead of a Telnet session to define device network settings on the WAAS device. However, after you have used a console connection to define the device network settings, you can use a Telnet session to perform subsequent configuration tasks.
-------------------------	---

**Note**

Messages transported between the client and the device are not encrypted.

Examples	The following example shows how to enable the use of Telnet on the WAAS device:
-----------------	---

```
WAE(config)# telnet enable
```

Related Commands	telnet show telnet
-------------------------	---

(config) tfo exception

To configure exception handling for Traffic Flow Optimization (TFO), use the **tfo exception** global configuration command. To disable TFO exception handling configuration, use the **no** form of this command.

```
tfo exception { coredump | debug | no-coredump }  
  
no tfo exception { coredump | debug | no-coredump }
```

Syntax Description	coredump	Writes a core file (default).
	debug	Hangs the system until it is explicitly restarted.
	no-coredump	Restarts the accelerator and does not write a core file.

Defaults The default is coredump.

Command Modes global configuration

Device Modes application-accelerator

Examples The following example shows how to write TFO exeption handling to a core file using the **tfo exception** command:
WAE(config)# **tfo exception coredump**

Related Commands [\(config\) tfo optimize](#)

(config) tfo optimize

To configure a WAE for Traffic Flow Optimization (TFO), use the **tfo optimize** global configuration command. To disable TFO optimization, use the **no** form of this command.

tfo optimize {DRE {yes | no} compression {LZ | none} | full}

no tfo optimize {DRE {yes | no} compression {LZ | none} | full}

Syntax Description	DRE	Configures TFO optimization with or without Data Redundancy Elimination (DRE).
	yes	Enables DRE.
	no	Disables DRE.
	compression	Configures TFO optimization with or without generic compression.
	LZ	Configures TFO optimization with Lempel-Ziv (LZ) compression.
	none	Configures TFO optimization with no compression.
	full	Configures TFO optimization with DRE and LZ compression. Using this keyword is the same as specifying the tfo optimize DRE yes compression LZ command.

Defaults The default TFO optimization on a WAAS device is **tfo optimize full**.

Command Modes global configuration

Device Modes application-accelerator

Examples The following example shows to configures TFO optimization with DRE and full compression using the **tfo optimize** command:

```
WAE(config)# tfo optimize DRE yes compression full
```

Related Commands [show statistics tfo](#)

(config) tfo tcp adaptive-buffer-sizing

To configure a WAE for Traffic Flow Optimization (TFO) with TCP adaptive buffering, use the **tfo tcp adaptive-buffer-sizing** global configuration command. To disable adaptive buffer sizing or to unconfigure the buffer size, use the **no** form of this command.

tfo tcp adaptive-buffer-sizing {enable | receive-buffer-max *size* | send-buffer-max *size*}

no tfo tcp adaptive-buffer-sizing {enable | receive-buffer-max *size* | send-buffer-max *size*}

Syntax Description	<table> <tr> <td>enable</td><td>Enables TCP adaptive buffer sizing.</td></tr> <tr> <td>receive-buffer-max <i>size</i></td><td>Sets the maximum size of the receive buffer. Valid values range from 1 to 32768 KB.</td></tr> <tr> <td>send-buffer-max <i>size</i></td><td>Sets the maximum size of the send buffer. Valid values range from 1 to 32768 KB.</td></tr> </table>	enable	Enables TCP adaptive buffer sizing.	receive-buffer-max <i>size</i>	Sets the maximum size of the receive buffer. Valid values range from 1 to 32768 KB.	send-buffer-max <i>size</i>	Sets the maximum size of the send buffer. Valid values range from 1 to 32768 KB.
enable	Enables TCP adaptive buffer sizing.						
receive-buffer-max <i>size</i>	Sets the maximum size of the receive buffer. Valid values range from 1 to 32768 KB.						
send-buffer-max <i>size</i>	Sets the maximum size of the send buffer. Valid values range from 1 to 32768 KB.						
Defaults	Adaptive buffering is enabled by default. The default maximum send and receive buffer sizes depend on the WAE device model.						
Command Modes	global configuration						
Device Modes	application-accelerator						
Usage Guidelines	If you would rather use preallocated and unchanging send and receive buffers, you can configure them with the following global configuration commands: tfo tcp optimized-receive-buffer , tfo tcp optimized-send-buffer , tfo tcp original-receive-buffer , and tfo tcp original-send-buffer . You can turn off adaptive buffer sizing by using the no tfo tcp adaptive-buffer-sizing command.						
Examples	<p>The following example shows how to configure a WAE for Traffic Flow Optimization (TFO) with TCP adaptive buffering using the tfo tcp adaptive-buffer-sizing command:</p> <pre>WAE(config)# tfo tcp adaptive-buffer-sizing enable</pre>						
Related Commands	<p>(config) tfo tcp optimized-mss</p> <p>(config) tfo tcp optimized-receive-buffer</p> <p>(config) tfo tcp optimized-send-buffer</p> <p>(config) tfo tcp original-receive-buffer</p> <p>(config) tfo tcp original-send-buffer</p> <p>show tfo tcp</p>						

(config) tfo tcp keepalive

To configure a WAE for Traffic Flow Optimization (TFO) with TCP keepalives, use the **tfo tcp keepalive** global configuration command. To disable TFO TCP keepalives, use the **no** form of this command.

tfo tcp keepalive

no tfo tcp keepalive

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Defaults	Keepalives are disabled by default.
-----------------	-------------------------------------

Command Modes	global configuration
----------------------	----------------------

Device Modes	application-accelerator
---------------------	-------------------------

Usage Guidelines	This command enables TCP keepalives on the TFO optimized sockets (the connection between two peer WAEs).
-------------------------	--

Examples	The following example shows how to configure a WAE for Traffic Flow Optimization with TCP keepalives using the tfo tcp keepalive command:
-----------------	--

```
WAE(config)# tfo tcp keepalive
```

Related Commands	(config) tfo tcp optimized-mss (config) tfo tcp optimized-receive-buffer (config) tfo tcp optimized-send-buffer (config) tfo tcp original-mss (config) tfo tcp original-receive-buffer (config) tfo tcp original-send-buffer
-------------------------	---

(config) tfo tcp optimized-mss

To configure a WAE for Traffic Flow Optimization (TFO) with an optimized-side TCP maximum segment size, use the **tfo tcp optimized-mss** global configuration command. To disable this function, use the **no** form of this command.

tfo tcp optimized-mss *segment-size*

no tfo tcp optimized-mss *segment-size*

Syntax Description	<i>segment-size</i> Optimized side TCP max segment size (512–1460).
Defaults	The default value of the segment size is 1432 bytes.
Command Modes	global configuration
Device Modes	application-accelerator
Usage Guidelines	This command sets the TCP maximum segment size on TFO optimized sockets (the connection between two peer WAEs).
Examples	<p>The following example shows how to configure a WAE for Traffic Flow Optimization with an optimized-side TCP maximum segment size of 512 using the tfo tcp optimized-mss command:</p> <pre>WAE(config)# tfo tcp optimized-mss 512</pre>
Related Commands	<p> (config) tfo tcp keepalive (config) tfo tcp optimized-receive-buffer (config) tfo tcp optimized-send-buffer (config) tfo tcp original-mss (config) tfo tcp original-receive-buffer (config) tfo tcp original-send-buffer </p>

(config) tfo tcp optimized-receive-buffer

To configure a WAE for Traffic Flow Optimization (TFO) with an optimized-side receive buffer, use the **tfo tcp optimized-receive-buffer** global configuration command. To disable this function, use the **no** form of this command.

tfo tcp optimized-receive-buffer *buffer-size*

no tfo tcp optimized-receive-buffer *buffer-size*

Syntax Description	<i>buffer-size</i> Receive buffer size in kilobytes. Valid values range from 1 to 32768 KB.
Defaults	32 KB
Command Modes	global configuration
Device Modes	application-accelerator
Examples	<p>The following example shows how to configure a WAE for Traffic Flow Optimization with a 32 KB optimized-side receive buffer using the tfo tcp optimized-receive-buffer command:</p> <pre>WAE(config)# tfo tcp optimized-receive-buffer 32</pre>
Related Commands	<p>(config) tfo tcp keepalive</p> <p>(config) tfo tcp optimized-mss</p> <p>(config) tfo tcp optimized-send-buffer</p> <p>(config) tfo tcp original-mss</p> <p>(config) tfo tcp original-receive-buffer</p> <p>(config) tfo tcp original-send-buffer</p>

(config) tfo tcp optimized-send-buffer

To configure a WAE for Traffic Flow Optimization (TFO) with an optimized-side send buffer, use the **tfo tcp optimized-send-buffer** global configuration command. To disable this function, use the **no** form of this command.

tfo tcp optimized-send-buffer *buffer-size*

no tfo tcp optimized-send-buffer *buffer-size*

Syntax Description	<i>buffer-size</i> Send buffer size in kilobytes. Valid values range from 1 to 32768 KB.
Defaults	32 KB
Command Modes	global configuration
Device Modes	application-accelerator
Usage Guidelines	The buffer should be equal to or greater than twice the Bandwidth Delay Product (BDP). The BDP is equivalent to the bandwidth (in bits per second) * latency (in seconds). For example, for a 45-Mbps link with a 150-ms (0.15 sec) round-trip delay, the BDP is 45 Mbps * 0.15 sec = 6.75 Mb, or 0.844 MB (844 KB). In this case, you could set the buffer size to 2000 KB.
Examples	<p>The following example shows how to configure a WAE for Traffic Flow Optimization with a 32 KB optimized-side send buffer using the tfo tcp optimized-send-buffer command:</p> <pre>WAE(config)# tfo tcp optimized-send-buffer 32</pre>
Related Commands	<p>(config) tfo tcp keepalive</p> <p>(config) tfo tcp optimized-mss</p> <p>(config) tfo tcp optimized-receive-buffer</p> <p>(config) tfo tcp original-mss</p> <p>(config) tfo tcp original-receive-buffer</p> <p>(config) tfo tcp original-send-buffer</p>

(config) tfo tcp original-mss

To configure a WAE for Traffic Flow Optimization (TFO) with an unoptimized-side TCP maximum segment size, use the **tfo tcp original-mss** global configuration command. To disable this function, use the **no** form of this command.

tfo tcp original-mss *segment-size*

no tfo tcp original-mss *segment-size*

Syntax Description	<i>segment-size</i> Specifies original (end-point) side TCP max segment size (512–1460).
Defaults	1432 bytes
Command Modes	global configuration
Device Modes	application-accelerator
Examples	<p>The following example shows how to configure a WAE for Traffic Flow Optimization with a 1432 byte unoptimized-side TCP maximum segment size using the tfo tcp original-mss command:</p> <pre>WAE(config)# tfo tcp original-mss 1432</pre>
Related Commands	<p>(config) tfo tcp keepalive</p> <p>(config) tfo tcp optimized-mss</p> <p>(config) tfo tcp optimized-receive-buffer</p> <p>(config) tfo tcp optimized-send-buffer</p> <p>(config) tfo tcp original-receive-buffer</p> <p>(config) tfo tcp original-send-buffer</p>

(config) tfo tcp original-receive-buffer

To configure a WAE for Traffic Flow Optimization (TFO) with an unoptimized-side receive buffer, use the **tfo tcp original-receive-buffer** global configuration command. To disable this function, use the **no** form of this command.

tfo tcp original-receive-buffer *buffer-size*

no tfo tcp original-receive-buffer *buffer-size*

Syntax Description	<i>buffer-size</i> Receive buffer size in kilobytes. Valid values range from 1 to 32768 KB.
Defaults	32 KB
Command Modes	global configuration
Device Modes	application-accelerator
Examples	<p>The following example shows how to configure a WAE for Traffic Flow Optimization with a 32 KB unoptimized-side receive buffer using the tfo tcp original-receive-buffer command:</p> <pre>WAE(config)# tfo tcp original-receive-buffer 32</pre>
Related Commands	<p> (config) tfo tcp keepalive (config) tfo tcp optimized-mss (config) tfo tcp optimized-receive-buffer (config) tfo tcp optimized-send-buffer (config) tfo tcp original-mss (config) tfo tcp original-send-buffer </p>

(config) tfo tcp original-send-buffer

To configure a WAE for Traffic Flow Optimization (TFO) with an unoptimized-side send buffer, use the **tfo tcp original-send-buffer** global configuration command. To disable this function, use the **no** form of this command.

tfo tcp original-send-buffer *buffer-size*

no tfo tcp original-send-buffer *buffer-size*

Syntax Description	<i>buffer-size</i> Send buffer size in kilobytes. Valid values range from 1 to 32768 KB.
Defaults	32 KB
Command Modes	global configuration
Device Modes	application-accelerator
Examples	<p>The following example shows how to configure a WAE for Traffic Flow Optimization with a 32 KB unoptimized-side receive buffer using the tfo tcp original-send-buffer command:</p> <pre>WAE(config)# tfo tcp original-send-buffer 32</pre>
Related Commands	<p>(config) tfo tcp keepalive</p> <p>(config) tfo tcp optimized-mss</p> <p>(config) tfo tcp optimized-receive-buffer</p> <p>(config) tfo tcp optimized-send-buffer</p> <p>(config) tfo tcp original-mss</p> <p>(config) tfo tcp original-receive-buffer</p>

(config) transaction-logs

To configure and enable transaction logging on a WAE, use the **transaction-logs** global configuration command. To disable a transaction logging option, use the **no** form of this command.

transaction-logs { accelerator video windows-media | flow } enable

transaction-logs flow access-list *acl-name*

transaction-logs { accelerator video windows-media | flow } archive interval *seconds*

transaction-logs { accelerator video windows-media | flow } archive interval every-day
{ at *hour:minute* **| every** *hours*

transaction-logs { accelerator video windows-media | flow } archive interval every-hour
{ at *minute* **| every** *minutes*

transaction-logs { accelerator video windows-media | flow } archive interval every-week
[on *weekdays* **at** *hour:minute* **]**

transaction-logs { accelerator video windows-media | flow } archive max-file-size *filesize*

transaction-logs { accelerator video windows-media | flow } export compress

transaction-logs { accelerator video windows-media | flow } export enable

transaction-logs { accelerator video windows-media | flow } export ftp-server
{ hostname | servipaddrs } login passw directory

transaction-logs { accelerator video windows-media | flow } export interval *minutes*

transaction-logs { accelerator video windows-media | flow } export interval every-day
{ at *hour:minute* **| every** *hours*

transaction-logs { accelerator video windows-media | flow } export interval every-hour
{ at *minute* **| every** *minutes*

transaction-logs { accelerator video windows-media | flow } export interval every-week
[on *weekdays* **at** *hour:minute* **]**

transaction-logs { accelerator video windows-media | flow } export sftp-server
{ hostname | servipaddrs } login passw directory

Syntax Description

accelerator video windows-media	Specifies the video accelerator transaction log feature for Windows Media transactions.
flow	Specifies the TFO flow transaction log feature.
enable	Enables the transaction log feature.
access-list <i>acl-name</i>	Configures an access list name to restrict logged traffic. Only traffic that is included in the access list is logged.
archive	Configures archive parameters.
interval <i>seconds</i>	Determines how frequently the archive file is to be saved. Value is in seconds (120–604800).

every-day	Archives using intervals of 1 day or less.
at <i>hour:minute</i>	Specifies the local time at which to archive each day (hh:mm).
every <i>hours</i>	Specifies the interval in hours. The interval aligns with midnight. The intervals are as follows: 1 Hourly 12 Every 12 hours 2 Every 2 hours 24 Every 24 hours 3 Every 3 hours 4 Every 4 hours 6 Every 6 hours 8 Every 8 hours
every-hour	Specifies intervals of 1 hour or less.
at <i>minute</i>	Sets the time at each hour. The minute alignment for the hourly task is from 0 to 59.
every <i>minutes</i>	Specifies the interval in minutes for hourly task that aligns with the top of the hour. The intervals are as follows: 10 Every 10 minutes 15 Every 15 minutes 2 Every 2 minutes 20 Every 20 minutes 30 Every 30 minutes 5 Every 5 minutes
every-week	Specifies intervals of 1 or more times a week.
on <i>weekdays</i>	(Optional) Sets the day of the week and the weekdays on which to perform the task. You can specify one or more weekdays: Fri Every Friday Mon Every Monday Sat Every Saturday Sun Every Sunday Thu Every Thursday Tue Every Tuesday Wed Every Wednesday
max-file-size <i>filesize</i>	Specifies the maximum size in kilobytes (1000–2000000) of the archive file to be maintained on the local disk.
export	Configures file export parameters. The FTP export feature can support up to four servers. Each server must be configured with a username, password, and directory that are valid for that server.
compress	Enables compression of archived log files into a zip format before exporting them to external FTP servers.
ftp-server	Sets the FTP server to receive exported archived files.
<i>hostname</i>	Hostname of the target server.
<i>servipaddr</i>	IP address of the target server.
<i>login</i>	User login to target server (1–10080).
<i>passw</i>	User password to target server (less than 40 characters).
<i>directory</i>	Target directory path for exported files on the server.

interval <i>minutes</i>	Specifies the interval in minutes (1–10080) at which to export a file.
sftp-server	Sets the Secure File Transfer Protocol (SFTP) server to receive exported archived files.

Defaults

The default settings for the logging feature are as follows:

archive: disabled

enable: disabled

export compress: disabled

export: disabled

archive interval: every day, every one hour

archive max-file-size: 2,000,000 KB

export interval: every day, every one hour

Command Modes

global configuration

Device Modes

application-accelerator

Related Commands

[clear arp-cache](#)

[show transaction-logging](#)

[transaction-log](#)

(config) username

To establish username authentication on a WAAS device, use the **username** global configuration command. To disable this feature, use the **no** form of this command.

```
username name {password {0 plainword | 1 cryptoword | plainword} [uid uid] |
  print-admin-password {0 plainword | 1 cryptoword plainword | plainword} |
  privilege {0 | 15}}

no username name {password {0 plainword | 1 cryptoword | plainword} [uid uid] |
  print-admin-password {0 plainword | 1 cryptoword plainword | plainword} |
  privilege {0 | 15}}
```

Syntax Description

<i>name</i>	Username.
password	Specifies the password for the user.
0	Specifies an unencrypted user password.
<i>plainword</i>	Clear-text user password. Passwords are case sensitive, must be 1 to 31 characters, and cannot contain the characters ' " (apostrophe, double quote, or pipe) or any control characters.
1	Specifies a hidden user password.
<i>cryptoword</i>	Encrypted user password.
uid uid	(Optional) Sets the text user ID for the password (2001–65535).
print-admin-password	Sets the user print administration password.
privilege	Sets the user privilege level.
0	Specifies the user privilege level for the normal user.
15	Specifies the user privilege level for the superuser.

Defaults

The **password** value is set to 0 (clear text) by default.

The default administrator account is as follows:

- Uid: 0
- Username: admin
- Password: default
- Privilege: superuser (15)

Command Modes

global configuration

Device Modes

application-accelerator

central-manager

**Usage Guidelines****Note**

We strongly recommend that you use the WAAS Central Manager GUI instead of the WAAS CLI to configure passwords and privilege levels for users on your WAAS devices, if possible. For information about how to use the WAAS Central Manager GUI to centrally configure and administer users on a single WAE or group of WAEs, which are registered with a WAAS Central Manager, see the *Cisco Wide Area Application Services Configuration Guide*.

Legacy print services are deprecated and no longer supported in WAAS 4.2.x and later. We recommend using the Windows print accelerator (see the [\(config\) accelerator windows-print](#) command).

Examples

The following example demonstrates how passwords and privilege levels are reconfigured:

```
WAE# show user username abeddoe
Uid          : 2003
Username     : abeddoe
Password     : ghQ.GyGhP96K6
Privilege    : normal user

WAE# show user username bwhidney
Uid          : 2002
Username     : bwhidney
Password     : bhloh1bIwAMOk
Privilege    : normal user

WAE(config)# username bwhidney password 1 victoria

WAE(config)# username abeddoe privilege 15
User's privilege changed to super user (=15)

WAE# show user username abeddoe
Uid          : 2003
Username     : abeddoe
Password     : ghQ.GyGhP96K6
Privilege    : super user

WAE# show user username bwhidney
Uid          : 2002
Username     : bwhidney
Password     : mhYwYw.7PlLd6
Privilege    : normal user
```

Related Commands

[show user](#)

(config) virtual-blade

To configure virtual blades on your WAAS device, use the **virtual-blade** global configuration command. To negate these actions, use the **no** form of this command.

virtual-blade {*virtual-blade-number* | **enable**}

no virtual-blade {*virtual-blade-number* | **enable**}

Syntax Description	<i>virtual-blade-number</i>	Number of the virtual blade that you want to edit. This value can be from 1 through 6, depending on the number of virtual blades supported on the device. Using this command enables virtual blade configuration mode. See the “ Virtual Blade Configuration Mode Commands ” section for more information.
	enable	Enables the virtual blade feature on your WAAS device. You must reboot the device after executing this command.

Defaults	No default behavior or values.
-----------------	--------------------------------

Command Modes	global configuration
----------------------	----------------------

Device Modes	application-accelerator
---------------------	-------------------------

Usage Guidelines	Use the virtual-blade global configuration command to enter virtual blade configuration mode. This command is available only on WAAS devices that support virtual blades.
-------------------------	--

Examples	The following example shows how to enable the virtual blade feature on your device:
-----------------	---

```
WAE(config)# virtual-blade enable
WAE(config)# exit
```

The following example shows that after a reload, you can enter **show EXEC** command to see the new virtual blade resource allocation:

```
# show virtual-blade
Virtual-blade resources:
  VB Memory: 299MiB configured, 1749MiB available.
  VB Disk space: 0GiB configured, 204GiB available.
  /local1/vbs: 128MiB used, 214203MiB available
  CPU(s) assigned: 3 4
Virtual-blade(s) state:
  virtual-blade 2 has incomplete configuration
```

The following example puts your device into virtual blade configuration mode, editing virtual blade 2. The mode change is indicated by the system prompt:

```
WAE(config)# virtual-blade 2
```



```
WAE(config-vb) #
```

Related Commands

[show virtual-blade](#)
[\(config-vb\) autostart](#)
[\(config-vb\) boot](#)
[\(config-vb\) cpu-list](#)
[\(config-vb\) description](#)
[\(config-vb\) device](#)
[\(config-vb\) disk](#)
[\(config-vb\) interface](#)
[\(config-vb\) memory](#)
[\(config-vb\) vnc](#)

(config) wccp access-list

To configure an IP access list on a WAE for inbound WCCP GRE encapsulated traffic, use the **wccp access-list** global configuration command. To disable this feature, use the **no** form of this command.

wccp access-list {*acl-number* | *ext-acl-number* | *acl-name*}

no wccp access-list {*acl-number* | *ext-acl-number* | *acl-name*}

Syntax Description	<i>acl-number</i>	Standard IP access list number (1–99).
	<i>ext-acl-number</i>	Extended IP access list number (100–199).
	<i>acl-name</i>	Name of the access list. You can use a maximum of 30 characters.

Defaults WCCP access lists are not configured by default.

Command Modes global configuration

Device Modes application-accelerator

Usage Guidelines The **wccp access-list** *number* global configuration command configures an access control list to allow access to WCCP applications. See the *Cisco Wide Area Application Services Configuration Guide* for a detailed description of how to use standard IP ACLs to control WCCP access on a WAE.



Note

WCCP works only with IPv4 networks.

Examples The following example shows how to configure the WAE to apply IP access list number 10 to the inbound WCCP traffic:

```
WAE(config)# wccp access-list 10
```

The following example shows sample output from the **show ip access-list** EXEC command from a WAE that has several WCCP access lists configured:

```
WAE(config)# show ip access-list
Space available:
  40 access lists
 489 access list conditions

Standard IP access list 10
 1 deny 10.1.1.1
 2 deny any
   (implicit deny any: 0 matches)
 total invocations: 0
Standard IP access list 98
 1 permit any
```

```

        (implicit deny any: 0 matches)
    total invocations: 0
Extended IP access list 100
    1 permit icmp any any
        (implicit fragment permit: 0 matches)
        (implicit deny ip any any: 0 matches)
    total invocations: 0
Extended IP access list 101
    1 permit ip any any
        (implicit fragment permit: 0 matches)
        (implicit deny ip any any: 0 matches)
    total invocations: 0
Extended IP access list 102
    1 permit icmp 0.0.1.1 255.255.0.0 any
        (implicit fragment permit: 0 matches)
        (implicit deny ip any any: 0 matches)
    total invocations: 0
Extended IP access list 111
    1 permit gre 0.1.1.1 255.0.0.0 any
        (implicit fragment permit: 0 matches)
        (implicit deny ip any any: 0 matches)
    total invocations: 0
Extended IP access list 112
    1 permit ip any any
        (implicit fragment permit: 0 matches)
        (implicit deny ip any any: 0 matches)
    total invocations: 0
Extended IP access list 113
    1 permit gre 0.1.1.1 255.0.0.0 any
        (implicit fragment permit: 0 matches)
        (implicit deny ip any any: 0 matches)
    total invocations: 0
Extended IP access list ext_acl_2
    1 permit gre any any
        (implicit fragment permit: 0 matches)
        (implicit deny ip any any: 0 matches)
    total invocations: 0
Extended IP access list extended_ip_acl
    1 permit tcp any eq 2 any eq exec
        (implicit fragment permit: 0 matches)
        (implicit deny ip any any: 0 matches)
    total invocations: 0

Interface access list references:
PortChannel    2    inbound  extended_ip_acl
PortChannel    2    outbound 101

Application access list references:
snmp-server                standard  2
    UDP ports: none (List Not Defined)
WCCP                      either    10
    Any IP Protocol

```

The following example shows sample output from the **show wccp gre EXEC** command when WCCP access lists are defined on the WAE:

```

WAE# show wccp gre
Transparent GRE packets received:      366
Transparent non-GRE packets received:  0
Transparent non-GRE packets passed through: 0
Total packets accepted:                337
Invalid packets received:               0
Packets received with invalid service:  0
Packets received on a disabled service: 0

```

```
Packets received too small: 0
Packets dropped due to zero TTL: 0
Packets dropped due to bad buckets: 0
Packets dropped due to no redirect address: 0
Packets dropped due to loopback redirect: 0
Connections bypassed due to load: 0
Packets sent back to router: 0
Packets sent to another CE: 0
GRE fragments redirected: 0
Packets failed GRE encapsulation: 0
Packets dropped due to invalid fwd method: 0
Packets dropped due to insufficient memory: 0
Packets bypassed, no conn at all: 0
Packets bypassed, no pending connection: 0
Packets due to clean wccp shutdown: 0
Packets bypassed due to bypass-list lookup: 0
Packets received with client IP addresses: 0
Conditionally Accepted connections: 0
Conditionally Bypassed connections: 0
L2 Bypass packets destined for loopback: 0
Packets w/WCCP GRE received too small: 0
Packets dropped due to IP access-list deny: 29
L2 Packets fragmented for bypass: 0
```


Related Commands[\(config\) egress-method](#)[show ip access-list](#)[show wccp](#)

(config) wccp flow-redirect

To enable WCCP flow redirection on a WAE, use the **wccp flow-redirect** global configuration command. To disable flow redirection, use the **no** form of this command.

wccp flow-redirect enable

no wccp flow-redirect enable

Syntax Description	<table> <tr> <td>enable</td><td>Enables flow redirection.</td></tr> </table>	enable	Enables flow redirection.
enable	Enables flow redirection.		
Defaults	Enabled		
Command Modes	global configuration		
Device Modes	application-accelerator		
Usage Guidelines	<p>Use the wccp flow-redirect global configuration command to implement WCCP flow protection. Flow protection is designed to keep the TCP flow intact as well as to not overwhelm WAEs when they are first started up or are reassigned new traffic. This feature also has a slow start mechanism where the WAEs try to take a load appropriate for their capacity.</p>		
 Note	<p>When you enable bypass, the client tries to reach the origin web server. You must disable all bypass options to eliminate an unnecessary burden on the network.</p> <p>WCCP works only with IPv4 networks.</p>		
Examples	<p>The following example shows how to enable WCCP flow protection on a WAE:</p> <pre>WAE(config)# wccp flow-redirect enable</pre>		
Related Commands	show wccp		

(config) wccp router-list

To configure a router list for WCCP Version 2, use the **wccp router-list** global configuration command. To disable this function, use the **no** form of this command.

wccp router-list *number ip-address*

no wccp router-list *number ip-address*

Syntax Description	<i>number</i>	Router list number (1–8).
	<i>ip-address</i>	IP address of the router to add to the list.

Defaults	Disabled
----------	----------

Command Modes	global configuration
---------------	----------------------

Device Modes	application-accelerator
--------------	-------------------------

Usage Guidelines	Each router list can contain up to 32 routers and you can have up to 8 router lists.
------------------	--

**Note**

Do not create or modify router list number 8. The WAAS Central Manager uses router list number 8 for a default router list that contains the default gateway.

**Note**

The **ip wccp** global configuration command must be used to enable WCCP on each router that is included on the router list.

WCCP works only with IPv4 networks.

Examples

The following example shows how that router list number 7 is created and contains a single router (the WCCP Version 2-enabled router with IP address 192.168.68.98):

```
WAE(config)# wccp router-list 7 192.168.68.98
```

The following example shows how to delete the router list number 7 created in the previous example:

```
WAE(config)# no wccp router-list 7 192.168.68.98
```

The following example shows how to create a router list (router list 1) and then configure the WAE to accept redirected TCP traffic from the WCCP Version 2-enabled router on router list 1:

```
WAE(config)# wccp router-list 1 10.10.10.2
WAE(config)# wccp tcp-promiscuous router-list 1
WAE(config)# wccp version 2
```

■ (config) wccp router-list

Related Commands [\(config\) wccp version](#)

(config) wccp shutdown

To set the maximum time interval after which the WAE will perform a clean shutdown of the WCCP, use the **wccp shutdown** global configuration command. To disable the clean shutdown, use the **no** form of this command.

wccp shutdown max-wait *seconds*

no wccp shutdown max-wait *seconds*

Syntax Description	max-wait <i>seconds</i>	Sets the clean shutdown time interval. The time is in seconds (0–86400). The default is 120 seconds
--------------------	--------------------------------	---

Defaults	The maximum time interval before a clean shutdown is 120 seconds by default.
----------	--

Command Modes	global configuration
---------------	----------------------

Device Modes	application-accelerator
--------------	-------------------------

Usage Guidelines	To prevent broken TCP connections, the WAE performs a clean shutdown of the WCCP after you enter the reload or wccp version command. The WAE does not reboot until either all connections have been serviced or the configured max-wait interval has elapsed.
------------------	--



Note

WCCP works only with IPv4 networks.

Examples	The following example shows how to configure the WAE to wait 1000 seconds:
----------	--

```
WAE(config)# wccp shutdown max-wait 1000
```

The following example shows how to shut down WCCP Version 2 on the WAE by entering the **no wccp version 2** command. In this case, after you enter the **no wccp version 2** command, the WAE waits 1000 seconds before it shuts down WCCP Version 2.

```
WAE(config)# no wccp version 2
```

A countdown message appears, indicating how many seconds remain before WCCP will be shut down on the WAE:

```
Waiting (999 seconds) for WCCP shutdown. Press ^C to skip shutdown
```

The clean shutdown can be aborted while in progress by simultaneously pressing **^C** after the countdown message appears.

■ (config) wccp shutdown

Related Commands (config) wccp flow-redirect
 (config) wccp version

(config) wccp tcp-promiscuous mask

To configure the Web Cache Coordination Protocol (WCCP) Version 2 TCP promiscuous mode service (WCCP Version 2 services 61 and 62) mask on a WAE, use the **wccp tcp-promiscuous mask** global configuration command. To disable this function, use the **no** form of this command.

```
wccp tcp-promiscuous mask {dst-ip-mask mask | src-ip-mask mask}
```

```
no wccp tcp-promiscuous mask {dst-ip-mask mask | src-ip-mask mask}
```

Syntax Description	mask	Specifies the mask used for WAE assignment.
	dst-ip-mask <i>mask</i>	Specifies the IP address mask defined by a hexadecimal number (for example, 0xFE000000) used to match the packet destination IP address. The range is 0x00000000–0xFE000000. The default is 0x00000000.
	src-ip-mask <i>mask</i>	Specifies the IP address mask defined by a hexadecimal number (for example, 0xFE000000) used to match the packet source IP address. The range is 0x00000000–0xFE000000. The default is 0xF00.

Command Modes	global configuration
----------------------	----------------------

Device Modes	application-accelerator
---------------------	-------------------------

Usage Guidelines	In a service farm where the WAEs have different masks, the first WAE to establish two-way communication with the router(s) determines the farm's mask. All other WAEs cannot join the farm unless they are configured with the same mask.
-------------------------	---

Examples	The following example shows how to set a TCP promiscuous mode service mask on the source IP address:
-----------------	--

```
WAE # wccp tcp-promiscuous mask src-ip-mask 0xFC0
```

Related Commands	(config) egress-method (config) wccp router-list show wccp
-------------------------	--

(config) wccp tcp-promiscuous router-list-num

To configure the Web Cache Coordination Protocol (WCCP) Version 2 TCP promiscuous mode service (WCCP Version 2 services 61 and 62) on a WAE, use the **wccp tcp-promiscuous router-list-num** global configuration command. To disable this function, use the **no** form of this command.

wccp tcp-promiscuous router-list-num *number* [**assign-method-strict** | **hash-destination-ip** | **hash-source-ip** | **l2-redirect** | **l2-return** | **mask-assign** | **password** *password* | **weight** *weight*]

no wccp tcp-promiscuous router-list-num *number* [**assign-method-strict** | **hash-destination-ip** | **hash-source-ip** | **l2-redirect** | **l2-return** | **mask-assign** | **password** *password* | **weight** *weight*]

Syntax Description

router-list-num <i>number</i>	Specifies the number of the WCCP router list (1–8) that should be associated with the TCP promiscuous mode service. (These WCCP Version 2-enabled routers will transparently redirect TCP traffic to the WAE.)
assign-method-strict	(Optional) Specifies that only the configured assignment method be used.
hash-destination-ip	(Optional) Specifies that the load-balancing hash method should make use of the destination IP address. You can specify both the hash-destination-ip option and the hash-source-ip option.
hash-source-ip	(Optional) Specifies that the load-balancing hash method should make use of the source IP address. This is the default.
l2-redirect	(Optional) Specifies that Layer 2 redirection be used for packet forwarding. If the WAE has a Layer 2 connection with the device, and the device is configured for Layer 2 redirection, Layer 2 redirection permits the WAE to receive transparently redirected traffic from a WCCP Version 2-enabled switch or router.
l2-return	(Optional) Specifies that Layer 2 rewriting be used for packet return.
mask-assign	(Optional) Specifies that the mask method be used for WAE assignment.
password <i>password</i>	(Optional) Specifies the WCCP service password to be used for secure traffic between the WAEs within a cluster and the router for a specified service. Be sure to enable all other WAEs and routers within the cluster with the same password. You can use a maximum of 8 characters.
weight <i>weight</i>	(Optional) Specifies that a weight percentage be used. The weight represents a percentage of the total load redirected to the device for load-balancing purposes (for example, a WAE with a weight of 30 receives 30 percent of the total load). The weight value ranges from 0 to 100 percent. By default, weights are not assigned and the traffic load is distributed evenly between the WAEs in a service groups.

Command Modes

global configuration

Device Modes

application-accelerator

Usage Guidelines

To configure the egress method for WCCP intercepted connections, use the **egress-method** global configuration command.

**Note**

WCCP works with IPv4 networks only.

Examples

The following example shows how to turn on the TCP promiscuous mode service and associate this service with the router list:

```
WAE # wccp tcp-promiscuous router-list-num 1
WCCP configuration for TCP Promiscuous service 61 succeeded.
WCCP configuration for TCP Promiscuous succeeded.
Please remember to configure WCCP service 61 and 62 on the corresponding router.
```

Related Commands

(config) egress-method
(config) wccp router-list
show wccp

(config) wccp version

To specify the version of WCCP that the WAE should use, enter the **wccp version** global configuration command. To disable the currently running version, use the **no** form of this command.

wccp version 2

no wccp version 2

Syntax Description This command has no arguments or keywords.

Defaults No default behavior or values.

Command Modes global configuration

Device Modes application-accelerator

Usage Guidelines You must configure a WAE to use WCCP Version 2 instead of WCCP Version 1 because WCCP Version 1 only supports web traffic (port 80).
The WAE performs a clean shutdown after a **reload** or **no wccp version 2** command is entered. A clean shutdown prevents broken TCP connections.



Note

WCCP works only with IPv4 networks.

Examples The following example shows how to enable WCCP Version 2 on a WAE:

```
WAE(config)# wccp version 2
```

Related Commands [\(config\) wccp tcp-promiscuous mask](#)
[\(config\) wccp router-list](#)

(config) windows-domain

To configure Windows domain server options on a WAAS device, use the **windows-domain** global configuration command. To disable this feature, use the **no** form of this command.

```
windows-domain { administrative group { normal-user | super-user } groupname |
  comment string | netbios-name name | password-server { hostname | ipaddress } |
  realm kerberos-realm | wins-server { hostname | ipaddress } | workgroup name |
  security ADS }
```

```
no windows-domain { administrative group { normal-user | super-user } groupname |
  comment string | netbios-name | password-server { hostname | ipaddress } |
  realm kerberos-realm | wins-server { hostname | ipaddress } | workgroup name |
  security ADS }
```

Syntax Description

administrative	Sets administrative options.
group	Sets an administrative group name.
normal-user	Sets the administrative group name for the normal user (privilege 0).
super-user	Sets the administrative group name for the superuser (privilege 15).
<i>groupname</i>	Name of the administrative group.
comment <i>string</i>	Specifies a comment for the Windows domain server. This is a text string.
netbios-name <i>name</i>	Specifies the NetBIOS name of the WAE. This name is provided when the Edge FE announces its availability for print services.
password-server	Specifies the password server used to verify a client password.
<i>hostname</i>	Hostname of the password server.
<i>ipaddress</i>	IP address of the password server.
realm <i>kerberos-realm</i>	Specifies the Kerberos realm to use for authentication. The realm is used as the Active Directory Service (ADS) equivalent of the NT4 domain. This argument is valid only when Kerberos ADS mode is used. The value is an IP address or name (in uppercase letters) of the Kerberos realm. The Kerberos realm is typically set to the DNS name of the Kerberos server or Active Directory domain. The default value is a null string. Example: <code>kerberos-realm = MYBOX.MYCOMPANY.COM</code>
wins-server	Specifies the Windows Internet Naming Service (WINS) server.
<i>hostname</i>	Hostname of the WINS server.
<i>ipaddress</i>	IP address of the WINS server.
workgroup <i>name</i>	Specifies the name of the workgroup (or domain) in which the WAAS device resides.
security	Sets Kerberos authentication.
ADS	Specifies the Active Directory Service.

Defaults

Windows domain options are disabled by default.

Command Modes global configuration

Device Modes application-accelerator
 central-manager

Usage Guidelines Use this global configuration command to set the Windows domain server parameters for a WAAS device.

When you enable Kerberos authentication, the default **realm** is DOMAIN.COM and the **security** is ADS. If you disable Kerberos authentication, the **security** is domain.

**Note**

WAAS supports authentication by a Windows domain controller running only on Windows Server 2000 or Windows Server 2003.

Examples The following example shows how to configure the Windows domain server at 10.10.24.1 for an Edge FE with a NetBIOS name of myFileEngine in the ABD domain. It also identifies the password server:

```
WAE(config)# windows-domain wins-server 10.10.24.1
WAE(config)# windows-domain password-server 10.10.100.4
WAE(config)# windows-domain netbios-name myFileEngine
WAE(config)# windows-domain workgroup ABC
```

The following example shows how to configure the windows domain server when Kerberos authentication is enabled using the **kerberos** command:

```
WAE(config)# windows-domain realm ABC.COM
WAE(config)# windows security ADS

===== checking new config using testparm =====

Load smb config files from /state/actona/conf/smb.conf
Processing section "[print$]"
Processing section "[printers]"
Loaded services file OK.

WAE(config)# exit
WAE# show windows-domain
  Login Authentication for Console/Telnet Session: enabled

Windows domain Configuration:
-----
  Workgroup:
  Comment: Comment:
  Net BIOS: MYFILEENGINE
  Realm: ABC
  WINS Server: 10.10.10.1
  Password Server: 10.10.10.10
  Security: ADS
```

Related Commands (config) [kerberos](#)

```
show windows-domain  
windows-domain
```