

- A**
- addresses
 - IP 2-9
 - MAC 1-7
 - airflow requirements 1-8
 - alias command A-4
- B**
- boot command A-4
 - booting
 - from the ROM monitor A-4
 - Break key (interrupt) A-1
- C**
- cable
 - interference 2-6
 - jacks, in wet locations 2-3
 - safety guidelines 2-3
 - ungrounded and uninsulated 2-3
 - Cable activity LED 5-7
 - cable connections 1-7
 - Cable Link LED 5-7
 - Cable Modem definition 1-2
 - Cable Router definition 1-2
 - cables
 - 4E RJ-45 pinout 2-13
 - CATV definition 1-2
 - caution
 - antistatic strap 2-4
 - cable modem, overheating 2-10
 - scoring coaxial cable connectors 2-8
 - changes, reviewing configuration 4-31
 - Channel definition 1-2
 - checklist, installation 2-15
 - Cisco Documentation CD-ROM, ordering 4-31
 - Cisco IOS
 - command modes 4-18
 - enable mode 4-19
 - getting help 4-18
 - saving configuration changes 4-29
 - undo command 4-21
 - undo feature 4-21
 - CM definition 1-2
 - coaxial cable 5-8
 - condition of 5-9
 - subsystem for troubleshooting 5-4, 5-8
 - command
 - alias A-4
 - boot A-4
 - confreg A-5
 - cont A-6
 - context A-6
 - cookie A-6
 - dev (device) A-7
 - dir A-7
 - dlnd A-7
 - exec-timeout 4-23
 - frame A-7
 - help A-8
 - history A-8
 - meminfo A-9
 - repeat A-9
 - reset A-9
 - ROM monitor A-3
 - ROM monitor diagnostics A-1
 - set A-9
 - stack A-9
 - sync A-9
 - sysret A-9
 - unalias A-10
 - command modes
 - Cisco IOS 4-18

- commands
 - show running-config 4-29
 - show startup-config 4-31
- computer
 - See personal computer
- configuration
 - reviewing modifications 4-31
 - timeout 4-23
- configuration register A-5
- configuration, saving 4-29
- confreg command A-5
- connection equipment
 - console 3-6
 - console port signals 3-7
- connections
 - coaxial cable 3-2
 - console 3-6
 - Ethernet cable 3-3
 - power 3-7
 - to computer 3-5
- connector
 - console port 3-7
 - Ethernet RJ-45 3-3
- console terminal, system banner display 5-5
- cont command A-6
- context command A-6
- cookie command A-6
- cooling requirements 1-8
- crossover cable connection 2-13
- crossover Ethernet cables 1-8

D

- Data-over-cable systems 1-2
- description of cable modem 1-4
- dev (device) command A-7
- diagnostics
 - ROM monitor A-1

- digital signal
 - subsystem for troubleshooting 5-9
- digital signal, subsystem for troubleshooting 5-4
- dir command A-7
- distance limitations, transmission 2-8
- dlnd command A-7
- Downstream defintion 1-2

E

- electromagnetic pulse (EMP), avoiding 2-7
- EML, shielding 2-3
- enable mode 4-19
- Ethernet cable
 - crossover 2-12
 - straight-through 2-12
 - network interface card 2-9
- Ethernet 0 LED 5-7
- Ethernet 1 LED 5-7
- Ethernet 10BaseT
 - show arp command 4-25
 - verifying IP address 4-25
- Ethernet 2 LED 5-7
- Ethernet 3 LED 5-7

F

- features, cable modem 1-1
- footprint of cable modem 2-10
- frame command A-7

H

- Headend defintion 1-2
- help command A-8
- help, Cisco IOS 4-18

- HFC definition 1-3
- history command A-8
- Host definition 1-3
- Host Device definition 1-3
- host name
 - configuring 4-22
 - show config command 4-23
 - verifying 4-23

I

- installation
 - at the headend 2-9
 - checklist 2-15
 - configuring the cable modem 3-8
 - connecting console cables 3-6
 - connecting power 3-7
 - connecting the cable modem to the computer 3-5
 - connecting the CATV cable 3-2
 - connecting the Ethernet cable to the cable modem 3-3
 - general 3-1
 - initial configuration information 2-14
 - preparing for 2-1
 - safety recommendations 2-2
 - site requirements 2-5
 - starting up the cable modem 3-8
 - tools for 2-12
 - wiring 2-6
- interference, radio frequency 2-6

J

- jewelry, avoiding for safety 2-2

K

- key
 - Break (interrupt) A-1

L

- LEDs
 - Act 3-8, 5-7
 - Link 5-7
 - MSG 5-7
 - OK 1-6, 5-7
- lightning storm, safety during 2-3

M

- MCNS definition 1-3
- MCNS, description 1-1
- meminfo command A-9
- Message LED 5-7
- modifications to configuration, reviewing 4-31
- Multimedia Cable Network Partners, Ltd., see MCNS

N

- note, description of xiii

O

- operating conditions for cable modem 2-6
- operating conditions for unit 1-6
- overheating, preventing 2-11

P

- password
 - configuring 4-22
 - show config command 4-23
 - verifying 4-23
- personal computer
 - DHCP services 2-9
 - IP protocol 2-9
 - network interface card 2-9
 - recommended configuration 2-9
 - subsystem for troubleshooting 5-4, 5-10
 - web browsing software 2-9
- pinouts
 - RJ-45
 - 4E 2-13
- power
 - connections 3-7
 - OK LED 1-6
 - site requirements 2-6
 - subsystem for troubleshooting 5-4, 5-6
 - surge suppression 2-7
 - ungrounded 2-3
- power factor corrector, power supply 2-6
- power supply, physical description 1-6
- printing summary of ROM monitor commands A-8
- problem solving, subsystem 5-4
- procedures
 - configuring the cable modem 3-8
 - connecting console cables 3-6
 - connecting power 3-7
 - connecting the cable modem to the computer 3-5
 - connecting the CATV cable 3-2
 - connecting the Ethernet cable to the cable modem 3-3
 - general installation 3-1
- product overview of cable modem 1-4

Q

- QAM definition 1-3
- QPSK definition 1-3

R

- radio frequency interference (RFI) 2-6
- repeat command A-9
- reset command A-9
- reviewing changes to configuration 4-31
- RF signal
 - subsystem for troubleshooting 5-9
- RF signal, subsystem for troubleshooting 5-4
- RFI 2-6
- RJ-45
 - 4E
 - cable 2-13
- ROM monitor
 - commands A-3
 - diagnostics A-1
 - entering A-1

S

- safety recommendations 2-2
 - CISPR 22 requirements 2-5
 - FCC requirements 2-4
 - preventing electrostatic discharge damage 2-3
 - safety with electricity 2-3
- saving configuration changes 4-29
- set command A-9
- setup command facility
 - script
 - System Configuration Dialog (example) 4-12
- show arp command 4-25, 4-27
- show config command 4-9, 4-23

- site log 2-16
- site requirements 2-5
 - environment 2-10
 - power 2-6
 - preventive configuration 2-11
 - wiring 2-6
- software
 - See Cisco IOS software
- stack command A-9
- startup, cable modem 3-8
- Subscriber Unit (SU) definition 1-3
- subsystems for troubleshooting
 - coaxial cable 5-8
 - digital signal 5-9
 - personal computer 5-10
 - power 5-6
 - RF signal 5-9
- sync command A-9
- sysret command A-9
- system specifications 1-5
- System status LED 5-7

T

- timeout, disabling 4-23
- timesaver, description xiii
- tools, for installation 2-12
- troubleshooting
 - coaxial cable subsystem 5-8
 - digital signal subsystem 5-9
 - identifying installation problems 5-4
 - personal computer subsystem 5-10
 - power subsystem 5-6
 - RF signal subsystem 5-9
 - strategy 5-3

U

- unalias command A-10
- undo feature, Cisco IOS 4-21
- Upstream definition 1-3
- User LED 1 5-7
- User LED 2 5-7
- User LED 3 5-7

W

- wiring
 - installation site 2-6
 - interference 2-6
 - quality and requirements 2-7

