



CHAPTER 8

Failure Recovery

This module describes how to configure failure recovery.

Configuring the Failure Recovery Mode

The **failure-recovery operation-mode** command defines the behavior of the system after boot resulting from failure.

- [Options, page 8-1](#)

Options

The following options are available:

- **operational**—After failure, the system will return to operational mode.
- **non-operational**—After failure, the system will remain not operational.

The default value is **operational**.

-
- Step 1** From the NME-APA(config)# prompt, type **failure-recovery operation-mode operational|non-operational** and press Enter.
Specifies the desired failure recovery mode.
-

Example 1

This example sets the system to boot as non-operational after a failure.

```
NME-APA (config) #failure-recovery operation-mode non-operational
```

Example 2

This example sets the system to the default failure recovery mode.

```
NME-APA (config) # default failure-recovery operation-mode
```

