



Configuring the DPT Port Adapter

To continue your DPT port adapter installation, you must configure the DPT port adapter. The instructions that follow apply to all supported platforms. Minor differences between the platforms—with Cisco IOS software commands—are noted.

This chapter contains the following sections:

- [Using the EXEC Command Interpreter, page 4-1](#)
- [Configuring the DPT Interface, page 4-2](#)
- [Creating a DPT Ring, page 4-13](#)
- [Adding or Removing Nodes in a DPT Ring, page 4-15](#)
- [Checking the Configuration, page 4-18](#)

Using the EXEC Command Interpreter

You modify the configuration of your router through the software command interpreter called the *EXEC* (also called enable mode). You must enter the privileged level of the EXEC command interpreter with the **enable** command before you can use the **configure** command to configure a new interface or change the existing configuration of an interface. The system prompts you for a password if one has been set.

The system prompt for the privileged level ends with a pound sign (#) instead of an angle bracket (>). At the console terminal, use the following procedure to enter the privileged level:

-
- Step 1** At the user-level EXEC prompt, enter the **enable** command. The EXEC prompts you for a privileged-level password as follows:

```
Router> enable
```

```
Password:
```

- Step 2** Enter the password (the password is case sensitive). For security purposes, the password is not displayed. When you enter the correct password, the system displays the privileged-level system prompt (#):

```
Router#
```

To configure the new interface, proceed to the [“Configuring the DPT Interface”](#) section on page 4-2.

Configuring the DPT Interface

After you verify that the new DPT port adapter is installed correctly (the enabled LED goes on), use the privileged-level **configure** command to configure the new interface. Have the following information available:

- IP addresses, if you plan to configure the interface for IP routing
- Bridging protocols you plan to use

If you installed a new DPT port adapter or if you want to change the configuration of the existing interface, you must enter configuration mode to configure the new interface. If you replaced a DPT port adapter that was previously configured, the system recognizes the new interfaces and brings each of them up in their existing configuration.

For a summary of the configuration options available and instructions for configuring a DPT port adapter, refer to the appropriate configuration publications listed in the [“Related Documentation”](#) section on page viii.

You execute configuration commands from the privileged level of the EXEC command interpreter, which usually requires password access. Contact your system administrator, if necessary, to obtain password access. (See the [“Using the EXEC Command Interpreter”](#) section on page 4-1 for an explanation of the privileged level of the EXEC.)

This section contains the following subsections:

- [Shutting Down the Interface, page 4-2](#)
- [Performing a Basic Configuration, page 4-4](#)
- [Configuring the Intelligent Protection Switch Feature, page 4-6](#)
- [Configuring the DPT Topology Feature, page 4-7](#)
- [Changing the Default Values of Configuration Parameters, page 4-7](#)
- [Using show Commands to Check System Status, page 4-8](#)

Shutting Down the Interface

Before you remove an interface that you will not replace, use the **shutdown** command to shut down (disable) the interface to prevent anomalies when you reinstall the new or reconfigured interface. When you shut down an interface, it is designated *administratively down* in the **show** command displays.

Follow these steps to shut down an interface:

-
- Step 1** Enter the privileged level of the EXEC command interpreter (also called enable mode). (See the [“Using the EXEC Command Interpreter”](#) section on page 4-1 for instructions.)
- Step 2** At the privileged-level prompt, enter configuration mode and specify that the console terminal is the source of the configuration subcommands, as follows:
- ```
Router# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)#
```
- Step 3** Shut down the interface by entering the **interface srp** subcommand (followed by the interface address of the interface), and then enter the **shutdown** command. [Table 4-1](#) shows the command syntax.



**Note** The interface *type* of the DPT port adapter is **srp**.

When you have finished, press **Ctrl-Z**—hold down the **Control** key while you press **Z**—or enter **end** or **exit** to exit configuration mode and return to the EXEC command interpreter.

**Table 4-1 Syntax of the shutdown Command**

| Platform                                     | Command                                                                                                                                                | Example                                                                                                                                                                                        |
|----------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Cisco 7200 series and Cisco 7200 VXR routers | <b>interface</b> , followed by the <i>type</i> ( <b>srp</b> ) and <i>slot/port</i> (port-adapter-slot-number/interface-port-number)                    | The example shows the DPT interface in port adapter slot 1 being shut down.<br>Router(config-if)# <b>interface srp 1/0</b><br>Router(config-if)# <b>shutdown</b><br><b>Ctrl-Z</b><br>Router#   |
| Cisco uBR7246 router                         | <b>interface</b> , followed by the <i>type</i> ( <b>srp</b> ) and <i>slot/port</i> (port-adapter-slot-number/interface-port-number)                    | The example shows the DPT interface in port adapter slot 1 being shut down.<br>Router(config-if)# <b>interface srp 1/0</b><br>Router(config-if)# <b>shutdown</b><br><b>Ctrl-Z</b><br>Router#   |
| Cisco 7500 series router with VIP            | <b>interface</b> , followed by the <i>type</i> ( <b>srp</b> ) and <i>slot/bay/port</i> (port-adapter-slot-number/VIP-bay-number/interface-port-number) | The example shows the DPT interface in port adapter slot 1 being shut down.<br>Router(config-if)# <b>interface srp 1/0/0</b><br>Router(config-if)# <b>shutdown</b><br><b>Ctrl-Z</b><br>Router# |

**Step 4** Write the new configuration to NVRAM as follows:

```
Router# copy running-config startup-config
[OK]
Router#
```

The system displays an OK message when the configuration has been stored in NVRAM.

**Step 5** Verify that new interfaces are now in the correct state (shut down) using the **show interfaces** command (followed by the interface type and interface address of the interface) to display the specific interface. [Table 4-2](#) provides examples.

Table 4-2 Example of the show interfaces Command

| Platform                                     | Command                                                                                                                       | Example                                                                                                                                                                                                                                        |
|----------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Cisco 7200 series and Cisco 7200 VXR routers | <b>show interfaces srp</b> , followed by <i>slot/port</i> (port-adapter-slot-number/interface-port-number)                    | The example is for interface 0 on a port adapter in port adapter slot 1.<br>Router# <b>show interfaces srp 1/0</b><br><br>srp 1/0 is administratively down, line protocol is down<br><br>[Additional display text omitted from this example]   |
| Cisco uBR7246 router                         | <b>show interfaces srp</b> , followed by <i>slot/port</i> (port-adapter-slot-number/interface-port-number)                    | The example is for interface 0 on a port adapter in port adapter slot 1.<br>Router# <b>show interfaces srp 1/0</b><br><br>srp 1/0 is administratively down, line protocol is down<br><br>[Additional display text omitted from this example]   |
| Cisco 7500 series router with VIP            | <b>show interfaces srp</b> , followed by <i>slot/bay/port</i> (port-adapter-slot-number/VIP-bay-number/interface-port-number) | The example is for interface 0 on a port adapter in port adapter slot 1.<br>Router# <b>show interfaces srp 1/0/0</b><br><br>srp 1/0 is administratively down, line protocol is down<br><br>[Additional display text omitted from this example] |

**Step 6** Reenable interfaces by doing the following:

- a. Repeat Step 3 to reenable an interface. Substitute the **no shutdown** command for the **shutdown** command.
- b. Repeat Step 4 to write the new configuration to memory. Use the **copy running-config startup-config** command.
- c. Repeat Step 5 to verify that the interfaces are in the correct state. Use the **show interfaces** command followed by the interface type and interface address of the interface.

For complete descriptions of software configuration commands, refer to the publications listed in the “[Related Documentation](#)” section on page viii.

## Performing a Basic Configuration

This section describes guidelines for performing a basic configuration: enabling the DPT port adapter and specifying IP routing. You might also need to enter other configuration subcommands, depending on the requirements for your system configuration and the protocols you plan to route on the interface.

After configuring the DPT port adapter in a Cisco 7200 series, Cisco 7200 VXR, Cisco uBR7246, or Cisco 7500 series router with VIP, see the [“Adding a Node to a DPT Ring”](#) section on page 4-15 for adding the router to a DPT ring.

Before using the **configure** command, you must enter the privileged level of the EXEC command interpreter with the **enable** command. The system prompts you for a password if one has been set.

Use the following procedure to configure the DPT port adapter. Press the **Return** key after each configuration step, unless otherwise noted.

- Step 1** Confirm that the system recognizes the DPT port adapter by entering the **show running-config** command:

```
Router# show running-config
```

For an example of output from the **show running-config** command, see the [“Using show Commands to Check System Status”](#) section on page 4-8.

- Step 2** Enter configuration mode and specify that the console terminal is the source of the configuration subcommands:

```
Router# configure terminal
```

- Step 3** Enable IP routing by entering the **ip routing** command:

```
Router(config)# ip routing
```

- Step 4** At the prompt, specify the new interface to configure by entering the **interface** command, followed by the *type (srp)* and *slot/port*. The example that follows is for a DPT port adapter in slot 1:

```
Router(config)# interface srp 1/0
```



**Note** The interface *type* of the DPT port adapter is **srp**.

- Step 5** Assign an IP address and subnet mask to the interface with the **ip address** configuration subcommand, as in the following example:

```
Router(config)# interface srp 1/0
Router(config-if)# ip address 192.168.2.3 255.0.0.0
```

- Step 6** Use the **srp framing** command to verify that the framing is set to SONET for both side A and side B. The example below shows framing being set to SONET on side B of the DPT port adapter in slot 1:

```
Router(config)# interface srp 1/0
Router(config-if)# srp framing sonet side b
```

- Step 7** Use the **srp internal clock** command to set the clock source to *internal* for both sides of the DPT port adapter. The example below shows side A being set to *internal*:

```
Router(config)# interface srp 1/0
Router(config-if)# srp internal clock side a
```

- Step 8** Change the shutdown state to up and enable the interface:

```
Router(config)# interface srp 1/0
Router(config-if)# no shutdown
```

The **no shutdown** command passes an **enable** command to the DPT port adapter. It also causes the DPT port adapter to configure itself based on the previous configuration commands sent.

- Step 9** Add any other configuration subcommands required to enable routing protocols and adjust the interface characteristics.
- Step 10** When you have included all of the configuration subcommands to complete the configuration, enter **^Z** (press the **Control** key while you press **Z**) to exit configuration mode.
- Step 11** Write the new configuration to memory:

```
Router# copy running-config startup-config
```

The system displays an OK message when the configuration has been stored.

After you have completed your configuration, you can check it using **show** commands. For an explanation of **show** commands, see the [“Using show Commands to Check System Status”](#) section on page 4-8.

## Configuring the Intelligent Protection Switch Feature

Intelligent Protection Switch (IPS) ensures that ring traffic flow continues uninterrupted even if device or ring failures occur. IPS protects the DPT ring by initiating ring wraps that route traffic in the opposite direction over the alternate ring. The system software creates ring wraps by issuing an IPS request when failures are detected. The five types of IPS requests are hierarchical, with higher-priority requests taking precedence over lower-priority requests. For example, if a signal failure was detected at the same time that an operator entered a manual switch request, the system would create the ring wrap at the point of signal failure and the manual switch would be ignored. [Table 4-2](#) lists the types of IPS requests in order of priority.

**Table 4-3** *IPS Request Hierarchy*

| Request Type      | Originator |
|-------------------|------------|
| 1 Forced switch   | Operator   |
| 2 Signal fail     | Software   |
| 3 Signal degrade  | Software   |
| 4 Manual switch   | Operator   |
| 5 Wait to restore | Software   |

When you add a node to a DPT ring, you must create a break in the ring. You can create the break by initiating a forced switch request using the **srp ips request** command. See the [“Adding a Node to a DPT Ring”](#) section on page 4-15. The following example shows a forced switch request on side A of the DPT port adapter:

```
Router(config)# interface srp 2/0
Router(config-if)# srp ips request fs side A
```

If you need more detailed information about IPS commands, refer to publications listed in the [“Related Documentation”](#) section on page viii.

## Configuring the DPT Topology Feature

Every node on a DPT ring maintains a topology map of the ring so that it knows where to route traffic. It updates the topology map by periodically sending out a query, called a topology discovery packet, out onto the ring. Each node on the ring adds its own MAC address to the packet. When the discovery packet returns to the originating node, the contents of the packet are used to update the node topology map. You use the **srp topology-timer** command to set the frequency with which the node sends out topology discovery packets.

The **show srp topology** command is used to display the MAC addresses of each node on a DPT ring. See the “[Using show Commands to Check System Status](#)” section on page 4-8.

If you need more detailed information about DPT topology commands, see the “[Related Documentation](#)” section on page viii.

## Changing the Default Values of Configuration Parameters

The default values of the DPT port adapter configuration parameters can be changed to match your network requirements. [Table 4-4](#) lists the configuration parameter, the command used to alter it, and the default value of the parameter. If you need more detailed configuration information, refer to the publications listed in the “[Related Documentation](#)” section on page viii.

**Table 4-4 DPT Port Adapter Configuration Default Values**

| Parameter                       | Configuration Command                                                | Default Value                                     |
|---------------------------------|----------------------------------------------------------------------|---------------------------------------------------|
| Maximum transmission unit (MTU) | <b>mtu bytes</b>                                                     | 9000 bytes                                        |
| Buffer size                     | <b>srp buffer-size bytes</b>                                         | h = 4096 kbytes, m = 4096 kbytes, l = 8192 kbytes |
| Count                           | <b>srp count</b> 48-bit source address in hexadecimal format H.H.H.  | —                                                 |
| Deficit round robin             | <b>srp deficit-round-robin</b>                                       | quantum = 9216, deficit = 16384                   |
| Flag                            | <b>srp flag [c2 value] [j0 value] [s1s0 value]</b>                   | c2 set to 0x16; j0 set to 0xcc; s1s0 set to 0     |
| Framing                         | <b>srp framing [sdh   sonet]</b>                                     | SONET OC-12c                                      |
| Internal-clock                  | <b>srp clock-source [internal   line] [a   b]</b>                    | Internal                                          |
| IPS                             | <b>srp ips [request   timer   wtr-timer]</b>                         | timer = 1 sec, wtr-timer = 60 sec                 |
| Loopback                        | <b>srp loopback [internal   line] [a   b]</b>                        | —                                                 |
| Priority map                    | <b>srp priority-map [receive   transmit]</b>                         | receive high = 5, receive med = 3, transmit = 7   |
| Random detect                   | <b>srp random-detect [compute-interval   input   precedence]</b>     | compute interval = 128 sec                        |
| Reject                          | <b>srp reject</b> 48-bit source address in hexadecimal format H.H.H. | —                                                 |
| Shutdown                        | <b>srp shutdown [a   b]</b>                                          | —                                                 |

**Table 4-4** DPT Port Adapter Configuration Default Values (continued)

| Parameter       | Configuration Command                             | Default Value |
|-----------------|---------------------------------------------------|---------------|
| Topology timer  | <b>srp topology-timer</b> <i>value in seconds</i> | 5 sec         |
| TX traffic rate | <b>srp tx-traffic-rate</b> <i>rate in kbps</i>    | 10,000 kbps   |

## Using show Commands to Check System Status

The system maintains different kinds of information about its configuration and system status. This information can be accessed by using the **show** commands. This section contains **show** command information relevant to the installation and configuration of the DPT port adapter. See the “[Related Documentation](#)” section on page viii to locate more detailed information on **show** commands.

This section contains examples of the following commands:

- **show running-config**
- **show version**
- **show protocols**
- **show diag**
- **show controllers srp**
- **show interfaces srp**
- **show srp ips**
- **show srp topology**
- **show srp source-counters**

Use the **show running-config** command to display the currently running configuration. The example below shows that the current software version is Cisco IOS Release 12.0(6)S, a DPT port adapter is installed (the DPT port adapter is shown as interface SRP1/0), and the IP address of the DPT port adapter is 192.168.0.20 255.255.255.0:

```
Router# show running-config
Building configuration...
Current configuration:
version 12.0(6)S
service timestamps debug uptime
service timestamps log datetime
no service password-encryption
service udp-small-servers
service tcp-small-servers
!
hostname uut2
!
ip subnet-zero
ip host abrick 192.168.254.254
ip host curly 192.168.1.20
ip host sink 192.168.1.30
ip host sneha 192.168.1.40
ip name-server 192.168.2.132
!
!
!
interface SRP1/0
 mac-address 0010.5555.6666
 ip address 192.168.0.20 255.255.255.0
```

```

no ip directed-broadcast
no ip route-cache cef
no ip route-cache distributed
no keepalive
no srp random-detect input high
no srp random-detect input medium
no srp random-detect input low

```

Use the **show version** command to display the configuration of the system hardware, and Cisco IOS software information. The following example shows that the Cisco IOS Release 12.0(6)S is used, and that a DPT port adapter is installed:

```

Router# show version
Cisco Internetwork Operating System Software
IOS (tm) 7200 Software (C7200-JS-M), Version 12.0(6)S(19990617:032053)
Copyright (c) 1986-1999 by cisco Systems, Inc.
Compiled Thu 17-Jun-99 09:32 by iks
Image text-base: 0x600088F8, data-base: 0x611F2000

ROM: System Bootstrap, Version 11.1(13)CA,(f)
BOOTFLASH: 7200 Software (C7200-BOOT-M), Version 11.3(2)AA, R)

router uptime is 4 days, 16 minutes
System returned to ROM by reload
System image file is "tftp://223.255.254.254/c7200-js-mz.Jun17"

cisco 7206 (NPE200) processor with 122880K/8192K bytes of memory.
R5000 CPU at 200Mhz, Implementation 35, Rev 2.1, 512KB L2 Cache
6 slot midplane, Version 1.3

Last reset from power-on
Bridging software.
X.25 software, Version 3.0.0.
SuperLAT software (copyright 1990 by Meridian Technology Corp).
TN3270 Emulation software.
8 Ethernet/IEEE 802.3 interface(s)
1 FastEthernet/IEEE 802.3 interface(s)
1 FDDI network interface(s)
1 SRP network interface(s)
125K bytes of non-volatile configuration memory.
4096K bytes of packet SRAM memory.

20480K bytes of Flash PCMCIA card at slot 0 (Sector size 128K).
4096K bytes of Flash internal SIMM (Sector size 256K).
Configuration register is 0x0

```

Use the **show protocols** command to show whether a DPT port adapter is up, as shown in the following example:

```

Router# show protocols
Global values:
 Internet Protocol routing is enabled
FastEthernet0/0 is up, line protocol is up
Ethernet1/0 is up, line protocol is up
 Internet address is 10.1.1.41/24
Ethernet1/1 is up, line protocol is down
 Internet address is 10.9.9.7/24
Ethernet1/2 is administratively down, line protocol is down
Ethernet1/3 is up, line protocol is down
Ethernet1/4 is up, line protocol is up
Ethernet1/5 is administratively down, line protocol is down
Ethernet1/6 is administratively down, line protocol is down
Ethernet1/7 is administratively down, line protocol is down
Fddi2/0 is down, line protocol is down

```

```

Internet address is 10.4.4.3/24
SRP5/0 is up, line protocol is up
Internet address is 10.2.2.3/24

```

Use the **show diag** command to view system hardware information. The following example shows a DPT port adapter installed in slot 5 and slot 6:

```

Router# show diag 5
Slot 5/6:
 SRP Double Width, Multi Mode port adapter, 1 port
 Port adapter is analyzed
 Port adapter insertion time 1w3d ago
 EEPROM contents at hardware discovery:
 Hardware revision 1.0 Board revision UNKNOWN
 Serial number 0 Part number 73-3250-02
 Test history 0x0 RMA number 00-00-00
 EEPROM format version 1
 EEPROM contents (hex):
 0x20: 01 A7 01 00 00 00 00 00 49 0C B2 02 00 00 00 00
 0x30: 03 00 00 00 00 00 00 00 FF FF FF FF FF FF FF FF

```

**Note**

If you do not designate the slot number with the **show diag** command, hardware information for all slots is displayed.

Use the **show controllers srp** command to display the location of the DPT port adapter and other configuration information specific to the DPT port adapter, as shown in the following example:

```

Router# show controllers srp
SRP5/0

SRP5/0 - Side A (Outer RX, Inner TX)
SECTION
 LOF = 0 LOS = 0 BIP(B1) = 0
LINE
 AIS = 0 RDI = 0 FEBE = 0 BIP(B2) = 0
PATH
 AIS = 0 RDI = 0 FEBE = 0 BIP(B3) = 0
 LOP = 0 NEWPTR = 0 PSE = 0 NSE = 0

Active Defects: None
Active Alarms: None
Alarm reporting enabled for: SF SLOS SLOF B1-TCA B2-TCA PLOP B3-TCA

IPS
Rx(K1/K2) = 00/00 Rx(S1S0) = 02, Rx(C2) = CF
CLOCK SOURCE
 Internal
PATH TRACE BUFFER: STABLE
 Remote hostname : stingray
 Remote interface: srp1/0/0
 Remote IP addr : 10.2.2.5
 Remote Ring id : Outer Ring

BER thresholds: SF = 10e-3 SD = 10e-6
TCA thresholds: B1 = 10e-6 B2 = 10e-6 B3 = 10e-6

SRP5/0 - Side B (Inner RX, Outer TX)
SECTION
 LOF = 0 LOS = 0 BIP(B1) = 0

```

```

LINE
 AIS = 0 RDI = 0 FEBE = 0 BIP(B2) = 0
PATH
 AIS = 0 RDI = 0 FEBE = 0 BIP(B3) = 0
 LOP = 0 NEWPTR = 0 PSE = 0 NSE = 0

Active Defects: None
Active Alarms: None
Alarm reporting enabled for: SF SLOS SLOF B1-TCA B2-TCA PLOP B3-TCA

IPS
Rx(K1/K2) = 00/00 Rx(S1S0) = 02, Rx(C2) = 06
CLOCK SOURCE
 Internal
PATH TRACE BUFFER: STABLE
 Remote hostname : manofwar
 Remote interface: srp3/0/0
 Remote IP addr : 10.2.2.6
 Remote Ring id : Inner Ring

BER thresholds: SF = 10e-3 SD = 10e-6
TCA thresholds: B1 = 10e-6 B2 = 10e-6 B3 = 10e-6

```

**Note**


---

The DPT port adapter interface *type* and controller *type* are **srp**.

---

Use the **show interfaces srp** command to show statistics for the DPT port adapter interfaces, as shown in the following example:

```

Router# show interfaces srp 5/0
SRP5/0 is up, line protocol is up
 Hardware is SRP, address is 0010.0ba6.408c (bia 0010.0ba6.408c)
 Internet address is 10.2.2.3/24
 MTU 4470 bytes, BW 622000 Kbit, DLY 100 usec, rely 255/255, load 1/255
 Encapsulation SRP, loopback not set
 Last input 00:00:00, output 00:00:00, output hang never
 Last clearing of "show interface" counters 1w3d
 Queueing strategy: fifo
 Output queue 0/40, 0 drops; input queue 0/75, 0 drops
 5 minute input rate 0 bits/sec, 2 packets/sec
 5 minute output rate 0 bits/sec, 0 packets/sec
 2369845 packets input, 158630960 bytes, 0 no buffer
 Received 0 broadcasts, 0 runts, 0 giants, 0 throttles
 0 input errors, 0 CRC, 0 frame, 0 overrun, 0 ignored, 0 abort
 2369516 packets output, 158542697 bytes, 0 underruns
 0 output errors, 0 collisions, 1 interface resets
 0 output buffer failures, 0 output buffers swapped out
 Side A received errors:
 0 input errors, 0 CRC, 0 runts, 0 giants, 0 ignored, 0 abort
 Side B received errors:
 0 input errors, 0 CRC, 0 runts, 0 giants, 0 ignored, 0 abort

```

Use the **show srp ips** command to show IPS information for a specific interface. The following example shows the MAC addresses of the two nodes that are connected to the interface, and information about the state of the connections:

```

router# show srp ips 2/0

IPS Information for Interface SRP2/0
MAC Addresses
 Side A (Outer ring RX) neighbour 0000.0000.0002
 Side B (Inner ring RX) neighbour 0000.0000.0001

```

```

Node MAC address 0000.0000.0003
IPS State
 Side A not wrapped
 Side B wrapped
 Side A (Inner ring TX) IPS pkt. sent every 10 sec. (next pkt. after 6 sec.)
 Side B (Outer ring TX) IPS pkt. sent every 10 sec. (next pkt. after 6 sec.)
 IPS WTR period is 60 sec. (timer is inactive)
Node IPS State WRAPPED
IPS Self Detected Requests
 Side A IDLE
 Side B SF
IPS messages received
 Side A (Outer ring RX) {0000.0000.0002,SF ,L,1024}
 Side B (Inner ring RX) {0000.0000.0001,IDLE,S,1024}
IPS messages transmitted
 Side A (Inner ring TX) {0000.0000.0003,SF ,L,1024}
 Side B (Outer ring TX) {0000.0000.0003,SF ,S,1024}

Source Address Information for Interface SRP2/0
 000a.1234.bcde, reject
 000b.1234.bcde, pkt. count 0

Topology Map for Interface SRP2/0
 Topology pkt. sent every 20 sec. (next pkt. after 1 sec.)
 Last received topology pkt. 00:00:18
 Nodes on the ring:2
 Hops (outer ring) Address
 0 0000.0000.0003 Wrapped
 1 0000.0000.0002 Wrapped

```

Use the **show srp topology** command to show the identity of the nodes on the DPT ring according to their MAC addresses. The following examples show a three-node DPT ring. In the second example, nodes 0 and 2 are wrapped:

```

Router# show srp topology

Topology Map for Interface SRP5/0
 Topology pkt. sent every 61 sec. (next pkt. after 16 sec.)
 Last received topology pkt. 00:00:45
 Nodes on the ring:3
 Hops (outer ring) Address
 0 0000.0000.0001
 1 0000.0000.0002
 2 0000.0000.0003

Router# show srp topology

Topology Map for Interface SRP5/0
 Topology pkt. sent every 61 sec. (next pkt. after 54 sec.)
 Last received topology pkt. 00:00:07
 Nodes on the ring:3
 Hops (Outer ring) Address
 0 0000.0000.0001 Wrapped
 1 0000.0000.0002
 2 0000.0000.0003 Wrapped

```

Use the **show srp source-counters** command to show the number of packets received or rejected when SRP count and reject have been configured. The following example shows 1201 packets have come from another node, and 400 have been rejected:

```
Router# show srp source-counters


Source Address Information for Interface SRP5/0
000a.1234.5678, index 1, pkt. count 1201
000b.1234.5678, reject, pkt. count 400
```

## Creating a DPT Ring

A DPT ring may contain as many as 32 nodes, or as few as 2 nodes. This section documents the layout and configuration of a three-node DPT ring. It is assumed that the actual physical installation of the Cisco 7200 series, Cisco 7200 VXR, Cisco uBR7246, or Cisco 7500 series router with VIP has already been accomplished.

Before the DPT ring can be created, each router (node) must have a DPT port adapter installed and configured. See the [“Port Adapter Removal and Installation”](#) section on page 3-7, and the [“Configuring the DPT Interface”](#) section on page 4-2. Once the individual nodes are configured, the inner and outer rings of the DPT ring must be connected as shown in [Figure 4-1](#), and the DPT port adapters must be enabled. The following procedure describes the internodal connections of the DPT ring and the configuration commands used to create the ring.

**Figure 4-1** Three-Node DPT Ring

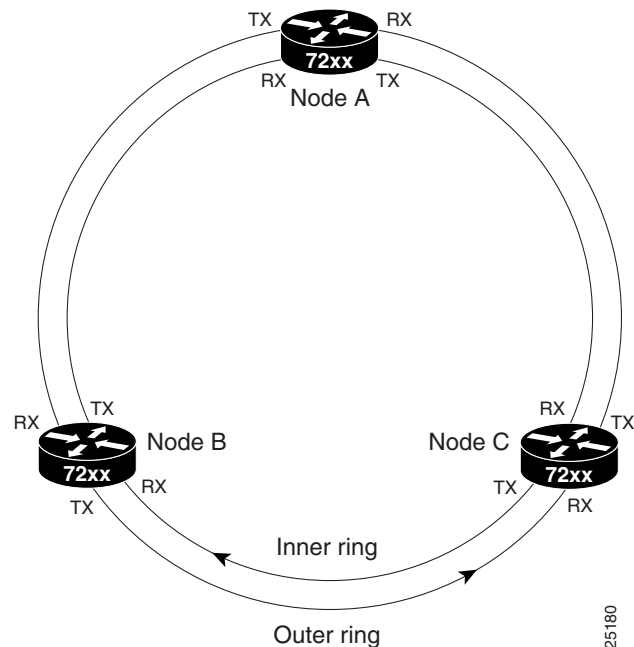

- Step 1** While in configuration mode, use the **shutdown** command to disable the DPT port adapter on each node, as shown below:


```
Router(config)# interface srp 1/0
Router(config-if)# shutdown
```

**Step 2** Connect the nodes as shown in [Figure 4-2](#), being careful to observe the receive (RX) and transmit (TX) cable relationship. [Table 4-5](#) lists the internodal cable connections for a three-node DPT ring.



**Note** Side A (RX outer/TX inner) of the DPT port adapter must be connected to side B (TX outer/RX inner) of the DPT port adapter in the next node in the ring. See [Figure 4-2](#) for the correct orientation of side A and side B.

**Figure 4-2 Internodal Connections of a Three-Node DPT Ring**

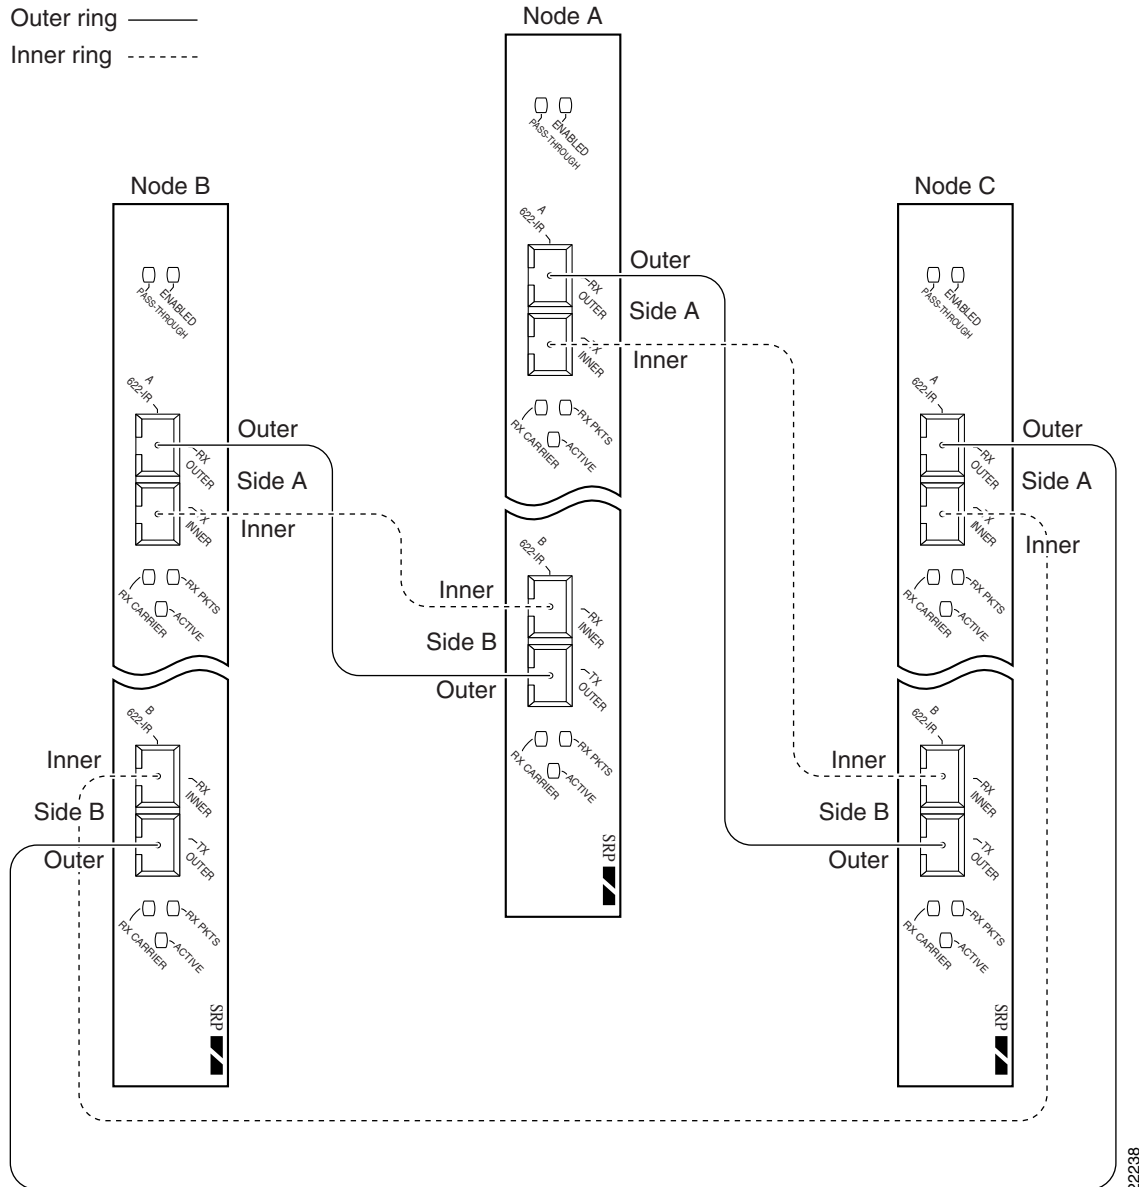

**Step 3** Use the **no shutdown** command to enable the DPT port adapter of each node, as shown below:

```
Router(config)# interface srp 1/0
Router(config-if)# no shutdown
```

- Step 4** Use the **show srp topology** command to verify that all three nodes are recognized as part of the DPT ring. The output shows the number of nodes on the ring and their MAC addresses. See the “[Using show Commands to Check System Status](#)” section on page 4-8.

**Table 4-5 Three-Node DPT Ring Cable Connections**

| Internodal Cable Connections |                   |
|------------------------------|-------------------|
| From Node/Connector          | To Node/Connector |
| Node A/RX outer              | Node C/TX outer   |
| Node A/TX inner              | Node C/RX inner   |
| Node A/TX outer              | Node B/RX outer   |
| Node A/RX inner              | Node B/TX inner   |
| Node B/RX outer              | Node A/TX outer   |
| Node B/TX inner              | Node A/RX inner   |
| Node B/TX outer              | Node C/RX outer   |
| Node B/RX inner              | Node C/TX inner   |
| Node C/RX outer              | Node B/TX outer   |
| Node C/TX inner              | Node B/RX inner   |
| Node C/TX outer              | Node A/RX outer   |
| Node C/RX inner              | Node A/TX inner   |

## Adding or Removing Nodes in a DPT Ring

The following sections describe the procedures for adding or removing a node in a DPT ring:

- [Adding a Node to a DPT Ring, page 4-15](#)
- [Removing a Node from a DPT Ring, page 4-18](#)

### Adding a Node to a DPT Ring

When you want to install a new node in a DPT ring, you must first install and configure a DPT port adapter in the Cisco 7200 series, Cisco 7200 VXR, Cisco uBR7246, or Cisco 7500 series router with VIP, and then install and configure the router as a node in the DPT ring. This section describes the procedure for adding a node to a DPT ring.

To add a node to a DPT ring, you must first reroute the traffic flow over the ring through an alternate path by creating a ring wrap where the new node is to be installed. [Figure 4-3](#) shows a four-node DPT ring. Use the following procedure to add a node between nodes A and D on the ring:

- Step 1** While in global configuration mode, stop data traffic between nodes A and D on the DPT ring by entering the forced-switch command **srp ips request forced-switch a** on the node A router. See the “[Configuring the Intelligent Protection Switch Feature](#)” section on page 4-6. This creates two ring wraps between the two nodes. (See [Figure 4-4](#).)

Figure 4-3 DPT Ring Topology with Four Nodes


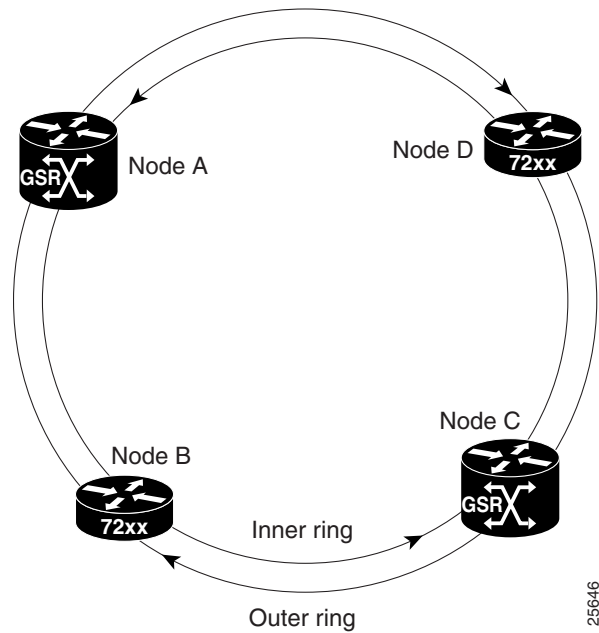


Figure 4-4 DPT Ring with Ring Wraps Created by a Forced Switch



- Step 2** From the configuration mode, enter the command **show srp topology** to verify that the ring wraps are in place. See the “[Using show Commands to Check System Status](#)” section on page 4-8.
- Step 3** Disconnect the fiber-optic cables connecting side A of node A to side B of node D. (See [Figure 4-4](#)).


- Step 4** Connect side A of node A to side B of the new node (node E), using two simplex or one duplex fiber-optic cable. See the “[Cables, Connectors, and Pinouts](#)” section on page 1-6. Connect side A of the new node to side B of node D. (See [Figure 4-5](#)).

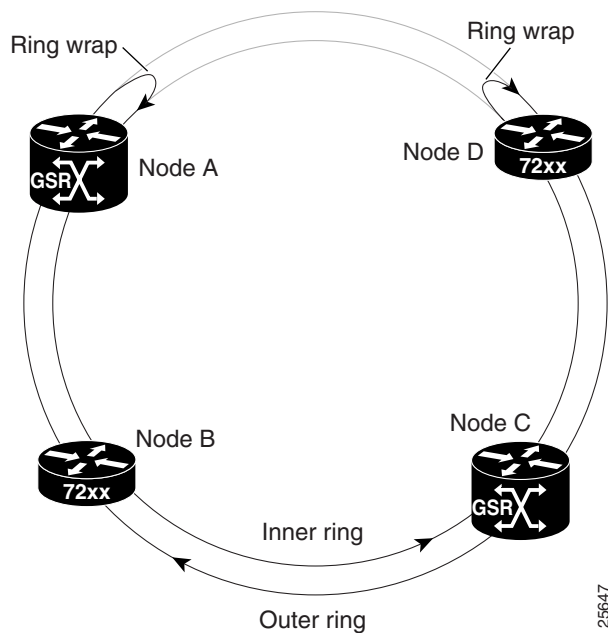

**Note** Be careful to observe the proper cable orientation. When using duplex cables, you must reverse one of the cable ends for correct orientation.

- Step 5** If the DPT port adapter in the new router (node E) has not been configured, do so at this time. See the “[Configuring the DPT Interface](#)” section on page 4-2.
- Step 6** Enter the **no shutdown** command to bring up the node E router.
- Step 7** Confirm that the system recognizes the new node by entering the **show srp topology** command. The output shows the number of nodes on the ring, their MAC addresses, and the state of the nodes (wrapped or not).
- Step 8** Remove the two ring wraps created by the forced switch on nodes A and D by entering the **no srp ips request forced-switch a** command on the node A router.
- Step 9** Confirm that the ring wraps are no longer in place by entering the **show srp topology** command. The output shows the number of nodes on the ring, their MAC addresses, and the state of the nodes (wrapped or not).

**Figure 4-5** DPT Ring Topology with an Added Node

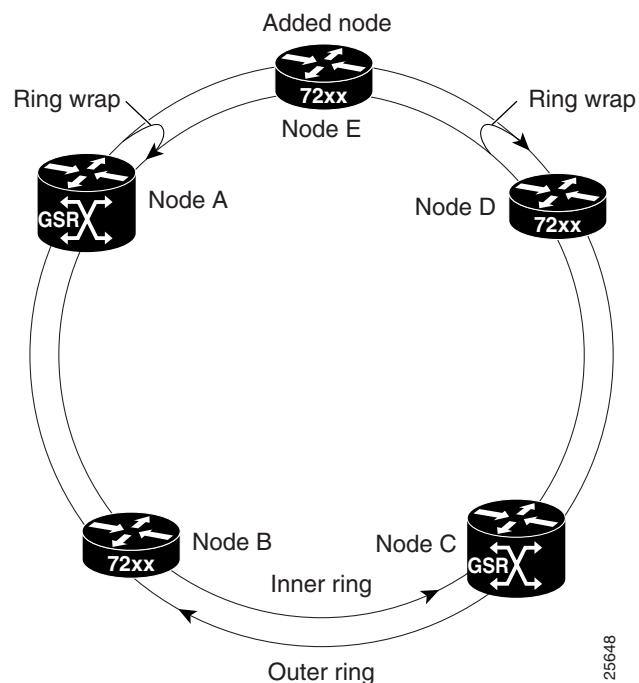

**Note** You can add a node to a DPT ring without entering the **srp ips forced-switch** command, but you then cannot control when the traffic is rerouted and restored; the system determines the time instead.

## Removing a Node from a DPT Ring

This section describes the procedure for removing a node from a DPT ring. The following steps describe how to remove node D from a four-node DPT ring, similar to that shown in [Figure 4-3](#).

- 
- Step 1** Isolate node D by entering the forced-switch command **srp ips request forced-switch a** on the node A router, and **srp ips request forced-switch b** on the node C router.
  - Step 2** Enter the **show srp topology** command on either router to verify that the ring wraps are in place and that node D no longer exists on the ring.
  - Step 3** Disconnect both ends of the cable connecting side A of node D to side B of node C.
  - Step 4** Disconnect the cable connected to side B of node D and connect it to side B of node C.
  - Step 5** Remove the two ring wraps created by the forced switch on nodes A and C by entering the **no srp ips request forced-switch a** command on node A, and **no srp ips request forced-switch b** command on node C.
  - Step 6** Enable IP routing by entering the **ip routing** command to restart data traffic.
- 

This completes the procedure for removing a node from a DPT ring.

## Checking the Configuration

After configuring the new interface, use the **show** commands to display the status of the new interface or all interfaces, and use the **ping** and **loopback** commands to check connectivity. This section includes the following subsections:

- [Using show Commands to Verify the New Interface Status, page 4-18](#)
- [Using the ping Command to Verify Network Connectivity, page 4-22](#)

## Using show Commands to Verify the New Interface Status

[Table 4-6](#) demonstrates how you can use the **show** commands to verify that new interfaces are configured and operating correctly and that the DPT port adapter appears in them correctly. Sample displays of the output of selected **show** commands appear in the sections that follow. For complete command descriptions and examples, refer to the publications listed in the [“Related Documentation” section on page viii](#).



### Note

The outputs that appear in this document may not match the output you receive when running these commands. The outputs in this document are examples only.

Table 4-6 Using show Commands

| Command <sup>1</sup>                                                                      | Function                                                                                                                                                                   | Example                                |
|-------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------|
| <b>show version</b> or<br><b>show hardware</b>                                            | Displays system hardware configuration, the number of each interface type installed, Cisco IOS software version, names and sources of configuration files, and boot images | Router# <b>show version</b>            |
| <b>show controllers</b>                                                                   | Displays all the current interface processors and their interfaces                                                                                                         | Router# <b>show controllers</b>        |
| <b>show diag slot</b>                                                                     | Displays types of port adapters installed in your system and information about a specific port adapter slot, interface processor slot, or chassis slot                     | Router# <b>show diag 2</b>             |
| <b>show interfaces type</b><br><i>port-adapter-slot-number/<br/>interface-port-number</i> | Displays status information about a specific type of interface (for example, <b>srp</b> ) in a Cisco 7200 series router                                                    | Router# <b>show interfaces srp 1/0</b> |
| <b>show interfaces type 1</b><br><i>linterface-port-number</i>                            | Displays status information about a specific type of interface (for example, <b>srp</b> ) in a Cisco uBR7246 router                                                        | Router# <b>show interfaces srp 1/0</b> |
| <b>show protocols</b>                                                                     | Displays protocols configured for the entire system and for specific interfaces                                                                                            | Router# <b>show protocols</b>          |
| <b>show running-config</b>                                                                | Displays the running configuration file                                                                                                                                    | Router# <b>show running-config</b>     |
| <b>show startup-config</b>                                                                | Displays the configuration stored in NVRAM                                                                                                                                 | Router# <b>show startup-config</b>     |

1. Refer to “Identifying Interface Addresses” section on page 1-10 for interface addresses on the Cisco 7500 series routers with VIP.

If an interface is shut down and you configured it as up, or if the displays indicate that the hardware is not functioning properly, ensure that the interface is properly connected and terminated. If you still have problems bringing up the interface, contact a service representative for assistance. This section includes the following subsections:

- [Using the show version or show hardware Commands, page 4-19](#)
- [Using the show diag Command, page 4-20](#)
- [Using the show interfaces Command, page 4-21](#)

Choose the subsection appropriate for your system. Proceed to the “Using the ping Command to Verify Network Connectivity” section on page 4-22 when you have finished using the **show** commands.

## Using the show version or show hardware Commands

Display the configuration of the system hardware, the number of each interface type installed, the Cisco IOS software version, the names and sources of configuration files, and the boot images, using the **show version** (or **show hardware**) command.

**Note**


---

The outputs that appear in this document may not match the output you receive when running these commands. The outputs in this document are examples only.

---

**Cisco 7200 Series and Cisco uBR7200 Series Routers**

Following is an example of the **show version** command from a Cisco 7200 series router with the DPT port adapter:

```
Router# show version

Cisco Internetwork Operating System Software
IOS (tm) 7200 Software (C7200-J-M), Version 11.1(7)CA [biff 105]
Copyright (c) 1986-1996 by cisco Systems, Inc.
Compiled Sun 04-Aug-96 06:00 by biff
Image text-base: 0x600088A0, data-base: 0x605A4000

ROM: System Bootstrap, Version 11.1(7)CA RELEASED SOFTWARE

Router uptime is 4 hours, 22 minutes
System restarted by reload
System image file is "c7200-j-mz", booted via slot0

cisco 7206 (NPE150) processor with 12288K/4096K bytes of memory.
R4700 processor, Implementation 33, Revision 1.0 (Level 2 Cache)
Last reset from power-on
Bridging software.
SuperLAT software (copyright 1990 by Meridian Technology Corp).
X.25 software, Version 2.0, NET2, BFE and GOSIP compliant.
TN3270 Emulation software (copyright 1994 by TGV INC).
Chassis Interface.
 4 Ethernet/IEEE 802.3 interfaces.
 2 FastEthernet/IEEE 802.3 interfaces.
 4 Token Ring /IEEE802.5 interfaces.
12 Serial network interfaces.
 1 Compression port adapter.
125K bytes of non-volatile configuration memory.
1024K bytes of packet SRAM memory.

20480K bytes of Flash PCMCIA card at slot 0 (Sector size 128K).
8192K bytes of Flash internal SIMM (Sector size 256K).
Configuration register is 0x2
```

**Using the show diag Command**

Display the types of port adapters installed in your system (and specific information about each) using the **show diag slot** command, where *slot* is the port adapter slot in a Cisco 7200 series, Cisco uBR7200, and Cisco 7500 series routers with VIP.

**Note**


---

The outputs that appear in this document may not match the output you receive when running these commands. The outputs in this document are examples only.

---

## Cisco 7200 Series and Cisco uBR7200 Series Routers

Following is an example of the **show diag slot** command that shows a DPT port adapter in port adapter slot 1 of a Cisco 7200 series router:

```
Router# show diag 1
Slot 1:
Mueslix serial (RS232) port adapter, 8 ports
Port adapter is analyzed
Port adapter insertion time 2d09h ago
Hardware revision 255.255 Board revision UNKNOWN
Serial number 4294967295 Part number 255-65535-255
Test history 0xFF RMA number 255-255-255
EEPROM format version 1
EEPROM contents (hex):
0x20: 01 0D FF FF FF FF FF FF FF FF FF FF FF FF FF
0x30: FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF
```



### Note

Port adapters used with Cisco 7200 VXR routers require the correct base hardware revision in order to function. The following error message occurs on bootup if the incorrect hardware revision is used:

```
> PA-3-REVNOTSUPPORTED:PA in slot 1 (Ethernet) requires base h/w revision of (1.14) for this chassis
```

Use the **show diag** command to display the hardware revision.

## Using the show interfaces Command

The **show interfaces** command displays status information (including the physical slot and interface address) for the interfaces you specify. All of the examples that follow specify **srp** interfaces.

For complete descriptions of interface subcommands and the configuration options available for Cisco 7200, Cisco uBR7200, and Cisco 7500 series routers, refer to the publications listed in the [“Related Documentation”](#) section on page viii.



### Note

The outputs that appear in this document may not match the output you receive when running these commands. The outputs in this document are examples only.

## Cisco 7200 Series and Cisco uBR7200 Series Routers

Following is an example of the **show interfaces** command for Cisco 7200 series and Cisco uBR7200 series routers. Following is an example of the **show interfaces srp** command, which shows all of the information specific to interface port 0 on a DPT port adapter installed in port adapter slot 1:

```
Router# show interfaces srp 1/0
SRP1/0 is up, line protocol is up
Hardware is SRP, address is 0010.0ba6.408c (bia 0010.0ba6.408c)
Internet address is 10.2.2.3/24
MTU 4470 bytes, BW 622000 Kbit, DLY 100 usec, rely 255/255, load 1/255
Encapsulation SRP, loopback not set
Last input 00:00:00, output 00:00:00, output hang never
Last clearing of "show interface" counters 1w3d
Queueing strategy: fifo
Output queue 0/40, 0 drops; input queue 0/75, 0 drops
5 minute input rate 0 bits/sec, 2 packets/sec
5 minute output rate 0 bits/sec, 0 packets/sec
2369845 packets input, 158630960 bytes, 0 no buffer
```

```

Received 0 broadcasts, 0 runts, 0 giants, 0 throttles
0 input errors, 0 CRC, 0 frame, 0 overrun, 0 ignored, 0 abort
2369516 packets output, 158542697 bytes, 0 underruns
0 output errors, 0 collisions, 1 interface resets
0 output buffer failures, 0 output buffers swapped out
Side A received errors:
0 input errors, 0 CRC, 0 runts, 0 giants, 0 ignored, 0 abort
Side B received errors:
0 input errors, 0 CRC, 0 runts, 0 giants, 0 ignored, 0 abort

```

## Using the ping Command to Verify Network Connectivity

Using the **ping** command, you can verify that an interface port is functioning properly. This section provides a brief description of this command. Refer to the publications listed in the [“Related Documentation” section on page viii](#) for detailed command descriptions and examples.

The **ping** command sends echo request packets out to a remote device at an IP address that you specify. After sending an echo request, the system waits a specified time for the remote device to reply. Each echo reply is displayed as an exclamation point (!) on the console terminal; each request that is not returned before the specified timeout is displayed as a period (.). A series of exclamation points (!!!!!) indicates a good connection; a series of periods (.....) or the messages [timed out] or [failed] indicate a bad connection.

Following is an example of a successful **ping** command to a remote server with the address 10.0.0.10:

```

Router# ping 10.0.0.10 <Return>
Type escape sequence to abort.
Sending 5, 100-byte ICMP Echoes to 10.0.0.10, timeout is 2 seconds:
!!!!!
Success rate is 100 percent (5/5), round-trip min/avg/max = 1/15/64 ms
Router#

```

If the connection fails, verify that you have the correct IP address for the destination and that the device is active (powered on), and repeat the **ping** command.