



# CHAPTER 12

## Configuring Gigabit Ethernet SPAs

---

This chapter provides information about configuring Gigabit Ethernet SPAs on the Cisco uBR10012 router. It includes the following sections:

- [Configuration Tasks, page 12-1](#)
- [Verifying the Configuration, page 12-15](#)
- [Configuration Examples, page 12-16](#)

### Configuration Tasks

This section describes how to configure the Gigabit Ethernet SPAs and includes the following topics:

- [Default Configuration Values, page 12-1](#)
- [Specifying the Interface Address on a SPA, page 12-2](#)
- [Configuring Gigabit Ethernet SPAs, page 12-3](#)
- [Modifying the MAC Address on the Interface, page 12-4](#)
- [Gathering MAC Address Accounting Statistics, page 12-5](#)
- [Configuring Autonegotiation on an Interface, page 12-5](#)
- [Ethernet Flow Control, page 12-6](#)
- [Modifying the Interface MTU Size, page 12-6](#)
- [Configuring the Encapsulation Type and VLANs, page 12-8](#)
- [Configuring the Hold Queue, page 12-9](#)
- [Configuring EtherChannels, page 12-9](#)
- [Configuring EtherChannels, page 12-9](#)
- [Configuring a Priority Queue on Gigabit Ethernet SPAs, page 12-9](#)
- [Preprovisioning the SIPs and Gigabit Ethernet SPAs, page 12-14](#)

### Default Configuration Values

[Table 12-1](#) lists the default configuration parameters when an interface is enabled on a Gigabit Ethernet SPA.

**Table 12-1** Gigabit Ethernet SPA Default Configuration Values

Parameter	Default Value
Autonegotiation	Enabled (supported only on Cisco 5-Port Gigabit Ethernet SPA)
Flow control	Enabled
Hold queue	Disabled
IEEE 802.1Q encapsulation	Disabled
MAC accounting	Disabled
MAC address	Hardware burned in address (BIA)
MTU	1514 for normal interfaces, 1518 for 802.1Q VLAN

## Specifying the Interface Address on a SPA

Gigabit Ethernet SPAs on the Cisco uBR10012 router use an addressing format that specifies the physical location of the SIP, SPA, and interface. The interface address format is *slot/subslot/port*, where:

- *slot*—Specifies the slot number in the Cisco uBR10012 router where the SIP is installed.
- *subslot*—Specifies the secondary slot of the SIP where the SPA is installed.
- *port*—Specifies the number of the individual interface port on a SPA.

The following example shows how to specify the second interface (1) on a Gigabit Ethernet SPA installed in the first subslot of a SIP (0) installed in chassis slot 3:

```
Router(config)# interface gigabitethernet 3/0/1
```



### Note

The interface address format for the Cisco Wideband SPA is changed in Cisco IOS Release 12.2(33)SCB. For details, see [“SIP and SPA Addressing Format”](#) section on page 4-2.

## Configuring Gigabit Ethernet SPAs

To configure a Gigabit Ethernet SPA, follow this procedure:

	Command or Action	Purpose
Step 1	<p><b>enable</b></p> <p><b>Example:</b> Router&gt; <b>enable</b></p>	Enables privileged EXEC mode. If prompted, enter your password.
Step 2	<p><b>configure terminal</b></p> <p><b>Example:</b> Router# <b>configure terminal</b></p>	Enters global configuration mode.
Step 3	<p>Router(config)# <b>interface gigabitethernet</b> <i>slot/subslot/port</i> [<i>.subinterface-number</i>]</p> <p>or</p> <p>Router(config)# <b>interface</b> <b>tengigabitethernet</b> <i>slot/subslot/port</i> [<i>.subinterface-number</i>]</p> <p><b>Example:</b> Router(config)# <b>interface gigabitethernet</b> <b>5/0/0</b></p>	<p>Specifies the Gigabit Ethernet or the 10-Gigabit Ethernet interface to enter interface configuration mode.</p> <ul style="list-style-type: none"> <li><i>slot/subslot/port</i>—Specifies the location of the interface.</li> <li><i>subinterface-number</i>—(Optional) Specifies a secondary interface (subinterface) number.</li> </ul>
Step 4	<p>Router(config-if)# <b>ip address</b> <i>ip-address mask</i></p> <p>or</p> <p>Router(config-if)# <b>ipv6 address</b> <i>ipv6-prefix/prefix-length</i></p> <p><b>Example:</b> Router(config-if)# <b>ip address 172.18.189.38 255.255.255.224</b></p> <p>or</p> <p>Router(config-if)# <b>ipv6 address 3000:1116::1:3:300:1/112</b></p>	<p>Assigns an IP address to the interface.</p> <ul style="list-style-type: none"> <li><i>ip-address mask</i>—Specifies an IP address and subnet mask.</li> <li><i>ipv6-prefix/prefix-length</i>—Specifies an IPv6 network address and prefix length.</li> </ul>
Step 5	<p>Router(config-if)# <b>no shutdown</b></p> <p><b>Example:</b> Router(config-if)# <b>no shutdown</b></p>	Removes the shutdown configuration, which forces an interface administratively down.
Step 6	<p>Router(config-if)# <b>end</b></p> <p><b>Example:</b> Router(config-if)# <b>end</b></p>	Saves configuration changes.

## Modifying the MAC Address on the Interface

The Gigabit Ethernet SPAs use a default MAC address for each port that is derived from the base address that is stored in the electrically erasable programmable read-only memory (EEPROM) on the backplane of the Cisco uBR10012 router.

To modify the default MAC address of an interface to some user-defined address, use the following command in interface configuration mode:

Command	Purpose
Router(config-if)# <b>mac-address</b> <i>ieee-address</i>	<p>Modifies the default MAC address of an interface to a user-defined address.</p> <ul style="list-style-type: none"> <li><i>ieee-address</i>—Specifies the 48-bit Institute of Electrical and Electronics Engineers (IEEE) MAC address written as a dotted triple of four-digit hexadecimal numbers (<i>xxxx.yyyy.zzzz</i>).</li> </ul>

To return to the default MAC address on the interface, use the **no** form of the command.

## Verifying the MAC Address

To verify the MAC address of an interface, use the **show interfaces gigabitethernet** privileged EXEC command and observe the value shown in the address field.

The following example shows output from the **show interfaces tengigabitethernet** command on a 1-Port 10-Gigabit Ethernet SPA in slot 1, SPA subslot 3. The second line of the output identifies the type of SPA and its MAC address.

```
Router# show interfaces tengigabitethernet 1/3/0

GigabitEthernet1/3/0 is up, line protocol is up
  Hardware is TenGigEther SPA, address is 0005.00e7.2548 (bia 0005.00e7.2548)

MTU 1500 bytes, BW 1000000 Kbit, DLY 10 usec,
  reliability 255/255, txload 1/255, rxload 1/255
Encapsulation ARPA, loopback not set
Keepalive not set
Full Duplex, 1000Mbps, link type is auto, media type is SX
output flow-control is unsupported, input flow-control is XON
ARP type: ARPA, ARP Timeout 04:00:00
Last input 00:00:00, output 00:00:00, output hang never
Last clearing of "show interface" counters never
Input queue: 0/75/0/0 (size/max/drops/flushes); Total output drops: 0
Interface GigabitEthernet1/3/0 queueing strategy: PXF Class-based
5 minute input rate 19000 bits/sec, 23 packets/sec
5 minute output rate 17000 bits/sec, 23 packets/sec
 61860 packets input, 9470324 bytes, 0 no buffer
  Received 3151 broadcasts (0 IP multicasts)
   0 runts, 0 giants, 0 throttles
  0 input errors, 0 CRC, 0 frame, 0 overrun, 0 ignored
  0 watchdog, 3151 multicast, 0 pause input
 62413 packets output, 5726961 bytes, 0 underruns
  0 output errors, 0 collisions, 0 interface resets
  0 babbles, 0 late collision, 0 deferred
  0 lost carrier, 0 no carrier, 0 pause output
  0 output buffer failures, 0 output buffers swapped out
```

## Gathering MAC Address Accounting Statistics

MAC address accounting provides accounting information for IP traffic based on the source and destination MAC addresses of the LAN interfaces. MAC address accounting calculates the total packet and byte counts for a LAN interface that receives or sends IP packets to or from a unique MAC address. It also records a time stamp for the last packet received or sent. With MAC address accounting, you can determine how much traffic is being sent to or received from various peers.

To enable MAC address accounting on an interface, use the following command in interface configuration mode:

Command	Purpose
Router(config-if)# <b>ip accounting mac-address</b> [input   output]	Enables MAC address accounting on an interface. <ul style="list-style-type: none"> <li>• <b>input</b>—Performs accounting based on the source MAC address on received packets.</li> <li>• <b>output</b>—Performs accounting based on the destination MAC address on transmitted packets.</li> </ul>

## Configuring Autonegotiation on an Interface

Autonegotiation is enabled by default and can be disabled on the 5-Port Gigabit Ethernet SPA. During autonegotiation, advertisement for flow control, speed, and duplex occurs. If autonegotiation is disabled on one end of a link, it must be disabled on the other end of the link. If one end of a link has autonegotiation disabled while the other end of the link does not, the link does not come up properly on both ends. Flow control is always negotiated when autonegotiation is enabled.



**Note**

Autonegotiation is not supported on the 1-Port 10-Gigabit Ethernet SPA.

## Disabling Autonegotiation

To disable autonegotiation on the 5-Port Gigabit Ethernet SPA, use the following command in interface configuration mode:

Command	Purpose
Router(config-if)# <b>no negotiation auto</b>	Disables autonegotiation on the 5-Port Gigabit Ethernet SPA interface on the SIP-600. No advertisement of flow control occurs.

## Enabling Autonegotiation

To re-enable autonegotiation on a Gigabit Ethernet interface, use the following command in interface configuration mode:

Command	Purpose
Router(config-if)# <b>negotiation auto</b>	Enables autonegotiation on the 5-Port Gigabit Ethernet SPA interface on the SIP-600. Advertisement of flow control occurs.

## Ethernet Flow Control

The Ethernet flow control feature is a mechanism for temporarily stopping the transmission of data between two peers to prevent packet drops in the event of data overflow. The overwhelmed network element will send a PAUSE frame, which halts transmission from the sending node for a specified period of time. Flow control is enabled by default on the 1-Port 10-Gigabit Ethernet SPA.



**Note** Flow control is always negotiated when autonegotiation is enabled.

## Disabling Flow Control

To disable flow control on the 1-Port 10-Gigabit Ethernet SPA, use the following command in interface configuration mode:

Command	Purpose
Router(config-if)# <b>flowcontrol receive off</b>	Disables flow control on the 1-Port 10-Gigabit Ethernet SPA. When the flow control is disabled, the PAUSE frames received from its peer are ignored and transmission continues.

## Enabling Flow Control

To re-enable flow control on a Gigabit Ethernet interface, use the following command in interface configuration mode:

Command	Purpose
Router(config-if)# <b>no flowcontrol receive off</b>	Enables flow control on a Gigabit Ethernet SPA interface.

## Modifying the Interface MTU Size

The Cisco IOS software supports three different types of configurable maximum transmission unit (MTU) options at different levels of the protocol stack:

- Interface MTU—Checked by the SPA on traffic coming in from the network. Different interface types support different interface MTU sizes and defaults. The interface MTU defines the maximum packet size allowable (in bytes) for an interface before drops occur. If the frame is smaller than the interface MTU size, but is not smaller than the minimum frame size for the interface type (such as 64 bytes for Ethernet), then the frame continues to process.
- IP MTU—Can be configured on an interface or a subinterface and is used by the Cisco IOS software to determine whether fragmentation of a packet takes place. If an IP packet exceeds the IP MTU size, then the packet is fragmented.
- Tag or Multiprotocol Label Switching (MPLS) MTU—Can be configured on an interface or a subinterface and allows up to six different labels, or tag headers, to be attached to a packet. The maximum number of labels is dependent on your Cisco IOS software release.

**Note**

---

For the Gigabit Ethernet SPAs on the Cisco uBR10012 router, the default MTU size is 1500 bytes. When the interface is being used as a Layer 2 port, the maximum configurable MTU is 9000 bytes. The SPA automatically adds an additional 22 bytes to the configured MTU size to accommodate some of the additional overhead.

---

## Interface MTU Configuration Guidelines

When configuring the interface MTU size on a Gigabit Ethernet SPA on a Cisco uBR10012 router, consider the following guidelines:

- The default interface MTU size accommodates a 1500-byte packet, plus 22 additional bytes to cover the following additional overhead:
  - Layer 2 header—14 bytes
  - Dot1Q header—4 bytes
  - CRC—4 bytes

**Note**

---

Depending on your Cisco IOS software release, a certain maximum number of MPLS labels are supported. If you need to support more than two MPLS labels, then you must increase the default interface MTU size.

---

- If you are using MPLS, be sure that the **mpls mtu** command is configured for a value less than or equal to the interface MTU.
- If you are using MPLS labels, then you should increase the default interface MTU size to accommodate the number of MPLS labels. Each MPLS label adds 4 bytes of overhead to a packet.

## Interface MTU Configuration Task

To modify the MTU size on an interface, use the following command in interface configuration mode:

Command	Purpose
Router(config-if)# <b>mtu bytes</b>	Configures the maximum packet size for an interface. The default is 1500 bytes. The maximum configurable MTU is 9129 bytes. <ul style="list-style-type: none"> <li><i>bytes</i>—Specifies the maximum number of bytes for a packet.</li> </ul>

To return to the default MTU size, use the **no** form of the command.

## Verifying MTU Size

To verify the MTU size for an interface, use the **show interfaces** command in privileged EXEC command and observe the value shown in the MTU field.

The following example shows an MTU size of 1500 bytes for the Gigabit Ethernet SPA installed in the SIP that is located in slot 1 of the Cisco uBR10012 router:

```
Router# show interfaces GigabitEthernet 1/3/0

GigabitEthernet1/3/0 is up, line protocol is up
  Hardware is GigEther SPA, address is 0005.00e7.2548 (bia 0005.00e7.2548)

  MTU 1500 bytes, BW 1000000 Kbit, DLY 10 usec,
    reliability 255/255, txload 1/255, rxload 1/255
  Encapsulation ARPA, loopback not set
  Keepalive not set
```

## Configuring the Encapsulation Type and VLANs

By default, the interfaces on the Gigabit Ethernet SPAs support Advanced Research Projects Agency (ARPA) encapsulation. They do not support configuration of service access point or SNAP encapsulation for transmission of frames; however, the interfaces will properly receive frames that use service access point and SNAP encapsulation.

The Cisco uBR10012 router supports virtual local area networks (VLANs) to separate a service provider's subscriber traffic. Each Gigabit Ethernet SPA supports up to 8000 VLANs

The other encapsulation supported by the SPA interfaces is IEEE 802.1Q encapsulation for virtual LANs (VLANs). To create a subinterface on a SPA interface port and configure the subinterface on a VLAN using IEEE 802.1Q encapsulation, use the following command in subinterface configuration mode:

Command	Purpose
Router(config-subif)# <b>encapsulation dot1q vlan-id</b>	Enables IEEE 802.1Q encapsulation on a subinterface on a VLAN <ul style="list-style-type: none"> <li><i>vlan-id</i>— Specifies the VLAN identifier. The valid range is from 1 to 4095.</li> </ul>

## Configuring the Hold Queue

You can limit the size of the input queue on a Gigabit Ethernet SPA in units of packets. The input hold queue prevents a single interface from flooding the network server with too many input packets. Further input packets are discarded if the interface has too many input packets outstanding in the system. The default input hold queue limit is 75 packets.

To modify the input hold queue on a Gigabit Ethernet SPA, use the following command in interface configuration mode:

Command	Purpose
Router(config-if)# <b>hold-queue</b> <i>length</i> <b>in</b>	Configures the input hold queue in units of packets. <ul style="list-style-type: none"> <li><i>length</i>— Specifies the maximum number of packets in the queue. The valid values are from 0 to 4096.</li> </ul>

## Configuring EtherChannels

An EtherChannel bundles individual Gigabit Ethernet links into a single logical link that provides the aggregate bandwidth of up to four physical links. This feature helps improve the cost effectiveness of a device by increasing cumulative bandwidth without requiring hardware upgrades. In addition, IEEE 802.3ad link bundling provides a capability to dynamically provision, manage, and monitor various aggregated links and enables interoperability between various Cisco devices and the devices of third-party vendors.

## Configuring a Priority Queue on Gigabit Ethernet SPAs

The Gigabit Ethernet SPAs provide the ability to separate high-priority traffic from low-priority traffic and places the traffic in the appropriate interface queue. Priority and nonpriority traffic are separated at the SIP to prevent the dropping of high-priority traffic in an oversubscription case.



### Note

Each SPA supports one priority queue.

The following classification types are available to prioritize ingress traffic on the Gigabit Ethernet SPAs:

- VLAN 802.1Q priority bits
- IP DSCP bits
- IP precedence bits
- IPv6 traffic-class bits
- MPLS EXP bits

### Classifying Ingress VLAN Traffic

To classify ingress VLAN traffic based on the 802.1Q priority bits, use the following commands in interface and subinterface configuration mode:

Command	Purpose
Router(config-if)# <b>plim qos input map cos enable</b>	<p>Enables classification of ingress VLAN traffic according to the 802.1Q priority bits.</p> <p><b>Note</b> This command can only be applied to VLAN interfaces.</p>
Router(config-subif)# <b>plim qos input map cos <i>cos-value</i> queue low-latency</b>	<p>(Optional) Classifies incoming VLAN traffic on a subinterface according to the 802.1Q priority bits and places the traffic into the appropriate queue.</p> <ul style="list-style-type: none"> <li>• <i>cos-value</i>—Specifies an IEEE 802.1Q/ISL CoS value from 0 to 7.</li> </ul> <p><b>Note</b> When you configure a class of service (CoS) value on a QinQ subinterface, the CoS value applies to all QinQ subinterfaces with the same outer VLAN ID.</p> <ul style="list-style-type: none"> <li>• <b>low-latency</b>—Specifies the high-priority queue.</li> </ul>

### Classifying Ingress IP Traffic According to DSCP Bits

To classify ingress IP traffic based on the value of the DSCP bits, use the following commands in interface configuration mode:

Command	Purpose
<pre>Router(config-if)# <b>plim qos input map</b> <b>ip dscp-based</b></pre>	<p>Enables the classification of incoming IP traffic according to the value of the DSCP bits.</p> <p><b>Note</b> This command only applies to physical interfaces.</p>
<pre>Router(config-if)# <b>plim qos input map</b> <b>ip dscp dscp-value queue low-latency</b></pre>	<p>Classifies incoming IP traffic according to the value of the DSCP bits and places the traffic into the appropriate queue. By default, IP traffic with the DSCP bits will use the low-latency queue, and traffic with any other DSCP value will use the low-priority queue.</p> <ul style="list-style-type: none"> <li> <b>dscp-value</b>—Value of the DSCP bits. Values can be one of the following: <ul style="list-style-type: none"> <li>0 to 63—Differentiated services code point value</li> <li>af11—001010</li> <li>af12—001100</li> <li>af13—001110</li> <li>af21—010010</li> <li>af22—010100</li> <li>af23—010110</li> <li>af31—011010</li> <li>af32—011100</li> <li>af33—011110</li> <li>af41—100010</li> <li>af42—100100</li> <li>af43—100110</li> <li>cs1—Precedence 1 (001000)</li> <li>cs2—Precedence 2 (010000)</li> <li>cs3—Precedence 3 (011000)</li> <li>cs4—Precedence 4 (100000)</li> <li>cs5—Precedence 5 (101000)</li> <li>cs6—Precedence 6 (110000)</li> <li>cs7—Precedence 7 (111000)</li> <li>default—000000</li> <li>ef—101110</li> </ul> <p>A range of values can be specified separated by a dash (-), or a list of values can be specified.</p> </li> <li> <b>low-latency</b>—Specifies the high-priority queue. </li> </ul>

### Classifying Ingress IP Traffic According to IP Precedence Bits

To classify ingress IP traffic based on the value of the IP precedence bits, use the following commands in interface configuration mode:

Command	Purpose
Router(config-if)# <b>plim qos input map ip precedence-based</b>	<p>Enables the classification of incoming IP traffic according to the IP precedence value.</p> <p><b>Note</b> This command only applies to physical interfaces.</p>
Router(config-if)# <b>plim qos input map ip precedence precedence-value queue low-latency</b>	<p>Classifies incoming IP traffic according to the value of the IP precedence bits and places the traffic into the appropriate queue.</p> <ul style="list-style-type: none"> <li><i>precedence-value</i>—Value of the IP precedence bits (0 to 7). A range of values can be specified separated by a dash (-), or a list of values can be specified.</li> <li><b>queue low-latency</b>—Specifies the high-priority queue.</li> </ul>

### Classifying Ingress IPv6 Traffic According to Traffic-Class Bits

To classify ingress IPv6 traffic based on the value of the traffic-class bits, use the following command in interface configuration mode:

Command	Purpose
<pre>Router(config-if)# <b>plim qos</b> <b>input map ipv6 tc</b> <i>tc-value</i> <b>queue low-latency</b></pre>	<p>Classifies ingress IPv6 traffic based on the value of the traffic-class bits and places the traffic into the appropriate queue. By default, IPv6 traffic with a traffic-class value uses the high-priority queue, and all other traffic will use the low-priority queue. Only the most significant six bits of the traffic-class octet is used for the classification.</p> <p><b>Note</b> This command only applies to physical interfaces.</p> <ul style="list-style-type: none"> <li> <b><i>tc-value</i></b>—Value of the traffic-class bits. Values can be one of the following: <ul style="list-style-type: none"> <li>0 to 63—Differentiated services code point value</li> <li>af11—001010</li> <li>af12—001100</li> <li>af13—001110</li> <li>af21—010010</li> <li>af22—010100</li> <li>af23—010110</li> <li>af31—011010</li> <li>af32—011100</li> <li>af33—011110</li> <li>af41—100010</li> <li>af42—100100</li> <li>af43—100110</li> <li>cs1—Precedence 1 (001000)</li> <li>cs2—Precedence 2 (010000)</li> <li>cs3—Precedence 3 (011000)</li> <li>cs4—Precedence 4 (100000)</li> <li>cs5—Precedence 5 (101000)</li> <li>cs6—Precedence 6 (110000)</li> <li>cs7—Precedence 7 (111000)</li> <li>default—000000</li> <li>ef—101110</li> </ul> <p>A range of values can be specified separated by a dash (-), or a list of values can be specified.</p> </li> <li> <b><i>queue low-latency</i></b>—Specifies the high-priority queue. </li> </ul>

### Classifying Ingress MPLS Traffic According to EXP Bits

To classify ingress MPLS traffic based on the value of the EXP bits, use the following commands in interface configuration mode:

Command	Purpose
<pre>Router(config-if)# <b>plm qos input map</b> <b>mpls exp</b> <i>exp-value</i> <b>queue low-latency</b></pre>	<p>Classifies incoming MPLS traffic according to the value of the EXP bits and places the traffic into the appropriate queue.</p> <p><b>Note</b> This command only applies to physical interfaces.</p> <ul style="list-style-type: none"> <li>• <i>exp-value</i>—Value of the EXP bits (0 to 7). A range of values can be specified separated by a dash (-), or a list of values can be specified.</li> <li>• <b>queue low-latency</b>—Specifies the high-priority queue.</li> </ul>

## Preprovisioning the SIPs and Gigabit Ethernet SPAs

Preprovisioning is an optional configuration task for the SIP-600 and the Gigabit Ethernet SPAs. It allows you to preprovision a line card slot in the Cisco uBR10012 router to accept a particular SIP, and to preconfigure the SPA interfaces without the SIP being physically present in the chassis. This feature allows planning for future configurations.

For preprovisioning a SPA, the subslot must be physically empty or gracefully deactivated. For information on gracefully deactivating a SPA, refer to the [“Preparing for Online Insertion and Removal of SIPs and SPAs” section on page 5-2](#).



#### Tip

To display the slots, if any, that are preprovisioned for a card type, use the **show running-config | include card** command.

To preprovision a SIP, use the following command in global configuration mode:

Command	Purpose
<pre>Router(config)# <b>card slot card type</b></pre> <p><b>Example:</b></p> <pre>Router(config)#<b>card 1 4jacket-1</b></pre>	<p>Specifies preprovisioning of a Cisco SIP-600 in a particular line card slot.</p> <ul style="list-style-type: none"> <li>• <i>slot</i>—Specifies the slot number for the SIP.</li> <li>• <b>card type</b>—Specifies the type of card for which to preprovision the slot. <b>4jacket-1</b> is the card type for the Cisco SIP-600.</li> </ul>

To preprovision a Gigabit Ethernet SPA, use the following command in global configuration mode:

Command	Purpose
Router(config)# <b>card slot/bay card type</b>	<ul style="list-style-type: none"> <li><i>slot</i>—Identifies the chassis slot for a SIP. Valid values are 1 to 3.</li> <li><i>bay</i>—Identifies the bay number in the SIP where a SPA is located. Valid values are 0 (upper bay) or 1 (lower bay).</li> <li><b>card type</b>—Specifies the type of card for which to preprovision the slot. Following are the card types for the Gigabit Ethernet SPAs: <ul style="list-style-type: none"> <li>SPA-1XTENGE-XFP-V2 for the 1-Port 10-Gigabit Ethernet SPA</li> <li>SPA-5X1GE-V2 for the 5-Port Gigabit Ethernet SPA</li> </ul> </li> </ul>
<b>Example:</b> Router(config)# <b>card 1/3 SPA-1XTENGE-XFP-V2</b>	

## Removing Preprovisioning on a SIP and SPA

To remove a preprovisioning configuration from a line card slot, use the **no card** command. This removes all configuration information for that subslot, as well as any information in the SNMP MIB database about the card and its card slot.

To remove preprovisioning configuration information, the SIP slot or SPA subslot must be physically empty or gracefully deactivated. For information on deactivating SIPs and SPAs, refer to the [“Preparing for Online Insertion and Removal of SIPs and SPAs”](#) section on page 5-2.

## Verifying the Configuration

Besides using the **show running-configuration** command to display your router configuration settings, you can use the **show interfaces gigabitethernet** command to get detailed information on a per-port basis for your Gigabit Ethernet SPAs.

## Verifying Per-Port Interface Status

To find detailed interface information on a per-port basis for the Gigabit Ethernet SPAs, use the **show interfaces gigabitethernet** command.

The following example provides sample output on a 1-Port 10-Gigabit Ethernet SPA in slot 1, subslot 3, port 0:

```
Router# show interfaces tenGigabitEthernet 1/3/0

GigabitEthernet1/3/0 is up, line protocol is up
  Hardware is GigEther SPA, address is 0005.00e7.2548 (bia 0005.00e7.2548)

  MTU 1500 bytes, BW 1000000 Kbit, DLY 10 usec,
    reliability 255/255, txload 1/255, rxload 1/255
  Encapsulation ARPA, loopback not set
  Keepalive not set
  Full Duplex, 1000Mbps, link type is auto, media type is SX
```

```

output flow-control is unsupported, input flow-control is XON
ARP type: ARPA, ARP Timeout 04:00:00
Last input 00:00:00, output 00:00:00, output hang never
Last clearing of "show interface" counters never
Input queue: 0/75/0/0 (size/max/drops/flushes); Total output drops: 0
Interface GigabitEthernet1/3/0 queueing strategy: PXF Class-based
5 minute input rate 19000 bits/sec, 23 packets/sec
5 minute output rate 17000 bits/sec, 23 packets/sec
  61860 packets input, 9470324 bytes, 0 no buffer
  Received 3151 broadcasts (0 IP multicasts)
  0 runts, 0 giants, 0 throttles
  0 input errors, 0 CRC, 0 frame, 0 overrun, 0 ignored
  0 watchdog, 3151 multicast, 0 pause input
  62413 packets output, 5726961 bytes, 0 underruns
  0 output errors, 0 collisions, 0 interface resets
  0 babbles, 0 late collision, 0 deferred
  0 lost carrier, 0 no carrier, 0 pause output
  0 output buffer failures, 0 output buffers swapped out

```

## Configuration Examples

This section includes the following configuration examples:

- [Basic Interface Configuration Example, page 12-16](#)
- [MAC Address Configuration Example, page 12-17](#)
- [MAC Address Accounting Configuration Example, page 12-18](#)
- [MTU Configuration Example, page 12-18](#)
- [VLAN Configuration Example, page 12-19](#)
- [Priority Queue Classification Configuration Example, page 12-19](#)
- [Configuring any Keyword on Subinterfaces for PPPoE–QinQ Support, page 12-19](#)

## Basic Interface Configuration Example

The following example shows how to specify the interface that you want to configure, configure an IP address for the interface, and save the configuration. This example configures interface port 0 on the SPA that is located in subslot 3 of the SIP, which is installed in slot 1 of the Cisco uBR10012 router.

```

! Enter global configuration mode.
!
Router# configure terminal

```

```
! Enter configuration commands, one per line. End with CNTL/Z.
!
! Specify the interface address.
!
Router(config)# interface gigabitethernet 1/3/0
!
! Configure an IP address.
!
Router(config-if)# ip address 192.168.50.1 255.255.255.0
!
! Start the interface.
!
Router(config-if)# no shut
!
! Save the configuration to NVRAM.
!
Router(config-if)# exit
Router# copy running-config startup-config
```

## MAC Address Configuration Example

The following example changes the default MAC address on the interface to 1111.2222.3333:

```
! Enter global configuration mode.
!
Router# configure terminal
! Enter configuration commands, one per line. End with CNTL/Z.
!
! Specify the interface address
!
Router(config)# interface gigabitethernet 1/3/0
!
! Modify the MAC address.
!
Router(config-if)# mac-address 1111.2222.3333
```

## MAC Address Accounting Configuration Example

The following example enables MAC Address Accounting:

```
! Enter global configuration mode.
!
Router# configure terminal
! Enter configuration commands, one per line. End with CNTL/Z.
!
! Enable MAC address accounting
Router(config)# ip accounting mac-address {input | output}
Router(config-if)# ip accounting ?
access-violations Account for IP packets violating access lists on this interface
mac-address Account for MAC addresses seen on this interface
output-packets Account for IP packets output on this interface
precedence Count packets by IP precedence on this interface
Router(config-if)# ip accounting mac
Router(config-if)# ip accounting mac-address ?
input Source MAC address on received packets
output Destination MAC address on transmitted packets
Router(config-if)# ip accounting mac-address ip
Router(config-if)# ip accounting mac-address input ?
! Specify MAC address accounting for traffic entering the interface.
!
Router(config-if)# ip accounting mac-address input
! Specify MAC address accounting for traffic leaving the interface.
!
Router(config-if)# ip accounting mac-address output
Router(config-if)# end
! Verify the MAC Address on the interface.
!
Router# show interfaces GigabitEthernet 1/3/0 mac-accounting
GigabitEthernet1/3/0
Input (511 free)
000f.f7b0.5200(26 ): 124174 packets, 7450440 bytes, last: 1884ms ago
Total: 124174 packets, 7450440 bytes
Output (511 free)
000f.f7b0.5200(26 ): 135157 packets, 8109420 bytes, last: 1884ms ago
Total: 135157 packets, 8109420 bytes
```

## MTU Configuration Example

The following example sets the interface MTU to 9180 bytes:

```
! Enter global configuration mode.
!
Router# configure terminal
! Enter configuration commands, one per line. End with CNTL/Z.
!
! Specify the interface address
!
Router(config)# interface gigabitethernet 1/3/0
!
! Configure the interface MTU.
!
Router(config-if)# mtu 9180
```

## VLAN Configuration Example

The following example creates subinterface number 268 on the SPA interface port, and configures the subinterface on the VLAN with ID number 268 using IEEE 802.1Q encapsulation:

```
! Enter global configuration mode.
!
Router# configure terminal
! Enter configuration commands, one per line. End with CNTL/Z.
!
! Specify the interface address
!
Router(config)# interface gigabitethernet 1/3/0.268
!
! Configure dot1q encapsulation and specify the VLAN ID.
!
Router(config-subif)# encapsulation dot1q 268
```

## Priority Queue Classification Configuration Example

The following example enables DSCP-based classification on the SPA that is located in subslot 3 of the SIP in slot 1 of the Cisco uBR10012 router:

```
! Enter global configuration mode.
!
Router# configure terminal
! Enter configuration commands, one per line. End with CNTL/Z.
!
! Specify the interface address
!
Router(config)# interface gigabitethernet 1/3/0
!
! Configure the priority queue classification type.
Router(config-if)# plim qos input map ip dscp-based
```

## Configuring any Keyword on Subinterfaces for PPPoE–QinQ Support

The following example configures seven subinterfaces with various outer and inner VLAN IDs:

```
! Enter global configuration mode.
!
Router# configure terminal
! Enter configuration commands, one per line. End with CNTL/Z.
Router# interface GigabitEthernet3/0/0.1
Router(config-if)# encapsulation dot1q 100 second-dot1q 100
Router(config-if)# exit
Router# interface GigabitEthernet3/0/0.2
Router(config-if)# encapsulation dot1q 100 second-dot1q 200
Router(config-if)# exit
Router# interface GigabitEthernet3/0/0.3
Router(config-if)# encapsulation dot1q 100 second-dot1q 300-400,500-600
Router(config-if)# exit
Router# interface GigabitEthernet3/0/0.4
Router(config-if)# encapsulation dot1q 100 second-dot1q any
Router(config-if)# exit
Router# interface GigabitEthernet3/0/0.5
Router(config-if)# encapsulation dot1q 200 second-dot1q 50
Router(config-if)# exit
Router# interface GigabitEthernet3/0/0.6
```

```
Router(config-if)# encapsulation dot1q 200 second-dot1q 1000-2000,3000-4000
Router(config-if)# exit
Router# interface GigabitEthernet3/0/0.7
Router(config-if)# encapsulation dot1q 200 second-dot1q any
```