



Support for Software Media Termination Point

Last Updated: December 20, 2011

The Support for Software Media Termination Point (MTP) feature bridges the media streams between two connections allowing Cisco Unified Communications Manager (Cisco UCM) to relay calls that are routed through SIP or H.323 endpoints via Skinny Call Control Protocol (SCCP) commands. These commands allow Cisco UCM to establish an MTP for call signaling.

- [Finding Feature Information, page 1](#)
- [Information About Support for Software Media Termination Point, page 1](#)
- [How to Configure Support for Software Media Termination Point, page 2](#)
- [Prerequisites, page 2](#)
- [Restrictions, page 2](#)
- [Configuring Support for Software Media Termination Point, page 2](#)
- [Feature Information for Support for Software Media Termination Point, page 7](#)

Finding Feature Information

Your software release may not support all the features documented in this module. For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the Feature Information Table at the end of this document.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Information About Support for Software Media Termination Point

This feature extends the software MTP support to the Cisco Unified Border Element (Enterprise). Software MTP is an essential component of large-scale deployments of Cisco UCM. This feature enables new capabilities so that the Cisco UBE can function as an Enterprise Edge Cisco Session Border Controller for large-scale deployments that are moving to SIP trunking.



Americas Headquarters:
Cisco Systems, Inc., 170 West Tasman Drive, San Jose, CA 95134-1706 USA

How to Configure Support for Software Media Termination Point

Prerequisites

- For the software MTP to function properly, codec and packetization must be configured the same way on both in call legs and out call legs.

Cisco Unified Border Element (Enterprise)

- Cisco IOS XE Release 2.6 or a later release must be installed and running on your Cisco ASR 1000 Series Router.

Restrictions

- RSVP Agent is not supported in software MTP.
- Hardware MTP for repacketization is not supported.
- Call Threshold is not supported for standalone software MTP.
- Per-call debugging is not supported.

Configuring Support for Software Media Termination Point

To enable and configure the Support for Software Media Termination Point feature, perform the following task.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **sccp local** *interface-type interface-number* [**port** *port-number*]
4. **sccp ccm** {*ipv4-address* | *ipv6-address* | *dns*} **identifier** *identifier-number* [**port** *port-number*] **version** *version-number*
5. **sccp**
6. **sccp ccm group** *group-number*
7. **associate ccm** *identifier-number* **priority** *number*
8. **associate profile** *profile-identifier* **register** *device-name*
9. **dspfarm profile** *profile-identifier* {**conference** | **mtp** | **transcode**} [**security**]
10. **maximum sessions** {**hardware** | **software**} *number*
11. **associate application** **sccp**
12. **no shutdown**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Router> enable	Enables privileged EXEC mode. Enter your password if prompted.
Step 2	configure terminal Example: Router# configure terminal	Enters global configuration mode.
Step 3	sccp local <i>interface-type interface-number</i> [port <i>port-number</i>] Example: Router(config)# sccp local gigabitethernet0/0/0	Selects the local interface that SCCP applications (transcoding and conferencing) use to register with Cisco UCM. <i>interface type</i> --Can be an interface address or a virtual-interface address such as Ethernet. <i>interface number</i> --Interface number that the SCCP application uses to register with Cisco UCM. (Optional) port <i>port-number</i>--Port number used by the selected interface. Range is 1025 to 65535. Default is 2000.
Step 4	sccp ccm { <i>ipv4-address</i> <i>ipv6-address</i> <i>dns</i> } identifier <i>identifier-number</i> [port <i>port-number</i>] version <i>version-number</i> Example: Router(config)# sccp ccm 10.1.1.1 identifier 1 version 7.0+	Adds a Cisco UCM server to the list of available servers and sets the following parameters: <i>ipv4-address</i> --IP version 4 address of the Cisco UCM server. <i>ipv6-address</i> --IP version 6 address of the Cisco UCM server. <i>dns</i> --DNS name. identifier --Specifies the number that identifies the Cisco UCM server. Range is 1 to 65535. port <i>port-number</i> (Optional)--Specifies the TCP port number. Range is 1025 to 65535. Default is 2000. version <i>version-number</i> --Cisco UCM version. Valid versions are 3.0, 3.1, 3.2, 3.3, 4.0, 4.1, 5.0.1, 6.0, and 7.0+. There is no default value.
Step 5	sccp Example: Router(config)# sccp	Enables the Skinny Client Control Protocol (SCCP) and its related applications (transcoding and conferencing).

	Command or Action	Purpose
Step 6	sccp ccm group <i>group-number</i> Example: Router(config)# sccp ccm group 10	Creates a Cisco UCM group and enters SCCP Cisco UCM configuration mode. <i>group-number</i> --Identifies the Cisco UCM group. Range is 1 to 50.
Step 7	associate ccm <i>identifier-number</i> priority <i>number</i> Example: Router(config-sccp-ccm)# associate ccm 10 priority 3	Associates a Cisco UCM with a Cisco UCM group and establishes its priority within the group: <i>identifier-number</i> --Identifies the Cisco UCM. Range is 1 to 65535. There is no default value. priority <i>number</i> --Priority of the Cisco UCM within the Cisco UCM group. Range is 1 to 4. There is no default value. The highest priority is 1.
Step 8	associate profile <i>profile-identifier</i> register <i>device-name</i> Example: Router(config-sccp-ccm)# associate profile 1 register MTP0011	Associates a DSP farm profile with a Cisco UCM group: <i>profile-identifier</i> --Identifies the DSP farm profile. Range is 1 to 65535. There is no default value. register <i>device-name</i> --Device name in Cisco UCM. A maximum of 15 characters can be entered for the device name.
Step 9	dspfarm profile <i>profile-identifier</i> {conference mtp transcode} [security] Example: Router(config-sccp-ccm)# dspfarm profile 1 mtp	Enters DSP farm profile configuration mode and defines a profile for DSP farm services: <i>profile-identifier</i> --Number that uniquely identifies a profile. Range is 1 to 65535. There is no default. conference --Enables a profile for conferencing. mtp --Enables a profile for MTP. transcode --Enables a profile for transcoding. security (Optional)-- Enables a profile for secure DSP farm services.
Step 10	maximum sessions {hardware software} <i>number</i> Example: Router(config-dspfarm-profile)# maximum sessions software 10	Specifies the maximum number of sessions that are supported by the profile. hardware --Number of sessions that MTP hardware resources can support. software --Number of sessions that MTP software resources can support. <i>number</i> --Number of sessions that are supported by the profile. Range is 0 to x. Default is 0. The x value is determined at run time depending on the number of resources available with the resource provider.

	Command or Action	Purpose
Step 11	associate application sccp Example: Router(config-dspfarm-profile)# associate application sccp	Associates SCCP to the DSP farm profile.
Step 12	no shutdown Example: Router(config-dspfarm-profile)# no shutdown	Changes the status of the interface to the UP state.

- [Examples, page 5](#)
- [Troubleshooting Tips, page 5](#)

Examples

The following example shows a sample configuration for the Support for Software Media Termination Point feature:

```
sccp local GigabitEthernet0/0/1
sccp ccm 10.13.40.148 identifier 1 version 6.0
sccp
!
sccp ccm group 1
  bind interface GigabitEthernet0/0/1
  associate ccm 1 priority 1
  associate profile 6 register RR_RLS6
!
dspfarm profile 6 mtp
  codec g711ulaw
  maximum sessions software 100
  associate application SCCP
!
!
gateway
media-inactivity-criteria all
timer receive-rtp 400
```

Troubleshooting Tips

To verify and troubleshoot this feature, use the following **show** commands:

- To verify information about SCCP, use the **show sccp** command:

```
Router# show sccp

SCCP Admin State: UP
Gateway IP Address: 10.13.40.157, Port Number: 2000
IP Precedence: 5
User Masked Codec list: None
Call Manager: 10.13.40.148, Port Number: 2000
```

Priority: N/A, Version: 6.0, Identifier: 1
Trustpoint: N/A

- To verify information about the DSPfarm profile, use the **show dspfarm profile** command:

Router# **show dspfarm profile 6**

```
Dspfarm Profile Configuration
Profile ID = 6, Service = MTP, Resource ID = 1
Profile Description :
Profile Service Mode : Non Secure
Profile Admin State : UP
Profile Operation State : ACTIVE
Application : SCCP Status : ASSOCIATED
Resource Provider : NONE Status : NONE
Number of Resource Configured : 100
Number of Resource Available : 100
Hardware Configured Resources : 0
Hardware Available Resources : 0
Software Resources : 100
Codec Configuration
Codec : g711ulaw, Maximum Packetization Period : 30
```

- To display statistics for the SCCP connections, use the **show sccp connections** command:

Router# **show sccp connections**

sess_id	conn_id	stype	mode	codec	ripaddr	rport	sport
16808048	16789079	mtp	sendrecv	g711u	10.13.40.20	17510	7242
16808048	16789078	mtp	sendrecv	g711u	10.13.40.157	6900	18050

- To display information about RTP connections, use the **show rtspci call** command:

Router# **show rtspci call**

RTP Service Provider info:

No.	CallId	dstCallId	Mode	LocalRTP	RmtRTP	LocalIP	RemoteIP	SRTP
22	19		Snd-Rcv	7242	17510	0x90D080F	0x90D0814	0
19	22		Snd-Rcv	18050	6900	0x90D080F	0x90D080F	0

- To display information about VoIP RTP connections, use the **show voip rtp connections** command:

Router# **show voip rtp connections**

VoIP RTP Port Usage Information

Max Ports Available: 30000, Ports Reserved: 100, Ports in Use: 102

Port range not configured, Min: 5500, Max: 65499

VoIP RTP active connections :

No.	CallId	dstCallId	LocalRTP	RmtRTP	LocalIP	RemoteIP
1	114	117	19822	24556	10.13.40.157	10.13.40.157
2	115	116	24556	19822	10.13.40.157	10.13.40.157
3	116	115	19176	52625	10.13.40.157	10.13.40.20
4	117	114	16526	52624	10.13.40.157	10.13.40.20

- Additional, more specific, **show** commands that can be used include the following:
 - show sccp connection callid**
 - show sccp connection connid**
 - show sccp connection sessionid**
 - show rtspci call callid**
 - show rtspci stat callid**
 - show voip rtp connection callid**
 - show voip rtp connection type**
- To isolate specific problems, use the **debug sccp** command:
 - debug sccp [all | config | errors | events | keepalive | messages | packets | parser | tls]**

Feature Information for Support for Software Media Termination Point

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Feature History Table for the ASR

Table 1 Feature Information for Support for Software Media Termination Point

Feature Name	Releases	Feature Information
Support for Software Media Termination Point	Cisco IOS XE Release 2.6 S	Software Media Termination Point (MTP) provides the capability for Cisco Unified Communications Manager (Cisco UCM) to interact with a voice gateway via Skinny Client Control Protocol (SCCP) commands. These commands allow the Cisco UCM to establish an MTP for call signaling.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: www.cisco.com/go/trademarks. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

© 2011 Cisco Systems, Inc. All rights reserved.