



Modem Support and Asynchronous Device Commands

The configuration commands described in this chapter are used to configure modems and modem lines on access servers and routers.

Note Some commands previously documented in this chapter have been replaced by new commands. Although these commands continue to perform their normal functions in the current release, support for these commands will cease in future releases.

For line configuration information and examples, refer to the “Configuring Modem Support and Asynchronous Devices” chapter in the *Dial Solutions Configuration Guide*.

async-bootp

To support the extended BOOTP request specified in RFC 1084, and to specify information that will be sent in response to BOOTP requests, use the **async-bootp** global configuration command. To clear the list, use the **no** form of this command.

```

async-bootp tag [:hostname] data
no async-bootp tag [:hostname] data
    
```

Syntax Description

<i>tag</i>	Item being requested; expressed as filename, integer, or IP dotted decimal address. See Table 1 for possible values.
<i>:hostname</i>	(Optional) This entry applies only to the specified host. The argument can be either an IP address or a logical host name.
<i>data</i>	List of IP addresses entered in dotted decimal notation or as logical host names, a number, or a quoted string.

Table 1 Supported Extended BOOTP Requests

Keyword and Argument Pair	Use
<i>bootfile</i>	Server boot file from which to download the boot program. Use the optional <i>:hostname</i> and <i>data</i> arguments to specify the host or hosts.
subnet-mask <i>mask</i>	Dotted decimal address specifying the network and local subnetwork mask (as defined by RFC 950).
time-offset <i>offset</i>	A signed 32-bit integer specifying the time offset of the local subnetwork in seconds from Coordinated Universal Time.
gateway <i>address</i>	Dotted decimal address specifying the IP addresses of gateways for this subnetwork. A preferred gateway should be listed first.
time-server <i>address</i>	Dotted decimal address specifying the IP address of time servers (as defined by RFC 868).
ien116-server <i>address</i>	Dotted decimal address specifying the IP address of name servers (as defined by IEN 116).
nbns-server <i>address</i>	Dotted decimal address specifying the IP address of Windows NT servers.
dns-server <i>address</i>	Dotted decimal address specifying the IP address of Domain Name Servers (as defined by RFC 1034).
log-server <i>address</i>	Dotted decimal address specifying the IP address of an MIT-LCS UDP log server.
quote-server <i>address</i>	Dotted decimal address specifying the IP address of Quote of the Day servers (as defined in RFC 865).
lpr-server <i>address</i>	Dotted decimal address specifying the IP address of Berkeley UNIX Version 4 BSD servers.
impress-server <i>address</i>	Dotted decimal address specifying the IP address of Impress network image servers.
rlp-server <i>address</i>	Dotted decimal address specifying the IP address of Resource Location Protocol (RLP) servers (as defined in RFC 887).

Table 1 Supported Extended BOOTP Requests (Continued)

Keyword and Argument Pair	Use
hostname <i>name</i>	Name of the client (which might or might not be domain qualified, depending upon the site).
bootfile-size <i>value</i>	Two-octet value specifying the number of 512 octet (byte) blocks in the default boot file.

Default

If no extended BOOTP commands are entered, the software generates a gateway and subnet mask appropriate for the local network.

Command Mode

Global configuration

Usage Guidelines

This command first appeared in Cisco IOS Release 10.3.

Each of the *tag* keyword-argument pairs is a field that can be filled in and sent in response to BOOTP requests from clients.

BOOTP supports the extended BOOTP requests specified in RFC 1084 and works for both SLIP and PPP encapsulation.

Use the **show async bootp EXEC** command to list the configured parameters. BOOTP works for both SLIP and PPP.

Examples

The following example specifies different boot files: one for a PC and one for a Macintosh. With this configuration, a BOOTP request from the host on 192.168.31.1 results in a reply listing the boot filename as pcboot. A BOOTP request from the host named mac results in a reply listing the boot filename as macboot.

```
async-bootp bootfile :192.168.31.1 "pcboot"
async-bootp bootfile :mac "macboot"
```

The following example specifies a subnet mask of 255.255.0.0:

```
async-bootp subnet-mask 255.255.0.0
```

The following example specifies a negative time offset of the local subnetwork of -3600 seconds:

```
async-bootp time-offset -3600
```

The following example specifies the IP address of a time server:

```
async-bootp time-server 192.168.31.1
```

Related Commands

You can use the master indexes or search online to find documentation of related commands.

service old-slip-prompts

async default ip address

The **peer default ip address** command replaces the **async default ip address** command.

Refer to the description of the **peer default ip address** command for more information.

async default routing

To enable RIP, OSPF, and IGRP routing protocols on an asynchronous interfaces when using the **/routing** keyword with the **ppp** and **slip** EXEC commands, use the **async default routing** interface command. To disable this function, use the **no** form of this command.

async default routing
no async default routing

Syntax Description

This command has no arguments or keywords.

Default

Disabled

Command Mode

Interface configuration

Usage Guidelines

This command first appeared in Cisco IOS Release 11.1.

For asynchronous interfaces in interactive mode, the **async default routing** command causes the **ppp** and **slip** EXEC commands to be interpreted as though the **/route** keyword had been included in the command. For asynchronous interfaces in dedicated mode, the **async default routing** command turns on the use of routing protocols on the line. Without the **async default routing** command, there is no way to enable the use of routing protocols automatically on a dedicated asynchronous interface.

Example

The following example enables the use of routing protocols on asynchronous interface 4. In this example, asynchronous interface 4 is dedicated for asynchronous use.

```
interface async 4
 ip address 191.191.191.191 255.255.255.0
 async default routing
 async mode dedicated
```

Related Commands

You can use the master indexes or search online to find documentation of related commands.

async dynamic routing
async mode dedicated
async mode interactive
ppp
slip

async dynamic address

To specify dynamic asynchronous addressing, use the **async dynamic address** interface configuration command. To disable dynamic addressing, use the **no** form of this command.

async dynamic address
no async dynamic address

Syntax Description

This command has no arguments or keywords.

Default

Dynamic addressing is disabled.

Command Mode

Interface configuration

Usage Guidelines

This command first appeared in Cisco IOS Release 10.0.

You can control whether addressing is dynamic (the user specifies the address at the EXEC level when making the connection), or whether default addressing is used (the address is forced by the system). If you specify dynamic addressing, the router must be in interactive mode and the user will enter the address at the EXEC level.

It is common to configure an asynchronous interface to have a default address and to allow dynamic addressing. With this configuration, the choice between the default address or a dynamic addressing is made by the user when they enter the **slip** or **ppp** EXEC command. If the user enters an address, it is used, and if the user enters the **default** keyword, the default address is used.

Example

The following example shows dynamic addressing assigned to async interface 6.

```
interface ethernet 0
 ip address 10.0.0.1 255.0.0.0
interface async 6
 async dynamic address
```

Related Commands

You can use the master indexes or search online to find documentation of related commands.

peer default ip address

async dynamic routing

To allow the use of routing protocols on an interface, use the **async dynamic routing** interface configuration command. To disable the use of routing protocols, use the **no** form of this command.

async dynamic routing
no async dynamic routing

Syntax Description

This command has no arguments or keywords.

Default

Dynamic routing is disabled.

Command Mode

Interface configuration

Usage Guidelines

This command first appeared in Cisco IOS Release 10.0.

The use of routing protocols is further controlled by the use of the **/routing** keyword in the **slip** and **ppp EXEC** command.

Example

The following example shows how to enable asynchronous routing on async interface 6. The **ip tcp header-compression passive** command enables Van Jacobson TCP header compression and prevents transmission of compressed packets until a compressed packet arrives from the asynchronous link.

```
interface async 6
  async dynamic routing
  async dynamic address
  async default ip address 10.11.14.2
  ip tcp header-compression passive
  ip unnumbered ethernet 0
```

Related Commands

You can use the master indexes or search online to find documentation of related commands.

async dynamic address
ip tcp header-compression

autocommand

To configure the Cisco IOS software to automatically execute a command when a user connects to a particular line, use the **autocommand** line configuration command.

autocommand *command*

Syntax Description

<i>command</i>	Any appropriate EXEC command, including the host name and any switches that occur with the EXEC command.
----------------	--

Default

No commands are configured to automatically execute.

Command Mode

Line configuration

Usage Guidelines

This command first appeared in Cisco IOS Release 10.0.

This command enables you to automatically execute an EXEC command when a user connects to a line.

Example

The following example forces an automatic connection to a host named *host21* (which could be an IP address):

```
line vty 4
  autocommand connect host21
```

autohangup

To configure automatic line disconnect, use the **autohangup** line configuration command. This command causes the EXEC to issue the **exit** command when the last connection closes.

autohangup

Syntax Description

This command has no arguments or keywords.

Default

Disabled

Command Mode

Line configuration

Usage Guidelines

This command first appeared in Cisco IOS Release 10.0.

This command is useful for UNIX UUCP applications that automatically disconnect lines because UUCP scripts cannot issue the **exit** command to hang up the telephone.

Example

The following example enables automatic line disconnect on lines 5 through 10:

```
line 5 10
 autohangup
```

clear line

To return a terminal line to idle state, use the **clear line** EXEC command.

clear line *line-number*

Syntax Description

line-number Absolute line number.

Command Mode

EXEC

Usage Guidelines

This command first appeared in Cisco IOS Release 10.0.

Use this command to log out of a specific session running on another line. If the line uses a modem, the modem will be disconnected.

Example

In the following example, line 3 is reset to idle state:

```
clear line 3
```

exec

To allow an EXEC process on a line, use the **exec** line configuration command. Use the **no** form of this command to turn off the EXEC process for the specified line.

```
exec  
no exec
```

Syntax Description

This command has no arguments or keywords.

Default

The EXEC processes start is activated automatically on all lines.

Command Mode

Line configuration

Usage Guidelines

This command first appeared in Cisco IOS Release 10.0.

When you want to allow an outgoing connection *only* for a line, use the **no exec** command. When a user tries to Telnet to a line with the **no exec** command configured, the user will get no response when pressing the Return key at the login screen.

Example

The following example turns off the EXEC on line 7. You might want to do this on the auxiliary port if the attached device (for example, the control port of a rack of modems) sends unsolicited data. If this happens, an EXEC process starts, which makes the line unavailable.

```
line 7  
no exec
```

exec-timeout

To set the interval that the EXEC command interpreter waits until user input is detected, use the **exec-timeout** line configuration command. Use the **no** form of this command to remove the timeout definition.

exec-timeout *minutes* [*seconds*]
no exec-timeout

Syntax Description

<i>minutes</i>	Integer that specifies the number of minutes.
<i>seconds</i>	(Optional) Additional time intervals in seconds. An interval of zero specifies no timeouts.

Default

10 minutes

Command Mode

Line configuration

Usage Guidelines

This command first appeared in Cisco IOS Release 10.0.

If no input is detected, the EXEC facility resumes the current connection, or if no connections exist, it returns the terminal to the idle state and disconnects the incoming session. It is the same as entering **exec-timeout 0**.

Examples

The following example sets a time interval of 2 minutes, 30 seconds:

```
line console
exec-timeout 2 30
```

The following example sets a time interval of 10 seconds:

```
line console
exec-timeout 0 10
```

flowcontrol

To set the method of data flow control between the terminal or other serial device and the router, use the **flowcontrol** line configuration command. Use the **no** form of this command to disable flow control.

```
flowcontrol { none | software [lock] [in | out] | hardware [in | out]}
no flowcontrol { none | software [in | out] | hardware [in | out]}
```

Syntax Description

none	Turns off flow control.
software	Sets software flow control. An optional keyword specifies the direction: in causes the Cisco IOS software to listen to flow control from the attached device, and out causes the software to send flow control information to the attached device. If you do not specify a direction, both are assumed.
lock	Used to make it impossible to turn off flow control from the remote host when the connected device <i>needs</i> software flow control. This option applies to connections using the Telnet or rlogin protocols.
hardware	Sets hardware flow control. An optional keyword specifies the direction: in causes the software to listen to flow control from the attached device, and out causes the software to send flow control information to the attached device. If you do not specify a direction, both are assumed. For more information about hardware flow control, see the hardware manual that was shipped with your router.

Default

No flow control

Command Mode

Line configuration

Usage Guidelines

This command first appeared in Cisco IOS Release 10.0.

When software flow control is set, the default stop and start characters are Ctrl-S and Ctrl-Q (XOFF and XON). You can change them with the **stop-character** and **start-character** commands.

If a remote Telnet device requires software flow control, the remote system should not be able to turn it off. Using the **lock** option makes it possible to refuse “dangerous” Telnet negotiations if they are inappropriate.

Example

The following example sets hardware flow control on line 7:

```
line 7
  flowcontrol hardware
```

Related Commands

You can use the master indexes or search online to find documentation of related commands.

start-character

stop-character

terminal flowcontrol

group-range

To create a list of member asynchronous interfaces (associated with a group interface), use the **group-range** interface configuration command. Use the **no** form of the command to remove an interface from the member list.

```
group-range low-end-of-range high-end-of-range  
no group-range interface
```

Syntax Description

<i>low-end-of-range</i>	Beginning interface number to be made a member of the group interface.
<i>high-end-of-range</i>	Ending interface number to be made a member of the group interface.

Default

No interfaces are designated as members of a group.

Command Mode

Interface configuration

Usage Guidelines

Using the **group-range** command, you create a group of asynchronous interfaces that are associated with a group asynchronous interface on the same device. This group interface is configured by using the **interface group-async** command. This one-to-many structure allows you to configure all associated member interfaces by entering one command on the group interface, rather than entering this command on each interface. You can customize the configuration on a specific interface by using the **member** command.

Examples

The following example defines interfaces 2, 3, 4, 5, 6, and 7 as members of asynchronous group interface 0:

```
interface group-async 0  
  group range 2 7
```

Related Commands

You can use the master indexes or search online to find documentation of related commands.

interface group-async
member

hold-queue

To limit the size of the IP output queue, use the **hold-queue** interface configuration command. To return the output queue to the default size, use the **no** form of this command.

hold-queue *packets*
no hold-queue

Syntax Description

packets Maximum number of packets. The range of values is 0 to 65535.

Default

10 packets (default for asynchronous interfaces only)

Command Mode

Interface configuration

Usage Guidelines

This command first appeared in Cisco IOS Release 10.0. The **no hold-queue** command first appeared in Cisco IOS Release 11.1.

The default of 10 packets allows the Cisco IOS software to queue a number of back-to-back routing updates. This is the default for asynchronous interfaces only; other media types have different defaults.

The hold queue stores packets received from the network that are waiting to be sent to the client. It is recommended that the queue size not exceed ten packets on asynchronous interfaces. For most other interfaces, queue length should not exceed 100.

Example

The following example changes the packet queue length of a line to five packets:

```
interface async 2
  async default ip address 172.31.7.5
  hold-queue 5
```

ip access-group

To configure an access list to be used for packets transmitted to and from the asynchronous host, use the **ip access-group** interface configuration command. To disable control over packets transmitted to or from an asynchronous host, use the **no** form of this command.

```
ip access-group access-list-number { in | out }
no ip access-group access-list-number
```

Syntax Description

<i>access-list-number</i>	Assigned IP access list number.
in	Defines access control on packets transmitted <i>from</i> the asynchronous host.
out	Defines access control on packets being sent <i>to</i> the asynchronous host.

Default

Disabled

Command Mode

Interface configuration

Usage Guidelines

This command first appeared in Cisco IOS Release 10.0.

With this command in effect, the IP destination address of each packet is run through the access list for acceptability and dropped or passed.

Example

The following example assumes that users are restricted to certain servers designated as SLIP or PPP servers, but that normal terminal users can access anything on the local network:

```
! access list for normal connections
access-list 1 permit 172.16.0.0 0.0.255.255
!
! access list for SLIP packets.
access-list 2 permit 172.16.42.55
access-list 2 permit 172.16.111.1
access-list 2 permit 172.16.55.99
!
! Specify the access list
interface async 6
 async dynamic address
 ip access-group 1 out
 ip access-group 2 in
```

ip mtu

To specify the size of the largest Internet packet, use the **ip mtu** interface configuration command. To return to the default MTU size of 1500 bytes, use the **no** form of this command.

ip mtu *bytes*
no ip mtu

Syntax Description

bytes Maximum number of bytes. The range of values is 64 to 1000000.

Default

1500 bytes

Command Mode

Interface configuration

Usage Guidelines

This command first appeared in Cisco IOS Release 10.0.

Example

The following example sets the packet MTU size to 200 bytes:

```
interface async 5
  async default ip address 172.31.7.5
  ip mtu 200
```

line

To identify a specific line for configuration and start the line configuration command collection mode, use the **line** global configuration command.

```
line [aux | console | tty | vty] line-number [ending-line-number]
```

Syntax Description

aux	(Optional) Auxiliary EIA/TIA-232 DTE port. Must be addressed as relative line 0. The auxiliary port can be used for modem support and asynchronous connections.
console	(Optional) Console terminal line. The console port is DCE.
tty	(Optional) Standard asynchronous line.
vty	(Optional) Virtual terminal for remote console access.
<i>line-number</i>	The relative number of the terminal line (or the first line in a contiguous group) that you want to configure when the line type is specified. Numbering begins with zero.
<i>ending-line-number</i>	(Optional) The relative number of the last line in a contiguous group that you want to configure. If you omit the keyword, then <i>line-number</i> and <i>ending-line-number</i> are absolute rather than relative line numbers.

Default

There is no default line.

Command Mode

Global configuration

Usage Guidelines

This command first appeared in Cisco IOS Release 10.0.

You can address a single line or a consecutive range of lines with the **line** command. A line number is necessary, though, and you will receive an error message if you forget to include it.

Entering the **line** command with the optional line type (**AUX**, **CON**, **TTY**, or **VTY**) designates the line number as a relative line number. For example, to configure line parameters for line 7 (a TTY line), you could enter the following:

```
Router(config)# line tty 7
```

You also can enter the **line** command without specifying a line type. In this case, the line number is treated as an absolute line number. For example, to configure line parameters for line 5, which can be of any type, you could enter the following:

```
Router(config)# line 5
```

Absolute line numbers increment consecutively and can be difficult to manage on large systems. Relative line numbers are a shorthand notation used in configuration. Internally, the Cisco IOS software uses absolute line numbers. You cannot use relative line numbers everywhere, but you can use absolute line numbers everywhere.

The absolute line number of the auxiliary port is 1. The relative line number of the auxiliary port is 0. See the **modem** line configuration command to set up modem support on the auxiliary port.

The software keeps a table of absolute and relative line numbers that you can display with the EXEC command **show users all**. A sample display follows:

```
Router> show users all
  Line      User      Host(s)                Idle   Location
  0 con 0
  1 tty 1
  2 tty 2
  3 tty 3          DREGGS                1:07   Katy x1111
  4 tty 4
  5 tty 5
  6 tty 6
  7 tty 7          DREGGS                14    Marie x1112
 10 tty 10
  . . .
 135 tty 135
 136 tty 136
 137 tty 137
 140 tty 140
 141 aux 0
 142 vty 0   Denise   idle                  DENISE-MAC.CISCO.COM
 143 vty 1   Michael idle                  0 DREGGS.CISCO.COM
 144 vty 2
 145 vty 3
 146 vty 4
 147 vty 5
 148 vty 6
 149 vty 7
 150 vty 8
 151 vty 9
 152 vty 10
 153 vty 11
 154 vty 12
 155 vty 13
 156 vty 14
 157 vty 15
 158 vty 16
 159 vty 17
 160 vty 18
 161 vty 19
 162 vty 20
 163 vty 21
 164 vty 22
 165 vty 23
 166 vty 24
 167 vty 25
 168 vty 26
 169 vty 27
 170 vty 28
 171 vty 29
 172 vty 30
 173 vty 31
 174 vty 32
 175 vty 33
 176 vty 34
 177 vty 35
 178 vty 36
 179 vty 37
 180 vty 38
 181 vty 39
 182 vty 40
 183 vty 41
 184 vty 42
 185 vty 43
 186 vty 44
 187 vty 45
 188 vty 46
 189 vty 47
 190 vty 48
 191 vty 49
 192 vty 50
 193 vty 51
 194 vty 52
 195 vty 53
 196 vty 54
 197 vty 55
 198 vty 56
 199 vty 57
 200 vty 58
 201 vty 59
 202 vty 60
 203 vty 61
 204 vty 62
 205 vty 63
 206 vty 64
 207 vty 65
 208 vty 66
 209 vty 67
 210 vty 68
 211 vty 69
 212 vty 70
 213 vty 71
 214 vty 72
 215 vty 73
 216 vty 74
 217 vty 75
 218 vty 76
 219 vty 77
 220 vty 78
 221 vty 79
 222 vty 80
 223 vty 81
 224 vty 82
 225 vty 83
 226 vty 84
 227 vty 85
 228 vty 86
 229 vty 87
 230 vty 88
 231 vty 89
 232 vty 90
 233 vty 91
 234 vty 92
 235 vty 93
 236 vty 94
 237 vty 95
 238 vty 96
 239 vty 97
 240 vty 98
 241 vty 99
 242 vty 100
 243 vty 101
 244 vty 102
 245 vty 103
 246 vty 104
 247 vty 105
 248 vty 106
 249 vty 107
 250 vty 108
 251 vty 109
 252 vty 110
 253 vty 111
 254 vty 112
 255 vty 113
 256 vty 114
 257 vty 115
 258 vty 116
 259 vty 117
 260 vty 118
 261 vty 119
 262 vty 120
 263 vty 121
 264 vty 122
 265 vty 123
 266 vty 124
 267 vty 125
 268 vty 126
 269 vty 127
 270 vty 128
 271 vty 129
 272 vty 130
 273 vty 131
 274 vty 132
 275 vty 133
 276 vty 134
 277 vty 135
 278 vty 136
 279 vty 137
 280 vty 138
 281 vty 139
 282 vty 140
 283 vty 141
 284 vty 142
 285 vty 143
 286 vty 144
 287 vty 145
 288 vty 146
 289 vty 147
 290 vty 148
 291 vty 149
 292 vty 150
 293 vty 151
 294 vty 152
 295 vty 153
 296 vty 154
 297 vty 155
 298 vty 156
 299 vty 157
 300 vty 158
 301 vty 159
 302 vty 160
 303 vty 161
 304 vty 162
 305 vty 163
 306 vty 164
 307 vty 165
 308 vty 166
 309 vty 167
 310 vty 168
 311 vty 169
 312 vty 170
 313 vty 171
 314 vty 172
 315 vty 173
 316 vty 174
 317 vty 175
 318 vty 176
 319 vty 177
 320 vty 178
 321 vty 179
 322 vty 180
 323 vty 181
 324 vty 182
 325 vty 183
 326 vty 184
 327 vty 185
 328 vty 186
 329 vty 187
 330 vty 188
 331 vty 189
 332 vty 190
 333 vty 191
 334 vty 192
 335 vty 193
 336 vty 194
 337 vty 195
 338 vty 196
 339 vty 197
 340 vty 198
 341 vty 199
 342 vty 200
 343 vty 201
 344 vty 202
 345 vty 203
 346 vty 204
 347 vty 205
 348 vty 206
 349 vty 207
 350 vty 208
 351 vty 209
 352 vty 210
 353 vty 211
 354 vty 212
 355 vty 213
 356 vty 214
 357 vty 215
 358 vty 216
 359 vty 217
 360 vty 218
 361 vty 219
 362 vty 220
 363 vty 221
 364 vty 222
 365 vty 223
 366 vty 224
 367 vty 225
 368 vty 226
 369 vty 227
 370 vty 228
 371 vty 229
 372 vty 230
 373 vty 231
 374 vty 232
 375 vty 233
 376 vty 234
 377 vty 235
 378 vty 236
 379 vty 237
 380 vty 238
 381 vty 239
 382 vty 240
 383 vty 241
 384 vty 242
 385 vty 243
 386 vty 244
 387 vty 245
 388 vty 246
 389 vty 247
 390 vty 248
 391 vty 249
 392 vty 250
 393 vty 251
 394 vty 252
 395 vty 253
 396 vty 254
 397 vty 255
 398 vty 256
 399 vty 257
 400 vty 258
 401 vty 259
 402 vty 260
 403 vty 261
 404 vty 262
 405 vty 263
 406 vty 264
 407 vty 265
 408 vty 266
 409 vty 267
 410 vty 268
 411 vty 269
 412 vty 270
 413 vty 271
 414 vty 272
 415 vty 273
 416 vty 274
 417 vty 275
 418 vty 276
 419 vty 277
 420 vty 278
 421 vty 279
 422 vty 280
 423 vty 281
 424 vty 282
 425 vty 283
 426 vty 284
 427 vty 285
 428 vty 286
 429 vty 287
 430 vty 288
 431 vty 289
 432 vty 290
 433 vty 291
 434 vty 292
 435 vty 293
 436 vty 294
 437 vty 295
 438 vty 296
 439 vty 297
 440 vty 298
 441 vty 299
 442 vty 300
 443 vty 301
 444 vty 302
 445 vty 303
 446 vty 304
 447 vty 305
 448 vty 306
 449 vty 307
 450 vty 308
 451 vty 309
 452 vty 310
 453 vty 311
 454 vty 312
 455 vty 313
 456 vty 314
 457 vty 315
 458 vty 316
 459 vty 317
 460 vty 318
 461 vty 319
 462 vty 320
 463 vty 321
 464 vty 322
 465 vty 323
 466 vty 324
 467 vty 325
 468 vty 326
 469 vty 327
 470 vty 328
 471 vty 329
 472 vty 330
 473 vty 331
 474 vty 332
 475 vty 333
 476 vty 334
 477 vty 335
 478 vty 336
 479 vty 337
 480 vty 338
 481 vty 339
 482 vty 340
 483 vty 341
 484 vty 342
 485 vty 343
 486 vty 344
 487 vty 345
 488 vty 346
 489 vty 347
 490 vty 348
 491 vty 349
 492 vty 350
 493 vty 351
 494 vty 352
 495 vty 353
 496 vty 354
 497 vty 355
 498 vty 356
 499 vty 357
 500 vty 358
 501 vty 359
 502 vty 360
 503 vty 361
 504 vty 362
 505 vty 363
 506 vty 364
 507 vty 365
 508 vty 366
 509 vty 367
 510 vty 368
 511 vty 369
 512 vty 370
 513 vty 371
 514 vty 372
 515 vty 373
 516 vty 374
 517 vty 375
 518 vty 376
 519 vty 377
 520 vty 378
 521 vty 379
 522 vty 380
 523 vty 381
 524 vty 382
 525 vty 383
 526 vty 384
 527 vty 385
 528 vty 386
 529 vty 387
 530 vty 388
 531 vty 389
 532 vty 390
 533 vty 391
 534 vty 392
 535 vty 393
 536 vty 394
 537 vty 395
 538 vty 396
 539 vty 397
 540 vty 398
 541 vty 399
 542 vty 400
 543 vty 401
 544 vty 402
 545 vty 403
 546 vty 404
 547 vty 405
 548 vty 406
 549 vty 407
 550 vty 408
 551 vty 409
 552 vty 410
 553 vty 411
 554 vty 412
 555 vty 413
 556 vty 414
 557 vty 415
 558 vty 416
 559 vty 417
 560 vty 418
 561 vty 419
 562 vty 420
 563 vty 421
 564 vty 422
 565 vty 423
 566 vty 424
 567 vty 425
 568 vty 426
 569 vty 427
 570 vty 428
 571 vty 429
 572 vty 430
 573 vty 431
 574 vty 432
 575 vty 433
 576 vty 434
 577 vty 435
 578 vty 436
 579 vty 437
 580 vty 438
 581 vty 439
 582 vty 440
 583 vty 441
 584 vty 442
 585 vty 443
 586 vty 444
 587 vty 445
 588 vty 446
 589 vty 447
 590 vty 448
 591 vty 449
 592 vty 450
 593 vty 451
 594 vty 452
 595 vty 453
 596 vty 454
 597 vty 455
 598 vty 456
 599 vty 457
 600 vty 458
 601 vty 459
 602 vty 460
 603 vty 461
 604 vty 462
 605 vty 463
 606 vty 464
 607 vty 465
 608 vty 466
 609 vty 467
 610 vty 468
 611 vty 469
 612 vty 470
 613 vty 471
 614 vty 472
 615 vty 473
 616 vty 474
 617 vty 475
 618 vty 476
 619 vty 477
 620 vty 478
 621 vty 479
 622 vty 480
 623 vty 481
 624 vty 482
 625 vty 483
 626 vty 484
 627 vty 485
 628 vty 486
 629 vty 487
 630 vty 488
 631 vty 489
 632 vty 490
 633 vty 491
 634 vty 492
 635 vty 493
 636 vty 494
 637 vty 495
 638 vty 496
 639 vty 497
 640 vty 498
 641 vty 499
 642 vty 500
 643 vty 501
 644 vty 502
 645 vty 503
 646 vty 504
 647 vty 505
 648 vty 506
 649 vty 507
 650 vty 508
 651 vty 509
 652 vty 510
 653 vty 511
 654 vty 512
 655 vty 513
 656 vty 514
 657 vty 515
 658 vty 516
 659 vty 517
 660 vty 518
 661 vty 519
 662 vty 520
 663 vty 521
 664 vty 522
 665 vty 523
 666 vty 524
 667 vty 525
 668 vty 526
 669 vty 527
 670 vty 528
 671 vty 529
 672 vty 530
 673 vty 531
 674 vty 532
 675 vty 533
 676 vty 534
 677 vty 535
 678 vty 536
 679 vty 537
 680 vty 538
 681 vty 539
 682 vty 540
 683 vty 541
 684 vty 542
 685 vty 543
 686 vty 544
 687 vty 545
 688 vty 546
 689 vty 547
 690 vty 548
 691 vty 549
 692 vty 550
 693 vty 551
 694 vty 552
 695 vty 553
 696 vty 554
 697 vty 555
 698 vty 556
 699 vty 557
 700 vty 558
 701 vty 559
 702 vty 560
 703 vty 561
 704 vty 562
 705 vty 563
 706 vty 564
 707 vty 565
 708 vty 566
 709 vty 567
 710 vty 568
 711 vty 569
 712 vty 570
 713 vty 571
 714 vty 572
 715 vty 573
 716 vty 574
 717 vty 575
 718 vty 576
 719 vty 577
 720 vty 578
 721 vty 579
 722 vty 580
 723 vty 581
 724 vty 582
 725 vty 583
 726 vty 584
 727 vty 585
 728 vty 586
 729 vty 587
 730 vty 588
 731 vty 589
 732 vty 590
 733 vty 591
 734 vty 592
 735 vty 593
 736 vty 594
 737 vty 595
 738 vty 596
 739 vty 597
 740 vty 598
 741 vty 599
 742 vty 600
 743 vty 601
 744 vty 602
 745 vty 603
 746 vty 604
 747 vty 605
 748 vty 606
 749 vty 607
 750 vty 608
 751 vty 609
 752 vty 610
 753 vty 611
 754 vty 612
 755 vty 613
 756 vty 614
 757 vty 615
 758 vty 616
 759 vty 617
 760 vty 618
 761 vty 619
 762 vty 620
 763 vty 621
 764 vty 622
 765 vty 623
 766 vty 624
 767 vty 625
 768 vty 626
 769 vty 627
 770 vty 628
 771 vty 629
 772 vty 630
 773 vty 631
 774 vty 632
 775 vty 633
 776 vty 634
 777 vty 635
 778 vty 636
 779 vty 637
 780 vty 638
 781 vty 639
 782 vty 640
 783 vty 641
 784 vty 642
 785 vty 643
 786 vty 644
 787 vty 645
 788 vty 646
 789 vty 647
 790 vty 648
 791 vty 649
 792 vty 650
 793 vty 651
 794 vty 652
 795 vty 653
 796 vty 654
 797 vty 655
 798 vty 656
 799 vty 657
 800 vty 658
 801 vty 659
 802 vty 660
 803 vty 661
 804 vty 662
 805 vty 663
 806 vty 664
 807 vty 665
 808 vty 666
 809 vty 667
 810 vty 668
 811 vty 669
 812 vty 670
 813 vty 671
 814 vty 672
 815 vty 673
 816 vty 674
 817 vty 675
 818 vty 676
 819 vty 677
 820 vty 678
 821 vty 679
 822 vty 680
 823 vty 681
 824 vty 682
 825 vty 683
 826 vty 684
 827 vty 685
 828 vty 686
 829 vty 687
 830 vty 688
 831 vty 689
 832 vty 690
 833 vty 691
 834 vty 692
 835 vty 693
 836 vty 694
 837 vty 695
 838 vty 696
 839 vty 697
 840 vty 698
 841 vty 699
 842 vty 700
 843 vty 701
 844 vty 702
 845 vty 703
 846 vty 704
 847 vty 705
 848 vty 706
 849 vty 707
 850 vty 708
 851 vty 709
 852 vty 710
 853 vty 711
 854 vty 712
 855 vty 713
 856 vty 714
 857 vty 715
 858 vty 716
 859 vty 717
 860 vty 718
 861 vty 719
 862 vty 720
 863 vty 721
 864 vty 722
 865 vty 723
 866 vty 724
 867 vty 725
 868 vty 726
 869 vty 727
 870 vty 728
 871 vty 729
 872 vty 730
 873 vty 731
 874 vty 732
 875 vty 733
 876 vty 734
 877 vty 735
 878 vty 736
 879 vty 737
 880 vty 738
 881 vty 739
 882 vty 740
 883 vty 741
 884 vty 742
 885 vty 743
 886 vty 744
 887 vty 745
 888 vty 746
 889 vty 747
 890 vty 748
 891 vty 749
 892 vty 750
 893 vty 751
 894 vty 752
 895 vty 753
 896 vty 754
 897 vty 755
 898 vty 756
 899 vty 757
 900 vty 758
 901 vty 759
 902 vty 760
 903 vty 761
 904 vty 762
 905 vty 763
 906 vty 764
 907 vty 765
 908 vty 766
 909 vty 767
 910 vty 768
 911 vty 769
 912 vty 770
 913 vty 771
 914 vty 772
 915 vty 773
 916 vty 774
 917 vty 775
 918 vty 776
 919 vty 777
 920 vty 778
 921 vty 779
 922 vty 780
 923 vty 781
 924 vty 782
 925 vty 783
 926 vty 784
 927 vty 785
 928 vty 786
 929 vty 787
 930 vty 788
 931 vty 789
 932 vty 790
 933 vty 791
 934 vty 792
 935 vty 793
 936 vty 794
 937 vty 795
 938 vty 796
 939 vty 797
 940 vty 798
 941 vty 799
 942 vty 800
 943 vty 801
 944 vty 802
 945 vty 803
 946 vty 804
 947 vty 805
 948 vty 806
 949 vty 807
 950 vty 808
 951 vty 809
 952 vty 810
 953 vty 811
 954 vty 812
 955 vty 813
 956 vty 814
 957 vty 815
 958 vty 816
 959 vty 817
 960 vty 818
 961 vty 819
 962 vty 820
 963 vty 821
 964 vty 822
 965 vty 823
 966 vty 824
 967 vty 825
 968 vty 826
 969 vty 827
 970 vty 828
 971 vty 829
 972 vty 830
 973 vty 831
 974 vty 832
 975 vty 833
 976 vty 834
 977 vty 835
 978 vty 836
 979 vty 837
 980 vty 838
 981 vty 839
 982 vty 840
 983 vty 841
 984 vty 842
 985 vty 843
 986 vty 844
 987 vty 845
 988 vty 846
 989 vty 847
 990 vty 848
 991 vty 849
 992 vty 850
 993 vty 851
 994 vty 852
 995 vty 853
 996 vty 854
 997 vty 855
 998 vty 856
 999 vty 857
1000 vty 858
1001 vty 859
1002 vty 860
1003 vty 861
1004 vty 862
1005 vty 863
1006 vty 864
1007 vty 865
1008 vty 866
1009 vty 867
1010 vty 868
1011 vty 869
1012 vty 870
1013 vty 871
1014 vty 872
1015 vty 873
1016 vty 874
1017 vty 875
1018 vty 876
1019 vty 877
1020 vty 878
1021 vty 879
1022 vty 880
1023 vty 881
1024 vty 882
1025 vty 883
1026 vty 884
1027 vty 885
1028 vty 886
1029 vty 887
1030 vty 888
1031 vty 889
1032 vty 890
1033 vty 891
1034 vty 892
1035 vty 893
1036 vty 894
1037 vty 895
1038 vty 896
1039 vty 897
1040 vty 898
1041 vty 899
1042 vty 900
1043 vty 901
1044 vty 902
1045 vty 903
1046 vty 904
1047 vty 905
1048 vty 906
1049 vty 907
1050 vty 908
1051 vty 909
1052 vty 910
1053 vty 911
1054 vty 912
1055 vty 913
1056 vty 914
1057 vty 915
1058 vty 916
1059 vty 917
1060 vty 918
1061 vty 919
1062 vty 920
1063 vty 921
1064 vty 922
1065 vty 923
1066 vty 924
1067 vty 925
1068 vty 926
1069 vty 927
1070 vty 928
1071 vty 929
1072 vty 930
1073 vty 931
1074 vty 932
1075 vty 933
1076 vty 934
1077 vty 935
1078 vty 936
1079 vty 937
1080 vty 938
1081 vty 939
1082 vty 940
1083 vty 941
1084 vty 942
1085 vty 943
1086 vty 944
1087 vty 945
1088 vty 946
1089 vty 947
1090 vty 948
1091 vty 949
1092 vty 950
1093 vty 951
1094 vty 952
1095 vty 953
1096 vty 954
1097 vty 955
1098 vty 956
1099 vty 957
1100 vty 958
1101 vty 959
1102 vty 960
1103 vty 961
1104 vty 962
1105 vty 963
1106 vty 964
1107 vty 965
1108 vty 966
1109 vty 967
1110 vty 968
1111 vty 969
1112 vty 970
1113 vty 971
1114 vty 972
1115 vty 973
1116 vty 974
1117 vty 975
1118 vty 976
1119 vty 977
1120 vty 978
1121 vty 979
1122 vty 980
1123 vty 981
1124 vty 982
1125 vty 983
1126 vty 984
1127 vty 985
1128 vty 986
1129 vty 987
1130 vty 988
1131 vty 989
1132 vty 990
1133 vty 991
1134 vty 992
1135 vty 993
1136 vty 994
1137 vty 995
1138 vty 996
1139 vty 997
1140 vty 998
1141 vty 999
1142 vty 1000
1143 vty 1001
1144 vty 1002
1145 vty 1003
1146 vty 1004
1147 vty 1005
1148 vty 1006
1149 vty 1007
1150 vty 1008
1151 vty 1009
1152 vty 1010
1153 vty 1011
1154 vty 1012
1155 vty 1013
1156 vty 1014
1157 vty 1015
1158 vty 1016
1159 vty 1017
1160 vty 1018
1161 vty 1019
1162 vty 1020
1163 vty 1021
1164 vty 1022
1165 vty 1023
1166 vty 1024
1167 vty 1025
1168 vty 1026
1169 vty 1027
1170 vty 1028
1171 vty 1029
1172 vty 1030
1173 vty 1031
1174 vty 1032
1175 vty 1033
1176 vty 1034
1177 vty 1035
1178 vty 1036
1179 vty 1037
1180 vty 1038
1181 vty 1039
1182 vty 1040
1183 vty 1041
1184 vty 1042
1185 vty 1043
1186 vty 1044
1187 vty 1045
1188 vty 1046
1189 vty 1047
1190 vty 1048
1191 vty 1049
1192 vty 1050
1193 vty 1051
1194 vty 1052
1195 vty 1053
1196 vty 1054
1197 vty 1055
1198 vty 1056
1199 vty 1057
1200 vty 1058
1201 vty 1059
1202 vty 1060
1203 vty 1061
1204 vty 1062
1205 vty 1063
1206 vty 1064
1207 vty 1065
1208 vty 1066
1209 vty 1067
1210 vty 1068
1211 vty 1069
1212 vty 1070
1213 vty 1071
1214 vty 1072
1215 vty 1073
1216 vty 1074
1217 vty 1075
1218 vty 1076
1219 vty 1077
1220 vty 1078
1221 vty 1079
1222 vty 1080
1223 vty 1081
1224 vty 1082
```

Configuring the console port or virtual terminal lines allows you to perform such tasks as setting communication parameters, specifying autobaud connections, and configuring terminal operating parameters for the terminal you are using.

Examples

The following example starts configuration for virtual terminal lines 0 to 4:

```
line vty 0 4
```

In the following example, the user creates and configures the maximum 100 virtual terminal lines with the **no login** command:

```
line vty 0 99
no login
```

In the following example, the user eliminates virtual terminal line number 5 and all higher-numbered virtual terminal lines. Only virtual terminal lines 0 to 4 will remain.

```
no line vty 5
```

In the following example, the user configures console line 0, auxiliary line 0, and virtual terminal lines 0 to 4:

```
line vty 0 4
login
line con 0
password baskerville
line aux 0
password Mypassword
no exec
access-class 1 in
speed 19200
line vty 0
exec-timeout 0 0
password Mypassword
line vty 1
exec-timeout 0 0
password Mypassword
line vty 2
exec-timeout 0 0
password Mypassword
line vty 3
password Mypassword
line vty 4
password Mypassword
```

Related Commands

You can use the master indexes or search online to find documentation of related commands.

show line

show users all

member

To alter the configuration of an asynchronous interface that is a member of a group, use the **member** interface configuration command. Use the **no** form of the command to restore defaults set at the group master interface.

member *number interface-command*
no member *number interface command*

Syntax Description

<i>number</i>	Number of the asynchronous interface to be altered.
<i>interface-command</i>	One or more of the following commands entered for this specific interface: <ul style="list-style-type: none">• peer default ip address• description

Default

No individual configurations are set for member interfaces.

Command Mode

Interface configuration

Usage Guidelines

You can customize a member interface by using the **member** command. (Interfaces are designated as members of a group by using the **interface group-async** and **group-range** commands.) To restore the defaults set at the group master interface, use the **no** form of this command.

Examples

The following example defines interface 3 with a description of line 3, which is attached to a Hayes Optima modem:

```
interface group-async 0
  member 3 description line #3 Hayes Optima
```

Related Commands

You can use the master indexes or search online to find documentation of related commands.

group-range
interface group-async

modem callin

To support dial-in modems that use the data terminal ready (DTR) signal to control the off-hook status of the modem, use the **modem callin** line configuration command. Use the **no** form of this command to disable this feature.

modem callin
no modem callin

Syntax Description

This command has no arguments or keywords.

Default

No modem control

Command Mode

Line configuration

Usage Guidelines

This command first appeared in Cisco IOS Release 10.0.

In response to RING, the router raises the DTR signal, which indicates to the modem that it should answer the call. At the end of the session, the Cisco IOS software lowers DTR, which disconnects the modem. This command is useful for older modems that do not support auto answer.

This command uses CTS, whereas newer modem commands in the Cisco IOS software use DSR.

Only use the **modem callin** command on the ASM terminal server, where hardware flow control is not possible. If you have a more recent device (such as a Cisco 2509 through 2512, Cisco 2520 through 2523, a Cisco AS5100, Cisco 3600 series, or Cisco AS5200), use the **modem dialin** command instead.

Example

The following example configures lines 10 through 16 for dial-in modems that can run at speeds from 300 to 19,200 bps:

```
line 10 16
modem callin
autobaud
```

Related Commands

You can use the master indexes or search online to find documentation of related commands.

modem answer-timeout
modem inout

modem callout

To configure a line for reverse connections, use the **modem callout** line configuration command. Use the **no** form of this command to disable this feature.

modem callout
no modem callout

Syntax Description

This command has no arguments or keywords.

Default

No modem control

Command Mode

Line configuration

Usage Guidelines

This command first appeared in Cisco IOS Release 10.0.

This command supports ports connected to computers that would normally be connected to modems. It causes the access server to act somewhat like a modem.

This command uses CTS and should be used only on access servers that do not support hardware flow control. If you have an access server that is newer than the ASM terminal server (such as a Cisco 2509 through 2512, Cisco 2520 through 2523, a Cisco AS5100, Cisco 3600 series, or a Cisco AS5200), use the **modem host** command instead. The **modem callout** command uses CTS, whereas the **modem host** command uses DSR/DCD. If CTS is used for modem control instead of DSR/DCD, it prevents CTS from being used by hardware flow control.

Example

The following example configures lines 17 through 32 in reverse connection mode to a large terminal switch. By using Telnet to connect to a TCP port on this host, the user gets the next free line in the rotary group.

```
line 17 32
  rotary 1
  modem callout
```

Related Commands

You can use the master indexes or search online to find documentation of related commands.

modem inout
rotary

modem cts-required

The **modem printer** command replaces the **modem cts-required** command. Refer to the description of the **modem printer** command for more information.

modem dialin

To configure a line to enable a modem attached to the router to accept incoming calls only, use the **modem dialin** line configuration command. Use the **no** form of this command to disable this feature.

modem dialin
no modem dialin

Syntax Description

This command has no arguments or keywords.

Default

Do not permit incoming calls to the modem.

Command Mode

Line configuration

Usage Guidelines

This command first appeared in Cisco IOS Release 11.1.

This command supports modems that can automatically handle telephone line activity, such as answering the telephone after a certain number of rings.

Example

The following example configures a line for a high-speed modem:

```
line 5
 modem dialin
```

Related Commands

You can use the master indexes or search online to find documentation of related commands.

dialer
modem inout
parity

modem dtr-active

To configure a line to leave data terminal ready (DTR) signals low, unless the line has an active incoming connection or an EXEC process, use the **modem dtr-active** line configuration command. Use the **no** form of this command to disable this feature.

modem dtr-active
no modem dtr-active

Syntax Description

This command has no arguments or keywords.

Default

No modem control

Command Mode

Line configuration

Usage Guidelines

This command first appeared in Cisco IOS Release 10.0.

This command does not use the Carrier Detect (CD) signal.

This command can be useful if the line is connected to an external device (for example, a time-sharing system) that must know whether a line is in active use. The **modem dtr-active** command is similar to the **no modem** line configuration command.

Example

The following example configures a line for low DTR:

```
line 5
  modem dtr-active
```

Related Commands

You can use the master indexes or search online to find documentation of related commands.

modem cts-required

modem host

To configure a line for reverse connections where hardware flow control is also required, use the **modem host** line configuration command. Use the **no** form of this command to disable the line modem control for reverse connections.

modem host
no modem host

Syntax Description

This command has no arguments or keywords.

Default

No modem control

Command Mode

Line configuration

Usage Guidelines

This command first appeared in Cisco IOS Release 11.1.

This command supports ports connected to computers that would normally be connected to modems. This command causes the access server to act like a modem.

The **modem host** command is identical in operation to the **modem callout** command except that DSR/DCD is used for modem control instead of CTS. This frees CTS for use by hardware flow control.

Example

The following example configures a line to send a DSR/CD active signal to the modem for data switches and hosts:

```
line 5
  modem host
```

Related Commands

You can use the master indexes or search online to find documentation of related commands.

modem callout
modem printer

modem inout

To configure a line for both incoming and outgoing calls, use the **modem inout** line configuration command. Use the **no** form of this command to disable this feature.

```
modem inout  
no modem inout
```

Syntax Description

This command has no arguments or keywords.

Default

No modem control

Command Mode

Line configuration

Usage Guidelines

This command first appeared in Cisco IOS Release 10.0.

This command uses DSR and RING signals for carrier detection.

The Cisco IOS software does not support any dialing protocols; therefore, the host system software or the user must provide any special dialing commands when using the modem for outgoing calls.

Example

The following example configures a line for both incoming and outgoing calls:

```
line 5  
  modem inout
```

Related Commands

You can use the master indexes or search online to find documentation of related commands.

```
dialer  
parity
```

modem printer

To configure a line to require a data set ready (DSR) signal, use the **modem printer** line configuration command. Use the **no** form of this command to use CTS instead of DSR.

modem printer
no modem printer

Syntax Description

This command has no arguments or keywords.

Default

No modem control

Command Mode

Line configuration

Usage Guidelines

This command first appeared in Cisco IOS Release 11.1.

This command uses RING/DCD (Data Carrier Detect) /DSR as the modem control signal instead of CTS. This leaves CTS free for use in hardware flow control. You can configure hardware flow control concurrently with the **modem printer** command.

While the **modem dialin** command supports modems concurrently with hardware flow control, the other auxiliary modem control options for printers, such as **modem cts-required**, use CTS instead of DSR/CD, as the CD signal.

Example

The following example configures a line to send a DSR signal to the modem:

```
line 5
modem printer
```

modem ri-is-cd

The **modem dialin** command replaces the **modem ri-is-cd** command. Refer to the description of the **modem dialin** command for more information.

netbios nbf

To enable the NetBIOS Frames Protocol (NBF) on an interface, use the **netbios nbf** interface configuration command. To disable NetBIOS Frames Protocol support on an interface, use the **no** form of this command.

netbios nbf
no netbios nbf

Syntax Description

This command has no arguments or keywords.

Default

Disabled

Command Mode

Interface configuration

Usage Guidelines

This command first appeared in Cisco IOS Release 11.1.

Example

The following example enables NetBIOS Frames Protocol on asynchronous interface 1 (connected to remote access client using a NetBEUI application) and Ethernet interface 0 (connected to the remote router):

```
interface async 1
  netbios nbf
interface ethernet 0
  netbios nbf
```

Related Commands

You can use the master indexes or search online to find documentation of related commands.

netbios name-cache
show netbios cache
show nbf sessions

physical-layer

To specify the mode of a slow-speed serial interface on a router as either synchronous or asynchronous, use the **physical-layer** interface configuration command. Use the **no** form of this command to return the interface to its default mode, which is synchronous.

```
physical-layer {sync | async}  
no physical-layer
```

Syntax Description

sync	Place the interface in synchronous mode.
async	Place the interface in asynchronous mode.

Default

Synchronous mode

Command Mode

Interface configuration

Usage Guidelines

This command first appeared in Cisco IOS Release 11.2.

This command applies only to low-speed serial interfaces available on Cisco 2520 through Cisco 2523 routers.

If you specify the **no physical-layer** command, you return the interface to its default mode (synchronous).

In synchronous mode, low-speed serial interfaces support all interface configuration commands available for high-speed serial interfaces, except the following two commands:

- **sdhc cts-delay**
- **sdhc rts-timeout**

When placed in asynchronous mode, low-speed serial interfaces support all commands available for standard asynchronous interfaces.

When you enter this command, it does not appear in the output of **show running config** and **show startup config** commands, because the command is a physical layer command.

Example

The following example changes a low-speed serial interface from synchronous to asynchronous mode:

```
interface serial 2  
  physical-layer async
```

rotary

To define a group of lines consisting of one or more lines, use the **rotary** line configuration command. Use the **no** form of this command to remove a line or group of lines from a rotary group.

rotary group
no rotary

Syntax Description

group Integer between 1 and 100 that you choose to identify the rotary group.

Default

No group of lines is defined.

Command Mode

Line configuration

Usage Guidelines

This command first appeared in Cisco IOS Release 10.0.

Typically, rotary groups are used on devices with multiple modem connections to allow connections to the next free line in a hunt group.

Connections to a rotary group can take advantage of the following features:

- Clear To Send (CTS)—If a line in a rotary group is configured to require CTS, the Cisco IOS software skips that line if CTS from the attached device is low. This feature enables the software to avoid inactive host ports automatically. To enable this feature, use the **modem bad** line configuration command.
- EIA/TIA-232 handshaking—Rotary groups are often associated with large terminal switches that require an EIA/TIA-232 handshake before forming a connection. In this case, use the **modem callout** line configuration command to configure the lines in the group. If the EIA/TIA-232 handshake fails on a line, the Cisco IOS software steps to the next free line in the rotary group and restarts the negotiation.
- Access control—You can use access lists for groups of virtual terminal lines.
- Session timeout—Use the **session-timeout** line configuration command to set an interval for a line so that if no activity occurs on a remotely initiated connection for that interval the Cisco IOS software closes the connection. The software assumes that the host has crashed or is otherwise inaccessible.

The remote host must specify a particular TCP port on the router to connect to a rotary group with connections to an individual line. The available services are the same, but the TCP port numbers are different. Table 2 lists the services and port numbers for both rotary groups and individual lines.

Table 2 Services and Port Numbers for Rotary Groups and Lines

Services Provided	Base TCP Port for Rotaries	Base TCP Port for Individual Lines
Telnet protocol	3000	2000
Raw TCP protocol (no Telnet protocol)	5000	4000
Telnet protocol, binary mode	7000	6000
XRemote protocol	10000	9000

For example, if Telnet protocols are required, the remote host connects to the TCP port numbered 3000 (decimal) plus the rotary group number. If the rotary group identifier is 13, the corresponding TCP port is 3013.

If a raw TCP stream is required, the port is 5000 (decimal) plus the rotary group number. If rotary group 5 includes a raw TCP (printer) line, the user connects to port 5005 and is connected to one of the raw printers in the group.

If Telnet binary mode is required, the port is 7000 (decimal) plus the rotary group number.

Example

The following example establishes a rotary group consisting of virtual terminal lines 2 through 4 and defines a password on those lines. By using Telnet to connect to TCP port 3001, the user gets the next free line in the rotary group. The user does not have to remember the range of line numbers associated with the password.

```
line vty 2 4
 rotary 1
 password letmein
 login
```

Related Commands

You can use the master indexes or search online to find documentation of related commands.

dialer
modem bad
modem callout
session-timeout

script activation

To specify that a chat script start on a physical terminal line any time the line is activated, use the **script activation** line configuration command. Use the **no** form of this command to disable this feature.

script activation *regex*
no script activation

Syntax Description

<i>regex</i>	Regular expression that specifies the set of modem scripts that might be executed. The first script name that matches the argument <i>regex</i> will be used.
--------------	---

Default

Not assigned to terminal lines

Command Mode

Line configuration

Usage Guidelines

This command first appeared in Cisco IOS Release 10.0.

This command provides an asynchronous handshake to a user or device that activates the line. It can be activated by several events, such as a user issuing a carriage return on a vacant line, by a modem on the line sensing an incoming carrier, or an asynchronous device (such as another router) sending data. Each time an EXEC session is started on a line, the system checks to see if a **script activation** command is configured on the line. If so, and the argument *regex* (a regular expression) matches an existing chat script name, the matched script is run on the line. For more information about regular expressions, refer to the “Regular Expressions” appendix in this publication.

The **script activation** command can mimic a login handshake of another system. For example, a system that dials into a line on a router and expects an IBM mainframe login handshake can be satisfied with an appropriate activation script.

This command also can send strings to asynchronous devices that are connecting or dialing into a router.

The **script activation** command functions only on physical terminal (TTY) lines. It does not function on virtual terminal (VTY) lines.

Example

The following example specifies that the chat script with a name that includes *telebit* will be activated whenever line 4 is activated:

```
line 4
  script activation telebit
```

Related Commands

You can use the master indexes or search online to find documentation of related commands.

chat-script
dialer map modem-script system-script
dialer map modem-script system-script name
script activation
script connection
script dialer
script reset
script startup
start-chat

script connection

To specify that a chat script start on a physical terminal line any time a remote network connection is made to a line, use the **script connection** line configuration command. Use the **no** form of this command to disable this feature.

script connection *regex*
no script connection

Syntax Description

regex Specifies the set of modem scripts that might be executed. The first script name that matches the argument *regex* will be used.

Default

Not assigned to terminal lines

Command Mode

Line configuration

Usage Guidelines

This command first appeared in Cisco IOS Release 10.0.

This command provides modem dialing commands and commands for logging onto remote systems. The **script connection** command functions only on physical terminal (TTY) lines. It does not function on virtual terminal (VTY) lines.

This command can be used to initialize an asynchronous device sitting on a line to which a reverse network connection is made.

For information about regular expressions, refer to the “Regular Expressions” appendix in this publication.


Example

The following example specifies that the chat script with a name that includes *inband* will be activated whenever a remote connection to line 4 is established. The router can send a login string and password to the UNIX server when a network tunneling connection comes into line 4:

```
line 4
 script connection inband
```

Using this example and the topology in Figure 2, the access server or router can send a login string and password to the UNIX server when a network tunneling connection comes into line 4.

Figure 2 Network Tunneling Connection on an Asynchronous Line

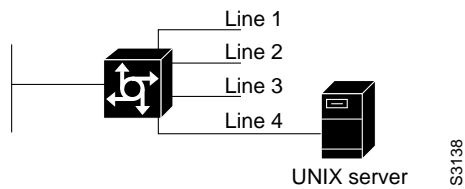

Related Commands

You can use the master indexes or search online to find documentation of related commands.

chat-script
dialer map modem-script system-script
dialer map modem-script system-script name
script activation
script dialer
script reset
script startup
start-chat

script reset

To specify that a chat script start on a physical terminal line any time the specified line is reset, use the **script reset** line configuration command. Use the **no** form of this command to disable this feature.

```
script reset regex  
no script reset
```

Syntax Description

regex Specifies the set of modem scripts that might be executed. The first script name that matches the argument *regex* will be used.

Default

Not assigned to terminal lines.

Command Mode

Line configuration

Usage Guidelines

This command first appeared in Cisco IOS Release 10.0.

Chat scripts provide modem dialing commands and commands for logging onto remote systems. Use this command to reset a modem attached to a line every time a call is dropped.

The **script reset** command functions only on physical terminal (TTY) lines. It does not function on virtual terminal (VTY) lines.

For information about regular expressions, refer to the “Regular Expressions” appendix in this publication.

Examples

The following example specifies that any chat script name with the word *linebackup* in it will be activated any time line 7 is reset:

```
line 7  
script reset linebackup
```

The following example resets a modem sitting on a line each time a call is dropped:

```
chat-script drop-line ""+++"" " " ATH OK "ATS0=1" OK "ATS9=21"  
line 4  
script reset drop-line
```

Related Commands

You can use the master indexes or search online to find documentation of related commands.

```
chat-script  
dialer map modem-script system-script  
dialer map modem-script system-script name
```

script activation
script connection
script dialer
script startup
start-chat

script startup

To specify that a chat script start on a physical terminal line any time the router is powered up, use the **script startup** line configuration command. Use the **no** form of this command to disable this feature.

script startup *regex*
no script startup

Syntax Description

regex Specifies the set of modem scripts that might be executed. The first script that matches the argument *regex* will be used.

Default

Not assigned to terminal lines

Command Mode

Line configuration

Usage Guidelines

This command first appeared in Cisco IOS Release 10.0.

Use this command to initialize asynchronous devices connected to a line when the router is started up or reloaded. You can also use it to start up a banner other than the default banner on lines. The **script startup** command functions only on physical terminal (TTY) lines. It does not function on virtual terminal (VTY) lines.

For information about regular expressions, refer to the “Regular Expressions” appendix in this publication.

Example

The following example specifies that a chat script with the word *linestart* in its name will be activated whenever line 5 is started up:

```
line 5
  script startup linestart
```

Related Commands

You can use the master indexes or search online to find documentation of related commands.

chat-script
dialer map modem-script system-script
dialer map modem-script system-script name
script activation
script connection
script dialer
script reset
start-chat

show async bootp

To display the parameters that have been configured for extended BOOTP requests, use the **show async bootp** privileged EXEC command.

```
show async bootp
```

Syntax Description

This command has no arguments or keywords.

Command Mode

Privileged EXEC

Usage Guidelines

This command first appeared in Cisco IOS Release 10.0.

Sample Display

The following is sample output from the **show async bootp** command.

```
sloth# show async bootp

The following extended data will be sent in BOOTP responses:

bootfile (for address 192.168.31.1) "pcboot"
bootfile (for address 172.16.1.110) "dirtboot"
subnet-mask 255.255.0.0
time-offset -3600
time-server 192.168.31.1
```

Table 3 describes significant fields shown in the display.

Table 3 Show Async BOOTP Field Descriptions

Field	Description
bootfile... "pcboot"	Indicates that the boot file for address 192.168.31.1 is named pcboot.
subnet-mask 255.255.0.0	Specifies the subnet mask.
time-offset -3600	Indicates that the local time is one hour (3600 seconds) earlier than Coordinated Universal Time (UTC).
time-server 192.168.31.1	Indicates the address of the time server for the network.

show async status

To display the status of activity on all lines configured for asynchronous support, use the **show async status** privileged EXEC command.

show async status

Syntax Description

This command has no arguments or keywords.

Command Mode

Privileged EXEC

Usage Guidelines

This command first appeared in Cisco IOS Release 10.0.

The display resulting from this command shows all asynchronous sessions, whether they are using SLIP or PPP encapsulation.

Sample Display

The following is sample output from the **show async status** command:

```
router# show async status

Async protocol statistics:
  Rcvd: 5448 packets, 7682760 bytes
        1 format errors, 0 checksum errors, 0 overrun, 0 no buffer
  Sent: 5455 packets, 7682676 bytes, 0 dropped

  Tty          Local          Remote Qd InPack OutPac Inerr  Drops  MTU Qsz
  *  1         192.168.7.84      Dynamic 0     0     0     0     0 1500 10
  *  3         192.168.7.98      None    0   5448   5455     1     0 1500 10
```

Table 4 describes significant fields shown in the display.

Table 4 Show Async Status Field Descriptions

Field	Description
Rcvd	Statistics on packets received.
5448 packets	Packets received.
7682760 bytes	Total number of bytes.
1 format errors	Spurious characters received when a packet start delimiter is expected.
0 checksum errors	Count of checksum errors.
0 overrun	Number of giants received.
0 no buffer	Number of packets received when no buffer was available.
Sent	Statistics on packets sent.
5455 packets	Packets sent.
7682676 bytes	Total number of bytes.

Table 4 Show Async Status Field Descriptions (Continued)

Field	Description
0 dropped	Number of packets dropped.
Tty	Line number.
*	Line currently in use.
Local	Local IP address on the link.
Remote	Remote IP address on the link; "Dynamic" indicates that a remote address is allowed but has not been specified; "None" indicates that no remote address is assigned or being used.
Qd	Number of packets on hold queue (Qsz is the maximum).
InPack	Number of packets received.
OutPac	Number of packets sent.
Inerr	Number of total input errors; sum of format errors, checksum errors, overruns and no buffers.
Drops	Number of packets received that would not fit on the hold queue.
MTU	Current maximum transmission unit size.
Qsz	Current output hold queue size.

show line

To display a terminal line's parameters, use the **show line** EXEC command.

show line [*line-number*]

Syntax Description

line-number (Optional) Absolute line number of the line for which you want to list parameters.

Command Mode

EXEC

Usage Guidelines

This command first appeared in Cisco IOS Release 10.0.

Sample Display

The following sample output from the **show line** command shows that line 17 is a virtual terminal line with a transmit and receive rate of 9600 bps. Also shown is the modem state, terminal screen width and length, and so on.

```
router# show line 17

Tty Typ      Tx/Rx      A Modem  Roty AccO AccI  Uses   Noise  Overruns
A 17 VTY     9600/9600  -  -      -  -  -    1      0      0/0

Line 17, Location: "", Type: ""
Length: 24 lines, Width: 80 columns
Baud rate (TX/RX) is 9600/9600
Status: Ready, Connected, Active, No Exit Banner, Async interface active
Capabilities: Line usable as async interface
Modem state: Ready
Special Chars: Escape Hold Stop Start Disconnect Activation
                ^^x  none  -  -          none
Timeouts:      Idle EXEC Idle Session Modem Answer Session Dispatch
                never   never          none   not set
Session limit is not set.
Time since activation: never
Editing is enabled.
History is enabled, history size is 10.
Full user help is disabled
Allowed transports are lat telnet rlogin mop. Preferred is lat.
No output characters are padded
No special data dispatching characters

Line is running SLIP routing for address 1.0.0.2.
0 output packets queued, 0 input packets.
Group codes:    0
```

Table 5 describes the fields in the **show line** output.

Table 5 Show Line Field Descriptions

Field	Description
Tty	Line number. In this case, 17.
Typ	Type of line. In this case, a virtual terminal line (VTY), which is active, in asynchronous mode denoted by the preceding 'A.' Other possible values are: <ul style="list-style-type: none"> • CTY—console • AUX—auxiliary port • TTY—asynchronous terminal port • lpt—parallel printer
Tx/Rx	Transmit rate/receive rate of the line.
A	Indicates whether autobaud has been configured for the line. A value of F indicates that autobaud has been configured; a hyphen indicates that it has not been configured.
Modem	Types of modem signals that have been configured for the line. Possible values include <ul style="list-style-type: none"> • callin • callout • cts-req • DTR-Act • inout • RIisCD
Roty	Rotary group configured for the line.
AccO, AccI	Output or Input access list number configured for the line.
Uses	Number of connections established to or from the line since the system was restarted.
Noise	Number of times noise has been detected on the line since the system restarted.
Overruns	Hardware (UART) overruns and/or software buffer overflows, both defined as the number of overruns or overflows that have occurred on the specified line since the system was restarted. Hardware overruns are buffer overruns; the UART chip has received bits from the software faster than it can process them. A software overflow occurs when the software has received bits from the hardware faster than it can process them.
Line	Current line.
Location	Location of the current line.
Type	Type of line, as specified by the line global configuration command.
Length	Length of the terminal or screen display.
Width	Width of the terminal or screen display.
Baud rate (TX/RX)	Transmit rate/receive rate of the line.
Status	State of the line: Ready or not, connected or disconnected, active or inactive, exit banner or no exit banner, async interface active or inactive.
Capabilities	Current terminal capabilities. In this case, the line is usable as an asynchronous interface.

Table 5 Show Line Field Descriptions (Continued)

Field	Description
Modem state	Modem control state. This field should always read READY.
Special Chars	Current settings of special characters that were input by the user (or taken by default) from the following global configuration commands: <ul style="list-style-type: none"> • escape-character • hold-character • stop-character • start-character • disconnect-character • activation-character
Timeouts	Current settings that were input by the user (or taken by default) from the following global configuration commands: <ul style="list-style-type: none"> • exec-timeout • session-timeout • dispatch-timeout • modem answer-timeout
Session limit	Maximum number of sessions.
Time since activation	Last time start_process was run.
Editing	Whether or not command line editing is enabled.
History	Current history length, set by the user (or taken by default) from the history configuration command.
Full user help	Whether or not full user help has been set by the user with the terminal full-help command or by the administrator with the full-help line configuration command.
Allowed transports are...	Current set transport method, set by the user (or taken by default) from the transport preferred line configuration command.
characters are padded	Current set padding, set by the user (or taken by default) from the padding line configuration command.
data dispatching characters	Current dispatch character set by the user (or taken by default) from the dispatch-character line configuration command.
Line	Definition of the specified line's protocol and address.
output, input packets	Number of output and input packets queued on this line.
Group codes	AT group codes.

show modemcap

To display the values set for the current modem, use the **show modemcap** command. This display lists the modems for which the router has entries. To display the attributes associated with a specific modem, use the **show modemcap *modem-name*** command.

show modemcap *modem-name*

Syntax Description

modem-name The name of the modem (such as Codex_3260).

Default

The list of modems for which the router has entries.

Command Mode

EXEC

Usage Guidelines

This command first appeared in Cisco IOS Release 11.1.

When a modem name is supplied, this command displays the available modem values. Table 6 identifies the list of attributes and their description:

Table 6 Modem Attributes

Modem Attribute	Description
Factory defaults (FD)	Returns the modem to factory default configuration. This is commonly "&F"
Autoanswer (AA)	Sets the modem to answer the phone if DTR is high, preferably on the first ring. This is commonly "S0=1"
Carrier detect (CD)	Instructs the modem to raise CD signal when a carrier is detected. Cisco configures modems into auto-answer mode by default. Oddly this is not the default for most modems, which just raise CD and leave it high. This is commonly "&C1." In auto-answer mode, the modem waits until it detects a ring, then responds to the incoming call and negotiates an end-to-end connection with the other modem. At this point, the modem receiving the call informs the router that it has a call ready to be processed; this notification is performed by raising the signal on RS-232 pin 8 (the Data Carrier Detect signal) to high.
Drop with DTR (DTR)	Drops the connection if DTR signal drops. There is frequently an option to reset the configuration while doing this. However, this option should <i>not</i> be used. The connection should only drop. The correct value for this is commonly "&D2."
Set hardware flow control (HFL)	Uses RTS/CTS (out-of-band) flow control.
Set software flow control (SFL)	Uses XON/XOFF (in-band) flow control.

Table 6 Modem Attributes (Continued)

Modem Attribute	Description
Lock to maximum DTE speed (SPD)	Instructs the modem to lock the speed at which it communicates to the router to a single rate, preferably the highest. This attribute is important and is often hard to find in manuals. SPD is often linked to the hardware flow control variable. Look for phrases like “bps rate adjust” and “bit rate adjust.” Some modems set the speed to a value that depends on an S-register; other modems simply lock to the speed that was used when the last AT command was issued. Locking to the speed that was last used is handled automatically. To enable the S-register to set the speed, you must include the proper S-register value for the fastest possible DTE speed.
Best error control (BER)	Instructs the modem to negotiate its best error control with remote modems. For ARAP users, this is MNP5/LAPB, but not MNP4.
Best compression (BCP)	Instructs the modem to negotiate its best compression with remote modems.
No error control (NER)	Instructs the modem to negotiate no error control with remote modems. This will be used when placing outgoing (callback) ARAP calls.
No compression (NCP)	Instructs the modem to negotiate no compression with remote modems. This is used when placing outgoing (callback) ARAP calls.
No echo (NEC)	Requests the modem <i>not</i> to echo characters. This is commonly “E0.”
No response codes (NRS)	Requests the modem <i>not</i> to send a response when you issue a command. This is commonly “Q1.”
Set Caller ID (CID)	Requests that Caller ID information be returned when dialin occurs. Currently not used.
Miscellaneous strings (MSC)	Sends any extra commands that are needed for the modem to work (possibly with specific platforms).
Template entry (TPL)	This is the name of another modem type. It is referenced as the value of any of the previously listed attributes if they are not set on the current modem type.

As an alternative to repeatedly entering the same data, use templates as a way to join modemcap entries. For example, consider the following modemcap entries:

```
modemcap entry gv_basics:FD=&F:AA=S0=1:CD=&C1:DTR=&D2:NEC=E0:NRS=Q1
modemcap entry global_village:HFL=&K3\X1:BCP=%C1:NCP=%C0:TPL=gv_basics
modemcap entry gv_teleport:NCP=%C0:TPL=gv_basics
```

To look up the factory default for a global_village modem, perform the following steps:

- Step 1** Look at the global_village modemcap entry for the factory default (FD).
- Step 2** If you fail to find FD in global_village, look at the global_village modemcap entry for a template (TPL).
- Step 3** Find a TPL called “gv_basics.”
- Step 4** Look in the gv_basics modemcap entry for the FD.
- Step 5** Find FD=&F in the gv_basics modemcap entry.
- Step 6** Use &F as the FD for the global_village.

Sample Display

The following example shows the modem values in a Codex_3260:

```
show modemcap Codex_3260
```

Related Commands

You can use the master indexes or search online to find documentation of related commands.

modemcap edit

modemcap entry

show nbf cache

Use the **show nbf cache** user level EXEC command to display NetBIOS name cache contents.

show nbf cache

Syntax Description

This command has no arguments or keywords.

Command Mode

EXEC

Usage Guidelines

This command first appeared in Cisco IOS Release 11.1.

Sample Display

The following is sample output from the **show nbf cache** command:

```
router> show nbf cache
  HW Addr      Name      How      Idle  NetBIOS Packet Savings
1000.5a89.449a IKBA      E0        6      0
0000.0000.0000 NANOO     async1    21     0
```

Table 7 describes significant fields shown in the display.

Table 7 Show NBF Cache Field Descriptions

Field	Description
HW Addr	MAC address mapped to the NetBIOS name in this entry.
Name	NetBIOS name mapped to the MAC address in this entry.
How	Interface through which this information was learned.
Idle	Period of time (in seconds) since this entry was last accessed. A hyphen in this column indicates a static entry in the NetBIOS name cache.
NetBIOS Packet Savings	Number of packets to which local replies were made (thus preventing transmission of these packets over the network).

Related Commands

You can use the master indexes or search online to find documentation of related commands.

netbios access-list
netbios input-access-filter
netbios name-cache
netbios nbf
netbios output-access-filter
show nbf sessions

show nbf sessions

Use the **show nbf sessions** user level EXEC command to view NetBEUI connection information.

show nbf sessions

Syntax Description

This command has no arguments or keywords.

Command Mode

EXEC

Usage Guidelines

This command first appeared in Cisco IOS Release 11.1.

Sample Display

The following is sample output from the **show nbf sessions** command:

```
router> show nbf sessions

Async6 NetBIOS Session Table:
Srcnum  Destnum  Dest-Interface  DestMAC
8        6          Ethernet0 00aa.005b.c17b

NetBIOS Global Session Table:
Srcnum  Destnum  Dest-Interface  DestMAC  Src-Interface  SrcMac(I)

6        8          Async7 0000.0000.0000  Ethernet0 00aa.005b.c17b(95)
ADD_[GROUP]NAME_QUERY queue size=0
STATUS_QUERY queue size=0
STATUS_RESPONSE queue size=0
NAME_QUERY queue size=0
NAME_RECOGNIZED queue size=0
SESSION_INITIALIZE queue size=0
SESSION_INITIALIZE (pending) queue size=0
```

Table 8 describes significant fields shown in the display.

Table 8 Show NBF Sessions Field Descriptions

Field	Description
Interface NetBIOS Session Table:	Summarizes Async/ISDN interface NetBIOS connection information.
Srcnum, Destnum	Source and destination connection numbers.
Dest-Interface, DestMAC	Destination interface and MAC address.
Global NetBIOS Session Table:	Summarizes LAN NetBIOS connection information.
Dest-Interface DestMAC	Destination interface (Async7 in this case) and MAC address (0000.0000.0000 in this case).
Src-Interface SrcMac	Source interface (Ethernet0 in this case) and MAC address (00aa.005b.c17b(95) in this case).

Table 8 Show NBF Sessions Field Descriptions (Continued)

Field	Description
NetBIOS Datagram Queue Summary	Summarizes NetBIOS pending datagram queues.
ADD_[GROUP]NAME_QUERY	Add Group Name Query packets.
STATUS_QUERY	Status Query packets.
STATUS_RESPONSE	Status Response packets.
NAME_QUERY	Name Query packets.
NAME_RECOGNIZED	Name Recognized packets.
SESSION_INITIALIZE (pending)	NetBIOS session Initialize packets.

Related Commands

You can use the master indexes or search online to find documentation of related commands.

- netbios access-list**
- netbios input-access-filter**
- netbios output-access-filter**
- netbios name-cache**
- netbios nbf**
- show nbf cache**

show users

To display information about the active lines on the router, use the **show users** user EXEC command.

```
show users [all]
```

Syntax Description

all (Optional) Specifies that all lines be displayed, regardless of whether anyone is using them.

Command Mode

User EXEC

Usage Guidelines

This command first appeared in a release prior to Cisco IOS Release 10.0.

This command displays the line number, connection name, idle time, and terminal location.

Sample Displays

The following is sample output from the **show users** command:

```
router# show users
      Line      User      Host(s)      Idle Location
      0 con 0
*    2 vty 0    rose      idle        0 BASHFUL.CISCO.COM
```

The following is sample output from the **show users all** command:

```
router# show users all
      Line      User      Host(s)      Idle Location
*    0 vty 0    rose      idle        0 BASHFUL.CISCO.COM
      1 vty 1
      2 con 0
      3 aux 0
      4 vty 2
```

The asterisk (*) indicates the current terminal session.

Table 9 describes significant fields shown in the displays.

Table 9 Show Users Field Descriptions

Field	Description
Line	Contains three subfields. <ul style="list-style-type: none">• The first subfield (0 in the sample output) is the absolute line number.• The second subfield (VTY) indicates the type of line. Possible values follow: con—Console aux—Auxiliary port tty—Asynchronous terminal port vty—Virtual terminal• The third subfield (0 in the * sample output) indicates the relative line number within the type.
User	User using the line. If no user is listed in this field, no one is using the line.
Host(s)	Host to which the user is connected (outgoing connection). A value of idle means that there is no outgoing connection to a host.
Idle	Interval (in minutes) since the user has entered something.
Location	Either the hard-wired location for the line or, if there is an incoming connection, the host from which incoming connection came.

Related Commands

You can use the master indexes or search online to find documentation of related commands.

show users

start-character

To set the flow control start character, use the **start-character** line configuration command. Use the **no** form of this command to remove the character.

```
start-character ascii-number  
no start-character
```

Syntax Description

ascii-number Decimal representation of the start character.

Default

Decimal 17

Command Mode

Line configuration

Usage Guidelines

This command first appeared in Cisco IOS Release 10.0.

This command defines the character that signals the start of data transmission when software flow control is in effect. See the “ASCII Character Set” appendix in the *Configuration Fundamentals Command Reference* for a list of ASCII characters.

Example

The following example changes the start character to Ctrl-B, which is decimal 2:

```
line 2  
start-character 2
```

Related Commands

You can use the master indexes or search online to find documentation of related commands.

```
flowcontrol  
stop-character  
terminal start-character
```

start-chat

To specify that a chat script start on a specified line at any point, use the **start-chat** privileged EXEC command. Use the **no** form of this command to stop the chat script.

```
start-chat regex [line-number [dialer-string]]  
no start-chat
```

Syntax Description

<i>regex</i>	Specifies the name of a regular expression or modem script to be executed. If there is more than one script with a name that matches the argument <i>regex</i> , the first script found will be used.
<i>line-number</i>	(Optional) Indicates the line number on which to execute the chat script. If you do not specify a line number, the current line number is chosen. If the specified line is busy, the script is not executed and an error message appears. If the dialer-string argument is specified, line-number must be entered; it is not optional if you specify a dialer string. This command functions only on physical terminal (TTY) lines. It does not function on virtual terminal (VTY) lines.
<i>dialer-string</i>	(Optional) String of characters (often a telephone number) to be sent to a DCE. If you enter a dialer string, you must also specify line-number, or the chat script <i>regex</i> will not start.

Command Mode

Privileged EXEC

Usage Guidelines

This command first appeared in Cisco IOS Release 10.0.

This command provides modem dialing commands for a chat script that you want to apply immediately to a line. If you do not specify a line, the script runs on the current line. If the specified line is already in use, the script is not activated and an error message appears.

The argument *regex* is used to specify the name of the modem script that is to be executed. The first script that matches the argument in this command and the **dialer map** command will be used. For more information about regular expressions, refer to the “Regular Expressions” appendix in this publication.

This command functions only on physical terminal (TTY) lines. It does not function on virtual terminal (VTY) lines.

Example

The following example forces a dialout on line 8 using the script *telebit*:

```
start-chat telebit line 8
```

Related Commands

You can use the master indexes or search online to find documentation of related commands.

chat-script
dialer map modem-script system-script
dialer map modem-script system-script name
script activation
script connection
script dialer
script reset
script startup

stop-character

To set the flow control stop character, use the **stop-character** line configuration command. Use the **no** form of this command to remove the character.

stop-character *ascii-number*
no stop-character

Syntax Description

ascii-number Decimal representation of the stop character.

Default

Decimal 19

Command Mode

Line configuration

Usage Guidelines

This command first appeared in Cisco IOS Release 10.0.

This command defines the character that signals the end of data transmission when software flow control is in effect. See the “ASCII Character Set” appendix in the *Configuration Fundamentals Command Reference* for a list of ASCII characters.

Example

The following example changes the stop character to Ctrl-E, which is decimal 5:

```
line 3
 stop-character 5
```

Related Commands

You can use the master indexes or search online to find documentation of related commands.

flowcontrol
start-character
terminal stop-character