

BR	Bridging and IBM Networking Command Reference
DR	Dial Solutions Command Reference
FR	Configuration Fundamentals Command Reference
IR	Cisco IOS Interface Command Reference
P1R	Network Protocols Command Reference, Part 1
P2R	Network Protocols Command Reference, Part 2
P3R	Network Protocols Command Reference, Part 3
QR	Quality of Service Solutions Command Reference
SR	Security Command Reference
VR	Voice, Video, and Home Applications Command Reference
WR	Wide-Area Networking Command Reference
XR	Cisco IOS Switching Services Command Reference

Symbols

FR-174	
! character	
ping command output	FR-523
# character	
privileged EXEC mode prompt	FR-8
. character	
ping command output	FR-523
/etc/printcap file	
modifying for printing	70
> prompt	FR-283
? command	xv

Numerics

7-bit character set	
changing for session	95
8-bit character set	
EXEC and configuration commands	
changing for a session	84
setting default value	50
setting for line	59
hardware databits	
changing for session	78
configuring on a line	48
software character bits	
changing for session	79
setting for line	49
special character width	

changing for session	95
configuring default	51
configuring for line	74

A

abbreviating commands	
context-sensitive help	xv
software recognition	FR-3
absolute-timeout command	66
activation character	
setting	46
activation-character command	46
alias command	FR-618
aliases	
creating for commands	FR-618
default	FR-618
displaying	FR-671
ASCII	
activation character	46
character	
widths	74, 95
character set	
(table)	FR-741
disconnect character	52
dispatch character	53, 80
escape character	58, 83
hold character	61, 86
padding	68, 91
start character	97
stop character	99
async-bootp command	FR-322
attach command	FR-488
attach shelf command	FR-694
autobaud command	47

B

banner exec command	FR-112
banner incoming command	FR-114
banner login command	FR-115
banner motd command	FR-117
banners	
disabling on a line	FR-112, FR-115, FR-139
enabling on a line	FR-112, FR-115, FR-139
EXEC, displaying	FR-112
for reverse Telnet lines	FR-114
incoming message	FR-114
line number	FR-144
login	FR-115
MOTD	FR-117
using to announce system shutdown	FR-117

- See also messages
- baud rate
 - receive, changing for session 94
 - See also line speed
- boot bootldr command FR-286
- boot bootstrap command FR-288
- boot buffersize command FR-199
- boot command FR-282
- boot config command FR-200
- BOOT environment variable
 - rearranging order of entries FR-292
 - specifying FR-290, FR-293
- boot field
 - bit settings, listing FR-300
 - default values, changing FR-295, FR-297
- boot flash command FR-282
- boot host command FR-202
- booting
 - from Flash FR-290
 - from network server FR-282
 - (example) FR-284
 - manually from Flash FR-282
 - system software, configuration register FR-295, FR-297
- BOOTLDR environment variable, specifying FR-286
- boot network command FR-204
- boot register FR-295, FR-297
- bootstrap image
 - backing up on a server FR-253
 - secondary FR-288
- boot system command FR-290, FR-291
- Break key FR-293
- buckets-of-history-kept command FR-352
- buffers
 - character, for terminal sessions 53, 56
 - command history
 - changing for session FR-33
 - setting for a line FR-16, FR-18
 - configuration file, changing size FR-199
 - interface buffer pool tuning FR-622
 - management parameters FR-621, FR-623
 - message logging to internal FR-505
 - public buffer pool tuning FR-622
 - size, setting FR-621, FR-623
 - statistics, displaying FR-672
- buffers command FR-621
- buffers huge size command FR-623

C

- calendar set command FR-624
- cautions
 - usage in text xiii
- CCO

- accessing xiv
- definition xiv
- cd command FR-168
- CDP
 - enabling and disabling for routing device FR-356
 - enabling on an interface FR-354
 - global information, displaying FR-395
 - interface status information, displaying FR-398
 - neighbor
 - information, displaying FR-399
 - table, clearing FR-359
 - neighbor device, displaying information FR-396
 - traffic counters, clearing FR-358
 - traffic information, displaying FR-401
 - transmission hold time, configuring FR-355
 - transmission timer, setting FR-357
- cdp enable command FR-354
- cdp holdtime command FR-355
- cdp run command FR-356
- cdp timer command FR-357
- character data bits
 - changing for session 79
 - setting for line 49
- character padding
 - changing for session 91
 - configuring for line 68
- character set
 - 7-bit for standard U.S. characters 95
 - 8-bit
 - See 8-bit character set
- character width
 - EXEC process
 - changing for session 84
 - configuring for a line 59
 - defining default 50
 - special characters
 - changing for session 95
 - configuring for line 74
 - defining default 51
- checksums
 - system images, verifying FR-254
- Cisco Connection Online
 - See CCO
- Cisco Discovery Protocol
 - See CDP
- Cisco IOS
 - saving configuration changes xxi
- Cisco-supported RFCs
 - (table) FR-753
- clear card-message command FR-219
- clear cdp counters command FR-358
- clear cdp table command FR-359
- clear ip wccp command FR-148
- clear logging command FR-490
- clear tcp command FR-119

- clock calendar-valid command FR-625
- clock read-calendar command FR-626
- clock set command FR-627
- clock summer-time command FR-628
- clock timezone command FR-630
- clock update-calendar command FR-631
- command FR-180
- command alias
 - See aliases
- command history
 - buffer size
 - changing for session FR-33
 - setting for a line FR-16, FR-18
 - displaying previous commands FR-26
 - recalling commands FR-26
- command modes
 - exiting FR-11
 - global configuration FR-207
 - privileged EXEC FR-8
 - summary (table) xx
- commands
 - abbreviating FR-3
 - history
 - See command history
 - mapping old to new
 - (table) FR-321
 - mapping old to new (table) FR-198, FR-218, FR-247
- command syntax
 - help FR-14
- community access string
 - setting for SNMP FR-450
- compressed system images FR-292
- compressing configuration files FR-210
- CONFIG_FILE environment variable, specifying FR-200
- config-register command FR-295
- configuration, saving xxi
- configuration file
 - active, displaying FR-215
 - buffer, changing size FR-199
 - copying
 - to an rcp server FR-252
 - host
 - default filename FR-212
 - loading from a server FR-202, FR-212
 - network
 - default filename FR-212
 - loading from a server FR-212
 - network server, storing FR-254
- NVRAM
 - displaying file FR-216
- storing
 - in CONFIG_FILE environment variable FR-254, FR-255
 - in NVRAM FR-254, FR-255

configuration files

- copying
 - to an rcp server FR-203, FR-205, FR-253
- configuration mode
 - exiting FR-10
- configuration register
 - streamlined setup facility FR-37
- configure command FR-207
- configure network command
 - See copy command
- configure overwrite-network command
 - See copy command
- confreg command FR-297
- connections
 - incoming, definition FR-114
 - naming FR-141
 - notification of pending output 67
 - refusing full duplex 101
- console
 - displaying debug messages 89
 - logging messages FR-506
- contact string
 - setting for SNMP FR-452
- continue command FR-299
- copy FR-193
- copy bootflash rcp command FR-260
- copy command FR-249
- copy erase flash command
 - See erase flash command
- copy flash rcp command FR-258
- copy rcp flash command
 - example FR-256
- copy rcp running-config command FR-260
- copy rcp startup-config command FR-260
- copy tftp flash command
 - example FR-257
- copy verify bootflash command
- copy verify command
 - See verify command
- copy verify flash command
 - See verify command
- copy xmodem command FR-224
- copy ymodem command FR-225
- Ctrl-C command FR-143
- Ctrl-Z command FR-143

D

- data bits
 - changing character 79
 - setting for session 49
- databits command 48
- data-character-bits command 49
- data flow control
 - setting 85

- data size
 - RTR FR-374, FR-375
- debug command output
 - displaying 89
- debug messages
 - displaying enabled FR-553
- default form of a command
 - using xxi
- default-value exec-character-bits command 50, 95
- default-value special-character-bits command 51
- delete command FR-169
- diag command FR-491
- dir command FR-170
- directory
 - print working FR-182
 - remove FR-184
- disable command FR-4
- disconnect character
 - setting 52
- disconnect-character command 52
- diskless boot
 - configuring FR-330
- dispatch character
 - changing for session 80
 - configuring for line 53
- dispatch-character command 53
- dispatch-machine command 54
- dispatch-timeout command 56
- distributions-of-statistics-kept command FR-360
- DNS
 - enabling for rcp and rsh FR-331
- Domain Name System
 - See DNS
- downward-compatible-config command FR-632

E

- editing command FR-5
- editor
 - enhanced mode
 - disabling for a line FR-5
 - disabling for session FR-28
 - enabling for a line FR-5
 - enabling for session FR-28
- enable command FR-8, FR-695
- end command FR-10
- end-of-line character
 - changing 104
- enhanced editing mode
 - See editor, enhanced mode
- environmental conditions
 - at last shutdown FR-557
 - table of measurements within specification FR-560
 - temperature and voltage FR-557

- environment variables
 - BOOT, specifying FR-290
 - BOOTLDR, specifying FR-286
 - CONFIG_FILE, specifying FR-200
- erase bootflash command
 - See erase command
- erase command FR-172
- erase flash command FR-226, FR-265
 - See erase command
- erase start-up config command
 - See erase command
- error messages
 - logging priorities
 - (table) FR-506
 - logging priorities (table) FR-575
 - redirecting FR-516
- escape character
 - changing for session 83
 - defining for a line 58
- escape-character command 58
- exception core-file command FR-494
- exception dump command FR-496
- exception linecard command FR-498
- exception memory command FR-500
- exception protocol command FR-502
- EXEC
 - mode
 - default aliases FR-618
 - process
 - delaying startup of FR-663
 - disabling on a line FR-121
 - displaying messages upon creation FR-112
 - enabling on a line FR-121
 - setting timeout interval FR-124
 - prompt
 - setup command facility FR-37
- exec-banner command FR-112, FR-115
- exec-character-bits command 59
- exec command FR-121
- exec-timeout command FR-124
- execute-on command FR-227
- exit
 - configuration mode FR-10
- exit command FR-11

F

- file
 - display FR-180
- file compression FR-210
- file prompt command FR-174
- files
 - download mode 82
- file system

- erase FR-172
- list FR-170
- setting the default FR-168
- filter-for-history command FR-362
- filtering
 - establishing packet size for SNMP FR-467
- Finger protocol
 - enabling FR-664
- Flash file system
 - check and repair FR-178
 - format FR-176
 - make directory FR-179
 - recover deleted file FR-191
 - remove directory FR-184
 - rename file FR-183
 - squeeze FR-190
 - verify memory FR-193
- Flash load helper, monitoring FR-235
- Flash memory
 - booting automatically FR-290
 - erasing internal FR-265
 - formatting FR-175
 - partitioning FR-267
 - verifying checksum FR-193
- Flash memory device
 - deleting a file FR-169
- flow control
 - changing for session 85
 - end transmission 99
 - start character 97
 - stop character 99
- format command FR-175
- frequency command FR-364
- front panel LED message FR-219
- fsck command FR-178
- FTP Server
 - restricted regions FR-698
 - router acting as FR-697
- ftp-server enable command FR-697
- ftp-server topdir command FR-698
- full-help command FR-12

G

- global configuration command mode FR-207
- global configuration mode
 - summary xx

H

- hardware
 - break signal 100

- flow control 85
- Health Monitor
 - managed shelf polling FR-712
 - SNMP traps FR-727, FR-729
- help
 - user-level commands FR-12
- help command xv, FR-14
- helper addresses
 - IP FR-157
- High System Availability
 - See HSA
- history command FR-16
- history for RTR
 - buckets kept FR-352
 - displaying FR-434
 - filters FR-362
 - lives kept FR-369
 - samples kept FR-393
- history size command FR-18
- hold character
 - changing for session 86
 - configuring for line 61
- hold-character command 61
- hops-of-statistics-kept command FR-366
- host configuration file FR-202
 - changing FR-202
 - copying from a server using rcp FR-254
 - example FR-260
 - default filename FR-212
 - loading from a server FR-202, FR-212
- host name
 - router FR-633
- hostname command FR-633
- hours-of-statistics-kept command FR-368
- HSA
 - automatic synchronization mode, starting FR-315
 - configuration synchronization
 - automatic FR-315
 - manual FR-319
 - configuring default slave RSP FR-316
 - master and slave, ensuring identical configurations FR-315
 - reload slave RSP card FR-318
 - slave image
 - reloading FR-318
 - specifying FR-317
 - synchronizing configurations
 - automatically FR-315
 - manually FR-319

I

- idle-terminal message
 - enabling FR-146

- incoming connections
 - definition FR-114
- informs
 - operation, enabling FR-454
- insecure command 62
- interface configuration mode
 - summary xx
- internal buffer
 - message logging to FR-505
- international character sets
 - supporting 95
 - See also 8-bit character set
- international command FR-150
- invalidated system images FR-274
- IP
 - routing
 - displaying status of interfaces FR-156, FR-445
- ip bootp server command FR-634
- ip ftp passive command FR-325
- ip ftp password command FR-326
- ip ftp source-interface command FR-327
- ip ftp username command FR-328
- ip http access-class command FR-19
- ip http authentication command FR-20
- ip http port command FR-21
- ip http server command FR-22
- ip rarp-server command FR-329
- ip rcmd domain-lookup command FR-331
- ip rcmd rcp-enable command FR-332, FR-338
- ip rcmd remote-host command FR-333
- ip rcmd remote-username command FR-336
- ip rcmd rsh-enable command FR-338
- ip telnet source-interface command FR-635
- ip tftp source-interface command FR-636
- ip wccp enable command FR-151
- ip wccp redirect-list command FR-153
- ip web-cache redirect command FR-155

K

- keepalive packets
 - generating FR-528, FR-529
- keymaps
 - specifying for session 87

L

- length command 63
- lines
 - sending messages to FR-143
- line speed
 - receive speed

- changing for session 94
- transmit and receive speed
 - changing for session 96
 - transmit speed
 - changing for session 106
- link traps
 - disabling FR-477
- lives-of-history-kept command FR-369
- loading the configuration file FR-204
- load-interval command FR-637
- load statistics
 - interval FR-637
- location command 64
- location string
 - setting FR-463
- lockable command 65
- logging buffer
 - clearing FR-490
- logging buffered command FR-505
- logging command FR-504
- logging console command FR-506
- logging facility command FR-508
 - facility-type keywords (table) FR-508
- logging history command FR-510
- logging history size command FR-510, FR-512
- logging linecard command FR-513
- logging messages
 - See message logging
- logging monitor command FR-515
- logging on command FR-516
- logging source-interface command FR-518
- logging synchronous command FR-519
- logging syslog-server command FR-699
- logging trap command FR-521
- logout
 - warning users of impending 66
- logout-warning command 66

M

- MAC address
 - mapping to IP address FR-329
- manual booting
 - from Flash FR-282
 - from ROM FR-282
- mapping
 - MAC address-to-IP address FR-329
- memory-size iomem command FR-266
- menu (EXEC) command FR-24
- menu clear-screen command FR-125
- menu command FR-126
 - resume FR-127
- menu default command FR-128
- menu line-mode command FR-129

- menu options command FR-130
- menu prompt command FR-131
- menu single-space command FR-132
- menu status-line command FR-133
- menu text command FR-134
- menu title command FR-136
- message
 - front panel LED display FR-219
 - specifying front panel LED FR-238
- message logging
 - console FR-506
 - enabling FR-516
 - history table size FR-512
 - monitor FR-515
 - SNMP trap FR-510
 - UNIX syslog server FR-504
- message-of-the-day banner
 - See MOTD banner
- message queue length
 - SNMP FR-469
- messages
 - busy FR-142
 - displaying debug 89
 - length FR-143
 - line activation, displaying FR-112
 - line-in-use FR-142
 - redirecting system error FR-516
 - sending to other terminals FR-143
 - vacant terminal FR-146
 - See also banners
 - See also message logging
- MIB
 - Cisco Round-Trip Time Monitor FR-383
 - RMON FR-376, FR-380
- microcode
 - loading Cisco IOS image FR-231
 - loading from Flash memory FR-229
 - reloading FR-233
- microcode (Cisco IOS image) command FR-231
- microcode command FR-229
- microcode reload command FR-233
- mkdir command FR-179
- modes
 - See command modes
- monitor
 - message logging to FR-515
- MOP
 - server
 - booting automatically FR-290
 - forwarding boot requests FR-340
- mop device-code command FR-339
- mop retransmit-timer command FR-340
- more FR-235
- more command FR-180
- more flh:logfile command FR-235

- MOTD banner
 - configuring FR-117
- motd-banner command FR-139

N

- name-connection command FR-141
- network configuration file FR-204
 - copying from a server using rep FR-254
 - example FR-260
 - default filename FR-212
 - changing FR-204
 - loading from a server FR-212
- network services
 - tailoring use of FR-528, FR-529
- no form of a command
 - using xxi
- no menu command FR-138
- nonvolatile RAM file compression FR-210
- notes
 - usage in text xiii
- notify command 67
- ntp access-group command FR-639
- ntp authenticate command FR-641
- ntp authentication-key command FR-642
- ntp broadcast client command FR-645
- ntp broadcast command FR-644
- ntp broadcastdelay command FR-646
- ntp clock-period command FR-647
- ntp disable command FR-648
- ntp master command FR-649
- ntp peer command FR-651
- ntp server command FR-653
- ntp source command FR-655
- ntp trusted-key command FR-656
- ntp update-calendar command FR-657
- null bytes
 - end of string 68, 91
- NVRAM file compression FR-210

O

- o command FR-300
- oid command FR-701
- online documentation
 - See CCO
- output notification
 - configuring for session 90
 - setting for line 67
- owner command FR-371

P

- packet
 - maximum size, establishing FR-467
 - SNMP, filtering FR-467
- packet dispatch character
 - changing for session 80
 - setting for line 53
- padding
 - changing for session 91
 - configuring for line 68
- padding command 68
- parity
 - changing for session 92
 - setting for line 69
- parity command 69
- partition command FR-267
- partition flash command FR-267
- paths-of-statistics-kept command FR-372
- Performance Data Collection
 - configuring FR-705
 - enabling FR-695
 - SNMP data FR-717, FR-732
 - transfer method FR-736
- period (.) character
 - ping command output FR-523
- ping (privileged) command FR-522
- ping (user) command FR-525
- ping command FR-204
 - test characters (table) FR-522, FR-525
 - test connectivity FR-522, FR-525
- poll-interval command FR-703
- port queue
 - retry interval 93
- printer command (LPD) 70
- private command 72
- privileged EXEC command mode
 - entering FR-8
- privileged EXEC mode
 - summary xx
- probes
 - See RTR
- prompt
 - customizing FR-658
- prompt command FR-658
- prompts
 - system xx
- pwd command FR-182

Q

- question command xv
- queues

- length, SNMP trap queues FR-469

R

- RARP
 - router, configuring as server FR-329
- rcp
 - configuring FR-333, FR-337
 - copying files FR-332
 - DNS, enabling security FR-331
 - remote username FR-292
- rearranging entries in BOOT environment
 - variable FR-292
- references and recommended reading FR-747
- refuse-message command FR-142
- reload command FR-302
- reloading the operating system FR-302
- remote copy protocol
 - See rcp
- Remote Monitoring
 - See RMON
- remote shell
 - See rsh server
- remote username, rcp requests
 - default values FR-292
 - overriding default value FR-292
- rename command FR-183
- request-data-size command FR-374
- response-data-size command FR-375
- response time reporter
 - See RTR
- resume command FR-127
- retry interval
 - terminal port queue 93
- Reverse Address Resolution Protocol
 - See RARP
- RFC 1034
 - domain name servers FR-322
- RFC 1035
 - domain names FR-633
- RFC 1084
 - BOOTP requests for asynchronous interfaces FR-322
- RFC 1178
 - choosing a name for your computer FR-633
- RFC 1447
 - predefined SNMP views FR-475
- RFC 1516 FR-455
- RFC 1757
 - RMON alarm group FR-379
 - RMON MIB FR-376, FR-380
- RFC 742
 - Finger protocol FR-664
- RFC 865

- Quote of the Day servers FR-322
- RFC 868
 - time servers FR-322
- RFC 887
 - RLP servers FR-323
- RFC 903
 - RARP FR-330
- RFC 950
 - subnet masks FR-322
- RFCs
 - Cisco-supported (table) FR-753
- rmdir command FR-184
- RMON
 - agent status, displaying FR-402
 - alarms, enabling FR-379
 - enabling FR-382
 - event table FR-380
 - interface, enabling FR-376
- rmon alarm command FR-378
- rmon command FR-376
- rmon event command FR-380
- rmon queuesize command FR-382
- ROM, booting automatically FR-290
- ROM monitor mode
 - summary xx
- rotary groups
 - in-use message FR-146
- router
 - host name FR-633
- rsh command FR-342
- rsh server
 - (example) FR-343
 - access, granting FR-333
 - commands, executing FR-338, FR-342
 - DNS, enabling security FR-331
- RTR
 - application information, displaying FR-426
 - configuration information, displaying FR-431
 - history
 - collection FR-352
 - displaying FR-434
 - filters FR-362
 - lives kept FR-369
 - samples kept FR-393
 - operational state, displaying FR-436
 - probe
 - configuring FR-383
 - frequency FR-364
 - owner FR-371
 - scheduling FR-391
 - type FR-484
 - reaction trigger
 - configuring FR-388, FR-389
 - displaying FR-438
 - request data size FR-374

- resetting FR-390
- response data size FR-375
- statistics
 - displaying FR-428, FR-432, FR-478
 - hops kept FR-366
 - hours kept FR-368
 - kept FR-360
 - paths kept FR-372
- tags FR-480
- threshold FR-481
- timeout FR-482
- verify data FR-485
- rtr command FR-383
- rtr reaction-configuration command FR-386
- rtr reaction-trigger command FR-389
- rtr reset command FR-390
- rtr schedule command FR-391
- running configuration file
 - backing up on the server FR-254
 - copying to the server (example) FR-260
- rxboot ROM
 - streamlined setup facility FR-37

S

- samples command FR-705
- samples-of-history-kept command FR-393
- saving configuration changes xxi
- scheduler allocate command FR-660
- scheduler-interval command FR-661
- screen
 - length
 - changing for session 88
 - setting for line 63
 - output, pausing 61
 - width
 - changing for session 108
 - setting for line 109
- SDP
 - system controller FR-721
- See verify command
- send command FR-143
- serial device
 - location, setting 64
- service compress-config command FR-210
- service config command FR-204, FR-212
- service decimal-tty command FR-662
- service exec-wait command FR-663
- service finger command FR-664
- service hide-telnet-address command FR-665
- service linenumber command FR-144
- service nagle command FR-666
- service prompt config command FR-667
- services

- tailoring your network FR-528, FR-529
- service slave-log command FR-527
- service tcp-keepalives-in command FR-528
- service tcp-keepalives-out command FR-529
- service tcp-small-servers command FR-668
- service telnet-zero-idle command FR-669
- service timestamps command FR-530
- service udp-small-servers command FR-670
- set card-message command FR-238
- setup command
 - See setup command facility
- setup command facility FR-36
 - asynchronous interfaces
 - configuration (examples) FR-39 to FR-40
 - default client IP address
 - (examples) FR-39 to FR-40
 - configuration
 - (example) FR-38 to FR-42
 - configuration command script
 - (example) FR-40
 - configuration file, saving FR-37, FR-42
 - entering FR-36
 - entering after erasing configuration FR-37
 - global parameters
 - configuration (example) FR-38
 - interface parameters
 - configuration (example) FR-38 to FR-42
 - interface summary, viewing FR-38
 - prerequisite knowledge FR-36
 - sample configuration FR-38 to FR-42
 - System Configuration Dialog FR-36
 - (example) FR-38
 - returning to privileged EXEC prompt FR-37
 - terminating the configuration FR-38
- shelf
 - attributes FR-715, FR-734, FR-735
 - discovered FR-709
 - managed polling FR-719
 - starting a session on FR-694
 - type selection FR-707
- shelf-type command FR-707
- show FR-180
- show (Flash file system) command FR-269
- show aliases command FR-671
- show async-bootp command FR-344
- show bootflash command FR-270
- show bootvar command FR-305
- show buffers command FR-621, FR-672
- show c2600 command FR-532
- show c7200 command FR-536
- show calendar command FR-678
- show cdp command FR-395
- show cdp entry command FR-396
- show cdp interface command FR-398
- show cdp neighbors command FR-399
- show cdp traffic command FR-401
- show clock command FR-679
- show configuration command
 - See more command
- show context command FR-539
- show context command (for Cisco 2600 Series routers) FR-537
- show controllers (GRP image) command FR-541
- show controllers (line card image) command FR-544
- show controllers logging command FR-550
- show controllers tech-support command FR-551
- show debugging command FR-553
- show diag command FR-554
- show environment command FR-556
- show file command
 - See more command
- show file descriptors command FR-186
- show file information command FR-187
- show file systems command FR-188
- show flash command FR-270
- show flash summary command FR-277
- show flh-log command FR-240
 - See more flh
 - logfile command
- show gsr command FR-570
- show gt64010 command FR-571
- show history command FR-26
- show ip interface command FR-156
- show ip wccp command FR-159
- show ip wccp web-caches command FR-161
- show logging command FR-506, FR-510, FR-521, FR-573
- show memory command FR-577
- show microcode command FR-241
- show ntp associations command FR-680
- show ntp status command FR-684
- show pci command FR-581
- show pci hardware command FR-583
- show processes command FR-585
- show processes memory command FR-588
- show protocols command FR-590
- show reload command FR-308
- show rmon alarms command FR-404
- show rmon capture command FR-406
- show rmon command FR-402
- show rmon events command FR-409
- show rmon filter command FR-411
- show rmon history command FR-414
- show rmon hosts command FR-417
- show rmon matrix command FR-419
- show rmon statistics command FR-421
- show rmon topn command FR-424
- show rtr application command FR-426
- show rtr collection-statistics command FR-428
- show rtr configuration command FR-430

- show rtr distribution-statistics command FR-432
- show rtr history command FR-434
- show rtr operational-state command FR-436
- show rtr reaction-trigger command FR-438
- show rtr totals-statistics command FR-439
- show running-config command
 - See more command FR-215
- show snmp command FR-441
- show snmp pending command FR-445
- show snmp sessions command FR-446
- show snmp command FR-686
- show stacks command FR-591
- show startup-config command
 - See more command
- show startup-config command
 - See more command
- show subsys command FR-593
- show syscon discover command FR-709
- show syscon mibpoll command FR-712
- show syscon monitor command FR-715
- show syscon perfdata command FR-717
- show syscon sdp command FR-719, FR-721
- show syslog-server command FR-723
- show tcp brief command FR-602
- show tcp command FR-595
- show tdm connections command FR-603
- show tdm connections motherboard command
 - channel output, interpreting FR-603
- show tdm data command FR-604
- show tech-support command FR-605
- show version command FR-309
- show whoami command 73
- shutdown
 - enabling for SNMP FR-470
- Simple Network Management Protocol
 - See SNMP
- slave auto-sync config command FR-315
- slave default-slot command FR-316
- slave image command FR-317
- slave reload command FR-318
- slave sync config command FR-319
- slave terminal command FR-320
- SNMP
 - configuration parameters, displaying FR-573
 - message queue length FR-469
 - packet filtering FR-467
 - system contact, setting FR-452
 - system location, setting FR-463
 - system shutdown, enabling FR-470
 - trap message
 - source, setting FR-473
 - timeout FR-474
- SNMP server
 - informs
 - enabling FR-454
 - system location, setting FR-457
 - trap operation
 - enabling FR-454
 - recipient FR-457
- snmp-server access-policy command FR-448
- snmp-server chassis-id command FR-449
- snmp-server community command FR-450
- snmp-server contact command FR-452
- snmp-server context command FR-453
- snmp-server enable command FR-454
- snmp-server enable trap command FR-510
- snmp-server host command FR-457
- snmp-server informs command FR-461
- snmp-server location command FR-463
- snmp-server manager command FR-464
- snmp-server manager session-timeout command FR-465
- snmp-server packet-size command FR-467
- snmp-server party FR-468
- snmp-server party command FR-468
- snmp-server queue-length command FR-469
- snmp-server system-shutdown command FR-470
- snmp-server tftp-server-list command FR-471
- snmp-server trap-authentication command
 - See snmp-server enable traps command FR-472
- snmp-server trap-source command FR-473
- snmp-server trap-timeout command FR-474
- snmp-server view command FR-475
- snmp trap link-status command FR-477
- sntp broadcast client command FR-688
- sntp server command FR-690
- software configuration boot register FR-295, FR-297
- software flow control
 - changing for session 85
 - changing start character 97
- special-character-bits command 74
- special characters
 - activation character 46
 - changing for session 80
 - character width
 - changing for session 95
 - configuring for line 74
 - defining default 51
 - disconnect character 52
 - dispatch character
 - setting for line 53
 - escape character
 - changing for session 83
 - setting for line 58
 - hold character
 - changing for session 86
 - configuring for line 61
- Specifically FR-252
- speed
 - See line speed
- squeeze command FR-190

- start character
 - changing flow control 97
 - changing for session 97
- startup configuration file FR-260
- state-machine command 75
- statistics-distribution-interval command FR-478
- statistics for RTR
 - displaying FR-428, FR-432, FR-478
 - distributions kept FR-360
 - hops kept FR-366
 - hours kept FR-368
 - paths kept FR-372
- stop bits
 - changing for session 98
 - configuring for line 77
- stopbits command 77
- stop character
 - changing flow control 99
 - changing for session 99
- streamlined setup facility FR-37
 - (example) FR-43
 - booting from network server
 - interface IP parameters, configuring FR-43
 - configuration, corrupted startup FR-37
 - configuration register FR-37
 - rxboot ROM FR-37
- string
 - setting system location FR-457
 - SNMP community access, setting FR-450
 - system contact, setting FR-452
 - system location, setting FR-463
- subinterface configuration mode
 - summary xx
- syscon address command FR-725
- syscon community command FR-726
- syscon monitor command FR-727
- syscon monitor traps command FR-729
- syscon password command FR-731
- syscon poll-group command FR-732
- syscon shelf-id command FR-734
- syscon source-interface command FR-735
- Syslog Disk Logging
 - syslog server subfiles FR-699, FR-723
- syslog history table FR-573
- system buffer
 - See buffers
- system contact string
 - setting FR-452
- system controller
 - configuring FR-725
 - data collection FR-701, FR-703, FR-707
 - shelf configuration FR-731
 - shelf session FR-694
 - SNMP community string FR-726
- system error messages
 - redirecting FR-516
- system image file
 - copying from server to Flash (example) FR-256
- system images
 - checksum, verifying FR-193
 - compressed FR-292
 - copying from a server using rcp FR-292
 - copying using Xmodem FR-244
 - copying using Ymodem FR-244
 - default filename FR-291
 - invalidated FR-274
- system location string
 - setting FR-463
- system shutdown
 - enabling for SNMP FR-470
- system software
 - booting FR-290, FR-291
 - displaying version of FR-309

T

- Tab key
 - command completion xv
- tag command FR-480
- TCP
 - connections
 - clearing FR-119
 - keepalive protocol, activating FR-529
 - packet dispatch state machine 54
- technical publications and standards FR-750
- technical support information
 - displaying FR-605
- Telnet
 - addresses, suppressing FR-665
 - changing end-of-line characters 104
 - notification of pending output 67
 - Remote Echo option 101
 - Suppress Go Ahead option 101
- terminal
 - activation character
 - setting 46
 - changing
 - escape character 83
 - line speed 96
 - screen length 88
 - stop character 99
 - character
 - data bits 79
 - padding 91
 - character padding
 - configuring for line 68
 - displaying
 - debug messages 89
 - end-of-line character 104

- escape character, defining for a line 58
- file download mode 82
- flow control 85
- line speed 96, 106
- location, recording 64
- locking 65
- message length FR-143
- output notification 90
- packet dispatch character 80
- parity bit 92
- pausing output to screen 61
- port queue 93
- receive speed 94
- screen length
 - changing for session 88
 - configuring for line 63
- screen width
 - changing for session 108
 - configuring for line 109
- settings, saving 72
- specifying type 105
- start character 97
- type, configuring for a line 107
- terminal databits command 78
- terminal data-character-bits command 79
- terminal dispatch-character command 80
- terminal dispatch-timeout command 81
- terminal download command 82
- terminal editing command FR-28
- terminal escape-character command 83
- terminal exec-character-bits command 84
- terminal flowcontrol command 85
- terminal full-help command FR-31
- terminal history command FR-33
- terminal hold-character command 86
- terminal international command FR-163
- terminal keymap-type command 87
- terminal length command 88
- terminal monitor command 89
- terminal notify command 90
- terminal padding command 91
- terminal parity command 92
- terminal port queue
 - retry interval 93
- terminal-queue command 93
- terminal rxspeed command 94, 106
- terminal sessions
 - closing FR-11
- terminal special-character-bits command 95
- terminal speed command 96
- terminal start-character command 97
- terminal stopbits command 98
- terminal stop-character command 99
- terminal telnet break-on-ip command 100
- terminal telnet refuse-negotiations command 101
- terminal telnet speed command 102
- terminal telnet sync-on-break command 103
- terminal telnet transparent command 104
- terminal terminal-type command 105
- terminal txspeed command 106
- terminal-type command 107
- terminal width command 108
- test flash command FR-607
- test interfaces command FR-608
- test memory command FR-609
- TFTP
 - server
 - booting automatically FR-290
 - router, configuring to function as FR-345
- tftp FR-348
- tftp-server command FR-345
- tftp-server system command
 - See tftp-server command
- threshold command FR-481
- timeout command FR-482
- timeout interval 81
 - EXEC process, setting FR-124
 - terminal character dispatch 56
 - trap message FR-474
- trace
 - common problems FR-614
 - terminating FR-614
 - tracing IP routes FR-615
- trace (privileged) command FR-610
- trace (user) command FR-614
- trace command
 - common problems FR-610
 - extended test FR-610
 - IP
 - routes FR-611
 - privileged, overview FR-610
 - terminating FR-610
 - user, overview FR-614
- transfer-mode command FR-736
- trap
 - host, setting message queue length FR-469
 - message
 - establishing timeout FR-474
 - source interface FR-473
 - operation, enabling FR-454
 - recipient, specifying FR-457
 - triggers for RTR
 - configuring FR-388, FR-389
 - displaying FR-438
- Trivial File Transfer Protocol
 - See TFTP
- type command FR-483

U

- undelete command FR-191
- UNIX
 - compress command FR-292
 - Syslog Server
 - message logging to FR-504
 - uncompress command FR-292
- unrecognized command message
 - help command 59
- user EXEC mode
 - summary xx

V

- vacant-message command FR-146
- verify bootflash command FR-242
- verify command FR-193
- verify-data command FR-485
- verify flash command FR-243
- views, predefined
 - described in RFC 1447 FR-475

W

- width command 109
- word help
 - description FR-14
- write FR-172, FR-180, FR-279
- write memory command
 - See copy command

- write terminal command
 - See more command

X

- xmodem command FR-244