

Index: Cisco IOS Dial Solutions Command Reference, Release 12.0

Symbols

\$ character in regular expressions DR-913
* character in regular expressions DR-912
+ character in regular expressions DR-912
? character in regular expressions DR-912
? command xix
^ character in regular expressions DR-913
_ character in regular expressions DR-914

A

AAA/TACACS+
 arap authentication DR-650
 enable login authentication DR-179
AAA configuration
 virtual profiles, use with DR-783
abbreviating commands
 context-sensitive help xix
absolute DR-21
absolute-timeout command DR-174
access-class command DR-366
access control
 ARA DR-653, DR-654, DR-661
 LAT
 assigning names to group lists DR-389
 connections DR-366
 defining a group list DR-395
 specifying access conditions to nodes DR-386
access list command
 with regular expressions DR-910
 (example) DR-915
access lists
 DDR
 dialing, controlling DR-669, DR-697, DR-725
 types and numbers, supported (table) DR-669,
 DR-697, DR-725
access routers
 pooling, common hostname DR-598
access servers
 four services supported DR-173
anchoring
 regular expressions DR-913

AO/DI
 BAP number
 formats DR-874
 prefix DR-874
 client
 enabling DR-878
 mapping DR-879
 multilink PPP bundle
 receive only mode DR-877
AppleTalk Remote Access
 See ARA
ARA
 access control DR-653, DR-654, DR-661
 clients, connecting to virtual terminal lines DR-511,
 DR-520, DR-529
 monitoring DR-662
 session, automatic startup DR-622
arap authentication command DR-650
arap callback command DR-818
arap dedicated command DR-650
arap enable command DR-652
arap net-access-list command DR-654
arap noquest command DR-655
arap timelimit command DR-657
arap use-tacacs command DR-658
arap warningtime command DR-660
arap zonelist command DR-661
ASCII
 stop character DR-66
asterisk character in regular expressions DR-912
asynchronous mobility DR-628
async-bootp command DR-4
async default ip address command
 See peer default ip address command
async default routing command DR-7
async dynamic address command DR-8
async dynamic routing command DR-9
asynchronous
 interfaces
 group ranges DR-17
 members DR-24
 mobility DR-487
asynchronous interface, routing on, configuring
 manually DR-9
asynchronous interfaces
 compression
 ignore-pfc option for async drivers DR-578
 MPPC DR-578
 group
 effect of peer neighbor routes DR-591
async mode dedicated command DR-620
async mode interactive command DR-621
authentication translate option
 mapping to virtual interface template
 command DR-517, DR-538

- autocommand command DR-10
- autoconfigure, modem DR-88
- autodetect encapsulation command DR-260, DR-340
- autodetect encapsulation v120 command DR-646
- autohangup command DR-11
- automatic protocol startup
 - ARA DR-622
 - PPP DR-622
 - SLIP DR-622
- autoselect command DR-622

B

- backup delay command DR-744
- backup interface
 - Dialer Profiles DR-753
- backup interface command DR-745, DR-754
- backup interface dialer command DR-754
- backup load command DR-746, DR-756
- bandwidth
 - setting DR-238
- Bandwidth Allocation Control Protocol
 - See PPP, BACP DR-787
- bandwidth command DR-238
- bandwidth on demand, DDR DR-699
- baud rate
 - receive, configuring for a line DR-182
 - transmit, configuring for a line DR-198
 - transmit and receive, configuring for a line DR-189
 - X.3 PAD parameters DR-904
- BGP
 - filtering packets and routing information DR-910
 - IP access (example) DR-915
- Break key, use in login string DR-417
- Break signals DR-903
 - generating DR-463
 - X.3, action upon receipt of DR-903
- buffers
 - XRemote, changing size of DR-494
- busy-message command DR-368

C

- callback
 - ARA DR-818
 - ARA protocol chat scripts DR-821
 - dialer interface, non-DTR DR-815
 - enabling for PPP client DR-820
 - enabling on interface DR-813
 - enabling on the EXEC DR-824
 - exec chat scripts DR-823
 - forcing a waiting period DR-819

- PPP, client or server DR-815
- secure DR-812
- callback forced-wait command DR-819
- called-number command DR-68
- caller ID screening DR-826
 - configuring DR-204, DR-297, DR-828
 - platform support DR-204, DR-297, DR-828
- carrier wait time
 - DDR
 - interface disabling DR-711
 - map class DR-734
- cas-custom command DR-261
- cas-group (controller e1) command DR-267
- cas-group (controller t1) command DR-271
- cautions
 - usage in text xv
- CCL scripts, using modified and unmodified together DR-623
- CCO
 - accessing xvi
 - definition xvi
- Challenge Handshake Authentication Protocol
 - See CHAP
- channel-group command DR-275
- channelized E1
 - channel groups DR-275
 - controller, statistics DR-281, DR-320
 - loopback
 - local, interface DR-313
- channelized T1
 - channel groups DR-275
 - controller
 - descriptive name DR-286
 - loopback
 - local, entire line DR-312
 - local, interface DR-313
 - remote, interface DR-315
- CHAP
 - authentication method DR-592
 - rotary, common alias for routers DR-598
 - username and password, specifying DR-617
 - using with DDR DR-704
- character mapping
 - creating DR-473
 - determining DR-451
 - displaying DR-452
- characters in regular expressions
 - \$ character DR-911
 - * character DR-911
 - + character DR-911
 - . character DR-911
 - ? character DR-911
 - ^ character DR-911
 - _ character DR-911
- chat-script command DR-672

- regular expressions
 - (example) DR-915
- chat scripts
 - ARA protocol-callback DR-821
 - backward compatibility, SLIP and PPP DR-640
 - DDR DR-676
 - escape sequences
 - (table) DR-673
 - example DR-915
 - EXEC callback DR-823
 - expect-send pairs
 - sample (table) DR-674
 - naming conventions DR-672, DR-676
 - physical terminal lines, using on DR-42, DR-821, DR-823
 - starting
 - because of incoming connections DR-44
 - from the EXEC DR-64
 - manually for a line DR-64
 - on line activation DR-42
 - on line reset DR-46
 - on system startup DR-48
 - writing DR-672
- chunk size, configuring IP DR-375
- CIPX DR-632
- Cisco 2520 through 2523 routers
 - low-speed serial interfaces, physical layer DR-39
- Cisco Connection Online
 - See CCO
- Cisco IOS
 - saving configuration changes xxiv
- clear controller command DR-277
- clear counters (async) command DR-70
- clear counters line command DR-72
- clear dialer command DR-680, DR-686
- clear entry command DR-369
- clear interface virtual-access command DR-768
- clear line command DR-12
- clear modem command DR-74
- clear modem counters command DR-76
- clear modempool-counters command DR-78
- clear snapshot quiet-time command DR-832
- clear vpdn history failure command DR-842
- clear vpdn tunnel command DR-843
- clock rate command DR-239
- clock rate examples DR-240
- clock signal
 - inverting DR-251
- clock source (Cisco AS5200) command DR-280
- clock source (controller) command DR-278
- clock source command
 - interface configuration DR-241
- clock source line command DR-278
- Combinet devices
 - protocols supported DR-290, DR-349
- Combinet Proprietary Protocol
 - See CPP
- command modes
 - summary (table) xxiii
- Common Command Language (CCL) DR-623
- compress command DR-242, DR-578
- compression
 - LAPB DR-242
 - MPPC
 - ignore-pfc option DR-578
 - PPP DR-578
 - RAND compression algorithm DR-242
- compress mppc command DR-578
- compress predictor command DR-242, DR-578
- compress stac command DR-242, DR-578
- configuration, saving xxiv
- connect command DR-370, DR-384, DR-460
- connections
 - displaying open DR-488, DR-567
 - escaping from DR-419, DR-561
 - LAT DR-384 to DR-385
 - mobile remote node DR-487
 - NASI clients, connecting to DR-760
 - NetBEUI DR-59
 - enabling DR-38
 - notification of pending output DR-418
 - PPP DR-637
 - refusing full duplex DR-464
 - resuming DR-40
 - reverse DR-30, DR-34
 - rlogin DR-421, DR-423, DR-424, DR-459 to DR-461
 - SLIP DR-642
 - switching between DR-40
 - Telnet DR-459 to DR-462
 - Telnet, configuring a line DR-465
 - TN3270 DR-470
 - viewing the status of TCP DR-445
 - X.3 PAD DR-568
 - XRemote DR-489, DR-493, DR-497
- console port, configuring DR-22
- controller command DR-281
- copy modem command DR-80
- CPP
 - and PPP support DR-341
 - authentication, negotiating with DR-283, DR-341
 - callback, accepting DR-285, DR-342
 - encapsulation DR-290, DR-349
 - half-bridging DR-290, DR-349
 - PPP support DR-283
- cpp authentication command DR-283, DR-341
 - usernames and passwords used DR-283
- cpp callback accept command DR-285, DR-342
- crc4 command DR-244
- crc bits 5 command DR-245

D

data communications equipment

See DCE

data compression DR-242

data terminal ready

See DTR

dce-terminal-timing enable command DR-246

DDR

bandwidth on demand DR-699

carrier wait time

specifying for interface DR-711

specifying for map class DR-734

chat scripts DR-676

sample expect-send pairs (table) DR-674

writing DR-672

clearing dialer interface statistics DR-680, DR-686

controlling dialing

by protocol DR-668, DR-696, DR-724

by protocol and access list DR-668, DR-696,
DR-724

diagnostics for interface

displaying DR-224

diagnostics for interface, displaying DR-713,
DR-737

dialer hold queue

and rotary groups DR-692

dialers supported DR-692

dialer pool, ISDN B channels

maximum number DR-730

minimum number DR-730

dialer profile

CHAP or PAP, username DR-732

dialer interface data, displaying DR-224,
DR-713, DR-737

dialer pool, members DR-730

dialer pool, specifying DR-728

dialer pool and dialer pool-member
(example) DR-728

links, maximum number DR-727

link to physical interface DR-730

specifying DR-732

dialer rotary groups

assigning interfaces DR-706

setting interface priority DR-705

dialing pool

dialer profile DR-728

DTR dialing

not for rotary group (hunt group)

leaders DR-681, DR-687

outgoing calls only DR-681, DR-687

receiving calls from DR-681, DR-687

remote interface passive DR-681, DR-687

remote interface to terminate calls DR-681,
DR-687

show dialer display DR-715, DR-739

identifying best line DR-708

idle time, line DR-693

idle time, map-class DR-722

interface timeout, setting DR-688

legacy

assigning dial string-telephone number DR-709

calls to single site, dial string DR-683, DR-709

dialer map

ISDN interfaces DR-348

dialer map, for outbound calls DR-701

dialer map, ISDN interfaces DR-345

enabling DR-682, DR-694

forwarding broadcasts DR-344, DR-347

ISDN Advice of Charge, BRI

(example) DR-345

snapshot routing DR-833

specifying one telephone number DR-683

outbound calls, identifying best line DR-708

protocol address for broadcasts DR-702

setting dialer load threshold DR-699

single DDR telephone number DR-709, DR-733

supported access list types and numbers

(table) DR-669, DR-697, DR-725

telephone number to call

specifying single DR-683

debug serial-interface command DR-617

DEC LAT

See LAT

DECnet

access list (example) DR-915

filtering packets and routing information DR-910

dedicated line, configuring DR-651

default form of a command

using xxiv

delta

PPP BACP negotiations

telephone number change DR-797

description (controller) command DR-286

description (interface) command DR-247, DR-287

DHCP

IP address pooling DR-581

show settings DR-610

specifying server DR-583

dial backup

Dialer Profiles DR-753 to DR-756

Dialer Watch DR-749

watched routes DR-749

line delay

setting DR-744

secondary line

selecting DR-745, DR-754

traffic load threshold

setting DR-746, DR-756

dialer DR-682, DR-694

- dialer callback-secure command DR-812
- dialer callback-server command DR-813
- dialer caller command DR-826
- dialer dtm command DR-681, DR-687
- dialer enable-timeout command DR-688
- dialer fast-idle (interface) command DR-689
- dialer fast-idle(map-class dialer) command
 - map-class configuration DR-720
- dialer group
 - assigning interface DR-691, DR-721
- dialer-group command DR-691, DR-721
- dialer hold queue
 - dialers supported DR-692
 - rotary groups DR-692
- dialer hold-queue command DR-692
- dialer idle-timeout (interface) command DR-693
- dialer idle-timeout (map-class dialer) command
 - map-class configuration DR-722
- dialer in-band command DR-682, DR-694
- dialer interface
 - clearing statistics DR-680
 - dial backup
 - Dialer Profiles DR-753
- dialer interface, clearing statistics DR-686
- dialer isdn command DR-723
- dialer isdn short-hold command DR-343
- dialer-list command DR-696
- dialer-list protocol command DR-668, DR-724
- dialer load-threshold command DR-699
 - multilink PPP and idle timers DR-601, DR-693, DR-700, DR-803
- dialer map
 - map class name DR-316
- dialer map (AOC) command DR-344
- dialer map (SPC) command DR-347
- dialer map, defining configuration parameters
 - for DR-736, DR-814
- dialer map bridge command DR-701
- dialer map class, for ISDN Advice of Charge DR-344
- dialer map command DR-701
 - form used for ISDN Advice of Charge DR-344
 - ISDN Advice of Charge, usage guidelines DR-345
 - ISDN semipermanent connections DR-701
 - no effect on DTR dialing DR-681, DR-687
 - regular expressions DR-910
- dialer map snapshot command DR-833
- dialer max-link command DR-727
- dialer outgoing command DR-288
- dialer pool
 - Dialer Profiles, backup interfaces DR-753
- dialer pool command DR-728
- dialer pool-member command DR-730
- dialer priority command DR-705
- Dialer Profiles
 - dial backup DR-753 to DR-756
- dialer remote-name command DR-732
- dialer rotary-group command DR-706
- dialer rotary groups
 - assigning interfaces DR-706
 - defining DR-712, DR-735
 - setting interface priority DR-705
- dialer rotor command DR-708
- dialer string class command DR-733
- dialer string command DR-683, DR-709, DR-733
 - DDR, dialer profiles DR-733
 - legacy DDR DR-683, DR-709
 - no effect on DTR dialing DR-681, DR-687
- dialer voice-call command DR-289
- dialer wait-for-carrier-time (map-class dialer)
 - command DR-734
- dialer wait-for-carrier-time command
 - interface configuration DR-711
- Dialer Watch
 - overview DR-749
 - watched routes DR-749
- dialer watch-disable command DR-750
- dialer watch-group command DR-751
- dialer watch-list command DR-752
- dial-on-demand routing
 - See DDR
- dial string (telephone number), specifying DR-683, DR-709, DR-733
- disconnect command DR-373
- disconnect warning time, setting DR-660
- dispatch-timeout command DR-188
- dollar sign character in regular expressions DR-913
- dte-invert-txc command DR-248
- DTR dialing
 - not affected by dialer map and dialer string commands DR-681, DR-687
 - not for rotary group (hunt group) leaders DR-681, DR-687
 - outgoing calls only DR-681, DR-687
 - remote interface configured to terminate calls DR-681
 - remote interface passive DR-687
 - remote interface passive only DR-681
 - remote interface to terminate calls DR-687
- DTR signal pulsing DR-253
- dynamic routing, asynchronous connection, configuring
 - manually DR-9

E

- E1 R2
 - countries supported DR-262
 - country settings DR-262
 - customizing parameters DR-262
- Easy IP DR-884

- editing command DR-175
- editor
 - enhanced mode
 - disabling for a line DR-175
 - enabling for a line DR-175
 - Release 9.21 keys and functions (table) DR-175
- EIA/TIA-232
 - handshake DR-40
- encapsulation
 - dynamic detection on serial or ISDN
 - interface DR-260, DR-340
 - PPP DR-249, DR-580
 - V.120
 - dynamically set DR-646
- encapsulation command DR-249, DR-624
- encapsulation cpp command DR-290, DR-349
- encapsulation ppp command DR-580
- escape character
 - returning to EXEC prompt DR-489
- exec command DR-13
- EXEC process
 - disabling on a line DR-13
 - enabling on a line DR-13
 - setting timeout interval DR-14
- exec-timeout command DR-14, DR-188
- extended TACACS
 - username authentication DR-617

F

- fast idle timer
 - interface, setting DR-689
 - map class, setting DR-720
- flow control
 - configuring for a line DR-15
 - input, X.3 PAD parameters DR-905
 - start character, configuring for a line DR-63, DR-190
 - stop character, configuring for a line DR-66
- flowcontrol command DR-15
- forwarding mask
 - X.3 PAD DR-902
- fractional data line DR-281
- framed mode on G.703-E1 interface DR-254
- frame type
 - channelized E1, channelized T1 DR-291
- framing command
 - channelized E1, channelized T1 DR-291

G

- G.703-E1 interface
 - CRC4 DR-244

- framed mode DR-254
- time slot 16 DR-257
- unframed mode DR-254
- global configuration mode
 - summary xxiii
- global translation options
 - translate command DR-513
 - translate lat command DR-516
 - translate tcp command DR-526
 - translate x25 command DR-537
- global translation options, translate command DR-522, DR-531
- group and member asynchronous interfaces DR-17, DR-24
- group range command DR-17
- guests
 - allowing DR-655
 - disallowing DR-655

H

- half-bridging
 - AppleTalk DR-594
 - Combinet devices
 - not supporting PPP DR-349
 - Combinet devices not supporting PPP DR-290
 - IP DR-595
 - IPX DR-596
 - serial or ISDN, and Ethernet subnetwork DR-594, DR-595, DR-596
- hardware flow control
 - configuring for a line DR-15
- header-compression translate option
 - mapping to virtual interface template
 - command DR-517, DR-538
- help command xix
- hold-queue command DR-18
- host-failed message DR-368
- host name
 - defining X.25 DR-550

I

- idle time DR-61, DR-508
- idle time, DDR
 - setting for line DR-693
 - setting for map-class DR-722
- idle timer
 - multilink PPP and dialer-load threshold DR-803
- idle timer, multilink PPP and dialer-load
 - threshold DR-601, DR-693, DR-700
- ignore-dcd command DR-250

- interface
 - virtual template, configuring DR-769, DR-782
- interface bri command DR-200, DR-868
 - X.25 traffic on D channel DR-868
- interface configuration mode
 - summary xxiii
- interface dialer command DR-712, DR-735
- interfaces
 - asynchronous
 - DDR dialer maps, configuring DR-703
 - backup, configuring DR-745, DR-754
 - descriptive name, adding DR-247, DR-287
 - dial backup
 - Dialer Profiles DR-753
 - G.703-E1
 - CRC4 DR-244
 - enabling framed mode DR-254
 - time slot 16 DR-257
 - ISDN, configuring for DDR DR-345, DR-348, DR-703
 - serial, dialer maps, configuring for DDR DR-702
- interface serial command DR-292
- interface virtual-template command DR-769, DR-782, DR-784
- interrupt characters, configuring faster response DR-375
- invert txclock command DR-251
- IP
 - addresses
 - assigning to TCP port DR-374
 - pooling, show settings DR-612
 - pools, defining local DR-585
 - pools, enabling DR-581
 - Easy IP, commands DR-884
 - ip access-group command DR-19, DR-626
 - ip address command DR-627
 - ip address negotiated command DR-884
 - ip address-pool command DR-581
 - ip alias command DR-374
 - ip as-path access-list command
 - with regular expressions DR-910, DR-915
 - ip dhcp-server command DR-583
 - ip local pool command DR-585
 - ip mtu command DR-20
 - ip nat inside source command DR-885
 - ip-pool translate option
 - mapping to virtual interface template command DR-517, DR-538
 - ip rtp reserve command DR-587
 - ip tcp async-mobility server command DR-628
 - ip tcp chunk-size command DR-375
 - ip tcp header-compression command DR-629
 - ip unnumbered command DR-631
- IPX
 - client, connecting to asynchronous interface over PPP DR-633
 - compression on PPP links DR-632
 - loopback interfaces DR-513, DR-522, DR-531
 - over PPP DR-633
 - clients connecting to virtual terminal lines DR-513, DR-522, DR-531
 - ipx compression cipx command DR-632
 - ipx loopback translate option
 - mapping to virtual interface template command DR-517, DR-538
 - ipx nasi-server enable command DR-760
 - IPX over PPP
 - on VTY lines DR-543
 - ipx ppp-client command DR-633
 - ISDN
 - active calls DR-334
 - active calls, displaying DR-231, DR-355
 - Advice of Charge
 - short-hold timer DR-343
 - static idle timer and short-hold timer (example) DR-343
 - B1 channel SPID, defining DR-212
 - B2 channel SPID, defining DR-214
 - Basic Rate Interface (BRI)
 - over leased-lines, treated as synchronous serial DR-350
 - subinterface, configuring DR-200
 - B channel
 - order selection DR-296
 - BRI subinterface, configuring DR-868
 - called-party number verification DR-202
 - caller ID callback DR-825 to DR-829
 - call history DR-334
 - call history, displaying DR-231, DR-355
 - calling number identification DR-205
 - call speed, origin and delivery mismatch DR-210, DR-305
 - channelized T1
 - PRI timeslots DR-318
 - channel service states, displaying DR-351
 - configuring static TEI DR-871
 - dialer maps, configuring for DDR DR-703
 - dialer maps, configuring for legacy DDR DR-345, DR-348
 - encapsulation, automatic detection DR-260, DR-340
 - Layer 2 and Layer 3 timers DR-231, DR-334, DR-355
 - leased-line service, 128 kbps DR-350
 - memory pool statistics DR-231, DR-334, DR-355
 - Multiple ISDN Switch Types
 - restrictions DR-308
 - NFAS
 - DDR configuration, needed on primary D channel only DR-353
 - group, members and channels, displaying DR-357

- primary and backup D channels, on separate T1 controllers DR-353
- outbound calls, identifying best line DR-708
- outgoing calls
 - Sending Complete information element DR-211
- PRI interface
 - channel status, displaying DR-355
- Primary Rate Interface (PRI)
 - called-party number verification DR-294
 - calling number identification DR-298
 - channel status DR-334
 - services DR-334
 - status DR-336
 - switch types (table) DR-308
 - timeslots DR-318
- semipermanent connections (Germany) DR-701, DR-723
- subinterfaces, BRI DR-200, DR-868
- switch types, service provider (table) DR-216
- timers (table) DR-233
- V.120 detection DR-260, DR-340
- isdn all-incoming-calls-v120 command DR-647
- isdn answer1 command DR-202, DR-294
- isdn answer2 command DR-202, DR-294
- isdn bchan-number-order command DR-296
- isdn caller command DR-204, DR-297, DR-828
- ISDN caller ID callback DR-825
- isdn calling-number command DR-205, DR-298
- isdn fast-rollover-delay command DR-206, DR-301
- isdn incoming-voice data command DR-208, DR-303
- isdn incoming-voice modem command DR-304
- isdn leased-line bri command DR-350
- isdn modem-busy-cause command DR-300
- isdn negotiate-bchan command DR-209
- isdn not-end-to-end command DR-210, DR-305
- isdn nsf-service command DR-306
- ISDN PRI
 - B channel, order selection DR-296
 - Multiple ISDN Switch Types
 - restrictions DR-308
- isdn sending-complete command DR-211, DR-307
- isdn service command DR-351
 - b_channel 0 DR-351
- isdn spid1 command DR-212
- isdn spid2 command DR-214
- ISDN subaddress
 - specifying in dialer string DR-683
- ISDN subaddress, specifying DR-709
- isdn-subaddress for multipoint connections DR-344, DR-347, DR-702
- isdn switch-type command DR-216, DR-308
- isdn tei command DR-218
- isdn twait-disable command DR-219
- isdn x25 dchannel command DR-870

- isdn x25 static-tei command DR-871

K

- keepalive timer, setting rate, LAT DR-393
- keepalive translate option, mapping to virtual interface
 - template command DR-517, DR-538
- keymap command DR-376
- keymaps
 - custom, creating DR-378
 - default DR-379
 - special characters DR-378
 - syntax DR-378
- keymap-type command DR-383

L

LAPB

- compression DR-242

LAT

- access control
 - assigning names to group lists DR-389
 - defining a group list DR-395
 - on connections DR-366
 - specifying access conditions to nodes DR-386
- associating a command with a service DR-400
- associating a rotary group with a service DR-408
- deleting entry from connection queue DR-369
- description DR-384
- enabling DR-388
- group code mask, specifying DR-402
- inbound connections, enabling DR-401
- keepalive timer, setting DR-393
- learned services DR-432
- listing
 - available services DR-384, DR-432
- making a connection DR-384 to DR-385
- maximum number of sessions, setting DR-410
- node name, changing DR-394
- opening multiple connections DR-384
- password for a service, setting DR-405
- protocol translation options DR-521, DR-530
- proxy node, configuring DR-407
- receive buffers
 - setting for host DR-391
 - setting for server DR-398
- retransmission limit, setting DR-397
- service advertisement timer DR-409
- service announcements
 - configuring DR-399
 - reenabling DR-399
- service identification, setting DR-404

- static service rating, setting DR-406
- transmission interval, setting DR-411
- viewing
 - active sessions DR-433
 - learned LAT services DR-432
- lat access-list command DR-386
- lat command DR-384
- lat enabled command DR-388
- lat group-list command DR-389
- lat host-buffers command DR-391
- lat host-delay command DR-392
- lat ka-timer command DR-393
- lat node command DR-394
- lat out-group command DR-395
- lat remote-modification command DR-396
- lat retransmit-limit command DR-397
- lat server-buffers command DR-398
- lat service-announcements command DR-399
- lat service autocommand DR-400
- lat service enabled command DR-401
- lat service-group command DR-402
- lat service ident command DR-404
- lat service password command DR-405
- lat service rating command DR-406
- lat service-responder command DR-407
- lat service rotary command DR-408
- lat service timer command DR-409
- lat vc-sessions command DR-410
- lat vc-timer command DR-411
- Layer 2 Forwarding
 - tunnel information, displaying DR-844
- line
 - characteristics, modifying remotely DR-396
 - console port, configuring DR-22
 - folding, X.3 DR-904
 - number
 - absolute DR-22
 - virtual terminal DR-22
 - linecode command DR-310
 - line-code type, selecting DR-310
 - line coding format DR-252
 - line command DR-21
 - line configuration mode, entering DR-21
 - line feed
 - insertion, X.3 PAD parameters DR-905
 - padding, X.3 PAD parameters DR-906
 - line number
 - auxiliary DR-22
 - relative DR-21
 - virtual terminal DR-22
- lines
 - disconnecting DR-373
 - displaying information about DR-61, DR-508
- line types DR-22
- Link Access Procedure, Balanced

- See LAPB
- Link Quality Monitoring (LQM)
 - enabling DR-607
- Local Area Transport
 - See LAT
- lock command DR-412
- logging
 - VPDN
 - events DR-857
 - logging in
 - as specific user DR-413
 - to change login username DR-413
 - login (EXEC) command DR-413
 - login (line) command DR-415
 - login authentication command DR-179
 - login command (line subcommand) DR-177
 - login-string command DR-417
 - loopback
 - channelized T1 or E1 channel-group DR-313
 - DS-3, channelized T1 link DR-315
 - from MIP over dedicated T1 link DR-314
 - T1 line DR-312
 - loopback (controller) command DR-311
 - loopback interfaces
 - assigning IPX network to DR-633
 - assigning virtual terminal lines to DR-543
 - loopback local (controller) command DR-312
 - loopback local (interface) command DR-313
 - loopback remote (controller) command DR-314
 - loopback remote (interface) command DR-315
 - LQM DR-607
- M**
- map class
 - dialer map DR-316
- map-class dialer command DR-316, DR-736, DR-814
- master bundle interface host DR-777
- MCI interface card
 - pulsing DTR signal DR-253
- member command DR-24
- messages
 - failed connection DR-368
 - login DR-368, DR-417
 - successful connection DR-368, DR-417
- mobile remote node DR-487
- mode
 - framed DR-254
 - unframed DR-254
- modem
 - chat script DR-676, DR-889
 - dialer hold queue DR-692
 - EC/compression DR-889
 - scripts (examples) DR-892

- settings
 - AUX (table) DR-890
 - EC/compression (table) DR-889
 - platform-specific (table) DR-890
- specifying capabilities of DR-116
- troubleshooting DR-892
- modem answer-timeout command DR-83, DR-188
- modem at-mode command DR-84
- modem at-mode-permit command DR-86
- modem attributes DR-55
- modem autoconfigure discovery command DR-87
- modem autoconfigure type command DR-88
- modem autotest command DR-89
- modem bad command DR-92
- modem buffer-size command DR-94
- modem busyout command DR-95
- modem callin command DR-29
- modem callout command DR-30, DR-40
- modem call-record command DR-25
- modemcap edit command DR-115
- modemcap entries, using templates to join DR-56
- modemcap entry command DR-116
- modem chat scripts
 - DDR DR-676
 - default DR-676
- modem country mica command DR-97
- modem country microcom_hdms command DR-100
- modem cts-required command
 - See modem printer command
- modem dialin command DR-32
- modem dtr-active command DR-33
- modem hold-reset command DR-103
- modem host command DR-34
- modem inout command DR-35
- modem poll retry command DR-105
- modem poll time command DR-106
- modem-pool command DR-117
- modem printer command DR-36
- modem reconnection, forcing a waiting period DR-819
- modem recovery action command DR-107
- modem recovery maintenance command DR-108
- modem recovery threshold command DR-110
- modem recovery-time command DR-111
- modem ri-is-cd command
 - See modem dialin command
 - See modem dialin line command
- modem shutdown command DR-112
- modem startup-test command DR-113
- modem status-poll command DR-114
- modes
 - See command modes
- mtu translate option, mapping to virtual interface template command DR-517, DR-538
- multilink bundle interface, defining template to use DR-588

- Multilink PPP
 - bundle information, displaying DR-614, DR-808
- multilink virtual-template command DR-588
- multiple-character patterns
 - anchoring DR-913
 - creating DR-912
 - description DR-910
 - using multipliers DR-912
- Multiple ISDN Switch Types
 - restrictions DR-308
- multipliers DR-912
 - using in regular expressions DR-912

N

- NASI
 - clients, enabling DR-760
 - connection status, displaying DR-761
 - TTY lines, connecting through DR-760
 - VTY lines, connecting through DR-760
- NBF, viewing sessions DR-59
- NetBEUI
 - connection information, displaying DR-59
 - remote node, configuring DR-38
- NetBIOS
 - session table
 - global DR-59
 - interface DR-59
- netbios nbf command DR-38
- NetWare Asynchronous Services Interface
 - See NASI
- node name, changing LAT DR-394
- no form of a command
 - using xxiv
- non-return to zero inverted (NRZI)
 - enabling DR-252
- notes
 - usage in text xv
- notify command DR-418
- nrzi-encoding command DR-252

O

- online documentation
 - See CCO
- open connections, displaying DR-488, DR-567

P

- packet assembler/disassembler
 - See PAD

PAD

- connections between devices DR-563
- Macintosh connecting through DR-511, DR-520, DR-529
- parameters, changing DR-559 to DR-561, DR-568
- See also X.3 PAD

pad command DR-556

PAD profile scripts DR-552

PAP

- authentication method DR-592
- parameter-setting command DR-902

parentheses

- using in regular expressions DR-914

Password Authentication Protocol

- See PAP

password command DR-181

passwords

- assigning for a line DR-181
- clear-text version DR-658

pattern matching

- See also regular expressions

pattern matching symbols, LAT (table) DR-386

peer default ip address command DR-589, DR-635

peer neighbor-route command DR-591

peer neighbor routes

- dialer interface, effect on DR-591

physical-layer command DR-39

plus character in regular expressions DR-912

Point-to-Point Protocol

- See PPP

pool-range command DR-119

port numbers, Telnet DR-40

PPP DR-637 to DR-638

- authentication
 - CHAP or PAP, order requested DR-592
 - incoming calls only DR-592
 - remote CHAP, common secret DR-599
 - remote PAP, username sent DR-605
- BACP DR-787 to DR-809
 - callback configuration DR-789
 - dialer load threshold DR-796
 - dropping links, no response DR-791
 - links, removing from multilink bundle DR-791
 - retransmissions, setting limits DR-794
 - telephone number, local, configuring DR-797
 - telephone number negotiation DR-797
 - transmit queue threshold DR-796
 - type of link, adding or dropping DR-793
- callback
 - enabling on non-DTR dialer interface DR-815
 - secure DR-812
- CHAP
 - common hostname DR-598
 - common secret DR-599
- client, calling back DR-820
 - common secret, remote CHAP authentication DR-599
- encapsulation
 - changing dynamically DR-260, DR-340
 - enabling on interface DR-580
- IPX packet compression over DR-632
- Multilink PPP
 - enabling for BACP DR-802
- PAP
 - remote, username and password sent DR-605
 - remote authentication (example) DR-605
 - session, automatic startup DR-622
 - wide-area networking DR-577 to DR-618

ppp authentication command DR-592

- CHAP DR-592
- PAP DR-592

ppp bap callback command DR-789

ppp bap call command DR-788

ppp bap drop command DR-791

ppp bap link types command DR-793

ppp bap max command DR-794

ppp bap monitor load command DR-796

ppp bap number command DR-797, DR-874

ppp bap timeout command DR-800

ppp bridge appletalk command DR-594

ppp bridge ip command DR-595

ppp bridge ipx command DR-596

ppp callback command DR-815, DR-820

ppp chap hostname command DR-598

ppp chap password command DR-599

ppp command DR-637

ppp lcp fast-start command DR-639

ppp max-bad-auth command DR-600

ppp multilink command DR-601

- BACP, enabling DR-802

ppp multilink fragment-delay command DR-603

ppp multilink idle-link command DR-877

ppp multilink interleave command DR-604

ppp pap sent-username command DR-605

ppp quality command DR-607

ppp reliable-link command DR-608

ppp use-tacacs translate option

- mapping to virtual interface template command DR-517, DR-538

predictor compression DR-578

predictor compressor DR-242

pri-group command DR-318

pri-group timeslots nfas_d command DR-353

privileged EXEC mode

- summary xxiii

prompts

- system xxiii

protocols

- selecting terminal transport DR-469

protocol translation
 global options DR-513, DR-522, DR-531, DR-537
 LAT DR-516
 TCP DR-526
 X.25 DR-537
 global translation options DR-513, DR-522, DR-531
 LAT options DR-521, DR-530
 outgoing options, mapping to virtual interface template
 commands DR-517, DR-538
 SLIP and PPP options DR-512, DR-521, DR-530
 Telnet DR-511, DR-519, DR-525, DR-530
 Telnet/TCP DR-511, DR-519, DR-525, DR-530
 Telnet/TCP options DR-519, DR-525
 X.25 options DR-511, DR-521
proxy, configuring for LAT DR-407
pulse-time command DR-253

Q

question command xix
queued host-initiated connections
 deleting entries from, LAT DR-369
queues
 holding packets for modem connection DR-692

R

R2 signaling DR-267
RAND compression algorithm DR-242, DR-578
Real-time Transport Protocol
 Multilink PPP interleaving DR-587
receive buffers
 setting for host, LAT DR-391
 setting for server, LAT DR-398
regular expressions
 alternative DR-913
 characters with special meaning (table) DR-911
 creating DR-910
 using multipliers DR-912
 using parentheses for recall DR-914
 with anchoring DR-913
 description DR-909
 examples DR-915
 recalling DR-914
 special characters
 anchoring (table) DR-913
 multipliers (table) DR-912
relative line number DR-21
resume (setting X.3 PAD parameters) command DR-559
resume (switching sessions) command DR-419
resume command DR-904
retransmission limit

 LAT DR-397
reverse connections DR-30, DR-34
RFC 1084
 BootP extensions DR-4
RFC 1144
 TCP/IP header compression DR-642
RFC 1334
 PPP PAP authentication DR-577
RFC 1570
 PPP callback DR-811
RFC 1661
 PPP DR-577
RFC 1717
 MLP DR-577
RFC 1994
 PPP CHAP DR-577
RFC 2125
 BACP DR-787
rlogin
 connections to server DR-421, DR-423, DR-424
 description DR-421
 login string DR-417
 rlogin username DR-423
rlogin command DR-421
rlogin trusted-localuser-source local command DR-423
rlogin trusted-remoteuser-source local command DR-424
ROM monitor mode
 summary xxiii
rotary command DR-40
rotary groups
 and DDR dialer hold queues DR-692
 services and port numbers (table) DR-40
rotary line configuration DR-40
routing
 manual configuration on asynchronous
 interfaces DR-9
routing translate option
 mapping to virtual interface template
 command DR-517, DR-538
rxspeed command DR-182

S

saving configuration changes xxiv
script activation command
 DR-42
script arap-callback command DR-821
script callback command DR-823
script connection DR-44
script dialer command DR-676
 regular expressions DR-910
script reset command DR-46
script startup command DR-48
serial interfaces

- DTR signal pulsing DR-253
- low-speed, Cisco 2520 through 2523 routers DR-39
- Serial Line Internet Protocol
 - See SLIP
- server connections
 - LAT DR-384 to DR-385
 - PPP DR-637 to DR-638
 - rlogin DR-421, DR-423 to DR-461
 - SLIP DR-642 to DR-643
 - Telnet DR-459 to DR-462
 - TN3270 DR-470
 - XRemote DR-489, DR-493, DR-497
- service advertisement timer DR-409
- service announcements, reenabling LAT DR-399
- service exec-callback command DR-824
- service old-slip-prompts command DR-640
- service pad command DR-563
- service pt-vty-logging command DR-500
- session-limit command DR-183
- sessions
 - timeout period, specifying DR-191
- sessions, limiting number per line DR-183
- session-timeout command DR-184
- setenv command DR-490, DR-492
- sgbp group command DR-774
- sgbp member command DR-775
- sgbp ppp-forward command DR-776
- sgbp seed-bid command DR-777
- show DR-761
- show arap command DR-662
- show async bootp command DR-49
- show async status command DR-50
- show controllers bri command DR-220
- show controllers e1 call-counters command DR-323
- show controllers e1 cas-data command DR-325
- show controllers e1 command DR-320
- show controllers t1 call-counters command DR-329
- show controllers t1 cas-data command DR-331
- show controllers t1 command DR-327
- show dhcp command DR-610
- show dialer command DR-713, DR-737
 - display for active connection DR-225, DR-716, DR-740
 - display for DTR dialing DR-715, DR-739
- show dialer interface async command DR-715, DR-739
- show dialer interface bri command DR-224, DR-713, DR-737
- show dialer map command DR-717, DR-804
- show entry command DR-426
- show interfaces bri command DR-227
- show interfaces command DR-200, DR-868
 - channelized E1 DR-292
 - channelized T1 DR-292
 - DDR interface DR-716, DR-740
- show interfaces serial bchannel command DR-333
- show interfaces virtual-access command DR-502, DR-770
- show ip interface virtual-access command DR-772
- show ip local pool command DR-612
- show ipx compression command DR-641
- show ipx nasi connections command DR-761
- show ipx spx-protocol command DR-763
- show isdn active command
 - field descriptions (table) DR-232, DR-335, DR-356
 - output display DR-231, DR-334, DR-355
- show isdn command DR-231, DR-334, DR-355
- show isdn history command
 - field descriptions (table) DR-232, DR-335, DR-356
 - output display DR-232, DR-335, DR-356
- show isdn nfas group command DR-357
 - field descriptions (table) DR-358
- show isdn service command DR-360
 - field descriptions (table) DR-336, DR-360
 - output display DR-336
- show isdn status command DR-351
 - field descriptions (table) DR-338
 - output display DR-336
- show keymap command DR-427
- show lat advertised command DR-428
- show lat groups command DR-429
- show lat nodes command DR-430
- show lat services command DR-432
- show lat sessions command DR-433
- show lat traffic command DR-437
- show line command DR-52
- show modem at-mode command DR-129
- show modem call-stats command DR-130
- show modemcap command DR-55, DR-116
- show modem command DR-121
- show modem configuration command DR-135
- show modem connect-speeds command DR-139
- show modem cookie command DR-143
- show modem csm command DR-144
- show modem log command DR-146
- show modem mapping command DR-153
- show modem mica command DR-156
- show modem operational-status command DR-160
- show modem-pool command DR-170
- show modem summary command DR-163
- show modem test command DR-164
- show modem version command DR-165
- show nbf cache command DR-58
- show nbf sessions command DR-59
- show node command DR-439
- show ppp bap command DR-806
- show ppp multilink command DR-614, DR-777, DR-808
- show queuing virtual-access command DR-615
- show service command DR-442
- show sgbp command DR-779
- show sgbp queries command DR-778, DR-780

- show snapshot command DR-834
- shows sessions command DR-444
- show tcp brief command DR-450
- show tcp command DR-445
- show terminal command DR-185
- show tn3270 ascii-hexval command DR-451
- show tn3270 character-map command DR-452
- show translate command DR-506
- show ttypcap command DR-453
- show users command DR-61, DR-508
- show vpdn command DR-844
- show vpdn history failure command DR-846
- show x25 pad command DR-565
- show xremote command DR-454
- show xremote line command DR-457
- signals
 - Break DR-904
 - pulsing DTR DR-253
- single-character patterns
 - anchoring DR-913
 - creating DR-910
 - description DR-910
 - using multipliers DR-912
- single DDR telephone number
 - specifying DR-683
- single DDR telephone number, specifying DR-709, DR-733
- SLIP
 - connections to server DR-642 to DR-643
 - session
 - automatic startup DR-622
 - session, automatic startup DR-622
- slip command DR-642
- snapshot client command DR-836
- snapshot routing DR-831 to DR-838
 - dialer map, defining for DDR DR-833
 - quiet period, ending DR-832
 - when to use DR-831
- snapshot server command DR-838
- software compression
 - configuring DR-242
 - PPP, configuring DR-578
- software flow control
 - configuring for a line DR-15
- speed command DR-189
- spoofing
 - DDR DR-716, DR-740
- stack group
 - bidding
 - default across stack members DR-777
 - offload server DR-777
 - overriding offload or default DR-778
 - bid value on system, displaying DR-780
 - configuration (example) DR-775
 - create and name DR-774

- master bundle interface, host DR-777
- member
 - assigning DR-774
 - host name DR-775
 - IP address DR-775
- receiver, first call, master bundle interface
 - host DR-777
- start character
 - configuring for a line DR-63, DR-190
 - default DR-15
- start-character command DR-63, DR-190
- start-chat command DR-64
- static TEI DR-871
- stop character
 - configuring for a line DR-66
 - default DR-15
- stop-character command DR-66
- subinterface configuration mode
 - summary xxiii
- subinterfaces
 - BRI multipoint, point-to-point DR-868
 - ISDN BRI DR-200, DR-868
 - multipoint, point-to-point DR-200
 - switching feature (example) DR-915

T

- Tab key
 - command completion xix
- TACACS
 - username authentication for extended mode DR-617
- TCP
 - protocol translation DR-511, DR-512, DR-519, DR-521, DR-525, DR-530
- TCP/IP
 - rlogin connections DR-421, DR-423, DR-424
 - Telnet connections DR-459
- telephone delta, in PPP BACP negotiations DR-797
- Telnet
 - connections DR-459 to DR-462
 - configuring a line DR-465
 - description DR-460
 - generating Break signal DR-463
 - login string DR-417
 - notification of pending output DR-418
 - protocol translation DR-511, DR-512, DR-519, DR-521, DR-525, DR-530
 - Remote Echo option DR-464
 - special commands (table) DR-461
 - Suppress Go Ahead option DR-464
- telnet break-on-ip command DR-463
- telnet command DR-459
- telnet refuse-negotiations command DR-464
- telnet speed command DR-465

- telnet sync-on-break command DR-466
- telnet transparent command DR-467
- terminal DR-189
 - absolute timeout interval, setting DR-174
 - baud rate
 - receive, configuring for a line DR-182
 - transmit, configuring for a line DR-198
 - locking access to DR-412
 - parameter settings, displaying DR-185
 - selecting a transport protocol DR-469
 - session limits, setting DR-183
 - session timeout interval, setting DR-184
- Terminal Access Controller Access Control System
 - See TACACS
- terminal dispatch-character command DR-902
- terminal lat out-group command DR-468
- terminal services DR-173
- terminal transport preferred command DR-469
- test modem back-to-back command DR-172
- time limit, setting for a session DR-657
- timeout absolute command DR-191
- timeout interval
 - EXEC process, setting DR-14
- timeouts
 - absolute DR-174
 - session, setting DR-184
 - setting for DDR interface DR-688
- timers
 - service advertisement, setting DR-409
- timeslot command DR-254
- TN3270
 - character mapping
 - creating DR-473
 - determining DR-451
 - displaying DR-452
 - connections to server DR-470
 - data character bits, setting DR-471, DR-472
 - default keymaps DR-379
 - description DR-470
 - display size DR-365
 - international characters
 - displaying DR-451
 - printing DR-473
 - null processing handling DR-478
 - require reset after user error DR-480
 - special characters DR-378
- tn3270 8bit display command DR-471
- tn3270 8bit transparent-mode command DR-472
- tn3270 character-map command DR-473
- tn3270 command DR-470
- tn3270 datastream command DR-477
- tn3270 null-processing command DR-478
- tn3270 optimize-cursor-move command DR-479
- tn3270 reset-required command DR-480
- tn3270 status-message command DR-481
- tn3270 typeahead command DR-482
- translate command DR-510, DR-519, DR-528
- translate lat command DR-516
- translate tcp command DR-525
- translate x25 command DR-536
- translation options
 - LAT DR-510, DR-516, DR-520, DR-529
 - outgoing options, mapping to virtual interface template
 - commands DR-517, DR-538
 - prevent service advertisements DR-510, DR-516
 - swap outgoing X.25 connections DR-531, DR-537
 - TCP
 - binary mode DR-525
 - incoming address DR-525
- TCP/IP
 - PPP DR-511, DR-520, DR-529
 - SLIP DR-510, DR-520, DR-529
 - Telnet DR-510, DR-519, DR-529
 - Telnet binary mode DR-519
 - X.25 DR-510, DR-520, DR-528, DR-536
- transmit-clock-internal command DR-255
- transmit clock signal
 - inverting DR-251
- transmitter-delay command DR-256
- transport input command DR-192
- transport output command DR-194
- transport preferred command DR-196
- transport protocol, selecting DR-469
- troubleshooting
 - modem access DR-892
- ts16 command DR-257
- ttycap command DR-483
- ttycap support DR-484
- tunnel
 - VPDN
 - shutting down, without unconfiguring DR-843
- tunnel command DR-487
- txspeed command DR-198

U

- underscore character in regular expressions DR-914
- user EXEC mode
 - summary xxiii
- username, authentication DR-617
- username command DR-617

V

- V.120
 - answer all calls, static configuration DR-647
 - dynamic detection and setting DR-646

- V.120, automatic detection DR-260, DR-340
- V.25bis
 - DDR Options (table) DR-684, DR-710
 - options DR-684, DR-710
- virtual access interfaces
 - VTY line on which created, identifying DR-502
- virtual asynchronous lines
 - configuring authentication DR-512, DR-522, DR-531
- virtual interface template
 - translate lat command, using with DR-516
 - translate tcp command, using with DR-526
 - translate x25 command, using with DR-537
- Virtual Private Dialup Networking
 - see VPDN
- virtual-profile aaa command DR-783
- virtual profiles DR-781 to DR-784
- virtual-profile virtual-template command DR-784
- virtual template
 - configuration example DR-588
 - configured as serial interface DR-769, DR-782
 - multilink bundle interface, defining DR-588
 - purpose DR-769, DR-782
- virtual terminal lines DR-22
 - configuring DR-22
 - See also VTY lines
- VPDN
 - authenticating tunnel
 - remote host name and IP address DR-859
 - connections, incoming DR-856
 - connections, outgoing DR-859
 - enabling DR-853
 - history failure table
 - clearing DR-842
 - event logging DR-858
 - size DR-855
 - statistics DR-846
 - home gateway
 - CHAP challenge, issuing DR-854
 - information, displaying
 - logging
 - events DR-857
 - tunnel
 - authorization search order DR-861
 - local name, specifying DR-856
 - virtual templates DR-856
- vpdn aaa attribute command DR-848
- vpdn aaa override-server command DR-849
- vpdn domain-delimiter command DR-851
- vpdn enable command DR-853
- vpdn force-local-chap command DR-854
- vpdn history failure table-size command DR-855
- vpdn incoming command DR-856
- vpdn logging command DR-857
- vpdn logging history failure command DR-858

- vpdn outgoing command DR-859
- vpdn search-order command DR-861
- vpdn source-ip command DR-863
- vty-async command DR-539
- vty-async dynamic-routing command DR-541
- vty-async header-compression command DR-542
- vty-async ipx ppp-client loopback command DR-543
- vty-async keepalive command DR-544
- vty-async mtu command DR-545
- vty-async ppp authentication command DR-546
- vty-async ppp use-tacacs command DR-547
- vty-async virtual-template command DR-548
- VTY lines
 - assigned to loopback interfaces DR-513, DR-522, DR-531
 - See also virtual terminal lines

W

- where command DR-488, DR-567

X

X.25

- configuring ISDN
 - static TEI DR-871
- hosts, limiting access DR-551
- Interrupt packet DR-904
- ISDN over D channel DR-870
 - isdn x25 static-tei command DR-871
- pad connections, viewing DR-565
- protocol translation options DR-511, DR-521
- static host name map, defining DR-550
- TEI restrictions DR-871
- traffic over ISDN D channel
 - (example) DR-869
- translation options DR-536

X.29

- Indication of Break packet DR-904
- X.25 hosts, limiting access DR-551

- X.29 SET PARAMETER packet DR-561, DR-568

X.3

- parameter settings, viewing DR-565

X.3 PAD

- description DR-568
- making connections DR-568
- parameters
 - changing dynamically DR-559
 - default values DR-561, DR-568
 - description DR-559 to DR-561
 - setting DR-568

- X.3 PAD parameters

- action upon receipt of Break signal (7) DR-903
- baud rate (11) DR-904
- character delete (16) DR-906
- data forward character (3) DR-902
- description of DR-901
- device control (5) DR-903
- discard output (8) DR-904
- echo mask (20) DR-907
- editing (15) DR-906
- edit PAD service signals (19) DR-907
- escape from data transfer (1) DR-902
- idle timer (4) DR-903
- input flow control (12) DR-905
- line delete (17) DR-906
- line display (18) DR-907
- Line Feed insertion (13) DR-905
- Line Feed padding (14) DR-906
- line folding (10) DR-904
- local echo mode (2) DR-902
- local editing (15) DR-906
- PAD service signals (6) DR-903
- page wait (22) DR-907
- parity treatment (21) DR-907
- return padding (9) DR-904
- X.28 mode DR-571
- x25 aodi command DR-878
- x25 host command DR-550
- x25 map ppp command DR-879
- x25 route command
 - regular expressions DR-910
 - (example) DR-915
- x25 subaddress command DR-570
- x28 command DR-571
- x29 access-list command DR-551
- x29 profile command DR-552
- x3 command DR-568
- X Display Manager Control Protocol
 - See XDMCP
- XDMCP, starting XRemote DR-497
- XRemote
 - automatic session startup DR-493 to DR-497
 - buffer size, changing DR-494
 - connecting to host computer DR-489
 - connections, displaying DR-457
 - connections to servers DR-489
 - description DR-365, DR-489, DR-493, DR-497
 - font servers, identifying DR-495
 - manual session startup DR-489
 - reenabling manually DR-489
 - returning to EXEC prompt DR-489
 - sessions between servers DR-491
 - setting X display location DR-489
 - starting clients DR-489
 - terminal line statistics, displaying DR-457
 - terminating the session DR-489
 - xremote command DR-489
 - xremote lat command DR-493
 - XRemote terminal
 - configuring DR-490
 - xremote tftp buffersize command DR-494
 - xremote tftp host command DR-495
 - xremote tftp retries command DR-496
 - xremote xdm command DR-497
 - X Window System, setting display location DR-489

