

debug cable err

To display errors that occur in the cable MAC protocols, use the **debug cable err** privileged EXEC command. To disable debugging output, use the **no** form of this command.

debug cable err

no debug cable err

Syntax Description

This command has no arguments or keywords.

Usage Guidelines

This command is used to display unexpected DOCSIS MAC protocol messages. When the Cisco uBR7246 universal broadband router does not expect to receive a specific MAC message, an error message and hexadecimal dump are printed. Other miscellaneous error conditions may result in output.

Examples

The following is sample output from the **debug cable err** command:

```
Router# debug cable err

This is a UCD Message
This is a MAP Message
This is a RNG_RSP Message
This is a REG_RSP Message
This is a UCC_REQ Message
This is a BPKM_RSP Message
This is a TRI_TCD Message
This is a TRI_TSI Message
This is a unrecognized MCNS message

ERROR:#####TICKS PER MSLOT NOT POWER OF 2####
```

debug cable freqhop

To display debug messages for frequency hopping, use the **debug cable freqhop** privileged EXEC command. To disable debugging output, use the **no** form of this command. **debug cable freqhop**

no debug cable freqhop

Syntax Description

This command has no arguments or keywords.

Defaults

Debugging for frequency hopping is not enabled.

Command History

Release	Modification
12.0(4)XI	This command was introduced.

Examples

The following is sample output from the **debug cable freqhop** command:

```
Router# debug cable freqhop  
  
CMTS freqhop debugging is on
```

Related Commands

Command	Description
debug cable hw-spectrum	Displays debug information about spectrum management (frequency agility).
debug cable freqhop	Displays debug information about frequency hopping, which is a facet of spectrum management.

debug cable hw-spectrum

To display debug messages for spectrum management (frequency agility), use the **debug cable hw-spectrum** privileged EXEC command. To disable debugging output, use the **no** form of this command.

debug cable hw-spectrum

no debug cable hw-spectrum

Syntax Description

This command has no arguments or keywords.

Defaults

Debugging for spectrum management is not enabled.

Command History

Release	Modification
12.0	This command was introduced as debug cable specmgmt .
12.0(4)XI	This command was renamed as debug cable hw-spectrum .

Examples

The following is sample output for the **debug cable hw-spectrum** command:

```
Router# debug cable hw-spectrum
```

```
CMTS specmgmt debugging is on
```

debug cable interface

To perform debugging on a specified interface, use the **debug cable interface** privileged EXEC command. To turn off debugging on a specified interface, use the **no** form of this command.

debug cable interface *interface* [**mac-address** *address* | **mask** | **verbose**]

no debug cable interface *interface* **mac-address** *address*

Syntax Description

<i>interface</i>	Specifies the cable interface to be debugged.
mac-address	(Optional) Specifies that debugging is to be done on a specified MAC address.
<i>address</i>	(Optional) Specifies the MAC address of the interface.
mask	(Optional) Specifies the MAC address validation address.
verbose	(Optional) Displays detailed debug information.

Command History

Release	Modification
12.0(6)T	This command was introduced.

Usage Guidelines

You can repeat this debug command for other interfaces. Each time you specify a different cable interface or MAC address, debugging is turned on for this cable interface or MAC address.

If you enter two debug commands with the same interface or MAC address, but with different mask or verbose keywords, the router treats both commands as the same. In this case, the latest debug information supersedes the previous debugging information.

Examples

The following example demonstrates how to enable debugging on interface c3/0:

```
Router# debug cable interface c3/0
```

The following example demonstrates how to enable detailed debugging on interface c3/0:

```
Router# debug cable interface c3/0 verbose
```

The following example demonstrates how to enable debugging on interface c3/0 for all traffic coming from modems with MAC addresses 0010.00xx.xxxx:

```
Router# debug cable interface c3/0 mac-address 0010.0000.0000 ffff.ff00.0000
```

Related Commands

Command	Description
debug cable mac-address	Enables debugging on traffic from modems with the specified MAC address or MAC address range.

debug cable keyman

To activate debugging of TEK and KEK baseline privacy key activity, use the **debug cable keyman** privileged EXEC command. To disable debugging output, use the **no** form of this command.

debug cable keyman

no debug cable keyman

Syntax Description

This command has no arguments or keywords.

Usage Guidelines

This command activates debugging of the TEK and KEK baseline privacy key activity. When this command is activated, all activity related to KEK and TEK keys will be displayed on the Cisco uBR7246 console. This command is used to display encryption key management debugging output.

Examples

The following is sample output from the **debug cable keyman** command:

```
Router# debug cable keyman

Read Verify DES failed with SID %2x
  Verify key failed with SID %2x : setvalue = %11x, readback = %11x
  Verify iv failed with SID %2x : setvalue = %11x, readback = %11x
Next TEK lifetime check is set to %u seconds.
  Next Multicast TEK lifetime check is set to 1 seconds

[UCAST_TEK] :", idbp->hw_namestring);
  show_sid_key_chain(ds, &ds->mcast_sid_key_list_hdr);

[MCAST_TEK] :", idbp->hw_namestring);
  buginf("\nSID : %4x\t", sidkey->sid);
  buginf("seq : %2x\t current : %2x\n", sidkey->key_seq_num,
  sidkey->current_key_num);
  buginf(" Status[0] : %x\tDES IV[0] : %11x\tKey Life[0]: %u sec\n",
  sidkey->key_status[0], sidkey->des_key[0].iv,
  compute_remain_lifetime(&sidkey->des_key[0]));

  buginf(" Status[1] : %x\tDES IV[1] : %11x\tKey Life[1]: %u sec\n",
  sidkey->key_status[1], sidkey->des_key213
1).iv,
  compute_remain_lifetime(&sidkey->des_key[1]));
```

debug cable mac

To display MAC-layer information for the specified cable modem, use the **debug cable mac** privileged EXEC command. To disable debugging output, use the **no** form of this command.

debug cable mac

no debug cable mac

Syntax Description

This command has no arguments or keywords.

Command History

Release	Modification
11.3 NA	This command was introduced.



Caution

Do not use this command if you have a large number of modems on your network. The Cisco uBR7246 universal broadband router will become flooded with console printouts.

Examples

The following example shows the return for the MAC layer:

```
Router# debug cable mac

19:46:27: Ranging Modem with Sid 1 on i/f : Cable6/0/U0

19:46:27: Got a ranging request
19:46:27: SID value is 1 on Interface Cable6/0/U0
19:46:27: CM mac address 00:E0:1E:B2:BB:07
19:46:27: Timing offset is 0
19:46:27: Power value is FE0, or 0 dB
19:46:27: Freq Error = 0, Freq offset is 0
19:46:27: Ranging has been successful for SID 1 on Interface Cable6/0/U0

19:46:29: Ranging Modem with Sid 2 on i/f : Cable6/0/U0
19:46:29: Got a ranging request
19:46:29: SID value is 2 on Interface Cable6/0/U0
19:46:29: CM mac address 00:E0:1E:B2:BB:8F
19:46:29: Timing offset is 1
19:46:29: Power value is 1350, or 0 dB
19:46:29: Freq Error = 0, Freq offset is 0
19:46:29: Ranging has been successful for SID 2 on Interface Cable6/0/U0

19:46:32: Ranging Modem with Sid 3 on i/f : Cable6/0/U0

19:46:32: Got a ranging request
19:46:32: SID value is 3 on Interface Cable6/0/U0
19:46:32: CM mac address 00:E0:1E:B2:BB:B1
19:46:32: Timing offset is FFFFFFFF
19:46:32: Power value is 1890, or -1 dB
19:46:32: Freq Error = 0, Freq offset is 0
19:46:32: Ranging has been successful for SID 3 on Interface Cable6/0/U0

19:46:34: Ranging Modem with Sid 5 on i/f : Cable6/0/U0
```

Table 28 describes the significant fields in the display.

Table 28 *debug cable mac Command Field Descriptions*

Field	Description
SID value is....	Reports the service ID of the modem. The range is from 1 through 891. The information on this line should agree with the first line of the return (that is, Ranging Modem with Sid...).
CM mac address....	MAC address of the specified cable modem.
Timing offset is....	Time by which to offset the frame transmission upstream so the frame arrives at the expected minislot time at the CMTS.
Power value is FE0, or 0 dB	Raw value derived from the 3137 Broadcom chip. Alternately, the decibel value specifies the relative change in the transmission power level that the cable modem needs to make so transmissions arrive at the CMTS at the desired power level. This desired power level is usually 0, but you can use the CLI to change it via the cable power-level command.
Freq Error =	Raw value derived from the 3137 Broadcom chip.
Freq offset is	Specifies the relative change in the transmission frequency that the cable modem will make to match the CMTS.

Related Commands

Command	Description
show controllers cable	Displays interface controller information for the specified slot.

debug cable mac-address

To enable debugging for a specified MAC address, use the **debug cable mac-address** privileged EXEC command. To turn off debugging for the specified MAC address, use the **no** form of this command.

debug cable mac-address *address* [**mask** | **verbose**]

no debug cable mac-address *address*

Syntax Description

<i>address</i>	Specifies the MAC address of the interface.
mask	(Optional) Specifies the MAC address validation address.
verbose	(Optional) Displays detailed debug information.

Command History

Release	Modification
12.0(6)T	This command was introduced.

Usage Guidelines

You can repeat this debug command for other MAC addresses. Each time you specify a different MAC address, debugging is turned on for this MAC address.

If you enter two debug commands with the same MAC address, but with different mask or verbose keywords, the router treats both commands as the same. In this case, the latest debug information supersedes the previous debugging information.

Examples

The following example demonstrates how to enable debugging for all traffic coming from all interfaces of modems with the MAC address 0010.00xx.xxxx:

```
Router# debug cable mac-address 0010.0000 ffff.ff00.000
```

Related Commands

Command	Description
debug cable interface	Enables debugging on the cable interface specified.

debug cable map

To display map debugging messages, use the **debug cable map** privileged EXEC command. To disable debugging output, use the **no** form of this command.

debug cable map

no debug cable map

Syntax Description

This command has no arguments or keywords.

Command History

Release	Modification
11.3 NA	This command was introduced.

Examples

The following example displays all the map messages with and without data grants:

```
Router# debug cable map

19:41:53: On interface Cable6/0, sent 5000 MAPs, 1321 MAPs had grant(s)Long Grants
13256993, Total Short Grants 223
A sample Map without any data grant
----- MAP MSG -----
us_ch_id: 1   ucd_count: 5   num_elems: 9   reserved: 0
Alloc Start Time: 33792           Ack Time: 33618
Rng_bkoff_start: 0   Rng_bkoff_end: 2
Data_bkoff_start: 1   Data_bkoff_end: 3:
sid:16383   iuc:1   mslot_offset:0
sid:0   iuc:7   mslot_offset:40
A sample Map with data grant(s)
----- MAP MSG -----
us_ch_id: 1   ucd_count: 5   num_elems: 7   reserved: 0
Alloc Start Time: 33712           Ack Time: 33578
Rng_bkoff_start: 0   Rng_bkoff_end: 2
Data_bkoff_start: 1   Data_bkoff_end: 3
sid:2   iuc:6   mslot_offset:0
sid:16383   iuc:1   mslot_offset:16
sid:0   iuc:7   mslot_offset:40
```

[Table 29](#) shows the significant fields in the display.

Table 29 *debug cable map Command Field Descriptions*

Field	Description
sent 5000 MAPs	Total number of maps sent.
MAPs had grant(s) Long Grants	Total number of grants considered long sized by the CMTS.
Total Short Grants	Total number of grants considered short sized by the CMTS.
us_ch_id	Identifies the upstream channel ID for this message.
ucd_count	Number of upstream channel descriptors (UCDs).
num_elems	Number of information elements in the map.
reserved	Reserved for alignment.

Table 29 *debug cable map Command Field Descriptions (continued)*

Field	Description
Alloc Start Time	Start time from CMTS initialization (in minislots) for assignments in this map.
Ack Time	Latest time from CMTS initialization (in minislots) processed in upstream. The cable modems use this time for collision detection.
Rng_bkoff_start	Initial backoff window for initial ranging contention, expressed as a power of 2. Valid values are from 0 to 15.
Rng_bkoff_end	Final backoff window for initial ranging contention, expressed as a power of 2. Valid values are from 0 to 15.
Data_bkoff_start	Initial backoff window for contention data and requests, expressed as a power of 2. Valid values are from 0 to 15.
Data_bkoff_end	Final backoff window for contention data and requests, expressed as a power of 2. Valid values are from 0 to 15.
sid	Service ID.
iuc	Interval usage code (IUC) value.
mslot_offset	Minislot offset.

Related Commands

Command	Description
show controllers cable	Displays interface controller information for the specified slot.

debug cable-modem bpkm

To debug baseline privacy information on a Cisco uBR900 series cable access router, use the **debug cable-modem bpkm** privileged EXEC command. To turn off debugging messages, use the **no** form of this command.

```
debug cable-modem bpkm {errors | events | packets}
```

```
no debug cable-modem bpkm {errors | events | packets}
```

Syntax Description

errors	Provides debugging information about Cisco uBR900 series privacy errors.
events	Provides debugging information about events related to cable baseline privacy.
packets	Provides debugging information about baseline privacy packets.

Command History

Release	Modification
11.3 NA	This command was introduced.

Usage Guidelines

Baseline privacy key management exchanges take place only when both the Cisco uBR900 series and the CMTS are running code images that support baseline privacy, and the privacy class of service is enabled via the configuration file that is downloaded to the cable modem. Baseline privacy code images for the Cisco uBR900 series contain “k1” in the code image name.

Examples

The following example shows debug output when the headend does not have privacy enabled:

```
Router# debug cable-modem bpkm errors

cm_bpkm_fsm(): machine: KEK, event/state: EVENT_4_TIMEOUT/STATE_B_AUTH_WAIT, new state:
STATE_B_AUTH_WAIT

cm_bpkm_fsm(): machine: KEK, event/state: EVENT_4_TIMEOUT/STATE_B_AUTH_WAIT, new state:
STATE_B_AUTH_WAIT

%LINEPROTO-5-UPDOWN: Line protocol on Interface cable-modem0, changed state to down
cm_bpkm_fsm(): machine: KEK, event/state: EVENT_1_PROVISIONED/STATE_A_START, new state:
STATE_B_AUTH_WAIT

%LINEPROTO-5-UPDOWN: Line protocol on Interface cable-modem0, changed state to up
```

Related Commands

Command	Description
debug cable-modem bridge	Displays bridge filter processing information for a Cisco uBR900 series cable access router.
debug cable-modem error	Enables debugging messages for the cable interface driver on a Cisco uBR900 series cable access router.
debug cable-modem interrupts	Displays interrupts for Cisco uBR900 series cable access routers.

Command	Description
<code>debug cable-modem mac</code>	Troubleshoots the Cisco uBR900 series cable access router MAC layer.
<code>debug cable-modem map</code>	Displays the timing from map messages to synchronize messages and the timing between map messages.

debug cable-modem bridge

To debug bridge filter processing information on a Cisco uBR900 series cable access router, use the **debug cable-modem bridge** privileged EXEC command. To turn off debugging messages, use the **no** form of this command.

debug cable-modem bridge

no debug cable-modem bridge

Syntax Description

This command has no arguments or keywords.

Command History

Release	Modification
11.3 NA	This command was introduced.

Usage Guidelines

When the interface is down, all bridge table entries learned on the Ethernet interface are set to discard because traffic is not bridged until the cable interface has completed initialization. After the interface (the line protocol) is completely up, bridge table entries learned on the Ethernet interface program the cable MAC data filters. The cable MAC hardware filters out any received packets whose addresses are not in the filters. In this way, the cable interface only receives packets addressed to its own MAC address or an address it has learned on the Ethernet interface.

Examples

The following example shows sample display output for the **debug cable-modem bridge** command:

```
Router# debug cable-modem bridge
```

```
%LINEPROTO-5-UPDOWN: Line protocol on Interface cable-modem0, changed state to downshut
cm_tbridge_add_entry(): MAC not initialized, discarding entry: 00e0.fe7a.186fno shut
cm_tbridge_add_entry(): MAC not initialized, discarding entry: 00e0.fe7a.186f
%LINEPROTO-5-UPDOWN: Line protocol on Interface cable-modem0, changed state to up
cm_tbridge_add_entry(): Adding entry 00e0.fe7a.186f to filter 2
```

Related Commands

Command	Description
debug cable-modem bridge	Displays bridge filter processing information for a Cisco uBR900 series cable access router.
debug cable-modem error	Enables debugging messages for the cable interface driver on a Cisco uBR900 series.
debug cable-modem interrupts	Displays interrupts for Cisco uBR900 series cable access routers.
debug cable-modem mac	Troubleshoots the Cisco uBR900 series MAC layer.
debug cable-modem map	Displays the timing from MAP messages to synchronize messages and the timing between MAP messages.

debug cable-modem error

To enable debugging messages for the cable interface driver, use the **debug cable-modem error** privileged EXEC command. To turn off debugging messages, use the **no** form of this command.

debug cable-modem error

no debug cable-modem error

Syntax Description

This command has no arguments or keywords.

Command History

Release	Modification
11.3 NA	This command was introduced.

Usage Guidelines

This command displays detailed output about the sanity checking of received frame formats, the acquisition of downstream QAM/FEC lock, the receipt or nonreceipt of SYNC messages from the CMTS, reception errors, and bandwidth request failures.

Examples

The following example shows sample display output for the **debug cable-modem error** command:

```
Router# debug cable-modem error

*Mar 7 20:16:29: AcquireSync(): Update rate is 100 Hz
*Mar 7 20:16:30: 1st Sync acquired after 1100 ms.
*Mar 7 20:16:30: Recovery loop is locked (7/9)
*Mar 7 20:16:30: 2nd Sync acquired after 100 ms.
*Mar 7 20:16:30: Recovery loop is locked (10/15)
```

Related Commands

Command	Description
debug cable-modem bridge	Displays bridge filter processing information for a Cisco uBR900 series cable access router.
debug cable-modem error	Enables debugging messages for the cable interface driver on a Cisco uBR900 series.
debug cable-modem interrupts	Displays interrupts for Cisco uBR900 series cable access routers.
debug cable-modem mac	Troubleshoots the Cisco uBR900 series MAC layer.
debug cable-modem map	Displays the timing from MAP messages to sync messages and the timing between MAP messages.

debug cable-modem interrupts

To debug Cisco uBR900 series interrupts, use the **debug cable-modem interrupts** privileged EXEC command. To turn off the debugging messages, use the **no** form of this command.

debug cable-modem interrupts

no debug cable-modem interrupts

Syntax Description

This command has no arguments or keywords.

Command History

Release	Modification
11.3 NA	This command was introduced.

Examples

The following example shows sample debug output for Cisco uBR900 series interrupts:

```
Router# debug cable-modem interrupts

*** BCM3300_rx_mac_msg_interrupt ***
*** BCM3300_rx_mac_msg_interrupt ***
### BCM3300_tx_interrupt ###
*** BCM3300_rx_mac_msg_interrupt ***
### BCM3300_tx_interrupt ###
*** BCM3300_rx_mac_msg_interrupt ***
### BCM3300_tx_interrupt ###
### BCM3300_tx_interrupt ###
### BCM3300_tx_interrupt ###
### BCM3300_tx_interrupt ###
```

Related Commands

Command	Description
debug cable-modem bridge	Displays bridge filter processing information for a Cisco uBR900 series cable access router.
debug cable-modem error	Enables debugging messages for the cable interface driver on a Cisco uBR900 series.
debug cable-modem interrupts	Displays interrupts for Cisco uBR900 series cable access routers.
debug cable-modem mac	Troubleshoots the Cisco uBR900 series MAC layer.
debug cable-modem map	Displays the timing from MAP messages to sync messages and the timing between MAP messages.

debug cable-modem mac

To troubleshoot the Cisco uBR900 series MAC layer, use the **debug cable-modem mac** privileged EXEC command. To turn off the debugging messages, use the **no** form of this command.

```
debug cable-modem mac {log [verbose] | messages}
```

```
no debug cable-modem mac {log [verbose] | messages}
```

Syntax Description	log	Displays the real-time MAC log.
	verbose	(Optional) Displays periodic MAC-layer events, such as ranging.
	messages	Displays MAC layer management messages.

Command History	Release	Modification
	11.3 NA	This command was introduced.

Usage Guidelines

Of all the available **debug cable-modem** commands, the most useful is **debug cable-modem mac log**.

MAC log messages are written to a circular log file even when debugging is not turned on. These messages include time stamps, events, and information pertinent to these events. Enter the **debug cable-modem mac log** command to view MAC log messages. If you want to view this information without entering debug mode, enter the **show controllers cable-modem number mac log** command. The same information is displayed by both commands.

If the Cisco uBR900 series interface fails to come up or resets periodically, the MAC log will show what happened. For example, if an address is not obtained from the DHCP server, an error is logged, initialization starts over, and the Cisco uBR900 series cable access server router scans for a downstream frequency. The **debug cable-modem mac log** command displays the log from the oldest to the newest entry.

After initial ranging is successful (dhcp_state has been reached), further RNG-REQ/RNG-RSP messages and watchdog timer entries are suppressed from output unless the **verbose** keyword is used. Note that CMAC_LOG_WATCHDOG_TIMER entries while in the maintenance_state are normal when the **verbose** keyword is used.

Examples

The following example shows sample display output from the **debug cable-modem mac log** command. The fields of the output are the time since bootup, the log message, and in some cases a parameter that gives more detail about the log entry.

```
Router# debug cable-modem mac log

*Mar  7 01:42:59: 528302.040 CMAC_LOG_LINK_DOWN
*Mar  7 01:42:59: 528302.042 CMAC_LOG_RESET_FROM_DRIVER
*Mar  7 01:42:59: 528302.044 CMAC_LOG_STATE_CHANGE
wait_for_link_up_state
*Mar  7 01:42:59: 528302.046 CMAC_LOG_DRIVER_INIT_IDB_SHUTDOWN          0x08098D02
*Mar  7 01:42:59: 528302.048 CMAC_LOG_LINK_DOWN
*Mar  7 01:43:05: 528308.428 CMAC_LOG_DRIVER_INIT_IDB_RESET          0x08098E5E
*Mar  7 01:43:05: 528308.432 CMAC_LOG_LINK_DOWN
*Mar  7 01:43:05: 528308.434 CMAC_LOG_LINK_UP
```

```

*Mar 7 01:43:05: 528308.436 CMAC_LOG_STATE_CHANGE
ds_channel_scanning_state
*Mar 7 01:43:05: 528308.440 CMAC_LOG_WILL_SEARCH_DS_FREQUENCY_BAND
88/453000000/855000000/6000000
*Mar 7 01:43:05: 528308.444 CMAC_LOG_WILL_SEARCH_DS_FREQUENCY_BAND
89/930000000/105000000/6000000
*Mar 7 01:43:05: 528308.448 CMAC_LOG_WILL_SEARCH_DS_FREQUENCY_BAND
90/111250000/117250000/6000000
*Mar 7 01:43:05: 528308.452 CMAC_LOG_WILL_SEARCH_DS_FREQUENCY_BAND
91/231012500/327012500/6000000
*Mar 7 01:43:05: 528308.456 CMAC_LOG_WILL_SEARCH_DS_FREQUENCY_BAND
92/333015000/333015000/6000000
*Mar 7 01:43:05: 528308.460 CMAC_LOG_WILL_SEARCH_DS_FREQUENCY_BAND
93/339012500/399012500/6000000
*Mar 7 01:43:05: 528308.462 CMAC_LOG_WILL_SEARCH_DS_FREQUENCY_BAND
94/405000000/447000000/6000000
*Mar 7 01:43:05: 528308.466 CMAC_LOG_WILL_SEARCH_DS_FREQUENCY_BAND
95/123015000/129015000/6000000
*Mar 7 01:43:05: 528308.470 CMAC_LOG_WILL_SEARCH_DS_FREQUENCY_BAND
96/135012500/135012500/6000000
*Mar 7 01:43:05: 528308.474 CMAC_LOG_WILL_SEARCH_DS_FREQUENCY_BAND
97/141000000/171000000/6000000
*Mar 7 01:43:05: 528308.478 CMAC_LOG_WILL_SEARCH_DS_FREQUENCY_BAND
98/219000000/225000000/6000000
*Mar 7 01:43:05: 528308.482 CMAC_LOG_WILL_SEARCH_DS_FREQUENCY_BAND
99/177000000/213000000/6000000
*Mar 7 01:43:05: 528308.486 CMAC_LOG_WILL_SEARCH_SAVED_DS_FREQUENCY      663000000
*Mar 7 01:43:05: 528308.488 CMAC_LOG_WILL_SEARCH_USER_DS_FREQUENCY      663000000
*Mar 7 01:43:07: 528310.292 CMAC_LOG_DS_64QAM_LOCK_ACQUIRED              663000000
.
528383.992 CMAC_LOG_STATE_CHANGE                                         registration_state
528384.044 CMAC_LOG_REG_REQ_MSG_QUEUED
528384.050 CMAC_LOG_REG_REQ_TRANSMITTED
528384.052 CMAC_LOG_REG_RSP_MSG_RCVD
528384.078 CMAC_LOG_COS_ASSIGNED_SID                                     1/4
528384.102 CMAC_LOG_RNG_REQ_QUEUED                                       4
528384.102 CMAC_LOG_REGISTRATION_OK
528384.102 CMAC_LOG_STATE_CHANGE                                         establish_privacy_state
528384.102 CMAC_LOG_STATE_CHANGE                                         maintenance_state
528388.444 CMAC_LOG_RNG_REQ_TRANSMITTED
528388.444 CMAC_LOG_RNG_RSP_MSG_RCVD
528398.514 CMAC_LOG_RNG_REQ_TRANSMITTED
528398.516 CMAC_LOG_RNG_RSP_MSG_RCVD
528408.584 CMAC_LOG_RNG_REQ_TRANSMITTED
528408.586 CMAC_LOG_RNG_RSP_MSG_RCVD
528414.102 CMAC_LOG_WATCHDOG_TIMER
528418.654 CMAC_LOG_RNG_REQ_TRANSMITTED
528418.656 CMAC_LOG_RNG_RSP_MSG_RCVD
528428.726 CMAC_LOG_RNG_REQ_TRANSMITTED
528428.728 CMAC_LOG_RNG_RSP_MSG_RCVD
528438.796 CMAC_LOG_RNG_REQ_TRANSMITTED
528438.798 CMAC_LOG_RNG_RSP_MSG_RCVD
528444.102 CMAC_LOG_WATCHDOG_TIMER
528444.492 CMAC_LOG_LINK_DOWN
528444.494 CMAC_LOG_RESET_FROM_DRIVER
528444.494 CMAC_LOG_STATE_CHANGE                                         wait_for_link_up_state
528444.494 CMAC_LOG_DRIVER_INIT_IDB_SHUTDOWN                            0x08098D02
528444.494 CMAC_LOG_LINK_DOWN
528474.494 CMAC_LOG_WATCHDOG_TIMER
528504.494 CMAC_LOG_WATCHDOG_TIMER
528534.494 CMAC_LOG_WATCHDOG_TIMER

0 events dropped due to lack of a chunk

```

The line “0 events dropped due to lack of a chunk” at the end of a display indicates that no log entries were discarded due to a temporary lack of memory, which means the log is accurate and reliable.

The following example compares the output of the **debug cable-modem mac log** command with the **debug cable-modem mac log verbose** command. The **verbose** keyword displays periodic events such as ranging.

```
Router# debug cable-modem mac log

Cable Modem mac log debugging is on
Router#
Router# debug cable-modem mac log verbose

Cable Modem mac log debugging is on (verbose)
Router#
574623.810 CMAC_LOG_RNG_REQ_TRANSMITTED
574623.812 CMAC_LOG_RNG_RSP_MSG_RCVD
574627.942 CMAC_LOG_WATCHDOG_TIMER
574633.880 CMAC_LOG_RNG_REQ_TRANSMITTED
574633.884 CMAC_LOG_RNG_RSP_MSG_RCVD
574643.950 CMAC_LOG_RNG_REQ_TRANSMITTED
574643.954 CMAC_LOG_RNG_RSP_MSG_RCVD
574654.022 CMAC_LOG_RNG_REQ_TRANSMITTED
574654.024 CMAC_LOG_RNG_RSP_MSG_RCVD
574657.978 CMAC_LOG_WATCHDOG_TIMER
574664.094 CMAC_LOG_RNG_REQ_TRANSMITTED
574664.096 CMAC_LOG_RNG_RSP_MSG_RCVD
574674.164 CMAC_LOG_RNG_REQ_TRANSMITTED
574674.166 CMAC_LOG_RNG_RSP_MSG_RCVD

Router# no debug cable-modem mac log verbose

Cable Modem mac log debugging is off
Router#
574684.234 CMAC_LOG_RNG_REQ_TRANSMITTED
574684.238 CMAC_LOG_RNG_RSP_MSG_RCVD
```

The following example shows display output for the **debug cable-modem mac messages** command. This command causes received cable MAC management messages to be displayed in a verbose format.

```
Router# debug cable-modem mac messages ?

dynsrv  dynamic service mac messages
map     map messages received
reg-req reg-req messages transmitted
reg-rsp reg-rsp messages received
rng-req rng-req messages transmitted
rng-rsp rng-rsp messages received
sync    Sync messages received
ucc-req ucc-req messages received
ucc-rsp ucc-rsp messages transmitted
ucd     UCD messages received
<cr>
```

The **dynsrv** keyword displays Dynamic Service Add or Dynamic Service Delete messages during the off-hook/on-hook transitions of a phone connected to the Cisco uBR900 series cable access router.

In addition, sent REG-REQ messages are displayed in hexadecimal dump format. The output from this command is very verbose and is usually not needed for normal interface debugging. The command is most useful when attempting to attach a Cisco uBR900 series cable access router to a CMTS that is not DOCSIS-qualified.

For a description of the displayed fields of each message, refer to the DOCSIS Radio Frequency Interface Specification, v1.0 (SP-RFI-I04-980724).

Router# **debug cable mac messages**

```
*Mar 7 01:44:06:
*Mar 7 01:44:06: UCD MESSAGE
*Mar 7 01:44:06: -----
*Mar 7 01:44:06:   FRAME HEADER
*Mar 7 01:44:06:     FC                - 0xC2 == MAC Management
*Mar 7 01:44:06:     MAC_PARM          - 0x00
*Mar 7 01:44:06:     LEN               - 0xD3
*Mar 7 01:44:06:   MAC MANAGEMENT MESSAGE HEADER
*Mar 7 01:44:06:     DA                - 01E0.2F00.0001
*Mar 7 01:44:06:     SA                - 00E0.1EA5.BB60
*Mar 7 01:44:06:     msg LEN           - C1
*Mar 7 01:44:06:     DSAP              - 0
*Mar 7 01:44:06:     SSAP              - 0
*Mar 7 01:44:06:     control           - 03
*Mar 7 01:44:06:     version           - 01
*Mar 7 01:44:06:     type              - 02 == UCD
*Mar 7 01:44:06:     RSVD              - 0
*Mar 7 01:44:06:   US Channel ID      - 1
*Mar 7 01:44:06:   Configuration Change Count - 4
*Mar 7 01:44:06:   Mini-Slot Size     - 8
*Mar 7 01:44:06:   DS Channel ID      - 1
*Mar 7 01:44:06:   Symbol Rate        - 8
*Mar 7 01:44:06:   Frequency          - 20000000
*Mar 7 01:44:06:   Preamble Pattern   - CC CC CC CC CC CC CC CC CC CC CC CC
CC 0D 0D
*Mar 7 01:44:06:   Burst Descriptor 0
*Mar 7 01:44:06:     Interval Usage Code - 1
*Mar 7 01:44:06:     Modulation Type     - 1 == QPSK
*Mar 7 01:44:06:     Differential Encoding - 2 == OFF
*Mar 7 01:44:06:     Preamble Length     - 64
*Mar 7 01:44:06:     Preamble Value Offset - 56
*Mar 7 01:44:06:     FEC Error Correction - 0
*Mar 7 01:44:06:     FEC Codeword Info Bytes - 16
*Mar 7 01:44:06:     Scrambler Seed      - 0x0152
*Mar 7 01:44:06:     Maximum Burst Size  - 1
*Mar 7 01:44:06:     Guard Time Size     - 8
*Mar 7 01:44:06:     Last Codeword Length - 1 == FIXED
*Mar 7 01:44:06:     Scrambler on/off    - 1 == ON
*Mar 7 01:44:06:   Burst Descriptor 1
*Mar 7 01:44:06:     Interval Usage Code - 3
*Mar 7 01:44:06:     Modulation Type     - 1 == QPSK
*Mar 7 01:44:06:     Differential Encoding - 2 == OFF
*Mar 7 01:44:06:     Preamble Length     - 128
*Mar 7 01:44:06:     Preamble Value Offset - 0
*Mar 7 01:44:06:     FEC Error Correction - 5
*Mar 7 01:44:06:     FEC Codeword Info Bytes - 34
*Mar 7 01:44:06:     Scrambler Seed      - 0x0152
*Mar 7 01:44:06:     Maximum Burst Size  - 0
*Mar 7 01:44:06:     Guard Time Size     - 48
*Mar 7 01:44:06:     Last Codeword Length - 1 == FIXED
*Mar 7 01:44:06:     Scrambler on/off    - 1 == ON
*Mar 7 01:44:06:   Burst Descriptor 2
*Mar 7 01:44:06:     Interval Usage Code - 4
*Mar 7 01:44:06:     Modulation Type     - 1 == QPSK
*Mar 7 01:44:06:     Differential Encoding - 2 == OFF
*Mar 7 01:44:06:     Preamble Length     - 128
*Mar 7 01:44:06:     Preamble Value Offset - 0
*Mar 7 01:44:06:     FEC Error Correction - 5
*Mar 7 01:44:06:     FEC Codeword Info Bytes - 34
```

```

*Mar 7 01:44:06: Scrambler Seed - 0x0152
*Mar 7 01:44:06: Maximum Burst Size - 0
*Mar 7 01:44:06: Guard Time Size - 48
*Mar 7 01:44:06: Last Codeword Length - 1 == FIXED
*Mar 7 01:44:06: Scrambler on/off - 1 == ON
*Mar 7 01:44:06: Burst Descriptor 3
*Mar 7 01:44:06: Interval Usage Code - 5
*Mar 7 01:44:06: Modulation Type - 1 == QPSK
*Mar 7 01:44:06: Differential Encoding - 2 == OFF
*Mar 7 01:44:06: Preamble Length - 72
*Mar 7 01:44:06: Preamble Value Offset - 48
*Mar 7 01:44:06: FEC Error Correction - 5
*Mar 7 01:44:06: FEC Codeword Info Bytes - 75
*Mar 7 01:44:06: Scrambler Seed - 0x0152
*Mar 7 01:44:06: Maximum Burst Size - 0
*Mar 7 01:44:06: Guard Time Size - 8
*Mar 7 01:44:06: Last Codeword Length - 1 == FIXED
*Mar 7 01:44:06: Scrambler on/off - 1 == ON
*Mar 7 01:44:06:
*Mar 7 01:44:06: MAP MESSAGE
*Mar 7 01:44:06: -----
*Mar 7 01:44:06: FRAME HEADER
*Mar 7 01:44:06: FC - 0xC3 == MAC Management with Extended
Header
*Mar 7 01:44:06: MAC_PARM - 0x02
*Mar 7 01:44:06: LEN - 0x42
*Mar 7 01:44:06: EHDR - 0x00 0x00
*Mar 7 01:44:06: MAC MANAGEMENT MESSAGE HEADER
*Mar 7 01:44:06: DA - 01E0.2F00.0001
.
*Mar 7 01:44:17: RNG-RSP MESSAGE
*Mar 7 01:44:17: -----
*Mar 7 01:44:17: FRAME HEADER
*Mar 7 01:44:17: FC - 0xC2 == MAC Management
*Mar 7 01:44:17: MAC_PARM - 0x00
*Mar 7 01:44:17: LEN - 0x2B
*Mar 7 01:44:17: MAC MANAGEMENT MESSAGE HEADER
*Mar 7 01:44:17: DA - 00F0.1EB2.BB61
.
*Mar 7 01:44:20: REG-REQ MESSAGE
*Mar 7 01:44:20: -----
*Mar 7 01:44:20: C20000A5 000000E0 1EA5BB60 00F01EB2
*Mar 7 01:44:20: BB610093 00000301 06000004 03010104
*Mar 7 01:44:20: 1F010101 0204003D 09000304 001E8480
*Mar 7 01:44:20: 04010705 04000186 A0060200 0C070101
*Mar 7 01:44:20: 080300F0 1E112A01 04000000 0A020400
*Mar 7 01:44:20: 00000A03 04000002 58040400 00000105
*Mar 7 01:44:20: 04000000 01060400 00025807 04000000
*Mar 7 01:44:20: 3C2B0563 6973636F 06105E4F C908C655
*Mar 7 01:44:20: 61086FD5 5C9D756F 7B730710 434D5453
*Mar 7 01:44:20: 204D4943 202D2D2D 2D2D2D2D 0C040000
*Mar 7 01:44:20: 00000503 010100
*Mar 7 01:44:20:
*Mar 7 01:44:20:
*Mar 7 01:44:20: REG-RSP MESSAGE
*Mar 7 01:44:20: -----
*Mar 7 01:44:20: FRAME HEADER
*Mar 7 01:44:20: FC - 0xC2 == MAC Management
*Mar 7 01:44:20: MAC_PARM - 0x00
*Mar 7 01:44:20: LEN - 0x29
*Mar 7 01:44:20: MAC MANAGEMENT MESSAGE HEADER
*Mar 7 01:44:20: DA - 00F0.1EB2.BB61

```

Related Commands	Command	Description
	debug cable-modem bpkm	Displays baseline privacy information for a Cisco uBR900 series cable access router.
	debug cable-modem bridge	Displays bridge filter processing information for a Cisco uBR900 series cable access router.
	debug cable-modem error	Enables debugging messages for the cable interface driver on a Cisco uBR900 series.
	debug cable-modem interrupts	Displays interrupts for Cisco uBR900 series cable access routers.
	debug cable-modem map	Displays the timing from MAP messages to synchronize messages and the timing between MAP messages.

debug cable-modem map

To display the timing from MAP messages to synchronized messages and the timing between MAP messages on a Cisco uBR900 series cable access router, use the **debug cable-modem map** privileged EXEC command. To turn off the debugging messages, use the **no** form of this command.

debug cable-modem map

no debug cable-modem map

Syntax Description

This command has no arguments or keywords.

Command History

Release	Modification
11.3 NA	This command was introduced.

Examples

The following example shows display output for the **debug cable-modem map** command:

```
Router# debug cable-modem map

Cable Modem MAP debugging is on
Router#
*Mar 7 20:12:08: 595322.942: Min MAP to sync=72
*Mar 7 20:12:08: 595322.944: Max map to map time is 40
*Mar 7 20:12:08: 595322.982: Min MAP to sync=63
*Mar 7 20:12:08: 595323.110: Max map to map time is 41
*Mar 7 20:12:08: 595323.262: Min MAP to sync=59
*Mar 7 20:12:08: 595323.440: Max map to map time is 46
*Mar 7 20:12:09: 595323.872: Min MAP to sync=58
```

Related Commands

Command	Description
debug cable-modem bpkm	Displays baseline privacy information for a Cisco uBR900 series cable access router.
debug cable-modem bridge	Displays bridge filter processing information for a Cisco uBR900 series cable access router.
debug cable-modem error	Enables debugging messages for the cable interface driver on a Cisco uBR900 series.
debug cable-modem interrupts	Displays interrupts for CiscouBR900 series cable access routers.
debug cable-modem mac	Troubleshoots the Cisco uBR900 series MAC layer.

debug cable phy

To activate debugging of messages generated in the cable physical layer, use the **debug cable phy** privileged EXEC command. To disable debugging output, use the **no** form of this command.

debug cable phy

no debug cable phy

Syntax Description

This command has no arguments or keywords.

Usage Guidelines

This command activates debugging of messages generated in the cable phy, which is the physical layer where upstream and downstream activity between the Cisco uBR7246 router and the HFC network is controlled. When this command is activated, any messages generated in the cable phy will be displayed on the Cisco uBR7246 console.

Examples

The following is sample output from the **debug cable phy** command:

```
Router# debug cable phy

cmts_phy_init: mac_version == BCM3210_FPGA
    bcm3033_set_tx_sym_rate(5056941)
    stintctl = 0x54484800
    bcm3033_set_tx_if_freq(44000000)
    stfreqctl = 0x5BAAAAAA
cmts_phy_init_us: U0 part_id = 0x3136, rev_id = 0x05, rev_id2 = 0x64
cmts_phy_init: mac_version == BCM3210_FPGA
Media access controller chip version.
    bcm3033_set_tx_sym_rate(5056941)
    stintctl = 0x54484800
Physical layer symbol rate register value.
    00:51:49: bcm3033_set_tx_if_freq(44000000)
    00:51:49: stfreqctl = 0x5BAAAAAA
Physical layer intermediate frequency (IF) register value.
    00:51:49: cmts_phy_init_us: U0 part_id = 0x3136, rev_id = 0x05, rev_id2 = 0x64
Physical layer receiver chip part version.
```

debug cable privacy

To activate debugging of baseline privacy, use the **debug cable privacy** privileged EXEC command. To disable debugging output, use the **no** form of this command.

debug cable privacy

no debug cable privacy

Syntax Description

This command has no arguments or keywords.

Usage Guidelines

This command activates debugging of baseline privacy. When this command is activated, any messages generated by the spectrum manager will be displayed on the Cisco uBR7246 console.

Examples

The following is sample output from the **debug cable privacy** command:

```
Router# debug cable privacy
Removing both odd and even keys for sid %x.

      Invalid Len for TLV_SERIAL_NUM_TYPE : %d.

      Invalid Len for TLV_MANUF_ID_TYPE : %d.

      Invalid Len for TLV_MANUF_ID_TYPE : %d.
```

debug cable qos

To activate quality of service (QoS) debugging, use the **debug cable qos** privileged EXEC command. To disable debugging output, use the **no** form of this command.

debug cable qos

no debug cable qos

Syntax Description

This command has no arguments or keywords.

Usage Guidelines

This command activates debugging of QoS. When this command is activated, any messages related to QoS parameters will be displayed on the Cisco uBR7246 console.

Examples

The following is sample output from the **debug cable qos** command:

```
Router# debug cable qos

CMTS_QOS_LOG_NO_MORE_QOS_INDEX
Modems cannot add more entries to the class of service table.
CMTS_QOS_LOG_NOMORE_QOSPRF_MEM
Memory allocation error when creating class of service table entry.
CMTS_QOS_LOG_NO_CREATION_ALLOWED
Class of service entry cannot be created by modem. Use CLI or SNMP
interface instead of the modem's TFTP configuration file.
CMTS_QOS_LOG_CANNOT_REGISTER_COS_SID
A service identifier (SID) could not be assigned to the registering modem.
CMTS_QOS_LOG_CANNOT_DEREGISTER_COS_SID
The modem's service identifier (SID) was already removed.
CMTS_QOS_LOG_MSLOT_TIMEBASE_WRAPPED
The 160 KHz timebase clock drives a 26-bit counter which wraps around
approximately every 7 minutes. This message is generated every time it
wraps around.
```

debug cable range

To display ranging messages from cable modems on the HFC network, use the **debug cable range** privileged EXEC command. To disable debugging output, use the **no** form of this command.

debug cable range

no debug cable range

Syntax Description

This command has no arguments or keywords.

Usage Guidelines

This command activates debugging of ranging messages from cable modems on the HFC network. When this command is activated, any ranging messages generated when cable modems request or change their upstream frequencies will be displayed on the Cisco uBR7246 console. Use this command to display the details of the initial and station maintenance procedures. The initial maintenance procedure is used for link establishment. The station maintenance procedure is used for link keepalive monitoring.

Examples

The following is sample output from the **debug cable range** command when a modem first seeks to establish a link to the Cisco uBR7246 universal broadband router:

```
Router# debug cable range

Got a ranging request
SID value is 0 on Interface Cable3/0/U0
CM mac address 00:10:7B:43:AA:21 Timing offset is 3312
3E 1E 3F FF 00 00 59 BF 01 15 F8 01 A7 00 0C F0
```

The SID value of 0 indicates that the modem has no assigned service identifier. The “CM mac address” is the MAC address of the radio frequency (RF) interface of the modem, not its Ethernet interface. The “Timing offset” is a measure of the distance between the modem and the Cisco uBR7246 universal broadband router expressed in 10.24-MHz clocks. This value is adjusted down to zero by the maintenance procedures. The first sixteen bytes of the prepended header of the message are dumped in hexadecimal.

The following is sample output when the modem is first assigned a SID during initial maintenance:

```
CM mac address 0010.7b43.aa21
  found..Assigned SID #2 on Interface Cable3/0/U0
  Timing offset is CF0
  Power value is 15F8, or -1 dB
  Freq Error = 423, Freq offset is 1692
  Ranging Modem with Sid 2 on i/f : Cable3/0/U0
```

The following is sample output when the modem is reassigned the same SID during initial maintenance:

```
Initial Range Message Received on Interface Cable3/0/U0
CMTS reusing old sid : 2 for modem : 0010.7b43.aa21
Timing offset is CF0
Power value is 15F8, or -1 dB
Freq Error = 423, Freq offset is 1692
Ranging Modem with Sid 2 on i/f : Cable3/0/U0
```

The following is sample output when the modem is polled by the uBR7246 universal broadband router during station maintenance. Polling happens at a minimum rate of once every 10 seconds.

```
Ranging Modem with Sid 2 on i/f : Cable3/0/U0
```

```
Got a ranging request
```

```
SID value is 2 on Interface Cable3/0/U0
```

```
CM mac address 00:10:7B:43:AA:21
```

```
Timing offset is 0
```

```
Power value is 1823, or -1 dB
```

```
Freq Error = 13, Freq offset is 0
```

```
Ranging has been successful for SID 2 on Interface Cable3/0/U0
```

debug cable reset

To display reset messages from cable interfaces, use the **debug cable reset** privileged EXEC command. To disable debugging output, use the **no** form of this command.

debug cable reset

no debug cable reset

Syntax Description

This command has no arguments or keywords.

Usage Guidelines

This command activates display of reset messages from cable interfaces.

Examples

The following is sample output from the **debug cable reset** command when the interface is reset due to complete loss of receive packets:

```
Router# debug cable reset
```

```
Resetting CMTS interface.
```

debug cable specmgmt

To debug spectrum management (frequency agility) on the HFC network, use the **debug cable specmgmt** privileged EXEC command. To disable debugging output, use the **no** form of this command.

debug cable specmgmt

no debug cable specmgmt

Syntax Description

This command has no arguments or keywords.

Usage Guidelines

This command activates debugging of spectrum management (frequency agility) on the HFC network. When this command is activated, any messages generated due to spectrum group activity will be displayed on the Cisco uBR7246 console. Spectrum group activity can be additions or changes to spectrum groups, or frequency and power level changes controlled by spectrum groups.

Examples

The following is sample output from the **debug cable specmgmt** command:

```
Router# debug cable specmgmt  
  
cmts_next_frequency(0x60A979AC, 1, 1)
```

The following is sample output when the frequency hop was commanded:

```
add_interface_to_freq(0x60BD3734, 0x60C44F68)
```

The following is sample output when the interface was added to a the interface list of a frequency:

```
set_upstream(0x60A979AC, 1, 21000000, -5)
```

The following is sample output when the spectrum management has set the frequency and power level of an upstream port:

```
cmts_frequency_hop_decision(0x60B57FEC)
```

debug cable startalloc

To debug channel allocations on the HFC network, use the **debug cable startalloc** privileged EXEC command. To disable debugging output, use the **no** form of this command.

debug cable startalloc

no debug cable startalloc

Syntax Description

This command has no arguments or keywords.

Usage Guidelines

This command activates debugging of any channel allocations on the HFC network. When this command is activated, any messages generated when channels are allocated to cable modems on the HFC network will be displayed on the Cisco uBR7246 console.

Examples

The following is sample output from the **debug cable startalloc** command:

```
Router# debug cable startalloc  
  
MAP startalloc adjusted by <n> mslots
```

This output indicates time-slot MAP processing is active.

debug cable telco-return

To display debug messages for Telco return events, use the **debug cable telco-return** privileged EXEC command. To disable debugging output, use the **no** form of this command.

debug cable telco-return

no debug cable telco-return

Syntax Description This command has no arguments or keywords.

Defaults Debugging for Telco return events is not enabled.

Command History	Release	Modification
	12.0(4)XI	This command was introduced.

Examples

```
Router# debug cable telco-return
CMTS telco-return debugging is on
```

Related Commands	Command	Description
	debug cable ucc	Displays debug messages for Telco return events.

debug cable ucc

To debug upstream channel change (UCC) messages generated when cable modems request or are assigned a new channel, use the **debug cable ucc** privileged EXEC command. To disable debugging output, use the **no** form of this command.

debug cable ucc

no debug cable ucc

Syntax Description

This command has no arguments or keywords.

Usage Guidelines

This command activates debugging of any UCC messages generated when cable modems request or are assigned a new channel. When this command is activated, any messages related to upstream channel changes will be displayed on the Cisco uBR7246 console.

Examples

The following is sample output from the **debug cable ucc** command when moving a modem from one upstream channel to another:

```
Router# debug cable ucc

SID 2 has been registered

Mac Address of CM for UCC
    00:0E:1D:D8:52:16

UCC Message Sent to CM

Changing SID 2 from upstream channel 1 to upstream channel 2
```

debug cable ucd

To debug upstream channel descriptor (UCD) messages, use the **debug cable ucd** privileged EXEC command. To disable debugging output, use the **no** form of this command.

debug cable ucd

no debug cable ucd

Syntax Description

This command has no arguments or keywords.

Usage Guidelines

This command activates debugging of any UCD messages. UCD messages contain information about upstream channel characteristics and are sent to the cable modems on the HFC network. Cable modems that are configured to use enhanced upstream channels use these UCD messages to identify and select an enhanced upstream channel to use. When this command is activated, any messages related to upstream channel descriptors will be displayed on the Cisco uBR7246 console.

Examples

The following is sample output from the **debug cable ucd** command:

```
Router# debug cable ucd

UCD MESSAGE
-----
FRAME HEADER
  FC                - 0xC2 ==
  MAC_PARM          - 0x00
  LEN               - 0xD3
MAC MANAGEMENT MESSAGE HEADER
  DA                - 01E0.2F00.0001
  SA                - 0009.0CEF.3730
  msg LEN           - C1
  DSAP              - 0
  SSAP              - 0
  control           - 03
  version           - 01
  type              - 02 ==
  US Channel ID    - 1
  Configuration Change Count - 5
  Mini-Slot Size   - 4
  DS Channel ID    - 1
  Symbol Rate      - 8
  Frequency        - 10000000
  Preamble Pattern - CC CC CC CC CC CC CC CC CC CC CC CC
CC 0D 0D
Burst Descriptor 0
  Interval Usage Code - 1
  Modulation Type     - 1 == QPSK
  Differential Encoding - 2 == OFF
  Preamble Length     - 64
  Preamble Value Offset - 56
  FEC Error Correction - 0
  FEC Codeword Length - 16
  Scrambler Seed      - 0x0152
  Maximum Burst Size  - 2
```

```

Guard Time Size          - 8
Last Codeword Length     - 1 == FIXED
Scrambler on/off        - 1 == ON
Burst Descriptor 1
Interval Usage Code      - 3
Modulation Type          - 1 == QPSK
Differential Encoding     - 2 == OFF
Preamble Length          - 128
Preamble Value Offset    - 0
FEC Error Correction      - 5
FEC Codeword Length      - 34
Scrambler Seed           - 0x0152
Maximum Burst Size       - 0
Guard Time Size          - 48
Last Codeword Length     - 1 == FIXED
Scrambler on/off        - 1 == ON
Burst Descriptor 2
Interval Usage Code      - 4
Modulation Type          - 1 == QPSK
Differential Encoding     - 2 == OFF
Preamble Length          - 128
Preamble Value Offset    - 0
FEC Error Correction      - 5
FEC Codeword Length      - 34
Scrambler Seed           - 0x0152
Maximum Burst Size       - 0
Guard Time Size          - 48
Last Codeword Length     - 1 == FIXED
Scrambler on/off        - 1 == ON
Burst Descriptor 3
Interval Usage Code      - 5
Modulation Type          - 1 == QPSK
Differential Encoding     - 2 == OFF
Preamble Length          - 72
Preamble Value Offset    - 48
FEC Error Correction      - 5
FEC Codeword Length      - 75
Scrambler Seed           - 0x0152
Maximum Burst Size       - 0
Guard Time Size          - 8
Last Codeword Length     - 1 == FIXED
Scrambler on/off        - 1 == ON

```

The UCD MESSAGE is :

```

0xC2 0x00 0x00 0xD3 0x00 0x00 0x01 0xE0
0x2F 0x00 0x00 0x01 0x00 0x09 0x0C 0xEF
0x37 0x30 0x00 0xC1 0x00 0x00 0x03 0x01
0x02 0x00 0x01 0x05 0x04 0x01 0x01 0x01
0x08 0x02 0x04 0x00 0x98 0x96 0x80 0x03
0x10 0xCC 0xCC 0xCC 0xCC 0xCC 0xCC 0xCC
0xCC 0xCC 0xCC 0xCC 0xCC 0xCC 0xCC 0x0D
0x0D 0x04 0x25 0x01 0x01 0x01 0x01 0x02
0x01 0x02 0x03 0x02 0x00 0x40 0x04 0x02
0x00 0x38 0x05 0x01 0x00 0x06 0x01 0x10
0x07 0x02 0x01 0x52 0x08 0x01 0x02 0x09
0x01 0x08 0x0A 0x01 0x01 0x0B 0x01 0x01
0x04 0x25 0x03 0x01 0x01 0x01 0x02 0x01
0x02 0x03 0x02 0x00 0x80 0x04 0x02 0x00
0x00 0x05 0x01 0x05 0x06 0x01 0x22 0x07
0x02 0x01 0x52 0x08 0x01 0x00 0x09 0x01
0x30 0x0A 0x01 0x01 0x0B 0x01 0x01 0x04
0x25 0x04 0x01 0x01 0x01 0x02 0x01 0x02
0x03 0x02 0x00 0x80 0x04 0x02 0x00 0x00
0x05 0x01 0x05 0x06 0x01 0x22 0x07 0x02

```

■ debug cable ucd

```
0x01 0x52 0x08 0x01 0x00 0x09 0x01 0x30
0x0A 0x01 0x01 0x0B 0x01 0x01 0x04 0x25
0x05 0x01 0x01 0x01 0x02 0x01 0x02 0x03
0x02 0x00 0x48 0x04 0x02 0x00 0x30 0x05
0x01 0x05 0x06 0x01 0x4B 0x07 0x02 0x01
0x52 0x08 0x01 0x00 0x09 0x01 0x08 0x0A
0x01 0x01 0x0B 0x01 0x01
```

debug call fallback detail

To display details of the call fallback, use the **debug call fallback detail** command in privileged EXEC mode. To disable debugging output, use the **no** form of this command.

debug call fallback detail

no debug call fallback detail

Syntax Description This command has no arguments or keywords.

Defaults Disabled

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(3)T	This command was introduced.
	12.2(2)XB1	This command was implemented on the Cisco AS5850 platform.
	12.2(4)T	The PSTN Fallback feature and enhancements were introduced on Cisco 7200 series routers and integrated into Cisco IOS Release 12.2(4)T.
	12.2(4)T3	Support for Cisco 7500 series routers was added.
	12.2(11)T	This command was integrated into Cisco IOS Release 12.2(11)T.

Usage Guidelines Every time a call request is received, the **debug call fallback detail** command displays in the command-line interface (CLI) cache lookup and call acceptance/rejection information. Use this command to monitor call requests as they enter the call fallback subsystem.

If you have a large amount of calls in your router, enabling this command can cause delays in your routing functions as the debug statistics are constantly compiled and sent to your terminal. Also, debug messages on your terminal may make for difficult CLI configuring.

Examples

The following example depicts a call coming in to 10.1.1.4 with codec g729r8. Because there is no cache entry for this destination, a probe is sent and values are inserted into the cache. A lookup is performed again, entry is found, and a fallback decision is made to admit the call.

```
Router# debug call fallback detail
```

```
When cache is empty:
debug call fallback detail:
2d19h:fb_lookup_cache:10.1.1.4, codec:g729r8
2d19h:fb_lookup_cache:No entry found.
2d19h:fb_check:no entry exists, enqueueing probe info... 10.1.1.4, codec:g729r8
2d19h:fb_main:Got FB_APP_INQ event
2d19h:fb_main:Dequeued prob info: 10.1.1.4, codec:g729r8
2d19h:fb_lookup_cache:10.1.1.4, codec:g729r8
2d19h:fb_lookup_cache:No entry found.
2d19h:fb_cache_insert:insert:10.1.1.4, codec:g729r8
2d19h:fb_cache_insert:returning entry:10.1.1.4, codec:g729r8
2d19h:fb_initiate_probe:Creating probe... 10.1.1.4, codec:g729r8
2d19h:fb_initiate_probe:Created and started on probe #13, 10.1.1.4, codec:g729r8
2d19h:fb_lookup_cache:10.1.1.4, codec:g729r8
2d19h:fb_lookup_cache:Found entry.
2d19h:fb_check:returned FB_CHECK_TRUE, 10.1.1.4, codec:g729r8
2d19h:fb_main:calling callback function with:TRUE
```

The following example depicts a call coming in to 10.1.1.4 with codec g729r8. A lookup is performed, entry is found, and a fallback decision is made to admit the call.

```
Router# debug call fallback detail
```

```
When cache is full:
2d19h:fb_lookup_cache:10.1.1.4, codec:g729r8
2d19h:fb_lookup_cache:Found entry.
2d19h:fb_check:returned FB_CHECK_TRUE, 10.1.1.4, codec:g729r8
2d19h:fb_main:calling callback function with:TRUE
```

debug call fallback probe

To display details of the call fallback probes, use the **debug call fallback probe** command in privileged EXEC mode. To disable debugging output, use the **no** form of this command.

debug call fallback probe

no debug call fallback probe

Syntax Description This command has no arguments or keywords.

Defaults Disabled

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(3)T	This command was introduced.
	12.2(2)XA	The call fallback and call fallback reject-cause-code commands were introduced.
	12.2(2)XB1	This command was implemented on the Cisco AS5850 platform.
	12.2(4)T	The PSTN Fallback feature and enhancements were introduced on Cisco 7200 series routers and integrated into Cisco IOS Release 12.2(4)T.
	12.2(4)T3	Support for Cisco 7500 series routers was added.
	12.2(11)T	This command was integrated into Cisco IOS Release 12.2(11)T.

Usage Guidelines Every time a probe is received, the **debug call fallback probe** command displays in the command-line interface (CLI) network traffic information collected by the probe. Use this command to monitor the network traffic information the probes carry as they enter the call fallback subsystem and log cache entries.

If you have frequent return of probes to your router, enabling this command can cause delays in your routing functions as the debug statistics are constantly compiled and sent to your terminal. Also, debug messages on your terminal may make for difficult CLI configuring.

Examples The following example depicts a call coming in to 10.1.1.4 and codec type g729r8. Because there is no cache entry for this IP address, a g729r8 probe is initiated. The probe consists of 20 packet returns with an average delay of 43 milliseconds. The “jitter out” is jitter from source to destination router and “jitter in” is jitter from destination to source router. The delay, loss, and Calculated Planning Impairment Factor (ICPIF) values following g113_calc_icpif are the instantaneous values, whereas those values following “New smoothed values” are the values after applying the smoothing with weight 65.

```
Router# debug call fallback probe
```

```
2d19h:fb_initiate_probe:Probe payload is 32
2d19h:fb_main:NumOfRTT=20, RTTSum=120, loss=0, delay=43, jitter in=0, jitter out=0->
10.1.1.4, codec:g729r8
2d19h:g113_calc_icpif(delay (w/codec delay)=43, loss=0, expect_factor=10) Icpif=0

2d19h:fb_main:Probe timer expired, 10.1.1.4, codec:g729r8
2d19h:fb_main:NumOfRTT=20, RTTSum=120, loss=0, delay=43, jitter in=0, jitter out=0->
10.1.1.4, codec:g729r8
2d19h:g113_calc_icpif(delay (w/codec delay)=43, loss=0, expect_factor=10) Icpif=0
2d19h:fb_main:New smoothed values:inst_weight=65, ICPIF=0, Delay=43, Loss=0 -> 10.1.1.4,
codec:g729r8
```

debug call-mgmt

To display debugging information for call accounting, including modem and time slot usage, for active and recent calls, use the **debug call-mgmt** command in privileged EXEC mode. To disable debugging output, use the **no** form of this command.

debug call-mgmt

no debug call-mgmt

Syntax Description This command has no arguments or keywords.

Defaults No default behavior or values.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1	This command was introduced.

Examples The following is an example of the debug output that will be received after the **debug call-mgmt** command has been enabled:

```
Router# debug call-mgmt

Call Management debugging is on
Router#
Dec 26 13:57:27.710: msg_to_calls_mgmt: msg type CPM_NEW_CALL_CSM_CONNECT received
Dec 26 13:57:27.714: In actv_c_proc_message,
    access type CPM_INSERT_NEW_CALL,
    call type CPM_ISDN_ANALOG:
        CSM completed connecting a new modem call
.
.
.
Dec 26 13:57:45.906: msg_to_calls_mgmt: msg type CPM_NEW_CALL_ISDN_CONNECT received
Dec 26 13:57:45.906: In actv_c_proc_message,
    access type CPM_INSERT_NEW_CALL,
    call type CPM_ISDN_ANALOG:
        Added a new ISDN analog call to the active-calls list
        CC-Slot#7, DSX1-Ctrlr#17, DS0-Timeslot#1
        Mdm-Slot#1, Mdm-Port#3, TTY#219
.
.
.
```

```

Dec 26 13:58:25.682: Call mgmt per minute statistics:
    active list length: 1
    history list length: 3
Dec 26 13:58:25.682:      0 timeslots active at slot 7, ctrlr 1
Dec 26 13:58:25.682:      0 timeslots active at slot 7, ctrlr 2
Dec 26 13:58:25.682:      0 timeslots active at slot 7, ctrlr 3
Dec 26 13:58:25.682:      0 timeslots active at slot 7, ctrlr 4
Dec 26 13:58:25.682:      0 timeslots active at slot 7, ctrlr 5
Dec 26 13:58:25.682:      0 timeslots active at slot 7, ctrlr 6
Dec 26 13:58:25.682:      0 timeslots active at slot 7, ctrlr 7
Dec 26 13:58:25.682:      0 timeslots active at slot 7, ctrlr 8
Dec 26 13:58:25.682:      0 timeslots active at slot 7, ctrlr 9
Dec 26 13:58:25.682:      0 timeslots active at slot 7, ctrlr 10
Dec 26 13:58:25.682:      0 timeslots active at slot 7, ctrlr 11
Dec 26 13:58:25.682:      0 timeslots active at slot 7, ctrlr 12
Dec 26 13:58:25.682:      0 timeslots active at slot 7, ctrlr 13
Dec 26 13:58:25.686:      0 timeslots active at slot 7, ctrlr 14
Dec 26 13:58:25.686:      0 timeslots active at slot 7, ctrlr 15
Dec 26 13:58:25.686:      0 timeslots active at slot 7, ctrlr 16
Dec 26 13:58:25.686:      1 timeslots active at slot 7, ctrlr 17
Dec 26 13:58:25.686:      0 timeslots active at slot 7, ctrlr 18
Dec 26 13:58:25.686:      0 timeslots active at slot 7, ctrlr 19
Dec 26 13:58:25.686:      0 timeslots active at slot 7, ctrlr 20
Dec 26 13:58:25.686:      0 timeslots active at slot 7, ctrlr 21
Dec 26 13:58:25.686:      0 timeslots active at slot 7, ctrlr 22
Dec 26 13:58:25.686:      0 timeslots active at slot 7, ctrlr 23
Dec 26 13:58:25.686:      0 timeslots active at slot 7, ctrlr 24
Dec 26 13:58:25.686:      0 timeslots active at slot 7, ctrlr 25
Dec 26 13:58:25.686:      0 timeslots active at slot 7, ctrlr 26
Dec 26 13:58:25.686:      0 timeslots active at slot 7, ctrlr 27
Dec 26 13:58:25.686:      0 timeslots active at slot 7, ctrlr 28

```

```
Router# clear int as1/03
```

```

Dec 26 13:58:26.538: msg_to_calls_mgmt: msg type CPM_VOICE_CALL_REJ_NO_MOD_AVAIL received
Dec 26 13:58:26.538: In actv_c_proc_message,
    access type CPM_REMOVE_DISC_CALL,
    call type CPM_ISDN_ANALOG:
        Removed a disconnected ISDN analog call
        CC-Slot#7, DSX1-Ctrlr#17, DS0-Timeslot#1
Dec 26 13:58:26.538:      Mdm-Slot#1, Mdm-Port#3, TTY#219

```

Table 30 describes the significant fields shown in the display.

Table 30 debug call-mgmt Field Descriptions

Field	Description
CPM_NEW_CALL_CSM_CONNECT	Indicates the arrival of a new call.
access type CPM_INSERT_NEW_CALL, call type CPM_ISDN_ANALOG:	Indicates that the new call is an analog ISDN B channel call (either a voice call or a call over an analog modem), rather than a digital (V.110) call.
CC-Slot#7, DSX1-Ctrlr#17, DS0-Timeslot#1 Mdm-Slot#1, Mdm-Port#3, TTY#219	Indicates that the call is connected via the B channel on Serial7/17:1 to the asynchronous modem resource 1/03 (interface async1/03, also known as line tty219).

Table 30 *debug call-mgmt Field Descriptions (continued)*

Field	Description
Dec 26 13:58:25.682: Call mgmt per minute statistics: active list length: 1 history list length: 3	Displays periodic statistics that give the allocation state of each DSX1 interface present in the system, as well as the number of current (active) and recent (history) calls.
Dec 26 13:58:26.538: msg_to_calls_mgmt: msg type CPM_VOICE_CALL_REJ_NO_MOD_AVAIL received	Indicates that the analog ISDN B channel call has been disassociated from a modem.
access type CPM_REMOVE_DISC_CALL, call type CPM_ISDN_ANALOG: Removed a disconnected ISDN analog call	Indicates that the analog ISDN B channel call has been disconnected.
CC-Slot#7, DSX1-Ctrlr#17, DS0-Timeslot#1 Dec 26 13:58:26.538: Mdm-Slot#1, Mdm-Port#3, TTY#219	Indicates that the call has been disconnected via the B channel on Serial7/17:1 to the asynchronous modem resource 1/03 (interface async1/03, also known as line tty219).

debug call rsvp-sync events

To display events that occur during Resource Reservation Protocol (RSVP) setup, use the **debug call rsvp-sync events** command in privileged EXEC mode. To restore the default condition, use the **no** form of this command.

debug call rsvp-sync events

no debug call rsvp-sync events

Syntax Description This command has no arguments or keywords.

Defaults No default behavior or values.

Command Modes Privileged EXEC

Command History

Release	Modification
12.1(3)XI1	This command was introduced.
12.1(5)T	This command was integrated into Cisco IOS Release 12.1(5)T.
12.2(2)XB1	This command was implemented on the Cisco AS5850.
12.2(11)T	This command was integrated into Cisco IOS Release 12.2(11)T.

Usage Guidelines

It is highly recommended that you log the output from the **debug call rsvp-sync events** command to a buffer, rather than sending the output to the console; otherwise, the size of the output could severely impact the performance of the gateway.

Examples

The following example shows a portion of sample output for a call initiating RSVP when using the **debug call rsvp-sync events** command:

```
00:03:25: Parameters: localip: 10.19.101.117 :localport: 16660
00:03:25: Parameters: remoteip: 10.19.101.116 :remoteport: 17568
00:03:25: QoS Primitive Event for Call id 0x1 : QoS Listen
00:03:25: Lookup to be done on hashkey 0x1 in hash table 0x61FC2498
00:03:25: Hashed entry 0x1 in call table 0x61FC2498
00:03:25: Entry Not found
00:03:25: Parameters: localip: 10.19.101.117
00:03:25: remoteip: 10.19.101.116
00:03:25: QoSpcb : 0x61FC34D8
```

```

00:03:25: Response Status : 0
Starting timer for call with CallId 0x1 for 10000 secs

00:03:25: Handling QoS Primitive QoS Listen

00:03:25: Establishing RSVP RESV state : rsvp_request_reservation()

00:03:25: For streams from 10.19.101.116:17568 to 10.19.101.117:16660

00:03:25: RSVP Confirmation required

00:03:25: QoS Primitive Event for Call id 0x1 : QoS Resv
00:03:25: Lookup to be done on hashkey 0x1 in hash table 0x61FC2498

00:03:25: Hashed entry 0x1 in call table 0x61FC2498

00:03:25: Initiating RVSP PATH messages to be Sent : reg_invoke_rsvp_advertise_sender()

00:03:25: Advertizing for streams to 10.19.101.116:17568 from 10.19.101.117:16660

00:03:25: RESV notification event received is : 2

00:03:25: Received RESVCONFIRM

00:03:25: RESV CONFIRM message received from 10.19.101.116 for RESV setup from
10.19.101.117

00:03:25: RESV event received is : 0

00:03:25: RESV message received from 10.19.101.116:17568 for streams from
10.19.101.117:16660

00:03:25: RESERVATIONS ESTABLISHED : CallId: 1Stop timer and notify Session Protocol of
Success (ie. if notification requested)

00:03:25: Invoking spQoSresvCallback with Success

```

Related Commands

Command	Description
call rsvp-sync	Enables synchronization between RSVP and the H.323 voice signaling protocol.
call rsvp-sync resv-timer	Sets the timer for RSVP reservation setup.
debug call rsvp-sync func-trace	Displays messages about the software functions called by RSVP synchronization.
show call rsvp-sync conf	Displays the RSVP synchronization configuration.
show call rsvp-sync stats	Displays statistics for calls that attempted RSVP reservation.

debug call rsvp-sync func-trace

To display messages about software functions called by Resource Reservation Protocol (RSVP), use the **debug call rsvp-sync func-trace** command in privileged EXEC mode. To restore the default condition, use the **no** form of this command.

debug call rsvp-sync func-trace

no debug call rsvp-sync func-trace

Syntax Description This command has no arguments or keywords.

Defaults No default behavior or values.

Command Modes Privileged EXEC

Command History

Release	Modification
12.1(3)XI1	This command was introduced.
12.1(5)T	This command was integrated into Cisco IOS Release 12.1(5)T.
12.2(2)XB1	This command was implemented on the Cisco AS5850.
12.2(11)T	This command was integrated into Cisco IOS Release 12.2(11)T.

Usage Guidelines

It is highly recommended that you log the output from the **debug call rsvp-sync func-trace** command to a buffer, rather than sending the output to the console; otherwise, the size of the output could severely impact the performance of the gateway.

Examples

The following example shows a portion of sample output for a call initiating RSVP when using the **debug call rsvp-sync func-trace** command in conjunction with the **debug call rsvp-sync events** command:

```
00:03:41: Entering Function QoS_Listen
00:03:41: Parameters:localip:10.10.101.116 :localport:17568
00:03:41:remoteip:10.10.101.117 :remoteport:0
00:03:41: Entering Function qos_dequeue_event
00:03:41: Entering Function process_queue_event
00:03:41: QoS Primitive Event for Call id 0x2 :QoS Listen
00:03:41: Entering Function get_pcb
00:03:41: Entering Function hash_tbl_lookup
00:03:41:Lookup to be done on hashkey 0x2 in hash table 0x61FAECD8
```

```

00:03:41: Entering Function hash_func
00:03:41:Hashed entry 0x2 in call table 0x61FAECD8
00:03:41:Entry Not found
00:03:41: Entering Function qos_dequeue_pcb
00:03:41: Entering Function qos_initialize_pcb
00:03:41: Parameters:localip:10.10.101.116
00:03:41:remoteip:10.10.101.117
00:03:41: QoSpcb :0x61FAFD18
00:03:41: Response Status :0
00:03:41: Entering Function hash_tbl_insert_entry
00:03:41: Entering Function hash_func
00:03:41: Handling QoS Primitive QoS Listen
00:03:41: Entering Function qos_dequeue_hash_port_entry
00:03:41: Entering Function qos_port_tbl_insert_entry
00:03:41: Entering Function hash_func
00:03:41: Doing RSVP Listen :rsvp_add_ip_listen_api()

```

Related Commands

Command	Description
call rsvp-sync	Enables synchronization between RSVP and the H.323 voice signaling protocol.
call rsvp-sync resv-timer	Sets the timer for RSVP reservation setup.
debug call rsvp-sync events	Displays the events that occur during RSVP synchronization.
show call rsvp-sync conf	Displays the RSVP synchronization configuration.
show call rsvp-sync stats	Displays statistics for calls that attempted RSVP reservation.

debug call threshold

To see details of the trigger actions, use the **debug call threshold** command in command in privileged EXEC mode. To disable debugging output, use the **no** form of this command.

debug call threshold *module*

no debug call threshold

Syntax Description

module The *module* argument can be:

- **core**—Traces the resource information.
- **detail**—Traces for detail information.

Defaults

Disabled

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(2)XA	This command was introduced.
12.2(4)T	The command was integrated into Cisco IOS Release 12.2(4)T. Support for the Cisco AS5300, AS5350, and AS5400 is not included in this release.
12.2(2)XB1	This command was implemented on the Cisco AS5850 platform.
12.2(8)T	This command was integrated into Cisco IOS Release 12.2(8)T and implemented on Cisco 7200 series routers. Support for the Cisco AS5300 universal access server, Cisco AS5350, Cisco AS5400, and Cisco AS5850 universal gateway is not included in this release.
12.2(11)T	Support for the Cisco AS5850 was integrated into Cisco IOS Release 12.2(11)T, support was added for the Cisco AS5800, and support was included for the Cisco AS5300, Cisco AS5350, and Cisco AS5400.

Examples

```
Router# debug call threshold core

RSCCAC Core info debugging is on

Router# debug call threshold detail

All RSCCAC info debugging is on
```

debug call treatment action

To debug the call treatment actions, use the **debug call treatment action** command in command in privileged EXEC mode. To disable debugging output, use the **no** form of this command.

debug call treatment action

no debug call treatment action

Syntax Description This command has no arguments or keywords.

Defaults Disabled

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(2)XA	This command was introduced.
	12.2(4)T	The command was integrated into Cisco IOS Release 12.2(4)T. Support for the Cisco AS5300, AS5350, and AS5400 is not included in this release.
	12.2(2)XB1	This command was implemented on the Cisco AS5850 platform.
	12.2(8)T	This command was integrated into Cisco IOS Release 12.2(8)T and implemented on Cisco 7200 series routers. Support for the Cisco AS5300 universal access server, Cisco AS5350, Cisco AS5400, and Cisco AS5850 universal gateway is not included in this release.
	12.2(11)T	Support for the Cisco AS5850 was integrated into Cisco IOS Release 12.2(11)T, support was added for the Cisco AS5800, and support was included for the Cisco AS5300, Cisco AS5350, and Cisco AS5400.

Examples Debug actions are performed on calls by call treatment. The following sample output shows that call treatment is turned on:

```
Router# debug call treatment action
```

```
Call treatment action debugging is on
```

debug callback

To display callback events when the router is using a modem and a chat script to call back on a terminal line, use the **debug callback** privileged EXEC command. To disable debugging output, use the **no** form of this command.

debug callback

no debug callback

Syntax Description

This command has no arguments or keywords.

Usage Guidelines

This command is useful for debugging chat scripts on PPP and ARAP lines that use callback mechanisms. The output provided by the **debug callback** command shows you how the call is progressing when used with the **debug ppp** or **debug arap** commands.

Examples

The following is sample output from the **debug callback** command:

```
Router# debug callback

TTY7 Callback process initiated, user: exec_test dialstring 123456
TTY7 Callback forced wait = 4 seconds
TTY7 Exec Callback Successful - await exec/autoselect pickup
TTY7: Callback in effect
```

Related Commands

Command	Description
debug cable err	Displays ARAP events.
debug ppp	Displays information on traffic and exchanges in an internetwork implementing the PPP.

debug ccaal2 session

To display the ccaal2 function calls during call setup and teardown, use the **debug ccaal2 session** command in privileged EXEC mode. To disable debugging output, use the **no** form of this command.

debug ccaal2 session

no debug ccaal2 session

Syntax Description

This command has no arguments or keywords.

Defaults

Debugging for ATM Adaptation Layer type 2 (AAL2) sessions is not enabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(1)XA	This command was introduced for the Cisco MC3810 series.
12.1(2)T	This command was integrated in Cisco IOS Release 12.1(2)T.
12.2(2)T	Support for this command was introduced on the Cisco 7200 series routers.

Usage Guidelines

Use this command when troubleshooting an AAL2 trunk setup or teardown problem.

Examples

The following example shows sample output from the **debug ccaal2 session** command for a forced shutdown of a voice port:

```
Router# debug ccaal2 session
CCAAL2 Session debugging is on
Router# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)# voice-port 2/0:0
Router(config-voiceport)# shutdown

00:32:45:ccaal2_call_disconnect:peer tag 0
00:32:45:ccaal2_evhandle_call_disconnect:Entered
00:32:45:ccaal2_call_cleanup:freeccb 1, call_disconnected 1
00:32:45:starting incoming timer:Setting accept_incoming to FALSE and
00:32:45:timer 2:(0x622F6270)starts - delay (70000)
00:32:45:ccaal2_call_cleanup:Generating Call record
00:32:45:cause=81 tcause=81 cause_text=unspecified
00:32:45:ccaal2_call_cleanup:ccb 0x63FF1700, vdbPtr 0x62DFF2E0
freeccb_flag=1, call_disconnected_flag=1
00:32:45:%LINK-3-UPDOWN:Interface recEive and transMit2/0:0(1),
changed state to Administrative Shutdown
```

The following example shows sample output from the **debug ccaal2 session** command for a trunk setup on a voice port:

```
Router(config-voiceport)# no shutdown
Router(config-voiceport)#
00:35:28:%LINK-3-UPDOWN:Interface recEive and transMit2/0:0(1),
changed state to up
00:35:35:ccaal2_call_setup_request:Entered
00:35:35:ccaal2_evhandle_call_setup_request:Entered
00:35:35:ccaal2_initialize_ccb:preferred_codec set(-1)(0)
00:35:35:ccaal2_evhandle_call_setup_request:preferred_codec
set(5)(40). VAD is 1
00:35:35:ccaal2_call_setup_trunk:subchannel linking
successfulccaal2_receive:xmitFunc is NULL

00:35:35:ccaal2_caps_ind:PeerTag = 49
00:35:35:      codec(preferred) = 1, fax_rate = 2, vad = 2
00:35:35:      cid = 56, config_bitmask = 258, codec_bytes = 40,
      signal_type=8
00:35:36:%HTSP-5-UPDOWN:Trunk port(channel) [2/0:0(1)] is up
Router(config-voiceport)#
```

Related Commands

Command	Description
show debug	Shows which debug commands are enabled.

debug ccrf11 session

To display the ccrf11 function calls during call setup and teardown, use the **debug ccrf11 session** command in privileged EXEC mode. To turn off the debug function, use the **no** form of this command.

debug ccrf11 session

no debug ccrf11 session

Syntax Description

This command has no keywords or arguments.

Command History

Release	Modification
12.0(3)XG	This command was introduced on the Cisco 2600 and Cisco 3600 series routers.
12.0(4)T	This command was integrated into Cisco IOS Release 12.0(4)T.
12.0(7)XK	This command was first supported on the Cisco MC3810 series.
12.1(2)T	This command was integrated into Cisco IOS Release 12.1(2)T.

Usage Guidelines

Use this command to display debug information about the various FRF.11 VoFR service provider interface (SPI) functions. Note that this debug command does not display any information regarding the proprietary Cisco switched-VoFR SPI.

This debug is useful only when the session protocol is “frf11-trunk.”

Examples

The following example shows sample output from the **debug ccrf11 session** command:

```
Router# debug ccrf11 session

INCOMING CALL SETUP (port setup for answer-mode):
*Mar 6 18:04:07.693:ccrf11_process_timers:scb (0x60EB6040) timer (0x60EB6098) expired
*Mar 6 18:04:07.693:Setting accept_incoming to TRUE
*Mar 6 18:04:11.213:ccrf11_incoming_request:peer tag 800:callingNumber=+2602100,
calledNumber=+3622110
*Mar 6 18:04:11.213:ccrf11_initialize_ccb:preffered_codec set(-1)(0)
*Mar 6 18:04:11.213:ccrf11_evhandle_incoming_call_setup_request:calling +2602100,
called +3622110 Incoming Tag 800
*Mar 6 18:04:11.217:ccrf11_caps_ind:PeerTag = 800
*Mar 6 18:04:11.217:      codec(preferred) = 4, fax_rate = 2, vad = 2
*Mar 6 18:04:11.217:      cid = 30, config_bitmask = 0, codec_bytes = 20, signal_type=2
*Mar 6 18:04:11.217:      required_bandwidth 8192
*Mar 6 18:04:11.217:ccrf11_caps_ind:Bandwidth reservation of 8192 bytes succeeded.
*Mar 6 18:04:11.221:ccrf11_evhandle_call_connect:Entered

CALL SETUP (MASTER):
5d22h:ccrf11_call_setup_request:Entered
5d22h:ccrf11_evhandle_call_setup_request:Entered
5d22h:ccrf11_initialize_ccb:preffered_codec set(-1)(0)
5d22h:ccrf11_evhandle_call_setup_request:preffered_codec set(9)(24)
5d22h:ccrf11_call_setup_trunk:subchannel linking successful
5d22h:ccrf11_caps_ind:PeerTag = 810
5d22h:      codec(preferred) = 512, fax_rate = 2, vad = 2
```

```

5d22h:      cid = 30, config_bitmask = 1, codec_bytes = 24, signal_type=2
5d22h:      required_bandwidth 6500
5d22h:ccfrf11_caps_ind:Bandwidth reservation of 6500 bytes succeeded.

```

CALL TEARDOWN:

```

*Mar 6 18:09:14.805:ccfrf11_call_disconnect:peer tag 0
*Mar 6 18:09:14.805:ccfrf11_evhandle_call_disconnect:Entered
*Mar 6 18:09:14.805:ccfrf11_call_cleanup:freeccb 1, call_disconnected 1
*Mar 6 18:09:14.805:ccfrf11_call_cleanup:Setting accept_incoming to FALSE and starting
incoming timer
*Mar 6 18:09:14.809:timer 2:(0x60EB6098)starts - delay (70000)
*Mar 6 18:09:14.809:ccfrf11_call_cleanup:Alive timer stopped
*Mar 6 18:09:14.809:timer 1:(0x60F64104) stops
*Mar 6 18:09:14.809:ccfrf11_call_cleanup:Generating Call record
*Mar 6 18:09:14.809:cause=10 tcause=10 cause_text="normal call clearing."
*Mar 6 18:09:14.809:ccfrf11_call_cleanup:Releasing 8192 bytes of reserved bandwidth
*Mar 6 18:09:14.809:ccfrf11_call_cleanup:ccb 0x60F6404C, vdbPtr 0x610DB7A4
freeccb_flag=1, call_disconnected_flag=1

```

Related Commands

Command	Description
debug call rsvp-sync events	Displays the ccsvoice function calls during call setup and teardown.
debug ccsvoice vofr-session	Displays the ccsvoice function calls during call setup and teardown.
debug vtsp session	Displays the first 10 bytes (including header) of selected VoFR subframes for the interface.