



Cisco IOS AppleTalk Command Reference

Corporate Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
<http://www.cisco.com>
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 526-4100



THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

CCIP, CCSP, the Cisco Arrow logo, the Cisco *Powered* Network mark, Cisco Unity, Follow Me Browsing, FormShare, and StackWise are trademarks of Cisco Systems, Inc.; Changing the Way We Work, Live, Play, and Learn, and iQuick Study are service marks of Cisco Systems, Inc.; and Aironet, ASIST, BPX, Catalyst, CCDA, CCDP, CCIE, CCNA, CCNP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, the Cisco IOS logo, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Empowering the Internet Generation, Enterprise/Solver, EtherChannel, EtherSwitch, Fast Step, GigaStack, Internet Quotient, IOS, IP/TV, iQ Expertise, the iQ logo, iQ Net Readiness Scorecard, LightStream, MGX, MICA, the Networkers logo, Networking Academy, Network Registrar, *Packet*, PIX, Post-Routing, Pre-Routing, RateMUX, Registrar, ScriptShare, SlideCast, SMARTnet, StrataView Plus, Stratm, SwitchProbe, TeleRouter, The Fastest Way to Increase Your Internet Quotient, TransPath, and VCO are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the U.S. and certain other countries.

All other trademarks mentioned in this document or Web site are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0304R)

Cisco IOS AppleTalk Command Reference

Copyright © 2002-2003, Cisco Systems, Inc.

All rights reserved.



Introduction P3R-1

Cisco IOS AppleTalk Commands P3R-3



Introduction

AppleTalk is a LAN system designed and developed by Apple Computer, Inc. It runs over Ethernet, Token Ring, and FDDI networks, in addition to LocalTalk, Apple's proprietary twisted-pair media access system. AppleTalk specifies a protocol stack comprising several protocols that direct the flow of traffic over the network.

Apple Computer uses the name *AppleTalk* to refer to the Apple networking architecture. Apple refers to the actual transmission media used in an AppleTalk network as LocalTalk (Apple's proprietary twisted-pair transmission medium for AppleTalk), TokenTalk (AppleTalk over Token Ring), EtherTalk (AppleTalk over Ethernet), and FDDITalk (AppleTalk over FDDI).

Use the commands in this book to configure and monitor AppleTalk networks. For AppleTalk configuration information and examples, refer to the "Configuring AppleTalk" chapter of the *Cisco IOS AppleTalk and Novell IPX Configuration Guide*.

The AppleTalk Enhanced Interior Gateway Routing Protocol (EIGRP) will no longer be available after Cisco IOS Release 12.2(13)T. AppleTalk EIGRP documentation in the *Cisco IOS AppleTalk and Novell IPX Command Reference*, Release 12.2 can be accessed at:

http://www.cisco.com/univercd/cc/td/doc/product/software/ios122/122cgcr/fatipx_r/at/index.htm.

The following commands have been removed from documentation in Cisco IOS Release 12.2(13)T and will not appear in future releases of the Cisco IOS software documentation set:

- `appletalk eigrp active-time`
- `appletalk eigrp-bandwidth-percentage`
- `appletalk eigrp log-neighbor-changes`
- `appletalk eigrp-splithorizon`
- `appletalk eigrp-timers`
- `appletalk route-redistribution`
- `show appletalk eigrp interfaces`
- `show appletalk eigrp neighbors`
- `show appletalk eigrp topology`

The Simple Multicast Routing Protocol (SMRP) for AppleTalk will no longer be available after Cisco IOS Release 12.2(13)T. SMRP documentation in the *Cisco IOS AppleTalk and Novell IPX Command Reference*, Release 12.2 can be accessed at:

http://www.cisco.com/univercd/cc/td/doc/product/software/ios122/122cgcr/fatipx_r/at/index.htm

The following commands have been removed from documentation in Cisco IOS Software Release 12.2(13)T and will not appear in future releases of the Cisco IOS software documentation set:

- `clear smrp mcache`

- show smrp forward
- show smrp globals
- show smrp group
- show smrp mcache
- show smrp neighbor
- show smrp port
- show smrp route
- show smrp traffic
- smrp mroute-cache protocol appletalk
- smrp protocol appletalk
- smrp routing



Cisco IOS AppleTalk Commands

access-list additional-zones

To define the default action to take for access checks that apply to zones, use the **access-list additional-zones** command in global configuration mode. To remove an access list, use the **no** form of this command.

access-list *access-list-number* {**deny** | **permit**} **additional-zones**

no access-list *access-list-number* **additional-zones**

Syntax Description

<i>access-list-number</i>	Number of the access list. This is a decimal number from 600 to 699.
deny	Denies access if the conditions are matched.
permit	Permits access if the conditions are matched.

Defaults

No access lists are predefined.

Command Modes

Global configuration

Command History

Release	Modification
10.0	This command was introduced.

Usage Guidelines

The **access-list additional-zones** command defines the action to take for access checks not explicitly defined with the **access-list zone** command. If you do not specify this command, the default action is to deny other access.

You apply access lists defined with the **access-list additional-zones** command to outgoing routing updates and GetZoneList (GZL) filters (using the **appletalk distribute-list out**, and **appletalk getzonelist-filter** commands). You cannot apply them to data-packet filters (using the **appletalk access-group** command) or to incoming routing update filters (using the **appletalk distribute-list in** command).

Examples

The following example creates an access list based on AppleTalk zones:

```
access-list 610 deny zone Twilight
access-list 610 permit additional-zones
```

Related Commands

Command	Description
access-list cable-range	Defines an AppleTalk access list for a cable range (for extended networks only).
access-list includes	Defines an AppleTalk access list that overlaps any part of a range of network numbers or cable ranges (for both extended and nonextended networks).

Command	Description
access-list nbp	Defines an AppleTalk access list entry for a particular NBP named entity, class of NBP named entities, NBP packet type, or NBP named entities belonging to a specific zone.
access-list network	Defines an AppleTalk access list for a single network number (that is, for a nonextended network).
access-list other-access	Defines the default action to take for subsequent access checks that apply to networks or cable ranges.
access-list other-nbps	Defines the default action to take for access checks that apply to NBP packets from named entities not otherwise explicitly denied or permitted.
access-list within	Defines an AppleTalk access list for an extended or a nonextended network whose network number or cable range is included entirely within the specified cable range.
access-list zone	Defines an AppleTalk access list that applies to a zone.
appletalk access-group	Assigns an access list to an interface.
appletalk distribute-list in	Filters routing updates received from other routers over a specified interface.
appletalk distribute-list out	Filters routing updates sent to other routers.
appletalk getzonelist-filter	Filters GZL replies.
appletalk permit-partial-zones	Permits access to the other networks in a zone when access to one of those networks is denied.

access-list cable-range

To define an AppleTalk access list for a cable range (for extended networks only), use the **access-list cable-range** command in global configuration mode. To remove an access list, use the **no** form of this command.

```
access-list access-list-number {deny | permit} cable-range cable-range
[broadcast-deny | broadcast-permit]
```

```
no access-list access-list-number [{deny | permit} cable-range cable-range
[broadcast-deny | broadcast-permit]]
```

Syntax Description

<i>access-list-number</i>	Number of the access list. This is a decimal number from 600 to 699.
deny	Denies access if the conditions are matched.
permit	Permits access if the conditions are matched.
<i>cable-range</i>	Cable range value. The argument specifies the start and end of the cable range, separated by a hyphen. These values are decimal numbers from 1 to 65279. The starting network number must be less than or equal to the ending network number.
broadcast-deny	(Optional) Denies access to broadcast packets if the conditions are matched.
broadcast-permit	(Optional) Permits access to broadcast packets if the conditions are met.

Defaults

No access lists are predefined.

Command Modes

Global configuration

Command History

Release	Modification
10.0	This command was introduced.

Usage Guidelines

When used as a routing update filter, the **access-list cable-range** command affects matching on extended networks only. The conditions defined by this access list are used only when a cable range in a routing update exactly matches that specified in the **access-list cable-range** command. The conditions are never used to match a network number (for a nonextended network).

When used as a data-packet filter, the **access-list cable-range** command affects matching on any type of network number. The conditions defined by this access list are used only when the packet's source network lies in the range defined by the access list.

You apply access lists defined with the **access-list cable-range** command to data-packet and routing-update filters (using the **appletalk access-group**, **appletalk distribute-list in**, and **appletalk distribute-list out** commands). You cannot apply them to GZL filters (using the **appletalk getzonelist-filter** command).

To delete an access list, specify the minimum number of keywords and arguments needed to delete the proper access list. For example, to delete the entire access list, use the following command:

```
no access-list access-list-number
```

To delete the access list for a specific network, use the following command:

```
no access-list access-list-number {deny | permit} cable-range cable-range
```

Priority queuing for AppleTalk operates on the destination network number, not the source network number.

Examples

The following access list forwards all packets except those from cable range 10 to 20:

```
access-list 600 deny cable-range 10-20
access-list 600 permit other-access
```

Related Commands

Command	Description
access-list additional-zones	Defines the default action to take for access checks that apply to zones.
access-list includes	Defines an AppleTalk access list that overlaps any part of a range of network numbers or cable ranges (for both extended and nonextended networks).
access-list nbp	Defines an AppleTalk access list entry for a particular NBP named entity, class of NBP named entities, NBP packet type, or NBP named entities belonging to a specific zone.
access-list network	Defines an AppleTalk access list for a single network number (that is, for a nonextended network).
access-list other-access	Defines the default action to take for subsequent access checks that apply to networks or cable ranges.
access-list other-nbps	Defines the default action to take for access checks that apply to NBP packets from named entities not otherwise explicitly denied or permitted.
access-list within	Defines an AppleTalk access list for an extended or a nonextended network whose network number or cable range is included entirely within the specified cable range.
access-list zone	Defines an AppleTalk access list that applies to a zone.
appletalk access-group	Assigns an access list to an interface.
appletalk distribute-list in	Filters routing updates received from other routers over a specified interface.
appletalk distribute-list out	Filters routing updates sent to other routers.
appletalk getzonelist-filter	Filters GZL replies.
priority-list protocol	Establishes queuing priorities based on the protocol type.

access-list includes

To define an AppleTalk access list that overlaps any part of a range of network numbers or cable ranges (for both extended and nonextended networks), use the **access-list includes** command in global configuration mode. To remove an access list, use the **no** form of this command.

```
access-list access-list-number {deny | permit} includes cable-range
[broadcast-deny | broadcast-permit]
```

```
no access-list access-list-number {deny | permit} includes cable-range
[broadcast-deny | broadcast-permit]
```

Syntax Description

<i>access-list-number</i>	Number of the access list. This is a decimal number from 600 to 699.
deny	Denies access if the conditions are matched.
permit	Permits access if the conditions are matched.
<i>cable-range</i>	Cable range or network number. The argument specifies the start and end of the cable range, separated by a hyphen. These values are decimal numbers from 1 to 65279. The starting network number must be less than or equal to the ending network number. To specify a network number, set the starting and ending network numbers to the same value.
broadcast-deny	(Optional) Denies access to broadcast packets if the conditions are matched.
broadcast-permit	(Optional) Permits access to broadcast packets if the conditions are met.

Defaults

No access lists are predefined.

Command Modes

Global configuration

Command History

Release	Modification
10.0	This command was introduced.

Usage Guidelines

When used as a routing update filter, the **access-list includes** command affects matching on extended and nonextended AppleTalk networks. The conditions defined by this access list are used when a cable range or network number overlaps, either partially or completely, one (or more) of those specified in the **access-list includes** command.

When used as a data-packet filter, the conditions defined by this access list are used when the packet's source network lies in the range defined in the **access-list includes** command.

You apply access lists defined with the **access-list includes** command to data-packet and routing-update filters (using the **appletalk access-group**, **appletalk distribute-list in**, and **appletalk distribute-list out** commands). You cannot apply them to GZL filters (using the **appletalk getzonelist-filter** command).

To delete an access list, specify the minimum number of keywords and arguments needed to delete the proper access list. For example, to delete the entire access list, use the following command:

```
no access-list access-list-number
```

To delete the access list for a specific network, use the following command:

```
no access-list access-list-number {deny | permit} includes cable-range
```

Priority queuing for AppleTalk operates on the destination network number, not the source network number.

Examples

The following example defines an access list that permits access to any network or cable range that overlaps any part of the range 10 to 20. This means, for example, that cable ranges 13 to 16 and 17 to 25 will be permitted. This access list also permits all other ranges.

```
access-list 600 permit includes 10-20
access-list 600 permit other-access
```

Related Commands

Command	Description
access-list additional-zones	Defines the default action to take for access checks that apply to zones.
access-list cable-range	Defines an AppleTalk access list for a cable range (for extended networks only).
access-list nbp	Defines an AppleTalk access list entry for a particular NBP named entity, class of NBP named entities, NBP packet type, or NBP named entities belonging to a specific zone.
access-list network	Defines an AppleTalk access list for a single network number (that is, for a nonextended network).
access-list other-access	Defines the default action to take for subsequent access checks that apply to networks or cable ranges.
access-list other-nbps	Defines the default action to take for access checks that apply to NBP packets from named entities not otherwise explicitly denied or permitted.
access-list within	Defines an AppleTalk access list for an extended or a nonextended network whose network number or cable range is included entirely within the specified cable range.
access-list zone	Defines an AppleTalk access list that applies to a zone.
appletalk access-group	Assigns an access list to an interface.
appletalk distribute-list in	Filters routing updates received from other routers over a specified interface.
appletalk distribute-list out	Filters routing updates sent to other routers.
appletalk getzonelist-filter	Filters GZL replies.
priority-list protocol	Establishes queuing priorities based on the protocol type.

access-list nbp

To define an AppleTalk access list entry for a particular Name Binding Protocol (NBP) named entity, class of NBP named entities, NBP packet type, or NBP named entities that belong to a specific zone, use the **access-list nbp** command in global configuration mode. To remove an NBP access list entry from the access list, use the **no** form of this command.

```
access-list access-list-number {deny | permit} nbp sequence-number {BrRq | FwdRq | Lookup | LkReply | object string | type string | zone string}
```

```
no access-list access-list-number {deny | permit} nbp sequence-number {BrRq | FwdRq | Lookup | LkReply | object string | type string | zone string}
```

Syntax Description

<i>access-list-number</i>	Number of the access list. This is a decimal number from 600 to 699.
deny	Denies access if conditions are matched.
permit	Permits access if conditions are matched.
<i>sequence-number</i>	Number used to tie together two or three portions of an NBP name tuple and to keep track of the number of access-list nbp entries in an access list. Each command entry must have a sequence number.
BrRq	Broadcast Request packet type.
FwdRq	Forward Request packet type.
Lookup	Lookup packet type.
LkReply	Lookup Reply packet type.
object	Characterizes <i>string</i> as the portion of an NBP name that identifies a particular object or named entity.
<i>string</i>	Portion of an NBP name identifying the object , type , or zone of a named entity. The name string can be up to 32 characters long, and it can include special characters from the Apple Macintosh character set. To include a special character, type a colon followed by two hexadecimal characters. For an NBP name with a leading space, enter the first character as the special sequence :20.
type	Characterizes <i>string</i> as the portion of an NBP name that identifies a category or type of named entity.
zone	Characterizes <i>string</i> as the portion of an NBP name that identifies an AppleTalk zone .

Defaults

No particular access list entry for an NBP named entity is defined, and the default filtering specified by the **access-list other-nbps** command takes effect.

Command Modes

Global configuration

Command History

Release	Modification
11.0	This command was introduced.

Usage Guidelines

The **access-list nbp** command defines the action to take for filtering NBP packets from a particular **object** (particular named entity), **type** (class of named entities), or **zone** (AppleTalk zone in which named entities reside), or for a particular NBP packet type, superseding the default action for NBP packets from all named entities specified by the **access-list other-nbps** command. For each command that you enter, you must specify a sequence number.

The sequence number serves two purposes:

- Its principal purpose is to allow you to associate two or three portions of an NBP three-part name, referred to as an NBP tuple. To do this, you enter two or three commands having the same sequence number but each specifying a different keyword and NBP name portion: **object**, **type**, or **zone**. The same sequence number binds them together. This provides you with the ability to restrict forwarding of NBP packets at any level, down to a single named entity.
- Its second purpose is to allow you to keep track of the number of **access-list nbp** entries you have made. You must enter a sequence number even if you do not use it to associate portions of an NBP name.

Examples

The following example adds entries to access list number 607 to allow forwarding of NBP packets from specific sources and deny forwarding of NBP packets from all other sources. The first command adds an entry that allows NBP packets from all printers of type LaserWriter. The second command adds an entry that allows NBP packets from all AppleTalk file servers of type AFPServer. The third command adds an entry that allows NBP packets from all applications called HotShotPaint. For example, there might be an application with a **zone** name of Accounting and an application with a **zone** name of engineering, both having the object name of HotShotPaint. NBP packets forwarded from both applications will be allowed.

The **access-list other-nbps** command denies forwarding of NBP packets from all other sources.

```
access-list 607 permit nbp 1 type LaserWriter
access-list 607 permit nbp 2 type AFPServer
access-list 607 permit nbp 3 object HotShotPaint
access-list 607 deny other-nbps
access-list 607 permit other-access
```

The following example adds entries to access list number 608 to deny forwarding of NBP packets from two specific servers whose fully qualified NBP names are specified. It permits forwarding of NBP packets from all other sources.

```
access-list 608 deny nbp 1 object ServerA
access-list 608 deny nbp 1 type AFPServer
access-list 608 deny nbp 1 zone Bld3
access-list 608 deny nbp 2 object ServerB
access-list 608 deny nbp 2 type AFPServer
access-list 608 deny nbp 2 zone Bld3
access-list 608 permit other-nbps
access-list 608 permit other-access
```

The following example denies forwarding of NBP Lookup Reply packets for all named entities. It permits forwarding of other NBP packet types from all other sources.

```
access-list 600 deny nbp 1 LkReply
access-list 600 permit other-nbps
access-list 600 permit other-access
```

The following example creates an access list that denies forwarding of these packets:

- All NBP Lookup Reply packets
- NBP packets from the server named Bob's Server

- Packets from all AppleTalk file servers of type AFPServer
- All NBP Lookup Reply packets that contain the specified named entities belonging to the zone *twilight*

```
access-list 600 deny nbp 1 LkReply
access-list 600 deny nbp 1 object Bob's Server
access-list 600 deny nbp 1 type AFPServer
access-list 600 deny nbp 1 zone twilight
access-list 600 permit other-nbps
access-list 600 permit other-access
```

Related Commands

Command	Description
access-list additional-zones	Defines the default action to take for access checks that apply to zones.
access-list cable-range	Defines an AppleTalk access list for a cable range (for extended networks only).
access-list includes	Defines an AppleTalk access list that overlaps any part of a range of network numbers or cable ranges (for both extended and nonextended networks).
access-list network	Defines an AppleTalk access list for a single network number (that is, for a nonextended network).
access-list other-access	Defines the default action to take for subsequent access checks that apply to networks or cable ranges.
access-list other-nbps	Defines the default action to take for access checks that apply to NBP packets from named entities not otherwise explicitly denied or permitted.
access-list within	Defines an AppleTalk access list for an extended or a nonextended network whose network number or cable range is included entirely within the specified cable range.
access-list zone	Defines an AppleTalk access list that applies to a zone.
appletalk access-group	Assigns an access list to an interface.
appletalk distribute-list in	Filters routing updates received from other routers over a specified interface.
appletalk distribute-list out	Filters routing updates sent to other routers.
appletalk getzonelist-filter	Filters GZL replies.
priority-list protocol	Establishes queuing priorities based on the protocol type.

access-list network

To define an AppleTalk access list for a single network number (that is, for a nonextended network), use the **access-list network** command in global configuration mode. To remove an access list, use the **no** form of this command.

```
access-list access-list-number { deny | permit } network network
[broadcast-deny | broadcast-permit]
```

```
no access-list access-list-number { deny | permit } network network
[broadcast-deny | broadcast-permit]
```

Syntax Description

<i>access-list-number</i>	Number of the access list. This is a decimal number from 600 to 699.
deny	Denies access if the conditions are matched.
permit	Permits access if the conditions are matched.
<i>network</i>	AppleTalk network number.
broadcast-deny	(Optional) Denies access to broadcast packets if the conditions are matched.
broadcast-permit	(Optional) Permits access to broadcast packets if the conditions are met.

Defaults

No access lists are predefined.

Command Modes

Global configuration

Command History

Release	Modification
10.0	This command was introduced.

Usage Guidelines

When used as a routing-update filter, the **access-list network** command affects matching on nonextended networks only. The conditions defined by this access list are used only when the nonextended number in a routing update matches a network number specified in one of the **access-list network** commands. The conditions are never used to match a cable range (for an extended network) even if the cable range has the same starting and ending number.

When used as a data-packet filter, the conditions defined by this access list are used only when the packet's source network matches the network number specified in the **access-list network** command.

You apply access lists defined with the **access-list network** command to data-packet and routing-update filters (using the **appletalk access-group**, **appletalk distribute-list in**, and **appletalk distribute-list out** commands). You cannot apply access lists to GZL filters (using the **appletalk getzonelist-filter** command).

In software releases before 9.0, the syntax of this command was **access-list access-list-number { deny | permit } network**. The current version of the software is still able to interpret commands in this format if it finds them in a configuration or boot file. However, it is recommended that you update the commands in your configuration or boot files to match the current syntax.

Use the **no access-list** command with the *access-list-number* argument only to remove an entire access list from the configuration. Specify the optional arguments to remove a particular clause.

To delete an access list, specify the minimum number of keywords and arguments needed to delete the proper access list. For example, to delete the entire access list, use the following command:

```
no access-list access-list-number
```

To delete the access list for a specific network, use the following command:

```
no access-list access-list-number {deny | permit} network network
```

Priority queuing for AppleTalk operates on the destination network number, not the source network number.

Examples

The following example defines an access list that forwards all packets except those destined for networks 1 and 2:

```
access-list 650 deny network 1
access-list 650 deny network 2
access-list 650 permit other-access
```

Related Commands

Command	Description
access-list additional-zones	Defines the default action to take for access checks that apply to zones.
access-list cable-range	Defines an AppleTalk access list for a cable range (for extended networks only).
access-list includes	Defines an AppleTalk access list that overlaps any part of a range of network numbers or cable ranges (for both extended and nonextended networks).
access-list nbp	Defines an AppleTalk access list entry for a particular NBP named entity, class of NBP named entities, NBP packet type, or NBP named entities belonging to a specific zone.
access-list other-access	Defines the default action to take for subsequent access checks that apply to networks or cable ranges.
access-list other-nbps	Defines the default action to take for access checks that apply to NBP packets from named entities not otherwise explicitly denied or permitted.
access-list within	Defines an AppleTalk access list for an extended or a nonextended network whose network number or cable range is included entirely within the specified cable range.
access-list zone	Defines an AppleTalk access list that applies to a zone.
appletalk access-group	Assigns an access list to an interface.
appletalk distribute-list in	Filters routing updates received from other routers over a specified interface.
appletalk distribute-list out	Filters routing updates sent to other routers.
appletalk getzonelist-filter	Filters GZL replies.
priority-list protocol	Establishes queuing priorities based on the protocol type.

access-list other-access

To define the default action to take for subsequent access checks that apply to networks or cable ranges, use the **access-list other-access** command in global configuration mode. To remove an access list, use the **no** form of this command.

access-list *access-list-number* { **deny** | **permit** } **other-access**

no access-list *access-list-number* **other-access**

Syntax Description

<i>access-list-number</i>	Number of the access list. This is a decimal number from 600 to 699.
deny	Denies access if the conditions are matched.
permit	Permits access if the conditions are matched.

Defaults

No access lists are predefined.

Command Modes

Global configuration

Command History

Release	Modification
11.0	This command was introduced.

Usage Guidelines

The **access-list other-access** command defines the action to take for access checks not explicitly defined with an **access-list network**, **access-list cable-range**, **access-list includes**, or **access-list within** command. If you do not specify this command, the default action is to deny other access.

You apply access lists defined with the **access-list other-access** command to data-packet and routing-update filters (using the **appletalk access-group**, **appletalk distribute-list in**, and **appletalk distribute-list out** commands). You cannot apply them to GZL filters (using the **appletalk getzonelist-filter** command).

In software releases before 9.0, the syntax of this command was **access-list** *access-list-number* { **deny** | **permit** } **-1**. The current version of the software is still able to interpret commands in this format if it finds them in a configuration or boot file. However, it is recommended that you update the commands in your configuration or boot files to match the current syntax.

Priority queuing for AppleTalk operates on the destination network number, not the source network number.

Examples

The following example defines an access list that forwards all packets except those destined for networks 1 and 2:

```
access-list 650 deny network 1
access-list 650 deny network 2
access-list 650 permit other-access
```

Related Commands	Command	Description
	access-list additional-zones	Defines the default action to take for access checks that apply to zones.
	access-list cable-range	Defines an AppleTalk access list for a cable range (for extended networks only).
	access-list includes	Defines an AppleTalk access list that overlaps any part of a range of network numbers or cable ranges (for both extended and nonextended networks).
	access-list nbp	Defines an AppleTalk access list entry for a particular NBP named entity, class of NBP named entities, NBP packet type, or NBP named entities belonging to a specific zone.
	access-list network	Defines an AppleTalk access list for a single network number (that is, for a nonextended network).
	access-list other-nbps	Defines the default action to take for access checks that apply to NBP packets from named entities not otherwise explicitly denied or permitted.
	access-list within	Defines an AppleTalk access list for an extended or a nonextended network whose network number or cable range is included entirely within the specified cable range.
	access-list zone	Defines an AppleTalk access list that applies to a zone.
	appletalk access-group	Assigns an access list to an interface.
	appletalk distribute-list in	Filters routing updates received from other routers over a specified interface.
	appletalk distribute-list out	Filters routing updates sent to other routers.
	priority-list protocol	Establishes queueing priorities based on the protocol type.

access-list other-nbpts

To define the default action to take for access checks that apply to Name Binding Protocol (NBP) packets from named entities not otherwise explicitly denied or permitted, use the **access-list other-nbpts** command in global configuration mode. To remove an access list, use the **no** form of this command.

```
access-list access-list-number {deny | permit} other-nbpts
```

```
no access-list access-list-number {deny | permit} other-nbpts
```

Syntax Description

<i>access-list-number</i>	Number of the access list for AppleTalk. This is a decimal number from 600 to 699.
deny	Denies access if conditions are matched.
permit	Permits access if conditions are matched.

Defaults

Access is denied.

Command Modes

Global configuration

Command History

Release	Modification
11.0	This command was introduced.

Usage Guidelines

The **access-list other-nbpts** command defines the action to take for filtering of NBP packets from named entities not explicitly defined by an **access-list nbp** command. It allows you to implement the default AppleTalk network security state at the named entity level. Any **access-list nbp** commands you enter affect a particular named entity object, class of named entities, or all named entities within a zone. This command sets the security state for all other NBP named entities. If you do not specify this command, the default action is to deny access.

You can use this command to create an entry in an access list before or after you issue **access-list nbp** commands. The order of the command in the access list is irrelevant.

Examples

The following example permits forwarding of all NBP packets from all sources except AppleTalk file servers of type AFPServer:

```
access-list 607 deny nbp 2 type AFPServer
access-list 607 permit other-nbpts
```

Related Commands

Command	Description
access-list additional-zones	Defines the default action to take for access checks that apply to zones.
access-list cable-range	Defines an AppleTalk access list for a cable range (for extended networks only).
access-list includes	Defines an AppleTalk access list that overlaps any part of a range of network numbers or cable ranges (for both extended and nonextended networks).
access-list nbp	Defines an AppleTalk access list entry for a particular NBP named entity, class of NBP named entities, NBP packet type, or NBP named entities belonging to a specific zone.
access-list network	Defines an AppleTalk access list for a single network number (that is, for a nonextended network).
access-list other-access	Defines the default action to take for subsequent access checks that apply to networks or cable ranges.
access-list within	Defines an AppleTalk access list for an extended or a nonextended network whose network number or cable range is included entirely within the specified cable range.
access-list zone	Defines an AppleTalk access list that applies to a zone.
appletalk access-group	Assigns an access list to an interface.
appletalk distribute-list in	Filters routing updates received from other routers over a specified interface.
appletalk distribute-list out	Filters routing updates sent to other routers.
appletalk getzonelist-filter	Filters GZL replies.
priority-list protocol	Establishes queuing priorities based on the protocol type.

access-list within

To define an AppleTalk access list for an extended or a nonextended network whose network number or cable range is included entirely within the specified cable range, use the **access-list within** command in global configuration mode. To remove this access list, use the **no** form of this command.

```
access-list access-list-number {deny | permit} within cable-range
```

```
no access-list access-list-number [{deny | permit} within cable-range]
```

Syntax Description

<i>access-list-number</i>	Number of the access list. This is a decimal number from 600 to 699.
deny	Denies access if the conditions are matched.
permit	Permits access if the conditions are matched.
<i>cable-range</i>	Cable range or network number. The argument specifies the start and end of the cable range, separated by a hyphen. These values are decimal numbers from 1 to 65279. The starting network number must be less than or equal to the ending network number. To specify a network number, set the starting and ending network numbers to the same value.

Defaults

No access lists are predefined.

Command Modes

Global configuration

Command History

Release	Modification
10.0	This command was introduced.

Usage Guidelines

When used as a routing update filter, the **access-list within** command affects matching on extended and nonextended AppleTalk networks. The conditions defined by this access list are used when a cable range or network number overlaps, either partially or completely, one (or more) of those specified in the **access-list within** command.

When used as a data-packet filter, the conditions defined by this access list are used when the packet's source network lies in the range defined in the **access-list within** command.

You apply access lists defined with the **access-list within** command to data-packet and routing-update (using the **appletalk access-group**, **appletalk distribute-list in**, and **appletalk distribute-list out**). You cannot apply them to GZL filters (using the **appletalk getzonelist-filter** command).

To delete an access list, specify the minimum number of keywords and arguments needed to delete the proper access list. For example, to delete the entire access list, use the following command:

```
no access-list access-list-number
```

To delete the access list for a specific network, use the following command:

```
no access-list access-list-number {deny | permit} within cable-range
```

Priority queuing for AppleTalk operates on the destination network number, not the source network number.

Examples

The following example defines an access list that permits access to any network or cable range that is completely included in the range 10 to 20. This means, for example, that cable range 13 to 16 will be permitted, but cable range 17 to 25 will not be. The second line of the access list permits all other packets.

```
access-list 600 permit within 10-20
access-list 600 permit other-access
```

Related Commands

Command	Description
access-list additional-zones	Defines the default action to take for access checks that apply to zones.
access-list cable-range	Defines an AppleTalk access list for a cable range (for extended networks only).
access-list includes	Defines an AppleTalk access list that overlaps any part of a range of network numbers or cable ranges (for both extended and nonextended networks).
access-list nbp	Defines an AppleTalk access list entry for a particular NBP named entity, class of NBP named entities, NBP packet type, or NBP named entities belonging to a specific zone.
access-list network	Defines an AppleTalk access list for a single network number (that is, for a nonextended network).
access-list other-access	Defines the default action to take for subsequent access checks that apply to networks or cable ranges.
access-list other-nbps	Defines the default action to take for access checks that apply to NBP packets from named entities not otherwise explicitly denied or permitted.
access-list zone	Defines an AppleTalk access list that applies to a zone.
appletalk access-group	Assigns an access list to an interface.
appletalk distribute-list in	Filters routing updates received from other routers over a specified interface.
appletalk distribute-list out	Filters routing updates sent to other routers.
appletalk getzonelist-filter	Filters GZL replies.
priority-list protocol	Establishes queuing priorities based on the protocol type.

access-list zone

To define an AppleTalk access list that applies to a zone, use the **access-list zone** command in global configuration mode. To remove an access list, use the **no** form of this command.

```
access-list access-list-number { deny | permit } zone zone-name
```

```
no access-list access-list-number [{ deny | permit } zone zone-name]
```

Syntax Description

<i>access-list-number</i>	Number of the access list. This is a decimal number from 600 to 699.
deny	Denies access if the conditions are matched.
permit	Permits access if the conditions are matched.
<i>zone-name</i>	Name of the zone. The name can include special characters from the Apple Macintosh character set. To include a special character, type a colon followed by two hexadecimal characters. For zone names with a leading space character, enter the first character as the special sequence :20.

Defaults

No access lists are predefined.

Command Modes

Global configuration

Command History

Release	Modification
10.0	This command was introduced.

Usage Guidelines

You apply access lists defined with the **access-list zone** command to outgoing routing update and GZL filters (using the **appletalk distribute-list out** and **appletalk getzonelist-filter** commands). You cannot apply them to data-packet filters (using the **appletalk access-group** command) or to incoming routing update filters (using the **appletalk distribute-list in** command).

To delete an access list, specify the minimum number of keywords and arguments needed to delete the proper access list. For example, to delete the entire access list, use the following command:

```
no access-list access-list-number
```

To delete the access list for a specific network, use the following command:

```
no access-list access-list-number { deny | permit } zone zone-name
```

Use the **access-list additional-zones** command to define the action to take for access checks not explicitly defined with the **access-list zone** command.

**Note**

AppleTalk zone access lists on an Enhanced Internet Gateway Routing Protocol (Enhance IGRP) interface will not filter the distribution of Enhanced IGRP routes. When the **appletalk distribute-list out** command is applied to an Enhanced IGRP interface, any **access-list zone** commands in the specified access list will be ignored.

Examples

The following example creates an access list based on AppleTalk zones:

```
access-list 610 deny zone Twilight
access-list 610 permit additional-zones
```

Related Commands

Command	Description
access-list additional-zones	Defines the default action to take for access checks that apply to zones.
access-list cable-range	Defines an AppleTalk access list for a cable range (for extended networks only).
access-list includes	Defines an AppleTalk access list that overlaps any part of a range of network numbers or cable ranges (for both extended and nonextended networks).
access-list nbp	Defines an AppleTalk access list entry for a particular NBP named entity, class of NBP named entities, NBP packet type, or NBP named entities belonging to a specific zone.
access-list network	Defines an AppleTalk access list for a single network number (that is, for a nonextended network).
access-list other-access	Defines the default action to take for subsequent access checks that apply to networks or cable ranges.
access-list other-nbps	Defines the default action to take for access checks that apply to NBP packets from named entities not otherwise explicitly denied or permitted.
access-list within	Defines an AppleTalk access list for an extended or a nonextended network whose network number or cable range is included entirely within the specified cable range.
appletalk access-group	Assigns an access list to an interface.
appletalk distribute-list in	Filters routing updates received from other routers over a specified interface.
appletalk distribute-list out	Filters routing updates sent to other routers.
appletalk getzonelist-filter	Filters GZL replies.
appletalk permit-partial-zones	Permits access to the other networks in a zone when access to one of those networks is denied.

appletalk access-group

To assign an access list to an interface, use the **appletalk access-group** command in interface configuration mode. To remove the access list, use the **no** form of this command.

appletalk access-group *access-list-number* [**in** | **out**]

no appletalk access-group *access-list-number*

Syntax Description	
<i>access-list-number</i>	Number of the access list. This is a decimal number from 600 to 699.
in	(Optional) Filters on incoming packets.
out	(Optional) Filters on outgoing packets. This is the default direction.

Defaults No access lists are predefined. The default interface direction is out.

Command Modes Interface configuration

Command History	Release	Modification
	10.0	This command was introduced.

Usage Guidelines The **appletalk access-group** command applies data-packet filters or NBP-packet filters to an inbound or outbound interface. These filters check data packets being received or sent on an interface. If the source network of the packets has access denied, these packets are not processed and are discarded.

When you apply a data-packet filter to an interface, you should ensure that all networks or cable ranges within a zone are governed by the same filters.

Examples The following example applies access list 601 to outbound Ethernet interface 0:

```
access-list 601 deny cable-range 1-10
access-list 601 permit other-access
interface ethernet 0
 appletalk access-group 601
```

The following example applies access list 600 to inbound Ethernet interface 0:

```
interface ethernet 0
 appletalk access-group 600 in
```

Related Commands	Command	Description
	access-list cable-range	Defines an AppleTalk access list for a cable range (for extended networks only).
	access-list includes	Defines an AppleTalk access list that overlaps any part of a range of network numbers or cable ranges (for both extended and nonextended networks).
	access-list network	Defines an AppleTalk access list for a single network number (that is, for a nonextended network).
	access-list other-access	Defines the default action to take for subsequent access checks that apply to networks or cable ranges.
	access-list within	Defines an AppleTalk access list for an extended or a nonextended network whose network number or cable range is included entirely within the specified cable range.
	appletalk distribute-list in	Filters routing updates received from other routers over a specified interface.
	appletalk distribute-list out	Filters routing updates sent to other routers.

appletalk address

To enable nonextended AppleTalk routing on an interface, use the **appletalk address** command in interface configuration mode. To disable nonextended AppleTalk routing, use the **no** form of this command.

appletalk address *network.node*

no appletalk address [*network.node*]

Syntax Description

<i>network.node</i>	AppleTalk network address assigned to the interface. The argument <i>network</i> is the 16-bit network number in the range 0 to 65279. The argument <i>node</i> is the 8-bit node number in the range 0 to 254. Both numbers are decimal and separated by a period.
---------------------	---

Defaults

Disabled

Command Modes

Interface configuration

Command History

Release	Modification
10.0	This command was introduced.

Usage Guidelines

You must enable routing on the interface before assigning zone names.

Specifying an address of 0.0, or 0.*node*, places the interface into *discovery mode*. When in this mode, the Cisco IOS software attempts to determine network address information from another router on the network. You also can enable discovery mode with the **appletalk discovery** command. Discovery mode does not run over serial lines.

Examples

The following example enables nonextended AppleTalk routing on Ethernet interface 0:

```
appletalk routing
interface ethernet 0
  appletalk address 1.129
```

Related Commands

Command	Description
access-list cable-range	Defines an AppleTalk access list for a cable range (for extended networks only).
appletalk discovery	Places an interface into discovery mode.
appletalk zone	Sets the zone name for the connected AppleTalk network.

appletalk alternate-addressing

To display network numbers in a two-octet format, use the **appletalk alternate-addressing** command in global configuration mode. To return to displaying network numbers in the format *network.node*, use the **no** form of this command.

appletalk alternate-addressing

no appletalk alternate-addressing

Syntax Description This command has no arguments or keywords.

Defaults Disabled

Command Modes Global configuration

Command History	Release	Modification
	10.0	This command was introduced.

Usage Guidelines The **appletalk alternate-addressing** command displays cable ranges in the alternate format wherever applicable. This format consists of printing the upper and lower bytes of a network number as 8-bit decimal values separated by a decimal point. For example, the cable range 511-512 would be printed as 1.255-2.0.

Examples The following example enables the display of network numbers in a two-octet format:

```
appletalk alternate-addressing
```

appletalk arp interval

To specify the time interval between retransmissions of Address Resolution Protocol (ARP) packets, use the **appletalk arp interval** command in global configuration mode. To restore both default intervals, use the **no** form of this command.

appletalk arp [**probe** | **request**] **interval** *interval*

no appletalk arp [**probe** | **request**] **interval** *interval*

Syntax Description

probe	(Optional) Interval to be used with AppleTalk Address Resolution Protocol (AARP) requests that are trying to determine the address of the local router when the Cisco IOS software is being configured. If you omit probe and request , probe is the default.
request	(Optional) Indicates that the interval specified is to be used when AARP is attempting to determine the hardware address of another node so that AARP can deliver a packet.
<i>interval</i>	Interval, in milliseconds, between AARP transmissions. The minimum value is 33 milliseconds. When used with the probe keyword, the default interval is 200 milliseconds. When used with the request keyword, the default interval is 1000 milliseconds.

Defaults

If you omit the keywords, **probe** is the default.

probe—200 milliseconds

request—1000 milliseconds

Command Modes

Global configuration

Command History

Release	Modification
10.0	This command was introduced.

Usage Guidelines

The time interval you specify takes effect immediately.

Lengthening the interval between AARP transmissions permits responses from devices that respond slowly (such as printers and overloaded file servers) to be received.

AARP uses the **appletalk arp probe interval** value when obtaining the address of the local router. This is done when the Cisco IOS software is being configured. You should not change the default value of this interval unless absolutely necessary, because this value directly modifies the AppleTalk dynamic node assignment algorithm.

AARP uses the **appletalk arp request interval** value when attempting to determine the hardware address of another node so that it can deliver a packet. You can change this interval as desired, although the default value is optimal for most sites.

The **no appletalk arp interval** command restores both the **probe** and **request** intervals specified in the **appletalk arp interval** and **appletalk arp retransmit-count** commands to their default values.

Examples

The following example lengthens the AppleTalk ARP retry interval to 2000 milliseconds:

```
appletalk arp request interval 2000
```

Related Commands

Command	Description
appletalk arp retransmit-count	Specifies the number of ARP probe or request transmissions.
appletalk arp-timeout	Specifies the interval at which entries are aged out of the ARP table.
appletalk glean-packets	Derives ARP table entries from incoming packets.
show appletalk globals	Displays information and settings about the AppleTalk internetwork and other parameters.

appletalk arp retransmit-count

To specify the number of AppleTalk Address Resolution Protocol (AARP) probe or request transmissions, use the **appletalk arp retransmit-count** command in global configuration mode. To restore both default values, use the **no** form of this command.

appletalk arp [**probe** | **request**] **retransmit-count** *number*

no appletalk arp [**probe** | **request**] **retransmit-count** *number*

Syntax Description		
probe	(Optional) Indicates that the number specified is to be used with AARP requests that are trying to determine the address of the local router when the Cisco IOS software is being configured. If you omit probe and request , probe is the default.	
request	(Optional) Indicates that the number specified is to be used when AARP is attempting to determine the hardware address of another node so that AARP can deliver a packet.	
<i>number</i>	Number of AARP retransmissions that will occur. The minimum number is 1. When used with the probe keyword, the default value is 10 retransmissions. When used with the request keyword, the default value is 5 retransmissions. Specifying 0 selects the default value.	

Defaults

If you omit the keyword, probe is the default.

probe—10 transmissions

request—5 transmissions

Command Modes

Global configuration

Command History

Release	Modification
10.0	This command was introduced.

Usage Guidelines

The value you specify takes effect immediately.

Increasing the number of retransmissions permits responses from devices that respond slowly (such as printers and overloaded file servers) to be received.

AARP uses the **appletalk arp probe retransmit-count** value when obtaining the address of the local router. This is done when the Cisco IOS software is being configured. You should not change the default value unless absolutely necessary, because this value directly modifies the AppleTalk dynamic node assignment algorithm.

AARP uses the **appletalk arp request retransmit-count** value when attempting to determine the hardware address of another node so that it can deliver a packet. You can change this interval as desired, although the default value is optimal for most sites.

The **no appletalk arp interval** command restores both the **probe** and **request** intervals specified in the **appletalk arp interval** and **appletalk arp retransmit-count** commands to their default values.

Examples

The following example specifies an AARP retransmission count of 10 for AARP packets that are requesting the hardware address of another node on the network:

```
appletalk arp request retransmit-count 10
```

Related Commands

Command	Description
appletalk arp interval	Specifies the time interval between retransmissions of ARP packets.
appletalk arp-timeout	Specifies the interval at which entries are aged out of the ARP table.
appletalk glean-packets	Derives ARP table entries from incoming packets.
show appletalk globals	Displays information and settings about the AppleTalk internetwork and other parameters.

appletalk arp-timeout

To specify the interval at which entries are aged out of the Address Resolution Protocol (ARP) table, use the **appletalk arp-timeout** command in interface configuration mode. To return to the default timeout, use the **no** form of this command.

appletalk arp-timeout *interval*

no appletalk arp-timeout *interval*

Syntax Description

<i>interval</i>	Time, in minutes, after which an entry is removed from the AppleTalk ARP table. The default is 240 minutes (4 hours).
-----------------	---

Defaults

240 minutes (4 hours)

Command Modes

Interface configuration

Command History

Release	Modification
10.0	This command was introduced.

Examples

The following example changes the ARP timeout interval on Ethernet interface 0 to 2 hours:

```
interface ethernet 0
appletalk cable-range 2-2
  appletalk arp-timeout 120
```

Related Commands

Command	Description
appletalk arp interval	Specifies the time interval between retransmissions of ARP packets.
appletalk arp retransmit-count	Specifies the number of ARP probe or request transmissions.
appletalk glean-packets	Derives ARP table entries from incoming packets.

appletalk aurp tickle-time

To set the Apple Update-Based Routing Protocol (AURP) last-heard-from timer value, use the **appletalk aurp tickle-time** command in interface configuration mode. To return to the default last-heard-from timer value, use the **no** form of this command.

appletalk aurp tickle-time *seconds*

no appletalk aurp tickle-time *seconds*

Syntax Description	<i>seconds</i>	Timeout value, in seconds. This value can be a number from 30 to infinity. The default is 90 seconds.
---------------------------	----------------	---

Defaults	90 seconds
-----------------	------------

Command Modes	Interface configuration
----------------------	-------------------------

Command History	Release	Modification
	10.3	This command was introduced.

Usage Guidelines	<p>If the tunnel peer has not been heard from within the time specified by the least-heard-from timer value, the Cisco IOS software sends tickle packets to check that the tunnel peer is still up.</p> <p>You can use this command only on tunnel interfaces.</p>
-------------------------	--

Examples	<p>The following example changes the AURP last-heard-from timer value on tunnel interface 0 to 120 seconds:</p>
-----------------	---

```
interface tunnel 0
 appletalk aurp tickle-time 120
```

Related Commands	Command	Description
	show appletalk interface	Displays the status of the AppleTalk interfaces configured in the Cisco IOS software and the parameters configured on each interface.

appletalk aurp update-interval

To set the minimum interval between Apple Update-Based Routing Protocol (AURP) routing updates, use the **appletalk aurp update-interval** command in interface configuration mode. To return to the default interval, use the **no** form of this command.

appletalk aurp update-interval *seconds*

no appletalk aurp update-interval *seconds*

Syntax Description	<i>seconds</i>	AURP routing update interval, in seconds. This interval must be a multiple of 10. The default is 30 seconds.
---------------------------	----------------	--

Defaults	30 seconds
-----------------	------------

Command Modes	Interface configuration
----------------------	-------------------------

Command History	Release	Modification
	10.3	This command was introduced.

Usage Guidelines	The AURP routing update interval applies only to tunnel interfaces.
-------------------------	---

Examples	The following example changes the AURP routing update interval on tunnel interface 0 to 40 seconds: <pre>interface tunnel 0 appletalk aurp update-interval 40</pre>
-----------------	---

Related Commands	Command	Description
	show appletalk globals	Displays information and settings about the AppleTalk internetwork and other parameters.

appletalk cable-range

To enable an extended AppleTalk network, use the **appletalk cable-range** command in interface configuration mode. To disable an extended AppleTalk network, use the **no** form of this command.

appletalk cable-range *cable-range* [*network.node*]

no appletalk cable-range *cable-range* [*network.node*]

Syntax Description		
	<i>cable-range</i>	Cable range value. The argument specifies the start and end of the cable range, separated by a hyphen. These values are decimal numbers from 0 to 65279. The starting network number must be less than or equal to the ending network number.
	<i>network.node</i>	(Optional) Suggested AppleTalk address for the interface. The argument <i>network</i> is the 16-bit network number, and the argument <i>node</i> is the 8-bit node number. Both numbers are decimal and separated by a period. The suggested network number must fall within the specified range of network numbers.

Defaults	
	Disabled

Command Modes	
	Interface configuration

Command History	Release	Modification
	10.0	This command was introduced.

Usage Guidelines	
	<p>You must enable routing on the interface before assigning zone names.</p> <p>Specifying a cable range value of 0-0 places the interface into <i>discovery mode</i>. When in this mode, the Cisco IOS software attempts to determine cable range information from another router on the network. You can also enable discovery mode with the appletalk discovery command. Discovery mode does not run over serial lines.</p>

Examples	
	The following example assigns a cable range of 3 to 3 to the interface:

```
interface ethernet 0
 appletalk cable-range 3-3
```

Related Commands	Command	Description
	appletalk address	Enables nonextended AppleTalk routing on an interface.
	appletalk discovery	Places an interface into discovery mode.
	appletalk zone	Sets the zone name for the connected AppleTalk network.

appletalk checksum

To enable the generation and verification of checksums for all AppleTalk packets (except routed packets), use the **appletalk checksum** command in global configuration mode. To disable checksum generation and verification, use the **no** form of this command.

appletalk checksum

no appletalk checksum

Syntax Description This command has no arguments or keywords.

Defaults Enabled

Command Modes Global configuration

Command History	Release	Modification
	10.0	This command was introduced.

Usage Guidelines

When the **appletalk checksum** command is enabled, the Cisco IOS software discards incoming Datagram Delivery Protocol (DDP) packets when the checksum is not zero and is incorrect, and when the router is the final destination for the packet.

You might want to disable checksum generation and verification if you have very early devices (such as LaserWriter printers) that cannot receive packets that contain checksums.

The Cisco IOS software does not check checksums on routed packets, thereby eliminating the need to disable checksum to allow operation of some networking applications.

Examples The following example disables the generation and verification of checksums:

```
no appletalk checksum
```

Related Commands	Command	Description
	show appletalk globals	Displays information and settings about the AppleTalk internetwork and other parameters.

appletalk client-mode

To allow users to access an AppleTalk zone when dialing into an asynchronous line (on Cisco routers, only via the auxiliary port) use the **appletalk client-mode** command in interface configuration mode. To disable this function, use the **no** form of this command.

appletalk client-mode

no appletalk client-mode

Syntax Description This command has no arguments or keywords.

Defaults Client mode is disabled.

Command Modes Interface configuration

Command History

Release	Modification
10.3	This command was introduced.

Usage Guidelines

The **appletalk client-mode** command allows a remote client to use an asynchronous interface to access AppleTalk zones, use networked peripherals, and share files with other Macintosh users.

This command works only on asynchronous interfaces on which Point-to-Point Protocol (PPP) encapsulation is enabled. Also, you must first create an internal network for the Macintosh client using the **appletalk virtual-net** global configuration command.

An interface configured with the **appletalk client-mode** interface configuration and **appletalk virtual-net** global configuration commands does not support routing.

Examples

The following example allows a user to access AppleTalk functionality on an asynchronous line using PPP:

```
interface asynchronous 1
 appletalk client-mode
```

Related Commands

Command	Description
appletalk virtual-net	Adds AppleTalk users logging in on an asynchronous line and using PPP encapsulation to an internal network.
encapsulation	Sets the encapsulation method used by the interface.
interface	Defines the IP addresses of the server, configures an interface type, and enters interface configuration mode.
ppp	Starts an asynchronous connection using PPP.

appletalk discovery

To place an interface into discovery mode, use the **appletalk discovery** command in interface configuration mode. To disable discovery mode, use the **no** form of this command.

appletalk discovery

no appletalk discovery

Syntax Description This command has no arguments or keywords.

Defaults Disabled

Command Modes Interface configuration

Command History	Release	Modification
	10.0	This command was introduced.

Usage Guidelines If an interface is connected to a network that has at least one other operational AppleTalk router, you can dynamically configure the interface using *discovery mode*. In discovery mode, an interface acquires network address information about the attached network from an operational router and then uses this information to configure itself.

If you enable discovery mode on an interface, when the Cisco router starts up, that interface must acquire information to configure itself from another operational router on the attached network. If no operational router is present on the connected network, the interface will not start.

If you do not enable discovery mode, the interface must acquire its configuration from memory when the router starts. If the stored configuration is not complete, the interface will not start. If there is another operational router on the connected network, the router will verify the interface's stored configuration with that router. If there is any discrepancy, the interface will not start. If there are no neighboring operational routers, the router will assume the interface's stored configuration is correct and will start.

Once an interface is operational, it can seed the configurations of other routers on the connected network regardless of whether you have enabled discovery mode on any of the routers.

If you enable **appletalk discovery** and the interface is restarted, another operational router must still be present on the directly connected network in order for the interface to start.

It is not advisable to have all routers on a network configured with discovery mode enabled. If all routers were to restart simultaneously (for instance, after a power failure), the network would become inaccessible until at least one router were restarted with discovery mode disabled.

You can also enable discovery mode by specifying an address of 0.0. in the **appletalk address** command or a cable range of 0-0 in the **appletalk cable-range** command.

Discovery mode is useful when you are changing a network configuration, or when you are adding a router to an existing network.

Discovery mode does not run over serial lines.

Use the **no appletalk discovery** command to disable discovery mode. If the interface is not operational when you issue this command (that is, if you have not issued an **access-list zone** command on the interface), you must configure the zone name next. If the interface is operational when you issue the **no appletalk discovery** command, you can save the current configuration (in running memory) in nonvolatile memory by issuing the **copy running-config startup-config** command. (The **copy running-config startup-config** command replaces the **write memory** command. Refer to the description of the **copy running-config startup-config** command for more information.)

Examples

The following example enables discovery mode on Ethernet interface 0:

```
interface ethernet 0
 appletalk discovery
```

Related Commands

Command	Description
appletalk address	Enables nonextended AppleTalk routing on an interface.
appletalk cable-range	Enables an extended AppleTalk network.
appletalk zone	Sets the zone name for the connected AppleTalk network.
show appletalk interface	Displays the status of the AppleTalk interfaces configured in the Cisco IOS software and the parameters configured on each interface.

appletalk distribute-list in

To filter routing updates received from other routers over a specified interface, use the **appletalk distribute-list in** command in interface configuration mode. To remove the routing table update filter, use the **no** form of this command.

appletalk distribute-list *access-list-number* **in**

no appletalk distribute-list [*access-list-number*] **in**

Syntax Description

access-list-number Number of the access list. This is a decimal number from 600 to 699.

Defaults

No routing filters are preconfigured.

Command Modes

Interface configuration

Command History

Release	Modification
10.0	This command was introduced.

Usage Guidelines

The **appletalk distribute-list in** command controls which networks and cable ranges in routing updates will be entered into the local routing table.

Filters for incoming routing updates use access lists that define conditions for networks and cable ranges only. They cannot use access lists that define conditions for zones. All zone information in an access list assigned to the interface with the **appletalk distribute-list in** command is ignored.

An input distribution list filters network numbers received in an incoming routing update. When AppleTalk routing updates are received on the specified interface, each network number and cable range in the update is checked against the access list. Only network numbers and cable ranges that are permitted by the access list are inserted into the Cisco IOS software AppleTalk routing table.

Examples

The following example prevents the router from accepting routing table updates received from network 10 and on Ethernet interface 3:

```
access-list 601 deny network 10
access-list 601 permit other-access
interface ethernet 3
  appletalk distribute-list 601 in
```

Related Commands	Command	Description
	access-list cable-range	Defines an AppleTalk access list for a cable range (for extended networks only).
	access-list includes	Defines an AppleTalk access list that overlaps any part of a range of network numbers or cable ranges (for both extended and nonextended networks).
	access-list network	Defines an AppleTalk access list for a single network number (that is, for a nonextended network).
	access-list other-access	Defines the default action to take for subsequent access checks that apply to networks or cable ranges.
	access-list within	Defines an AppleTalk access list for an extended or a nonextended network whose network number or cable range is included entirely within the specified cable range.
	appletalk distribute-list out	Filters routing updates sent to other routers.

appletalk distribute-list out

To filter routing updates transmitted to other routers, use the **appletalk distribute-list out** command in interface configuration mode. To remove the routing table update filter, use the **no** form of this command.

appletalk distribute-list *access-list-number* **out**

no appletalk distribute-list [*access-list-number*] **out**

Syntax Description

access-list-number Number of the access list. This is a decimal number from 600 to 699.

Defaults

No routing filters are preconfigured.

Command Modes

Interface configuration

Command History

Release	Modification
10.0	This command was introduced.

Usage Guidelines

The **appletalk distribute-list out** command controls which network numbers and cable ranges are included in routing updates and which zones the local router includes in its GetZoneList (GZL) replies.

When an AppleTalk routing update is generated on the specified interface, each network number and cable range in the routing table is checked against the access list. If an undefined access list is used, all network numbers and cable ranges are added to the routing update. Otherwise, if an access list is defined, only network numbers and cable ranges that satisfy the following conditions are added to the routing update:

- The network number or cable range is not explicitly or implicitly denied.
- The network number or cable range is not a member of a zone that is explicitly or implicitly denied.
- If **appletalk permit-partial-zones** is disabled (the default), the network number or cable range is not a member of a zone that is partially obscured.

A zone is considered partially obscured when one or more network numbers or cable ranges that are members of the zone is explicitly or implicitly denied.

When a Zone Information Protocol (ZIP) GZL reply is generated, only zones that satisfy the following conditions are included:

- If **appletalk permit-partial-zones** is enabled, at least one network number or cable range that is a member of the zone is explicitly or implicitly permitted.
- If **appletalk permit-partial-zones** is disabled, all network numbers or cable ranges are explicitly or implicitly permitted.
- The zone is explicitly or implicitly permitted.

**Note**

AppleTalk zone access lists on an Enhanced IGRP interface will not filter the distribution of Enhanced IGRP routes. When the **appletalk distribute-list out** command is applied to an Enhanced IGRP interface, any **access-list zone** commands in the specified access list will be ignored.

Examples

The following example prevents routing updates sent on Ethernet 0 from mentioning any networks in zone Admin:

```
access-list 601 deny zone Admin
access-list 601 permit other-access
interface Ethernet 0
 appletalk distribute-list 601 out
```

Related Commands

Command	Description
access-list additional-zones	Defines the default action to take for access checks that apply to zones.
access-list zone	Defines an AppleTalk access list that applies to a zone.
appletalk distribute-list in	Filters routing updates received from other routers over a specified interface.
appletalk getzonelist-filter	Filters GZL replies.
appletalk permit-partial-zones	Permits access to the other networks in a zone when access to one of those networks is denied.

appletalk domain-group

To assign a predefined domain number to an interface, use the **appletalk domain-group** command in interface configuration mode. To remove an interface from a domain, use the **no** form of this command.

appletalk domain-group *domain-number*

no appletalk domain-group [*domain-number*]

Syntax Description

<i>domain-number</i>	Number of an AppleTalk domain. It can be a decimal integer from 1 to 1,000,000.
----------------------	---

Defaults

No domain number is assigned to the interface.

Command Modes

Interface configuration

Command History

Release	Modification
10.3	This command was introduced.

Usage Guidelines

Before you can assign a domain number to an interface, you must create a domain with that domain number using the **appletalk domain name** global configuration command.

One or more interfaces on a router can be members of the same domain. However, a given interface can be in only one domain.

After you assign AppleTalk interenterprise features to an AppleTalk domain, you can attribute those features to a tunnel interface configured for AURP by assigning the AppleTalk domain-group number to the tunnel interface.

Examples

The following example assigns domain group 1 to Ethernet interface 0:

```
interface ethernet 0
 appletalk domain-group 1
```

The following example assigns domain group 1 to tunnel interface 2. Assuming that domain group 1 is configured for AppleTalk interenterprise and that tunnel interface 2 is configured for AURP, any features configured for domain group 1 are ascribed to AURP on tunnel interface 2.

```
interface tunnel 2
 appletalk domain-group 1
```

Related Commands

Command	Description
appletalk domain name	Creates a domain and assigns it a name and number.
show appletalk domain	Displays all domain-related information.

appletalk domain hop-reduction

To reduce the hop-count value in packets that are traveling between segments of a domains, use the **appletalk domain hop-reduction** command in global configuration mode. To disable the reduction of hop-count values, use the **no** form of this command.

appletalk domain *domain-number* **hop-reduction**

no appletalk domain *domain-number* **hop-reduction**

Syntax Description

<i>domain-number</i>	Number of an AppleTalk domain. It can be a decimal integer from 1 to 1,000,000.
----------------------	---

Defaults

Reduction of hop-count values is disabled.

Command Modes

Global configuration

Command History

Release	Modification
10.3	This command was introduced.

Usage Guidelines

Before you can specify the **appletalk domain hop-reduction** global configuration command, you must have created a domain with that domain number using the **appletalk domain name** global configuration command.

DDP and Routing Table Maintenance Protocol (RTMP) both impose a 15-hop limit when forwarding packets. A packet ages out and is no longer forwarded when its hop count reaches 16. To overcome RTMP's 15-hop limit, the domain router represents all networks accessible to routers on its local network as one hop away. This allows routers to maintain and send routing information about networks beyond the 15-hop limit and achieve full connectivity.

When you enable hop-count reduction, delivery of packets from networks that are farther than 15 hops apart is guaranteed.

When you enable hop-count reduction, the hop count in a packet is set to 1 as it passes from one domain to another. For example, if the hop count was 8 when the packet left one domain, its hop count is 1 when it enters the next segment of the domain.

Examples

The following example enables hop-count reduction for domain number 1:

```
appletalk domain 1 name Delta
appletalk domain 1 hop-reduction
```

Related Commands	Command	Description
	appletalk domain name	Creates a domain and assigns it a name and number.
	show appletalk domain	Displays all domain-related information.

appletalk domain name

To create a domain and assign it a name and number, use the **appletalk domain name** command in global configuration mode. To remove a domain, use the **no** form of this command.

appletalk domain *domain-number* **name** *domain-name*

no appletalk domain *domain-number* **name** *domain-name*

Syntax Description		
<i>domain-number</i>		Number of an AppleTalk domain. It can be a decimal integer from 1 to 1000000.
<i>domain-name</i>		Name of an AppleTalk domain. The name must be unique across the AppleTalk internetwork. It can be up to 32 characters long and can include special characters from the Apple Macintosh character set. To include a special character, type a colon followed by two hexadecimal characters. For zone names with a leading space character, enter the first character as the special sequence :20.

Defaults No domain is created.

Command Modes Global configuration

Command History	Release	Modification
	10.3	This command was introduced.

Examples The following example creates domain number 1 and assigns it the domain name *Delta*:

```
appletalk domain 1 name Delta
```

Related Commands	Command	Description
	appletalk routing	Enables AppleTalk routing.
	show appletalk domain	Displays all domain-related information.

appletalk domain remap-range

To remap ranges of AppleTalk network numbers or cable ranges between two segments of a domain, use the **appletalk domain remap-range** command in global configuration mode. To disable remapping, use the **no** form of this command.

appletalk domain *domain-number* **remap-range** {**in** | **out**} *cable-range*

no appletalk domain *domain-number* **remap-range** {**in** | **out**} [*cable-range*]

Syntax Description

<i>domain-number</i>	Number of an AppleTalk domain. It can be a decimal integer from 1 to 1,000,000.
in	Specifies that the remapping is performed on inbound packets (that is, on packets arriving into the local interenterprise network). All network numbers or cable ranges coming from the domain are remapped into the specified range.
out	Specifies that the remapping is performed on outbound packets (that is, on packets exiting from the local interenterprise network). All network numbers or cable ranges going to the domain are remapped into the specified range.
<i>cable-range</i>	Specifies the start and end of the cable range, separated by a hyphen. The starting network must be the first AppleTalk network number or the beginning of the cable range to remap. The number must be immediately followed by a hyphen. The ending network must be the last AppleTalk network number or the end of the cable range to remap.

Defaults

No remapping is performed.

Command Modes

Global configuration

Command History

Release	Modification
10.3	This command was introduced.

Usage Guidelines

Before you can specify the **appletalk domain remap-range** command, you must create a domain with that domain number using the **appletalk domain name** global configuration command.

Inbound and outbound packets are relative to the domain router.

Ensure that the domain range you specify does not overlap any network addresses or cable ranges that already exist in the AppleTalk interenterprise network.

Each domain can have two domain mapping ranges to which to remap all incoming or outgoing network numbers or cable ranges. Incoming remapping ranges cannot overlap. However, outbound remapping ranges can overlap.

When an AppleTalk network in a domain becomes inactive, its remapped entry is removed from the remapping table. This frees the space for another network to be remapped.

If there are more remote domains than available remapping range numbers, the Cisco IOS software displays an error message and shuts down domains.

Examples

The following example remaps all network addresses and cable ranges for packets inbound from domain 1 into the address range 1000 to 1999. It also remaps packets inbound from domain 2.

```
appletalk domain 1 name Delta
appletalk domain 2 name Echo
appletalk domain 1 remap-range in 10000-10999
appletalk domain 2 remap-range in 20000-20999
```

Related Commands

Command	Description
appletalk domain name	Creates a domain and assigns it a name and number.
show appletalk remap	Displays domain remapping information.

appletalk event-logging

To log significant network events, use the **appletalk event-logging** command in global configuration mode. To disable this function, use the **no** form of this command.

appletalk event-logging

no appletalk event-logging

Syntax Description This command has no arguments or keywords.

Defaults Disabled

Command Modes Global configuration

Command History	Release	Modification
	10.0	This command was introduced.

Usage Guidelines The **appletalk event-logging** command logs a subset of messages produced by **debug appletalk** command. These messages include routing changes, zone creation, port status, and address.

Examples The following example enables logging of AppleTalk events:

```
appletalk routing
appletalk event-logging
```

Related Commands	Command	Description
	debug appletalk	Displays information about routing changes, zone creation, port status, and address.
	show appletalk globals	Displays information and settings about the AppleTalk internetwork and other parameters.

appletalk free-trade-zone

To establish a free-trade zone, use the **appletalk free-trade-zone** command in interface configuration mode. To disable a free-trade zone, use the **no** form of this command.

appletalk free-trade-zone

no appletalk free-trade-zone

Syntax Description This command has no arguments or keywords.

Defaults Disabled

Command Modes Interface configuration

Command History	Release	Modification
	10.0	This command was introduced.

Usage Guidelines A *free-trade zone* is a part of an AppleTalk internetwork that is accessible by two other parts of the internetwork, neither of which can access the other. You might want to create a free-trade zone to allow the exchange of information between two organizations that otherwise want to keep their internetworks isolated from each other or that do not have physical connectivity with one another.

You apply the **appletalk free-trade-zone** command to each interface attached to the common-access network. This command has the following effect on the interface:

- All incoming RTMP updates are ignored.
- All outgoing RTMP updates contain no information.
- NBP conversion of BrRq packets to FwdReq packets is not performed.

The GZL for free-trade zone nodes will be empty.

Examples The following example establishes a free-trade zone on Ethernet interface 0:

```
interface ethernet 0
 appletalk cable-range 5-5
 appletalk zone FreeAccessZone
 appletalk free-trade-zone
```

appletalk getzonelist-filter

To filter GetZoneList (GZL) replies, use the **appletalk getzonelist-filter** command in interface configuration mode. To remove a filter, use the **no** form of this command.

appletalk getzonelist-filter *access-list-number*

no appletalk getzonelist-filter [*access-list-number*]

Syntax Description	<i>access-list-number</i>	Number of the access list. This is a decimal number from 600 to 699.
---------------------------	---------------------------	--

Defaults	No filters are preconfigured.
-----------------	-------------------------------

Command Modes	Interface configuration
----------------------	-------------------------

Command History	Release	Modification
	10.0	This command was introduced.

Usage Guidelines

GZL filters define conditions for zones only. They cannot use access lists that define conditions for network numbers or cable ranges. All network number and cable range information in the access list assigned to an interface with the **appletalk getzonelist-filter** command is ignored.

Using a GZL filter is not a complete replacement for anonymous network numbers. In order to prevent users from seeing a zone, all routers must implement the GZL filter. If there are any routers from other vendors on the network, the GZL filter will not have a consistent effect.

The Macintosh Chooser uses ZIP GZL requests to compile a list of zones from which the user can select services. Any router on the same network as the Macintosh can respond to these requests with a GZL reply. You can create a GZL filter on the router to control which zones the router mentions in its GZL replies. This has the effect of controlling the list of zones that are displayed by the Chooser.

When defining GZL filters, you should ensure that all routers on the same network filter GZL reply identically. Otherwise, the Chooser will list different zones depending upon which router responded to the request. Also, inconsistent filters can result in zones appearing and disappearing every few seconds when the user remains in the Chooser. Because of these inconsistencies, you should normally use the **appletalk getzonelist-filter** command only when all routers in the internetwork are our routers, unless the routers from other vendors have a similar feature.

Replies to GZL requests are also filtered by any **appletalk distribute-list out** filter that has been applied to the same interface. You must specify an **appletalk getzonelist-filter** command only if you want additional filtering to be applied to GZL replies. This filter is rarely needed except to eliminate zones that do not contain user services.

Examples	The following example does not include the zone Engineering in GZL replies sent out Ethernet interface 0:
-----------------	---

```
access-list 600 deny zone Engineering
interface ethernet 0
 appletalk getzonelist-filter 600
```

Related Commands

Command	Description
access-list additional-zones	Defines the default action to take for access checks that apply to zones.
access-list zone	Defines an AppleTalk access list that applies to a zone.
appletalk distribute-list out	Filters routing updates sent to other routers.
appletalk permit-partial-zones	Permits access to the other networks in a zone when access to one of those networks is denied.

appletalk glean-packets

To derive AppleTalk Address Resolution Protocol (ARP) table entries from incoming packets, use the **appletalk glean-packets** command in interface configuration mode. To disable this function, use the **no** form of this command.

appletalk glean-packets

no appletalk glean-packets

Syntax Description This command has no arguments or keywords.

Defaults Enabled

Command Modes Interface configuration

Command History	Release	Modification
	10.0	This command was introduced.

Usage Guidelines The Cisco IOS software automatically derives ARP table entries from incoming packets. This process, referred to as *gleaning*, speeds up the process of populating the ARP table.

Our implementation of AppleTalk does not forward packets with local source and destination network addresses. This behavior does not conform with the definition of AppleTalk in Apple Computer's *Inside AppleTalk* publication. However, this behavior is designed to prevent any possible corruption of the ARP table in any AppleTalk node that is performing MAC-address gleaning.

Examples The following example disables the building of the ARP table using information derived from incoming packets:

```
interface ethernet 0
  appletalk address 33
  no appletalk glean-packets
```

appletalk ignore-verify-errors

To allow the Cisco IOS software to start functioning even if the network is misconfigured, use the **appletalk ignore-verify-errors** command in global configuration mode. To disable this function, use the **no** form of this command.

appletalk ignore-verify-errors

no appletalk ignore-verify-errors

Syntax Description This command has no arguments or keywords.

Defaults Disabled

Command Modes Global configuration

Command History	Release	Modification
	10.0	This command was introduced.

Usage Guidelines Use this command only under the guidance of a customer engineer or other service representative. A router that starts routing in a misconfigured network will serve only to make a bad situation worse; it will not correct other misconfigured routers.

Examples The following example allows a router to start functioning without verifying network misconfiguration:

```
appletalk ignore-verify-errors
```

appletalk iptalk

To enable IPTalk encapsulation on a tunnel interface, use the **appletalk iptalk** command in interface configuration mode. To disable IPTalk encapsulation, use the **no** form of this command.

appletalk iptalk *network zone*

no appletalk iptalk [*network zone*]

Syntax Description		
<i>network</i>		AppleTalk network address assigned to the interface. The argument <i>network</i> is the 16-bit network number in decimal.
<i>zone</i>		Name of the zone for the connected AppleTalk network.

Defaults	
Disabled	

Command Modes	
Interface configuration	

Command History	Release	Modification
	10.0	This command was introduced.

Usage Guidelines

Use the **appletalk iptalk** command to enable IPTalk encapsulation on a tunnel interface. This command encapsulates AppleTalk in IP packets in a manner compatible with the Columbia AppleTalk Package (CAP) IPTalk and the Kinetics IPTalk implementations. IPTalk is configured on a tunnel interface.

This command allows AppleTalk communication with UNIX hosts running older versions of CAP that do not support native AppleTalk EtherTalk encapsulations. Typically, Apple Macintosh users wishing to communicate with these servers would have their connections routed through a Kinetics FastPath router running Kinetics IPTalk software.

This command is provided as a migration command; newer versions of CAP provide native AppleTalk EtherTalk encapsulations, and the IPTalk encapsulation is no longer required. Our implementation of IPTalk assumes that AppleTalk is already being routed on the backbone; there is currently no LocalTalk hardware interface for our routers.

Our implementation of IPTalk does not support manually configured AppleTalk-to-IP address mapping (atab). The address mapping provided is the same as the Kinetics IPTalk implementation when the atab facility is not enabled. This address mapping functions as follows: The IP subnet mask used on the Ethernet interface on which IPTalk is enabled is inverted (ones complement). This result is then masked against 255 (0xFF hexadecimal). This is then masked against the low-order 8 bits of the IP address to obtain the AppleTalk node number.

Examples

The following example configuration illustrates how to configure IPTalk:

```
interface Ethernet0
 ip address 172.31.255.118 255.255.255.0
 interface Tunnel0
```

```
tunnel source Ethernet0
tunnel mode iptalk
appletalk iptalk 30 UDPZone
```

In this configuration, the IP subnet mask would be inverted:

```
255.255.255.0 inverted yields: 0.0.0.255
```

Masked with 255 it yields 255, and masked with the low-order 8 bits of the interface IP address it yields 118.

This means that the AppleTalk address of the Ethernet 0 interface seen in the UDPZone zone is 30.118. This caveat should be noted, however: Should the host field of an IP subnet mask for an interface be more than 8 bits wide, it will be possible to obtain conflicting AppleTalk node numbers. For instance, consider a situation where the subnet mask for the Ethernet 0 interface above is 255.255.240.0, meaning that the host field is 12 bits wide.

Related Commands

Command	Description
appletalk iptalk-baseport	Specifies the UDP port number when configuring IPTalk.
tunnel mode	Sets the encapsulation mode for the tunnel interface.
tunnel source	Sets the source address of a tunnel interface.

appletalk iptalk-baseport

To specify the User Datagram Protocol (UDP) port number when configuring IPTalk, use the **appletalk iptalk-baseport** command in global configuration mode. To return to the default UDP port number, use the **no** form of this command.

appletalk iptalk-baseport *port-number*

no appletalk iptalk-baseport [*port-number*]

Syntax Description	<i>port-number</i>	First UDP port number in the range of UDP ports used in mapping AppleTalk well-known Datagram Delivery Protocol (DDP) socket numbers to UDP ports.
---------------------------	--------------------	--

Defaults	768
-----------------	-----

Command Modes	Global configuration
----------------------	----------------------

Command History	Release	Modification
	10.0	This command was introduced.

Usage Guidelines

Implementations of IPTalk prior to April 1988 mapped well-known DDP socket numbers to privileged UDP ports starting at port number 768. In April 1988, the Network Information Center (NIC) assigned a range of UDP ports for the defined DDP well-known sockets starting at UDP port number 200 and assigned these ports the names at-nbp, at-rtmp, at-echo, and at-zis. Release 6 and later of the CAP program dynamically decides which port mapping to use. If there are no AppleTalk service entries in the UNIX system's */etc/services* file, CAP uses the older mapping starting at UDP port number 768.

The default UDP port mapping supported by our implementation of IPTalk is 768. If there are AppleTalk service entries in the UNIX system's */etc/services* file, you should specify the beginning of the UDP port mapping range with the **appletalk iptalk-baseport** command.

Examples

The following example sets the base UDP port number to 200, which is the official NIC port number, and configures IPTalk on Ethernet interface 0:

```
appletalk routing
appletalk iptalk-baseport 200
!
interface Ethernet 0
ip address 172.31.255.118 255.255.255.0
appletalk address 20.129
appletalk zone Native AppleTalk
appletalk iptalk 30.0 UDPZone
```

Related Commands

Command	Description
appletalk iptalk	Enables IPTalk encapsulation on a tunnel interface.

appletalk lookup-type

To specify which Name Binding Protocol (NBP) service types are retained in the name cache, use the **appletalk lookup-type** command in global configuration mode. To disable the caching of services, use the **no** form of this command.

appletalk lookup-type *service-type*

no appletalk lookup-type *service-type*

Syntax Description	<i>service-type</i>	AppleTalk service types. The name of a service type can include special characters from the Apple Macintosh character set. To include a special character, type a colon followed by two hexadecimal numbers. For zone names with a leading space character, enter the first character as the special sequence :20. For a list of possible types, see Table 1 in the “Usage Guidelines” section.
---------------------------	---------------------	---

Defaults The entries from active adjacent Cisco routers are retained in the name cache.

Command Modes Global configuration

Command History	Release	Modification
	10.0	This command was introduced.

Usage Guidelines You can issue multiple **appletalk lookup-type** commands. The Cisco IOS software does not query the entire zone, but instead polls only the connected networks. This reduces network overhead and means that the name cache contains entries only for selected services that are in a directly connected network or zone, not for all the selected services in a network or zone.

[Table 1](#) lists some AppleTalk service types.

Table 1 AppleTalk Service Types

Service Type¹	Description
Services for Cisco Routers	
ciscoRouter	Active adjacent Cisco routers. This service type is initially enabled by default.
IPADDRESS	Addresses of active MacIP server.
IPGATEWAY	Names of active MacIP server.
SNMP Agent	Active SNMP agents in Cisco routers.

Table 1 AppleTalk Service Types (continued)

Service Type ¹	Description
Services for Other Vendors' Routers	
AppleRouter	Apple internetwork router.
FastPath	Shiva LocalTalk gateway.
GatorBox	Cayman LocalTalk gateway.
systemRouter	Cisco's OEM router name.
Workstation	Macintosh running System 7. The machine type also is defined, so it is possible to easily identify all user nodes.

1. Type all service names exactly as shown. Spaces are valid. Do not use leading or trailing spaces when entering service names.

If you omit the *service-type* argument from the **no appletalk lookup-type** command, no service types except those relating to our devices are cached.

To display information that is stored in the name cache about the services being used by our routers and other vendors' routers, use the **show appletalk name-cache** command.

If a neighboring router is not our device or is running our software that is earlier than Release 9.0, it is possible our device will be unable to determine the name of the neighbor. This is normal behavior, and there is no workaround.

If AppleTalk routing is enabled, enabling Simple Network Management Protocol (SNMP) will automatically enable SNMP over DDP.

Name cache entries are deleted after several interval periods expire without being refreshed. (You set the interval with the **appletalk name-lookup-interval** command.) At each interval, a single request is sent via each interface that has valid addresses.

Examples

The following example caches information about GatorBox services, Apple internetwork routers, MacIP services, and workstations. Information about our devices is automatically cached.

```
appletalk lookup-type GatorBox
appletalk lookup-type AppleRouter
appletalk lookup-type IPGATEWAY
appletalk lookup-type Workstation
```

Related Commands

Command	Description
appletalk name-lookup-interval	Sets the interval between service pollings by the router on its AppleTalk interfaces.
show appletalk name-cache	Displays a list of NBP services offered by nearby routers and other devices that support NBP.
show appletalk nbp	Displays the contents of the NBP name registration table.

appletalk macip dynamic

To allocate IP addresses to dynamic MacIP clients, use the **appletalk macip dynamic** command in global configuration mode. To delete a MacIP dynamic address assignment, use the **no** form of this command.

appletalk macip dynamic *ip-address* [*ip-address*] **zone** *server-zone*

no appletalk macip dynamic *ip-address* [*ip-address*] **zone** *server-zone*

Syntax Description	<i>ip-address</i>	IP address, in four-part, dotted decimal notation. To specify a range, enter two IP addresses, which represent the first and last addresses in the range.
	zone <i>server-zone</i>	Zone in which the MacIP server resides. The argument <i>server-zone</i> can include special characters from the Apple Macintosh character set. To include a special character, specify a colon followed by two hexadecimal characters. For zone names with a leading space character, enter the first character as the special sequence :20. For a list of Macintosh characters, refer to Apple Computer's <i>Inside AppleTalk</i> publication.

Defaults No IP addresses are allocated.

Command Modes Global configuration

Command History	Release	Modification
	10.0	This command was introduced.

Usage Guidelines Use the **appletalk macip dynamic** command when configuring MacIP. Dynamic clients are those that accept *any* IP address assignment within the dynamic range specified. In general, it is recommended that you do not use fragmented address ranges in configuring ranges for MacIP. However, if this is unavoidable, use the **appletalk macip dynamic** command to specify as many addresses or ranges as required and use the **appletalk macip static** command to assign a specific address or address range.

To shut down all running MacIP services, use the following command:

no appletalk macip

To delete a particular dynamic address assignment from the configuration, use the following command:

no appletalk macip dynamic *ip-address* [*ip-address*] **zone** *server-zone*

Examples

The following example illustrates MacIP support for dynamically addressed MacIP clients with IP addresses in the range 172.16.1.28 to 172.16.1.44:

```
! This global statement specifies the MacIP server address and zone:
appletalk macip server 172.16.1.27 zone Engineering
!
! This global statement identifies the dynamically addressed clients:
appletalk macip dynamic 172.16.1.28 172.16.1.44 zone Engineering
!
! These statements assign the IP address and subnet mask for Ethernet interface 0:
interface ethernet 0
ip address 172.16.1.27 255.255.255.0
!
! This global statement enables AppleTalk routing on the router.
appletalk routing
!
! These statements enable AppleTalk routing on the interface and
! set the zone name for the interface
interface ethernet 0
  appletalk cable-range 69-69 69.128
  appletalk zone Engineering
```

Related Commands

Command	Description
appletalk macip server	Establishes a MacIP server for a zone.
appletalk macip static	Allocates an IP address to be used by a MacIP client that has reserved a static IP address.
ip address	Sets a primary or secondary IP address for an interface.
show appletalk macip-servers	Displays status information about related servers.

appletalk macip server

To establish a MacIP server for a zone, use the **appletalk macip server** command in global configuration mode. To shut down a MacIP server, use the **no** form of this command.

appletalk macip server *ip-address zone server-zone*

no appletalk macip server *ip-address zone server-zone*

Syntax Description		
	<i>ip-address</i>	IP address, in four-part dotted decimal notation. It is suggested that this address match the address of an existing IP interface.
	zone <i>server-zone</i>	Zone in which the MacIP server resides. The argument <i>server-zone</i> can include special characters from the Apple Macintosh character set. To include a special character, specify a colon followed by two hexadecimal characters. For zone names with a leading space character, enter the first character as the special sequence :20. For a list of Macintosh characters, refer to Apple Computer's <i>Inside AppleTalk</i> publication.

Defaults No MacIP server is established.

Command Modes Global configuration

Command History	Release	Modification
	10.0	This command was introduced.

Usage Guidelines Use the **appletalk macip server** command when configuring MacIP.

You can configure only one MacIP server per AppleTalk zone, and the server must reside in the default zone. A server is not registered via NBP until at least one MacIP resource is configured.

You can configure multiple MacIP servers for a router, but you can assign only one MacIP server to a particular zone and only one IP interface to each MacIP server. In general, you must be able to establish an alias between the IP address you assign with the **appletalk macip server** command and an existing IP interface. For implementation simplicity, it is suggested that the address specified in this command match an existing IP interface address.

To shut down all active MacIP servers, use the following command:

no appletalk macip

To delete a specific MacIP server from the MacIP configuration, use the following command:

no appletalk macip server *ip-address zone server-zone*

Examples

The following example establishes a MacIP server on Ethernet interface 0 in AppleTalk zone Engineering. It then assigns an IP address to the Ethernet interface and enables AppleTalk routing on a router and its Ethernet interface.

```
appletalk macip server 172.19.1.27 zone Engineering
ip address 172.19.1.27 255.255.255.0
appletalk routing
interface ethernet 0
  appletalk cable-range 69-69 69.128
  appletalk zone Engineering
```

Related Commands

Command	Description
appletalk macip dynamic	Allocates IP addresses to dynamic MacIP clients.
appletalk macip static	Allocates an IP address to be used by a MacIP client that has reserved a static IP address.
ip address	Sets a primary or secondary IP address for an interface.
show appletalk macip-servers	Displays status information about related servers.

appletalk macip static

To allocate an IP address to be used by a MacIP client that has reserved a static IP address, use the **appletalk macip static** command in global configuration mode. To delete a MacIP static address assignment, use the **no** form of this command.

appletalk macip static *ip-address* [*ip-address*] **zone** *server-zone*

no appletalk macip static *ip-address* [*ip-address*] **zone** *server-zone*

Syntax Description	<i>ip-address</i>	IP address, in four-part, dotted decimal format. To specify a range, enter two IP addresses, which represent the first and last addresses in the range.
	zone <i>server-zone</i>	Zone in which the MacIP server resides. The argument <i>server-zone</i> can include special characters from the Apple Macintosh character set. To include a special character, specify a colon followed by two hexadecimal characters. For zone names with a leading space character, enter the first character as the special sequence :20. For a list of Macintosh characters, refer to Apple Computer's <i>Inside AppleTalk</i> publication.

Defaults No IP address is allocated.

Command Modes Global configuration

Command History	Release	Modification
	10.0	This command was introduced.

Usage Guidelines Use the **appletalk macip static** command when configuring MacIP. Static addresses are for users who require fixed addresses for IP name domain name service and for administrators who do not want addresses to change so they can always know who has what IP address. In general, it is recommended that you do not use fragmented address ranges in configuring ranges for MacIP. However, if this is unavoidable, use the **appletalk macip dynamic** command to specify as many addresses or ranges as required, and then use the **appletalk macip static** command to assign a specific address or address range.

To shut down all running MacIP services, use the following command:

no appletalk macip

To delete a particular static address assignment from the configuration, use the following command:

no appletalk macip static *ip-address* [*ip-address*] **zone** *server-zone*

Examples

The following example illustrates MacIP support for MacIP clients with statically allocated IP addresses. The IP addresses range is from 172.31.1.50 to 172.31.1.66. The three nodes that have the specific addresses are 172.31.1.81, 172.31.1.92, and 172.31.1.101.

```
! This global statement specifies the MacIP server address and zone:
appletalk macip server 172.31.1.27 zone Engineering
!
! These global statements identify the statically addressed clients:
appletalk macip static 172.31.1.50 172.31.1.66 zone Engineering
appletalk macip static 172.31.1.81 zone Engineering
appletalk macip static 172.31.1.92 zone Engineering
appletalk macip static 172.31.1.101 zone Engineering
!
! These statements assign the IP address and subnet mask for Ethernet interface 0:
interface ethernet 0
 ip address 172.31.1.27 255.255.255.0
!
! This global statement enables AppleTalk routing on the router.
appletalk routing
!
! These statements enable AppleTalk routing on the interface and
! set the zone name for the interface
interface ethernet 0
 appletalk cable-range 69-69 69.128
 appletalk zone Engineering
```

Related Commands

Command	Description
appletalk macip dynamic	Allocates IP addresses to dynamic MacIP clients.
appletalk macip server	Establishes a MacIP server for a zone.
ip address	Sets a primary or secondary IP address for an interface.
show appletalk macip-servers	Displays status information about related servers.

appletalk maximum-paths

To define the maximum number of equal-cost paths that the router should use when balancing the traffic load, use the **appletalk maximum-paths** command in global configuration mode. To restore the default value, use the **no** form of this command.

```
appletalk maximum-paths [paths]
```

```
no appletalk maximum-paths [paths]
```

Syntax Description	<i>paths</i>	(Optional) Maximum number of equal-cost paths to be used for balancing the traffic load. The <i>paths</i> argument is a decimal number in the range of 1 to 16.
---------------------------	--------------	---

Defaults	The default value is 1.
-----------------	-------------------------

Command Modes	Global configuration
----------------------	----------------------

Command History	Release	Modification
	11.2	This command was introduced.

Usage Guidelines	<p>Use the appletalk maximum-paths command when configuring AppleTalk load balancing.</p> <p>The appletalk maximum-paths command increases throughput by allowing the software to choose among several equal-cost, parallel paths. (Note that when paths have differing costs, the software chooses lower-cost routes in preference to higher-cost routes.)</p> <p>When the value of <i>paths</i> is greater than 1, packets are distributed over the multiple equal-cost paths in round-robin fashion on a packet-by-packet basis.</p>
-------------------------	---

Examples	<p>The following example defines four equal-cost paths:</p> <pre>! Sets the maximum number of equal-cost paths to 4. appletalk maximum-paths 4</pre>
-----------------	--

The following example restores the default value:

```
! Restores the default value.
no appletalk maximum-paths 4
```

appletalk name-lookup-interval

To set the interval between service pollings by the router on its AppleTalk interfaces, use the **appletalk name-lookup-interval** command in global configuration mode. To purge the name cache and return to the default polling interval, use the **no** form of this command.

appletalk name-lookup-interval *seconds*

no appletalk name-lookup-interval [*seconds*]

Syntax Description

<i>seconds</i>	Interval, in seconds, between NBP lookup pollings. This can be any positive integer; there is no upper limit. It is recommended that you use an interval between 300 seconds (5 minutes) and 1200 seconds (20 minutes). The smaller the interval, the more packets are generated to handle the names. Specifying an interval of 0 purges all entries from the name cache and disables the caching of service type information that is controlled by the appletalk lookup-type command, including the caching of information about our routers.
----------------	---

Defaults

The default is 0, which purges all entries from the name cache and disables the caching of service type information.

Command Modes

Global configuration

Command History

Release	Modification
10.0	This command was introduced.

Usage Guidelines

The Cisco IOS software collects name information only for entities on connected AppleTalk networks. This reduces overhead.

If you enter an interval of 0, all polling for services (except ciscoRouter) is disabled. If you reenter a nonzero value, the configuration specified by the **appletalk lookup-type** command is reinstated. You cannot disable the lookup of ciscoRouter.

Examples

The following example sets the lookup interval to 20 minutes:

```
appletalk name-lookup-interval 1200
```

Related Commands

Command	Description
appletalk lookup-type	Specifies which NBP service types are retained in the name cache.
show appletalk name-cache	Displays a list of NBP services offered by nearby routers and other devices that support NBP.

appletalk permit-partial-zones

To permit access to the other networks in a zone when access to one of those networks is denied, use the **appletalk permit-partial-zones** command in global configuration mode. To deny access to all networks in a zone if access to one of those networks is denied, use the **no** form of this command.

appletalk permit-partial-zones

no appletalk permit-partial-zones

Syntax Description This command has no arguments or keywords.

Defaults Access is denied.

Command Modes Global configuration

Command History	Release	Modification
	10.0	This command was introduced.

Usage Guidelines The permitting of partial zones provides IP-style access control.

When you enable the use of partial zones, the NBP protocol cannot ensure the consistency and uniqueness of name bindings.

If you enable the use of partial zones, access control behavior is compatible with that of Cisco IOS Release 8.3.

Examples The following example allows partial zones:

```
appletalk permit-partial-zones
```

Related Commands	Command	Description
	access-list additional-zones	Defines the default action to take for access checks that apply to zones.
	access-list zone	Defines an AppleTalk access list that applies to a zone.
	appletalk distribute-list out	Filters routing updates sent to other routers.
	appletalk getzonelist-filter	Filters GZL replies.

appletalk pre-fdditalk

To enable the recognition of pre-FDDITalk packets, use the **appletalk pre-fdditalk** command in global configuration mode. To disable this function, use the **no** form of this command.

appletalk pre-fdditalk

no appletalk pre-fdditalk

Syntax Description This command has no arguments or keywords.

Defaults Disabled

Command Modes Global configuration

Command History	Release	Modification
	10.0	This command was introduced.

Usage Guidelines Use this command to have the Cisco IOS software recognize AppleTalk packets sent on the FDDI ring from routers that are running Cisco software releases prior to Release 9.0(3) or Release 9.1(2).

Examples The following example disables the recognition of pre-FDDITalk packets:

```
no appletalk pre-fdditalk
```

appletalk protocol

To specify the routing protocol to use on an interface, use the **appletalk protocol** command in interface configuration mode. To disable a routing protocol, use the **no** form of this command.

appletalk protocol {aurp | rtmp}

no appletalk protocol {aurp | rtmp}

Syntax Description	Command	Description
	aurp	Specifies that the routing protocol to use is AppleTalk Update-Based Routing Protocol (AURP). You can enable AURP only on tunnel interfaces.
	rtmp	Specifies that the routing protocol to use is Routing Table Maintenance Protocol (RTMP), which is enabled by default.

Defaults RTMP

Command Modes Interface configuration

Command History	Release	Modification
	10.3	This command was introduced.
	12.2(13)T	The igrp keyword was removed.

Usage Guidelines You can configure an interface to use RTMP. The Cisco IOS software will continue to send out RTMP routing updates.

You cannot disable RTMP without first enabling AURP.

Enabling AURP automatically disables RTMP.

You can enable AURP only on tunnel interfaces.

Examples The following example enables AURP on tunnel interface 1:

```
interface tunnel 1
 appletalk protocol aurp
```

The following example disables RTMP on serial interface 0:

```
interface serial 0
 no appletalk protocol rtmp
```

Related Commands	Command	Description
	appletalk routing	Enables AppleTalk routing.

appletalk proxy-nbp

To assign a proxy network number for each zone in which there is a router that supports only nonextended AppleTalk, use the **appletalk proxy-nbp** command in global configuration mode. To delete the proxy, use the **no** form of this command.

appletalk proxy-nbp *network-number zone-name*

no appletalk proxy-nbp [*network-number zone-name*]

Syntax Description

<i>network-number</i>	Network number of the proxy. It is a 16-bit decimal number and must be unique on the network. This is the network number that will be advertised by the Cisco IOS software as if it were a real network number.
<i>zone-name</i>	Name of the zone that contains the devices that support only nonextended AppleTalk. The name can include special characters from the Apple Macintosh character set. To include a special character, type a colon followed by two hexadecimal characters. For zone names with a leading space character, enter the first character as the special sequence :20.

Defaults

No proxy network number is assigned.

Command Modes

Global configuration

Command History

Release	Modification
10.0	This command was introduced.

Usage Guidelines

The **appletalk proxy-nbp** command provides compatibility between AppleTalk Phase 1 and AppleTalk Phase 2 networks.

Proxy routes are included in outgoing RTMP updates as if they were directly connected routes, although they are not really directly connected, since they are not associated with any interface. Whenever an NBQ BrRq for the zone in question is generated by anyone anywhere in the internetwork, an NBP FwdReq is directed to any router connected to the proxy route. The Phase 2 router, which is the only router directly connected, converts the FwdReq to LkUps, which are understood by Phase 1 routers, and sends them to every network in the zone.

In an environment in which there are Phase 1 and Phase 2 networks, you must specify at least one **appletalk proxy-nbp** command for each zone that has a nonextended-only AppleTalk router.

The proxy network number you assign with the **appletalk proxy-nbp** command cannot also be assigned to a router, nor can it also be associated with a physical network.

You must assign only one proxy network number for each zone. However, you can define additional proxies with different network numbers to provide redundancy. Each proxy generates one or more packets for each forward request it receives. All other packets sent to the proxy network address are discarded. Defining redundant proxy network numbers increases the NBP traffic linearly.

Examples

The following example defines network number 60 as an NBP proxy for the zone *Twilight*:

```
appletalk proxy-nbp 60 Twilight
```

Related Commands

Command	Description
show appletalk route	Displays all entries or specified entries in the AppleTalk routing table.

appletalk require-route-zones

To prevent the advertisement of routes (network numbers or cable ranges) that have no assigned zone, use the **appletalk require-route-zones** command in global configuration mode. To disable this option and allow the Cisco IOS software to advertise to its neighbors routes that have no network-zone association, use the **no** form of this command.

appletalk require-route-zones

no appletalk require-route-zones

Syntax Description This command has no arguments or keywords.

Defaults Enabled

Command Modes Global configuration

Command History	Release	Modification
	10.0	This command was introduced.

Usage Guidelines The **appletalk require-route-zones** command ensures that all networks have zone names prior to advertisement to neighbors.

The **no appletalk require-route-zones** command enables behavior compatible with Cisco IOS Release 8.3.

Using this command helps prevent ZIP protocol storms. ZIP protocol storms can arise when corrupt routes are propagated and routers broadcast ZIP requests to determine the network/zone associations.

When the **appletalk require-route-zones** command is enabled, the Cisco IOS software will not advertise a route to its neighboring routers until it has obtained the network-zone associations. This effectively limits the storms to a single network rather than the entire internet.

As an alternative to disabling this option, use the **appletalk getzonelist-filter** interface configuration command to filter *empty* zones from the list presented to users.

You can configure different zone lists on different interfaces. However, you are discouraged from doing this because AppleTalk users expect to have the same user zone lists at any end node in the internet.

The filtering provided by the **appletalk require-route-zones** command does not prevent explicit access via programmatic methods, but should be considered a user optimization to suppress unused zones. You should use other forms of AppleTalk access control lists to actually *secure* a zone or network.

Examples The following example configures a router to prevent the advertisement of routes that have no assigned zone:

```
appletalk require-route-zones
```

appletalk route-cache

To enable fast switching on all supported interfaces, use the **appletalk route-cache** command in interface configuration mode. To disable fast switching, use the **no** form of this command.

appletalk route-cache

no appletalk route-cache

Syntax Description This command has no arguments or keywords.

Defaults Enabled on all interfaces that support fast switching.

Command Modes Interface configuration

Command History	Release	Modification
	10.0	This command was introduced.

Usage Guidelines Fast switching allows higher throughput by switching a packet using a cache created by previous packets. Fast-switching is enabled by default on all interfaces that support fast switching, including Token Ring, Frame Relay, PPP, High-Level Data Link Control (HDLC), SMDS, and ATM. Note that fast switching is not supported over X.25 and Link Access Procedure, Balanced (LAPB), encapsulations, or on the CSC-R16, CSC-1R, or CSC-2R STR Token Ring adapters.

Packet transfer performance is generally better when fast switching is enabled. However, you may want to disable fast switching in order to save memory space on interface cards and to help avoid congestion when high-bandwidth interfaces are writing large amounts of information to low-bandwidth interfaces.

Fast switching of extended AppleTalk is supported on serial lines with several encapsulation types (for example, SMDS and HDLC). Fast switching of nonextended AppleTalk is not supported on serial lines.

Examples The following example disables fast switching on an interface:

```
interface ethernet 0
  appletalk cable-range 10-20
  appletalk zone Twilight
  no appletalk route-cache
```

Related Commands	Command	Description
	show appletalk cache	Displays the routes in the AppleTalk fast-switching table on an extended AppleTalk network.

appletalk routing

To enable AppleTalk routing, use the **appletalk routing** command in global configuration mode. To disable AppleTalk routing, use the **no** form of this command.

appletalk routing

no appletalk routing

Syntax Description This command has no arguments or keywords.

Defaults Disabled

Command Modes Global configuration

Command History	Release	Modification
	10.0	This command was introduced.
	10.3	The igrp keyword was added.
	12.2(13)T	The igrp keyword and <i>router-number</i> argument were removed.

Usage Guidelines If you do not specify the optional keyword and argument, this command enables AppleTalk routing using the RTMP routing protocol.

Examples The following example enables AppleTalk protocol processing:

```
appletalk routing
```

Related Commands	Command	Description
	appletalk address	Enables nonextended AppleTalk routing on an interface.
	appletalk cable-range	Enables an extended AppleTalk network.
	appletalk protocol	Specifies the routing protocol to use on an interface.
	appletalk zone	Sets the zone name for the connected AppleTalk network.

appletalk rtmp jitter

To set the interval timer on a router between subsequent AppleTalk Routing Table Maintenance Protocol (RTMP) routing updates, use the **appletalk rtmp jitter** command in global configuration mode. To disable this mode, use the **no** form of the command.

appletalk rtmp jitter *percent*

no appletalk rtmp jitter *percent*

Syntax Description	<i>percent</i>	Ranges from 0 to 100.
---------------------------	----------------	-----------------------

Defaults	0 percent
-----------------	-----------

Command Modes	Global configuration
----------------------	----------------------

Command History	Release	Modification
	10.3	This command was introduced.

Usage Guidelines

The interval between subsequent routing updates is randomized to reduce the probability of synchronization with the routing updates from other routers on the same link. This is done by maintaining a separate transmission interval timer for each advertising interface.

The **appletalk rtmp jitter** command allows the user to stagger the routing updates and to avoid sending the updates every 10 seconds.

Examples

The following example sets AppleTalk RTMP updates to fluctuate 20 percent of the update interval time:

```
appletalk rtmp jitter 20
```

Related Commands	Command	Description
	show appletalk globals	Displays information and settings about the AppleTalk internetwork and other parameters.

appletalk rtmp-stub

To enable AppleTalk Routing Table Maintenance Protocol (RTMP) stub mode, use the **appletalk rtmp-stub** command in interface configuration mode. To disable this mode, use the **no** form of the command.

appletalk rtmp-stub

no appletalk rtmp-stub

Syntax Description This command has no arguments or keywords.

Defaults Disabled

Command Modes Interface configuration

Command History	Release	Modification
	11.1	This command was introduced.

Usage Guidelines

This command enables routers running RTMP to reduce the amount of CPU processing that RTMP modules use. RTMP modules send “stub” packets instead of full RTMP packets when you enable stub mode.

A stub packet is only the first tuple of an RTMP packet. The first tuple indicates the network number range assigned to that network. End nodes use stub packets to determine if their node number is in the right network range.

Upon startup, an end node on an extended network uses stub packets to verify that its previous node number is still within the segment’s network number range. If it is, the end node reuses the previous node number and stores the network number range information. If an end node learns upon startup that its previous node number does not fall within the segment’s new network number range, the end node picks a new node number based on the new network number range and stores the new network number range information.

After startup, end nodes use subsequent stub packets to verify that the network number range sent in the stub packets precisely matches its stored network number range. In this way, stub packets keep end nodes alive.

When routers that have stub mode enabled receive full RTMP packets, they discard these packets. Discarding full RTMP packets when stub mode is enabled saves the overhead processing of RTMP routes.

You can also use stub mode on “end” networks. End networks are those to which no other routers attach. Because no other routers are listening for routes on these end segments, there is no need for the end router to send full RTMP packets to these end segments. The end router can send stub packets to keep end nodes alive.

Examples

The following example turns on AppleTalk RTMP stub mode:

```
appletalk rtmp-stub
```

Related Commands

Command	Description
show appletalk interface	Displays the status of the AppleTalk interfaces configured in the Cisco IOS software and the parameters configured on each interface.

appletalk send-rtmps

To allow the Cisco IOS software to send routing updates to its neighbors, use the **appletalk send-rtmps** command in interface configuration mode. To block updates from being sent, use the **no** form of this command.

appletalk send-rtmps

no appletalk send-rtmps

Syntax Description

This command has no arguments or keywords.

Defaults

Routing updates are sent.

Command Modes

Interface configuration

Command History

Release	Modification
10.0	This command was introduced.

Usage Guidelines

If you block the sending of routing updates, an interface on the network that has AppleTalk enabled is not “visible” to other routers on the network.

Examples

The following example prevents a router from sending routing updates to its neighbors:

```
no appletalk send-rtmps
```

Related Commands

Command	Description
appletalk require-route-zones	Prevents the advertisement of routes (network numbers or cable ranges) that have no assigned zone.
appletalk strict-rtmp-checking	Performs maximum checking of routing updates to ensure their validity.
appletalk timers	Changes the routing update timers.

appletalk static cable-range

To define a static route or a floating static route on an extended network, use the **appletalk static cable-range** command in global configuration mode. To remove a static route, use the **no** form of this command.

appletalk static cable-range *cable-range* **to** *network.node* [**floating**] **zone** *zone-name*

no appletalk static cable-range *cable-range* **to** *network.node* [**floating**] [**zone** *zone-name*]

Syntax Description

<i>cable-range</i>	Cable range value. The argument specifies the start and end of the cable range, separated by a hyphen. These values are decimal number from 0 to 65,279. The starting network number must be less than or equal to the ending network number.
to <i>network.node</i>	AppleTalk network address of the remote router. The argument <i>network</i> is the 16-bit network number in the range 0 to 65,279. The argument <i>node</i> is the 8-bit node number in the range 0 to 254. Both numbers are decimal.
floating	(Optional) Specifies that this route is a floating static route, which is a static route that can be overridden by a dynamically learned route.
zone <i>zone-name</i>	Name of the zone on the remote network. The name can include special characters from the Apple Macintosh character set. To include a special character, type a colon followed by two hexadecimal characters. For zone names with a leading space character, enter the first character as the special sequence :20.

Defaults

No static routes are defined.

Command Modes

Global configuration

Command History

Release	Modification
10.0	This command was introduced.

Usage Guidelines

You cannot delete a particular zone from the zone list without first deleting the static route.

When links associated with static routes are lost, traffic may stop being forwarded even though alternative paths might be available. For this reason, you should be careful when assigning static routes.

Floating static routes are a kind of static route that can be overridden by dynamically learned routes. Floating static routes allow you to switch to another path whenever routing information for a destination is lost. One application of floating static routes is to provide back-up routes in topologies where dial-on-demand routing is used.

If you configure a floating static route, the Cisco IOS software checks to see if an entry for the route already exists in its routing table. If a dynamic route already exists, the floating static route is placed in reserve as part of a floating static route table. When the software detects that the dynamic route is no

longer available, it replaces the dynamic route with the floating static route for that destination. If the route is later relearned dynamically, the dynamic route replaces the floating static route and the floating static route is again placed in reserve.

To avoid the possibility of a routing loop occurring, by default floating static routes are not redistributed into other dynamic protocols.

Examples

The following example creates a static route to the remote router whose address is 1.2 on the remote network 100-110 that is in the remote zone *Remote*:

```
appletalk static cable-range 100-110 to 1.2 zone Remote
```

The following example creates a floating static route to the remote router whose address is 1.3 on the remote network 100-110 that is in the remote zone *Remote*:

```
appletalk static cable-range 100-110 to 1.3 floating zone Remote
```

Related Commands

Command	Description
appletalk static network	Defines a static route or a floating static route on a nonextended network.
<code>show appletalk route</code>	Displays all entries or specified entries in the AppleTalk routing table.
<code>show appletalk static</code>	Displays information about the statically defined routes.

appletalk static network

To define a static route or a floating static route on a nonextended network, use the **appletalk static network** command in global configuration mode. To remove a static route, use the **no** form of this command.

appletalk static network *network-number* **to** *network.node* [**floating**] **zone** *zone-name*

no appletalk static network *network-number* **to** *network.node* [**floating**] [**zone** *zone-name*]

Syntax Description

<i>network-number</i>	AppleTalk network number assigned to the interface. It is a 16-bit decimal number and must be unique on the network. This is the network number that will be advertised by the Cisco IOS software as if it were a real network number.
to <i>network.node</i>	AppleTalk network address of the remote router. The argument <i>network</i> is the 16-bit network number in the range 0 to 65279. The argument <i>node</i> is the 8-bit node number in the range 0 to 254. Both numbers are decimal.
floating	(Optional) Specifies that this route is a floating static route, which is a static route that can be overridden by a dynamically learned route.
zone <i>zone-name</i>	Name of the zone on the remote network. The name can include special characters from the Apple Macintosh character set. To include a special character, type a colon followed by two hexadecimal characters. For zone names with a leading space character, enter the first character as the special sequence :20.

Defaults

No static routes are defined.

Command Modes

Global configuration

Command History

Release	Modification
10.0	This command was introduced.

Usage Guidelines

You cannot delete a particular zone from the zone list without first deleting the static route.

When links associated with static routes are lost, traffic may stop being forwarded even though alternative paths might be available. For this reason, you should be careful when assigning static routes.

Floating static routes are a kind of static route that can be overridden by dynamically learned routes. Floating static routes allow you to switch to another path whenever routing information for a destination is lost. One application of floating static routes is to provide back-up routes in topologies where dial-on-demand routing is used.

If you configure a floating static route, the Cisco IOS software checks to see if an entry for the route already exists in its routing table. If a dynamic route already exists, the floating static route is placed in reserve as part of a floating static route table. When the Cisco IOS software detects that the dynamic

route is no longer available, it replaces the dynamic route with the floating static route for that destination. If the route is later relearned dynamically, the dynamic route replaces the floating static route and the floating static route is again placed in reserve.

To avoid the possibility of a routing loop occurring, by default floating static routes are not redistributed into other dynamic protocols.

Examples

The following example creates a static route to the remote router whose address is 1.2 on the remote network 200 that is in the remote zone *Remote*:

```
appletalk static network 200 to 1.2 zone Remote
```

The following example creates a floating static route to the remote router whose address is 1.3 on the remote network 200 that is in the remote zone *Remote*:

```
appletalk static network 200 to 1.3 floating zone Remote
```

Related Commands

Command	Description
appletalk static cable-range	Defines a static route or a floating static route on an extended network.
<code>show appletalk route</code>	Displays all entries or specified entries in the AppleTalk routing table.
<code>show appletalk static</code>	Displays information about the statically defined routes.

appletalk strict-rtmp-checking

To perform maximum checking of routing updates to ensure their validity, use the **appletalk strict-rtmp-checking** command in global configuration mode. To disable the maximum checking, use the **no** form of this command.

appletalk strict-rtmp-checking

no appletalk strict-rtmp-checking

Syntax Description This command has no arguments or keywords.

Defaults Maximum checking is provided.

Command Modes Global configuration

Command History	Release	Modification
	10.0	This command was introduced.

Usage Guidelines Strict Routing Table Maintenance Protocol (RTMP) checking discards any RTMP packets arriving from routers that are not directly connected to the local router. This means that the local router does not accept any routed RTMP packets. Note that RTMP packets that need to be forwarded are not discarded.

Examples The following example disables strict checking of RTMP routing updates:

```
no appletalk strict-rtmp-checking
```

Related Commands	Command	Description
	appletalk require-route-zones	Prevents the advertisement of routes (network numbers or cable ranges) that have no assigned zone.
	appletalk send-rtmps	Allows the Cisco IOS software to send routing updates to its neighbors.
	appletalk timers	Changes the routing update timers.

appletalk timers

To change the routing update timers, use the **appletalk timers** command in global configuration mode. To return to the default routing update timers, use the **no** form of this command.

appletalk timers *update-interval valid-interval invalid-interval*

no appletalk timers [*update-interval valid-interval invalid-interval*]

Syntax Description		
	<i>update-interval</i>	Time, in seconds, between routing updates sent to other routers on the network. The default is 10 seconds.
	<i>valid-interval</i>	Time, in seconds, that the Cisco IOS software will consider a route valid without having heard a routing update for that route. The default is 20 seconds (two times the update interval).
	<i>invalid-interval</i>	Time, in seconds, that the route is retained after the last update. The default is 60 seconds (three times the valid interval).

Defaults

update-interval argument: 10 seconds

valid-interval argument: 20 seconds

invalid-interval argument: 60 seconds

Command Modes

Global configuration

Command History

Release	Modification
10.0	This command was introduced.

Usage Guidelines

Routes older than the time specified by the *update-interval* argument are considered suspect. Once the period of time specified by the *valid-interval* argument has elapsed without having heard a routing update for a route, the route becomes bad and is eligible for replacement by a path with a higher (less favorable) metric. During the period for the *invalid-interval* argument, routing updates include this route with a special “notify neighbor” metric. If this timer expires, the route is deleted from the routing table.

Note that you should not attempt to modify the routing timers without fully understanding the ramifications of doing so. Many other AppleTalk router vendors provide no facility for modifying their routing timers; should you adjust the Cisco IOS software AppleTalk timers such that routing updates do not arrive at these other routers within the normal interval, it is possible to degrade or destroy AppleTalk network connectivity.

If you change the routing update interval, be sure to do so for *all* routers on the network.

In rare instances, you might want to change this interval, such as when a device is busy and cannot send routing updates every 10 seconds or when slower routers are incapable of processing received routing updates in a large network.

Examples

The following example increases the update interval to 20 seconds and the route-valid interval to 40 seconds:

```
appletalk timers 20 40 60
```

appletalk virtual-net

To add AppleTalk users who are logging in on an asynchronous line and using PPP encapsulation to an internal network, use the **appletalk virtual-net** command in global configuration mode. To remove an internal network, use the **no** form of this command.

appletalk virtual-net *network-number zone-name*

no appletalk virtual-net *network-number zone-name*

Syntax Description

<i>network-number</i>	AppleTalk network address assigned to the interface. This is a 16-bit decimal network number in the range 0 to 65279. The network address must be unique across your AppleTalk internetwork.
<i>zone-name</i>	Name of a new or existing zone to which the AppleTalk user will belong.

Defaults

No virtual networks are predefined.

Command Modes

Global configuration

Command History

Release	Modification
10.3	This command was introduced.

Usage Guidelines

A virtual network is a logical network that exists only within the Cisco IOS software. It enables you—and by extension anyone who dials into the router—to add an asynchronous interface to either a new or an existing AppleTalk zone.

Virtual networks work with both extended and nonextended AppleTalk networks. On Cisco routers, you can only set a virtual network on an asynchronous line on the auxiliary port.

If you issue the **appletalk virtual-net** command and specify a new AppleTalk zone name, the network number you specify is the only one associated with this zone. If you issue this command and specify an existing AppleTalk zone, the network number you specify is added to the existing zone.

The selected AppleTalk zone (either new or existing) is highlighted when you open the Macintosh Chooser window. From this window, you can access all available zones.

Examples

The following example adds a user to the virtual network number 3 and specifies the zone name renegade:

```
apple virtual-net 3 renegade
```

Related Commands

Command	Description
appletalk address	Enables nonextended AppleTalk routing on an interface.
appletalk cable-range	Enables an extended AppleTalk network.
appletalk client-mode	Allows users to access an AppleTalk zone when dialing into an asynchronous line (on Cisco routers, only via the auxiliary port).
appletalk zone	Sets the zone name for the connected AppleTalk network.
show appletalk zone	Displays all entries or specified entries in the zone information table.

appletalk zip-query-interval

To specify the interval at which the Cisco IOS software sends ZIP queries, use the **appletalk zip-query-interval** command in global configuration mode. To return to the default interval, use the **no** form of this command.

```
appletalk zip-query-interval interval
```

```
no zip-query-interval
```

Syntax Description	<i>interval</i>	Interval, in seconds, at which the software sends ZIP queries. It can be any positive integer. The default is 10 seconds.
---------------------------	-----------------	---

Defaults	10 seconds
-----------------	------------

Command Modes	Global configuration
----------------------	----------------------

Command History	Release	Modification
	10.0	This command was introduced.

Usage Guidelines	The software uses the information received in response to its ZIP queries to update its zone table.
-------------------------	---

Examples	The following example changes the ZIP query interval to 40 seconds: <pre>appletalk zip-query-interval 40</pre>
-----------------	---

appletalk zip-reply-filter

To configure a ZIP reply filter, use the **appletalk zip-reply-filter** command in interface configuration mode. To remove a filter, use the **no** form of this command.

appletalk zip-reply-filter *access-list-number*

no appletalk zip-reply-filter [*access-list-number*]

Syntax Description	<i>access-list-number</i>	Number of the access list. This is a decimal number from 600 to 699.
---------------------------	---------------------------	--

Defaults	No access lists are predefined.
-----------------	---------------------------------

Command Modes	Interface configuration
----------------------	-------------------------

Command History	Release	Modification
	10.3	This command was introduced.

Usage Guidelines	<p>ZIP reply filters limit the visibility of zones from routers in unprivileged regions throughout the internetwork. These filters filter the zone list for each network provided by a router to neighboring routers to remove restricted zones.</p>
-------------------------	--

ZIP reply filters apply to downstream routers, not to end stations on networks attached to the local router. With ZIP reply filters, when downstream routers request the names of zones in a network, the local router replies with the names of visible zones only. It does not reply with the names of zones that have been hidden with a ZIP reply filter. To filter zones from end stations, use GZL filters.

ZIP reply filters determine which networks and cable ranges the Cisco IOS software sends out in routing updates. Before sending out routing updates, the software excludes the networks and cable ranges whose zones have been completely denied access by ZIP reply filters. Excluding this information ensures that routers receiving these routing updates do not send unnecessary ZIP requests.

Examples	The following example assigns a ZIP reply filter to Ethernet interface 0:
-----------------	---

```
interface ethernet 0
 appletalk zip-reply-filter 600
```

Related Commands	Command	Description
	access-list additional-zones	Defines the default action to take for access checks that apply to zones.
	access-list zone	Defines an AppleTalk access list that applies to a zone.
	show appletalk interface	Displays the status of the AppleTalk interfaces configured in the Cisco IOS software and the parameters configured on each interface.

appletalk zone

To set the zone name for the connected AppleTalk network, use the **appletalk zone** command in interface configuration mode. To delete a zone, use the **no** form of this command.

appletalk zone *zone-name*

no appletalk zone [*zone-name*]

Syntax Description	<i>zone-name</i>	Name of the zone. The name can include special characters from the Apple Macintosh character set. To include a special character, type a colon followed by two hexadecimal characters. For zone names with a leading space character, enter the first character as the special sequence :20.
---------------------------	------------------	--

Defaults	No zone name is set.
-----------------	----------------------

Command Modes	Interface configuration
----------------------	-------------------------

Command History	Release	Modification
	10.0	This command was introduced.

Usage Guidelines If discovery mode is not enabled, you can specify the **appletalk zone** command only after an **appletalk address** or **appletalk cable-range** command. You can issue it multiple times if it follows the **appletalk cable-range** command.

On interfaces that have discovery mode disabled, you must assign a zone name in order for AppleTalk routing to begin.

If an interface is using extended AppleTalk, the first zone specified in the list is the default zone. The Cisco IOS software always uses the default zone when registering NBP names for interfaces. Nodes in the network will select the zone in which they will operate from the list of zone names valid on the cable to which they are connected.

If an interface is using nonextended AppleTalk, repeated execution of the **appletalk zone** command will replace the interface's zone name with the newly specified zone name.

The **no** form of the command deletes a zone name from a zone list or deletes the entire zone list if you do not specify a zone name. For nonextended AppleTalk interfaces, the zone name argument is ignored. You should delete any existing zone-name list using the **no appletalk zone** interface subcommand before configuring a new zone list.

The zone list is cleared automatically when you issue an **appletalk address** or **appletalk cable-range** command. The list also is cleared if you issue the **appletalk zone** command on an *existing* network; this can occur when adding zones to a set of routers until all routers are in agreement.

Examples The following example assigns the zone name Twilight to an interface:

```
interface Ethernet 0
  appletalk cable-range 10-20
  appletalk zone Twilight
```

The following example uses AppleTalk special characters to set the zone name to *Cisco:A5Zone*:

```
appletalk zone Cisco:A5Zone
```

Related Commands

Command	Description
appletalk address	Enables nonextended AppleTalk routing on an interface.
appletalk cable-range	Enables an extended AppleTalk network.
show appletalk zone	Displays all entries or specified entries in the zone information table.

clear appletalk arp

To delete all entries or a specified entry from the AppleTalk Address Resolution Protocol (AARP) table, use the **clear appletalk arp** command in EXEC mode.

```
clear appletalk arp [network.node]
```

Syntax Description	<i>network.node</i>	(Optional) AppleTalk network address to be deleted from the AARP table. The argument <i>network</i> is the 16-bit network number in the range 0 to 65,279. The argument <i>node</i> is the 8-bit node number in the range 0 to 254. Both numbers are decimal.
---------------------------	---------------------	---

Command Modes	EXEC
----------------------	------

Command History	Release	Modification
	10.0	This command was introduced.

Examples The following example deletes all entries from the AARP table:

```
clear appletalk arp
```

Related Commands	Command	Description
	show appletalk arp	Displays the entries in the ARP cache.

clear appletalk neighbor

To delete all entries or a specified entry from the neighbor table, use the **clear appletalk neighbor** command in EXEC mode.

```
clear appletalk neighbor [neighbor-address]
```

Syntax Description	<i>neighbor-address</i>	(Optional) Network address of the neighboring router to be deleted from the neighbor table. The address is in the format <i>network.node</i> . The argument <i>network</i> is the 16-bit network number in the range 1 to 65,279. The argument <i>node</i> is the 8-bit node number in the range 0 to 254. Both numbers are decimal.
---------------------------	-------------------------	--

Command Modes	EXEC
----------------------	------

Command History	Release	Modification
	10.0	This command was introduced.

Usage Guidelines You cannot clear the entry for an active neighbor, that is, for a neighbor that still has RTMP connectivity.

Examples The following example deletes the neighboring router 1.129 from the neighbor table:

```
clear appletalk neighbor 1.129
```

Related Commands	Command	Description
	show appletalk neighbors	Displays information about the AppleTalk routers that are directly connected to any of the networks to which this router is directly connected.

clear appletalk route

To delete entries from the routing table, use the **clear appletalk route** command in EXEC mode.

```
clear appletalk route [network]
```

Syntax Description	<i>network</i>	(Optional) Number of the network to which the route provides access.
---------------------------	----------------	--

Command Modes	EXEC
----------------------	------

Command History	Release	Modification
	10.0	This command was introduced.

Examples	The following example deletes the route to network 1:
-----------------	---

```
clear appletalk route 1
```

Related Commands	Command	Description
	show appletalk route	Displays all entries or specified entries in the AppleTalk routing table.

clear appletalk traffic

To reset AppleTalk traffic counters, use the **clear appletalk traffic** command in EXEC mode.

clear appletalk traffic

Syntax Description This command has no arguments or keywords.

Command Modes EXEC

Command History	Release	Modification
	10.0	This command was introduced.

Examples The following is sample output after a **clear appletalk traffic** command was executed:

```
Router# clear appletalk traffic
Router# show appletalk traffic

AppleTalk statistics:
  Rcvd:  0 total, 0 checksum errors, 0 bad hop count
        0 local destination, 0 access denied
        0 for MacIP, 0 bad MacIP, 0 no client
        0 port disabled, 0 no listener
        0 ignored, 0 martians
  Bcast: 0 received, 0 sent
  Sent:  0 generated, 0 forwarded, 0 fast forwarded, 0 loopback
        0 forwarded from MacIP, 0 MacIP failures
        0 encapsulation failed, 0 no route, 0 no source
  DDP:   0 long, 0 short, 0 macip, 0 bad size
  NBP:   0 received, 0 invalid, 0 proxies
        0 replies sent, 0 forwards, 0 lookups, 0 failures
  RTMP:  0 received, 0 requests, 0 invalid, 0 ignored
        0 sent, 0 replies
  ATP:   0 received
  ZIP:   0 received, 0 sent, 0 netinfo
  Echo:  0 received, 0 discarded, 0 illegal
        0 generated, 0 replies sent
  Responder: 0 received, 0 illegal, 0 unknown
AppleTalk statistics:
  0 replies sent, 0 failures
  AARP:  0 requests, 0 replies, 0 probes
        0 martians, 0 bad encapsulation, 0 unknown
        0 sent, 0 failures, 0 delays, 0 drops
  Lost:  0 no buffers
  Unknown: 0 packets
  Discarded: 0 wrong encapsulation, 0 bad SNAP discriminator
```

For explanation of the fields shown in the preceding example, see the **show appletalk traffic** command later in this chapter.

Related Commands

Command	Description
show appletalk macip-traffic	Displays statistics about MacIP traffic through the router.
show appletalk traffic	Displays statistics about AppleTalk traffic.

show appletalk access-lists

To display the AppleTalk access lists currently defined, use the **show appletalk access-lists** command in EXEC mode.

show appletalk access-lists

Syntax Description This command has no arguments or keywords.

Command Modes User EXEC

Command History	Release	Modification
	10.0	This command was introduced.

Examples The following is sample output from the **show appletalk access-lists** command:

```
Router> show appletalk access-lists

AppleTalk access list 601:
  permit zone ZoneA
  permit zone ZoneB
  deny additional-zones
  permit network 55
  permit network 500
  permit cable-range 900-950
  deny includes 970-990
  permit within 991-995
  deny other-access
```

[Table 2](#) describes fields shown in the display.

Table 2 *show appletalk access-lists Field Descriptions*

Field	Description
AppleTalk access list 601:	Number of the AppleTalk access lists.
permit zone deny zone	Indicates whether access to an AppleTalk zone has been explicitly permitted or denied with the access-list zone command.
permit additional-zones deny additional-zones	Indicates whether additional zones have been permitted or denied with the access-list additional-zones command.
permit network deny network	Indicates whether access to an AppleTalk network has been explicitly permitted or denied with the access-list network command.
permit cable-range deny cable-range	Indicates the cable ranges to which access has been permitted or denied with the access-list cable-range command.

Table 2 *show appletalk access-lists Field Descriptions (continued)*

Field	Description
permit includes deny includes	Indicates the cable ranges to which access has been permitted or denied with the access-list includes command.
permit within deny within	Indicates the additional cable ranges to which access has been permitted or denied with the access-list within command.
permit other-access deny other-access	Indicates whether additional networks or cable ranges have been permitted or denied with the access-list other-access command.

Related Commands

Command	Description
access-list additional-zones	Defines the default action to take for access checks that apply to zones.
access-list cable-range	Defines an AppleTalk access list for a cable range (for extended networks only).
access-list includes	Defines an AppleTalk access list that overlaps any part of a range of network numbers or cable ranges (for both extended and nonextended networks).
access-list nbp	Defines an AppleTalk access list entry for a particular NBP named entity, class of NBP named entities, NBP packet type, or NBP named entities belonging to a specific zone.
access-list network	Defines an AppleTalk access list for a single network number (that is, for a nonextended network).
access-list other-access	Defines the default action to take for subsequent access checks that apply to networks or cable ranges.
access-list other-nbps	Defines the default action to take for access checks that apply to NBP packets from named entities not otherwise explicitly denied or permitted.
access-list within	Defines an AppleTalk access list for an extended or a nonextended network whose network number or cable range is included entirely within the specified cable range.
access-list zone	Defines an AppleTalk access list that applies to a zone.
appletalk access-group	Assigns an access list to an interface.
appletalk distribute-list in	Filters routing updates received from other routers over a specified interface.
appletalk distribute-list out	Filters routing updates sent to other routers.
appletalk getzonelist-filter	Filters GZL replies.

show appletalk adjacent-routes

To display routes to networks that are directly connected or that are one hop away, use the **show appletalk adjacent-routes** command in privileged EXEC mode.

```
show appletalk adjacent-routes
```

Syntax Description This command has no arguments or keywords.

Command Modes Privileged EXEC

Command History

Release	Modification
10.0	This command was introduced.
12.2(13)T	The E - EIGRP field was removed from command output.

Usage Guidelines

The **show appletalk adjacent-routes** command provides a quick overview of the local environment that is especially useful when an AppleTalk internetwork consists of a large number of networks (typically, more than 600 networks).

You can use information provided by this command to determine if any local routes are missing or are misconfigured.

Examples

The following is sample output from the **show appletalk adjacent-routes** command:

```
Router# show appletalk adjacent-routes

Codes: R - RTMP derived, C - connected, S - static, P - proxy, 67 routes in internet

R Net 29-29 [1/G] via gatekeeper, 0 sec, Ethernet0, zone Engineering
C Net 2501-2501 directly connected, Ethernet1, no zone set
C Net 4160-4160 directly connected, Ethernet0, zone Low End SW Lab
C Net 4172-4172 directly connected, TokenRing0, zone Low End SW Lab
R Net 6160 [1/G] via urk, 0 sec, TokenRing0, zone Low End SW Lab
```

[Table 3](#) describes the fields shown in the display.

Table 3 *show appletalk adjacent-routes* Field Descriptions

Field	Description
Codes:	Codes defining source of route.
R - RTMP derived	Route derived from an RTMP update.
C - Connected	Directly connected network RTMP update.
S - Static	Static route.
P - Proxy	Proxy route.
67 routes in internet	Total number of known routes in the AppleTalk network.

Table 3 *show appletalk adjacent-routes Field Descriptions (continued)*

Field	Description
Net 29-29	Cable range or network to which the route goes.
[1/G]	Hop count, followed by the state of the route. Possible values for state include the following: <ul style="list-style-type: none"> • G—Good (update has been received within the last 10 seconds) • S—Suspect (update has been received more than 10 seconds ago but less than 20 seconds ago) • B—Bad (update was received more than 20 seconds ago)
via	NBP registered name or address of the router that sent the routing information.
0 sec	Time, in seconds, since information about this network cable range was last received.
directly connected	Indicates that the network or cable range is directly connected to the router.
Ethernet0	Possible interface through which updates to this NBP registered name or address will be sent.
zone	Zone name assigned to the network or cable range sending this update.

show appletalk arp

To display the entries in the Address Resolution Protocol (ARP) cache, use the **show appletalk arp** command in privileged EXEC mode.

show appletalk arp

Syntax Description This command has no arguments or keywords.

Command Modes Privileged EXEC

Command History	Release	Modification
	10.0	This command was introduced.

Usage Guidelines ARP establishes associates between network addresses and hardware (MAC) addresses. This information is maintained in the ARP cache.

Examples The following is sample output from the **show appletalk arp** command:

```
Router# show appletalk arp
```

Address	Age (min)	Type	Hardware Addr	Encap	Interface
2000.1	-	Hardware	0000.0c04.1111	SNAP	Ethernet1
2000.2	0	Dynamic	0000.0c04.2222	SNAP	Ethernet1
2000.3	0	Dynamic	0000.0c04.3333	SNAP	Ethernet3
2000.4	-	Hardware	0000.0c04.4444	SNAP	Ethernet3

[Table 4](#) describes the fields shown in the display.

Table 4 *show appletalk arp Field Descriptions*

Field	Description
Address	AppleTalk network address of the interface.
Age (min)	Time, in minutes, that this entry has been in the ARP table. Entries are purged after they have been in the table for 240 minutes (4 hours). A hyphen indicates that this is a new entry.

Table 4 *show appletalk arp Field Descriptions (continued)*

Field	Description
Type	<p>Indicates how the ARP table entry was learned. It can be one of the following:</p> <ul style="list-style-type: none"> • Dynamic—Entry was learned via AARP. • Hardware—Entry was learned from an adapter in the router. • Pending—Entry for a destination for which the router does not yet know the address. When a packet requests to be sent to an address for which the router does not yet have the MAC-level address, the Cisco IOS software creates an AARP entry for that AppleTalk address, then sends an AARP Resolve packet to get the MAC-level address for that node. When the software gets the response, the entry is marked “Dynamic.” A pending AARP entry times out after 1 minute.
Hardware Addr	MAC address of this interface.
Encap	<p>Encapsulation type. It can be one of the following:</p> <ul style="list-style-type: none"> • ARPA—Ethernet-type encapsulation • Subnetwork Access Protocol (SNAP)—IEEE 802.3 encapsulation
Interface	Type and number of the interface.

show appletalk aarp events

To display the pending events in the AppleTalk Update-Based Routing Protocol (AURP) update-events queue, use the **show appletalk aarp events** command in privileged EXEC mode.

show appletalk aarp events

Syntax Description This command has no arguments or keywords.

Command Modes Privileged EXEC

Command History	Release	Modification
	10.3	This command was introduced.

Examples The following is sample output from the **show appletalk aarp events** command:

```
Router# show appletalk aarp events
```

```
100-100, NDC EVENT pending
17043-17043, ND EVENT pending
```

[Table 5](#) explains the fields shown in the display.

Table 5 *show appletalk aarp events Field Descriptions*

Field	Description
100-100	Network number or cable range.
NCD EVENT pending	Type of update event that is pending.

show appletalk aurp topology

To display entries in the AppleTalk Update-Based Routing Protocol (AURP) private path database, which consists of all paths learned from exterior routers, use the **show appletalk aurp topology** command in privileged EXEC mode.

show appletalk aurp topology

Syntax Description This command has no arguments or keywords.

Command Modes Privileged EXEC

Command History	Release	Modification
	10.3	This command was introduced.

Examples The following is sample output from the **show appletalk aurp topology** command:

```
Router# show appletalk aurp topology

30
      via Tunnel0, 3 hops
80
      via Tunnel0, 3 hops
101-101
      via Tunnel0, 8 hops
102-102
      via Tunnel0, 8 hops
103-103
      via Tunnel0, 8 hops
104-104
      via Tunnel0, 8 hops
105-105
      via Tunnel0, 8 hops
108-108
      via Tunnel0, 8 hops
109-109
      via Tunnel0, 9 hops
120-120
      via Tunnel0, 10 hops
125-125
      via Tunnel0, 8 hops
169-169
      via Tunnel0, 7 hops
201-205
      via Tunnel0, 4 hops
```

Table 6 describes the fields shown in the display.

Table 6 *show appletalk aarp topology Field Descriptions*

Field	Description
30	AppleTalk network number or cable range.
via Tunnel0	Interface used to reach the network.
3 hops	Number of hops to the network.

show appletalk cache

To display the routes in the AppleTalk fast-switching table on an extended AppleTalk network, use the **show appletalk cache** command in EXEC mode.

show appletalk cache

Syntax Description This command has no arguments or keywords.

Command Modes EXEC

Command History	Release	Modification
	10.0	This command was introduced.

Usage Guidelines The **show appletalk cache** command displays information for all fast-switching route cache entries, regardless of whether they are valid.

Route entries are removed from the fast-switching cache if one of the following occurs:

- A route that was used has been deleted but has not yet been marked bad.
- A route that was used has gone bad.
- A route that was used has been replaced with a new route with a better metric.
- The state of route to a neighbor has changed from suspect to bad.
- The hardware address corresponding to a node address in the AARP cache has changed.
- The node address corresponding to a hardware address has changed.
- The ARP cache has been flushed.
- An ARP cache entry has been deleted.
- You have entered the **no appletalk routing** command, the **appletalk route-cache** command, or an **access-list** command.
- The encapsulation on the line has changed.
- An interface has become operational or nonoperational.

Examples The following is sample output from the **show appletalk cache** command:

```
Router> show appletalk cache

AppleTalk Routing Cache, * = active entry, cache version is 227
Destination      Interface      MAC Header
*      29.0      Ethernet0      00000C00008200000C00D8DD
*      1544.000  Ethernet1      AA000400013400000C00E8C809B84BE02
*      33.000    Ethernet1      AA000400013400000C00E8C809B84BE02
```

The following is sample output from the **show appletalk cache** command when AppleTalk load balanced is enabled. The output displayed shows additional MAC headers for parallel paths (for example, 6099.52):

```
Router> show appletalk cache

Appletalk Routing cache, * = active entry, cache version is 11021
Destination      Interface      MAC Header
*      82.36      Ethernet1/4    00000CF366A600000C12C52D
      17043.208   Ethernet1/5    00000C367B4000000C12C52E
*      60099.52     Ethernet1/5    00000C367B4000000C12C52E
                        Ethernet1/2    00000C367B3D00000C12C52B
                        Ethernet1/3    00000C367B3E00000C12C52C
```

Table 7 describes the fields shown in the display.

Table 7 show appletalk cache Field Descriptions

Field	Description
*	Indicates the entry is valid.
cache version is	Version number of the AppleTalk fast-switching cache.
Destination	Destination network for this packet.
Interface	Router interface through which this packet is transmitted.
MAC Header	First bytes of this packet's MAC header.

Related Commands

Command	Description
appletalk maximum-paths	Defines the maximum number of equal-cost paths the router should use when balancing the traffic load.
appletalk route-cache	Enables fast switching on all supported interfaces.

show appletalk domain

To display all domain-related information, use the **show appletalk domain** command in EXEC mode.

show appletalk domain [*domain-number*]

Syntax Description	<i>domain-number</i>	(Optional) Number of an AppleTalk domain about which to display information. It can be a decimal integer from 1 to 1,000,000.
---------------------------	----------------------	---

Command Modes	EXEC
----------------------	------

Command History	Release	Modification
	10.3	This command was introduced.

Usage Guidelines If you omit the argument *domain-number*, the **show appletalk domain** command displays information about all domains.

Examples

The following is sample output from the **show appletalk domain** command:

```
Router# show appletalk domain

AppleTalk Domain Information:

Domain 1      Name : Xerxes
-----
State          : Active
Inbound remap range : 100-199
Outbound remap range : 200-299
Hop reduction   : OFF
Interfaces in domain :
    Ethernet1   : Enabled

Domain 2      Name : Desdemona
-----
State          : Active
Inbound remap range : 300-399
Outbound remap range : 400-499
Hop reduction   : OFF
Interfaces in domain :
    Ethernet3   : Enabled
```

The following is sample output from the **show appletalk domain** command when you specify a domain number:

```
Router# show appletalk domain 1

AppleTalk Domain Information:

Domain 1      Name : Xerxes
-----
```

```

State                : Active
Inbound remap range  : 100-199
Outbound remap range : 200-299
Hop reduction        : OFF
Interfaces in domain :
    Ethernet1        : Enabled

```

Table 8 describes the fields shown in the displays.

Table 8 *show appletalk domain Field Descriptions*

Field	Description
Domain	Number of the domain as specified with the appletalk domain name global configuration command.
Name	Name of the domain as specified with the appletalk domain name global configuration command.
State	Status of the domain. It can be either Active or Nonactive.
Inbound remap range	Inbound mapping range as specified with the appletalk domain remap-range in global configuration command.
Outbound remap range	Outbound mapping range as specified with the appletalk domain remap-range out global configuration command.
Hop reduction	Indicates whether hop reduction has been enabled with the appletalk domain hop-reduction global configuration command. It can be either OFF or ON.
Interfaces in domain	Indicates which interfaces are in the domain as specified with the appletalk domain-group interface configuration command and whether they are enabled.

Related Commands

Command	Description
appletalk domain-group	Assigns a predefined domain number to an interface.
appletalk domain hop-reduction	Reduces the hop-count value in packets traveling between segments of a domain.
appletalk domain name	Creates a domain and assigns it a name and number.
appletalk domain remap-range	Remaps ranges of AppleTalk network numbers or cable ranges between two segments of a domain.

show appletalk globals

To display information and settings about the AppleTalk internetwork and other parameters, use the **show appletalk globals** command in EXEC mode.

show appletalk globals

Syntax Description This command has no arguments or keywords.

Command Modes EXEC

Command History	Release	Modification
	10.0	This command was introduced.

Examples The following is sample output from the **show appletalk globals** command:

```
Router# show appletalk globals

AppleTalk global information:
  The router is a domain router.
  Internet is compatible with older, AT Phase1, routers.
  There are 67 routes in the internet.
  There are 25 zones defined.
  All significant events will be logged.
  ZIP resends queries every 10 seconds.
  RTMP updates are sent every 10 seconds with a jitter.
  RTMP entries are considered BAD after 20 seconds.
  RTMP entries are discarded after 60 seconds.
  AARP probe retransmit count: 10, interval: 200.
  AARP request retransmit count: 5, interval: 1000.
  DDP datagrams will be checksummed.
  RTMP datagrams will be strictly checked.
  RTMP routes may not be propagated without zones.
  Alternate node address format will not be displayed.
```

[Table 9](#) describes the fields shown in the display.

Table 9 *show appletalk globals* Field Descriptions

Field	Description
AppleTalk global information:	Heading for the command output.
The router is a domain router.	Indicates whether this router is a domain router.
Internet is compatible with older, AT Phase1, routers.	Indicates whether the AppleTalk internetwork meets the criteria for interoperation with Phase 1 routers.
There are 67 routes in the internet.	Total number of routes in the AppleTalk internetwork from which this router has heard in routing updates.
There are 25 zones defined.	Total number of valid zones in the current AppleTalk internetwork configuration.

Table 9 *show appletalk globals Field Descriptions (continued)*

Field	Description
All significant events will be logged.	Indicates whether the router has been configured with the appletalk event-logging command.
ZIP resends queries every 10 seconds.	Interval, in seconds, at which zone name queries are retried.
RTMP updates are sent every 10 seconds.	Interval, in seconds, at which the Cisco IOS software sends routing updates.
RTMP entries are considered BAD after 20 seconds.	Time after which routes for which the software has not received an update will be marked as candidates for being deleted from the routing table.
RTMP entries are discarded after 60 seconds.	Time after which routes for which the software has not received an update will be deleted from the routing table.
AARP probe retransmit count: 10, interval: 200.	Number of AARP probe retransmissions that will be done before abandoning address negotiations and instead using the selected AppleTalk address, followed by the time, in milliseconds, between retransmission of ARP probe packets. You set these values with the appletalk arp retransmit-count and appletalk arp interval commands, respectively.
AARP request retransmit count: 5, interval: 1000.	Number of AARP request retransmissions that will be done before abandoning address negotiations and using the selected AppleTalk address, followed by the time, in milliseconds, between retransmission of ARP request packets. You set these values with the appletalk arp retransmit-count and appletalk arp interval commands, respectively.
DDP datagrams will be checksummed.	Indicates whether the appletalk checksum configuration command is enabled. When enabled, the software discards DDP packets when the checksum is incorrect and when the router is the final destination for the packet.
RTMP datagrams will be strictly checked.	Indicates whether the appletalk strict-rtmp-checking configuration command is enabled. When enabled, RTMP packets arriving from routers that are not directly connected to the router performing the check are discarded.
RTMP routes may not be propagated without zones.	Indicates whether the appletalk require-route-zones configuration command is enabled. When enabled, the Cisco IOS software does not advertise a route to its neighboring routers until it has obtained a network/zone association for that route.
Alternate node address format will not be displayed.	Indicates whether AppleTalk addresses will be printed in numeric or name form. You configure this with the appletalk lookup-type and appletalk name-lookup-interval commands.

Related Commands

Command	Description
appletalk arp interval	Specifies the time interval between retransmissions of ARP packets.
appletalk arp retransmit-count	Specifies the number of ARP probe or request transmissions.
appletalk checksum	Enables the generation and verification of checksums for all AppleTalk packets (except routed packets).
appletalk event-logging	Logs significant network events.
appletalk lookup-type	Specifies which NBP service types are retained in the name cache.
appletalk name-lookup-interval	Sets the interval between service pollings by the router on its AppleTalk interfaces.
appletalk require-route-zones	Prevents the advertisement of routes (network numbers or cable ranges) that have no assigned zone.
appletalk strict-rtmp-checking	Performs maximum checking of routing updates to ensure their validity.

show appletalk interface

To display the status of the AppleTalk interfaces configured in the Cisco IOS software and the parameters configured on each interface, use the **show appletalk interface** command in privileged EXEC mode.

```
show appletalk interface [brief] [type number]
```

Syntax Description	Field	Description
	brief	(Optional) Displays a brief summary of the status of the AppleTalk interfaces.
	<i>type</i>	(Optional) Interface type. It can be one of the following types: asynchronous, dialer, Ethernet (IEEE 802.3), Token Ring (IEEE 802.5), FDDI, High-Speed Serial Interface (HSSI), Virtual Interface, ISDN Basic Rate Interface (BRI), ATM interface, loopback, null, or serial.
	<i>number</i>	(Optional) Interface number.

Command Modes Privileged EXEC

Command History	Release	Modification
	10.0	This command was introduced.

Usage Guidelines The **show appletalk interface** is particularly useful when you first enable AppleTalk on a router interface.

Examples The following is sample output from the **show appletalk interface** command for an extended AppleTalk network:

```
Router# show appletalk interface fddi 0

Fddi0 is up, line protocol is up
  AppleTalk cable range is 4199-4199
  AppleTalk address is 4199.82, Valid
  AppleTalk zone is "Low End SW Lab"
  AppleTalk address gleaning is disabled
  AppleTalk route cache is enabled
  Interface will not perform pre-FDDITalk compatibility
```

[Table 10](#) describes the fields shown in the display as well as some fields not shown but that also may be displayed. Note that this command can show a node name in addition to the address, depending on how the software has been configured with the **appletalk lookup-type** and **appletalk name-lookup-interval** commands.

Table 10 show appletalk interface Field Descriptions—Extended Network

Field	Description
FDDI is ...	Type of interface and whether it is currently active and inserted into the network (up) or inactive and not inserted (down).
line protocol	Indicates whether the software processes that handle the line protocol believe the interface is usable (that is, whether <i>keepalives</i> are successful).
AppleTalk node	Indicates whether the node is up or down in the network.
AppleTalk cable range	Cable range of the interface.
AppleTalk address is ..., Valid	Address of the interface, and whether the address conflicts with any other address on the network (“Valid” means it does not).
AppleTalk zone	Name of the zone that this interface is in.
AppleTalk port configuration verified ...	When our access server implementation comes up on an interface, if there are other routers detected and the interface we are bringing up is not in discovery mode, our access server “confirms” our configuration with the routers that are already on the cable. The address printed in this field is that of the router with which the local router has verified that the interface configuration matches that on the running network.
AppleTalk discarded...packets due to input errors	Number of packets the interface discarded because of input errors. These errors are usually incorrect encapsulations (that is, the packet has a malformed header format).
AppleTalk address gleaning	Indicates whether the interface is automatically deriving ARP table entries from incoming packets (referred to as <i>gleaning</i>).
AppleTalk route cache	Indicates whether fast switching is enabled on the interface.
Interface will ...	Indicates that the AppleTalk interface will check to see if AppleTalk packets sent on the FDDI ring from routers running Cisco software releases prior to Release 9.0(3) or 9.1(2) are recognized.
AppleTalk domain	AppleTalk domain of which this interface is a member.

The following is sample output from the **show appletalk interface** command for a nonextended AppleTalk network:

```
Router# show appletalk interface ethernet 1

Ethernet 1 is up, line protocol is up
  AppleTalk address is 666.128, Valid
  AppleTalk zone is Underworld
  AppleTalk routing protocols enabled are RTMP
  AppleTalk address gleaning is enabled
  AppleTalk route cache is not initialized
```

Table 11 describes the fields shown in the display.

Table 11 show appletalk interface Field Descriptions—Nonextended Network

Field	Description
Ethernet 1	Type of interface and whether it is currently active and inserted into the network (up) or inactive and not inserted (down).
line protocol	Indicates whether the software processes that handle the line protocol believe the interface is usable (that is, whether <i>keepalives</i> are successful).
AppleTalk address is ..., Valid	Address of the interface, and whether the address conflicts with any other address on the network (“Valid” means it does not).
AppleTalk zone	Name of the zone that this interface is in.
AppleTalk routing protocols enabled	AppleTalk routing protocols that are enabled on the interface.
AppleTalk address gleaning	Indicates whether the interface is automatically deriving ARP table entries from incoming packets (referred to as <i>gleaning</i>).
AppleTalk route cache	Indicates whether fast switching is enabled on the interface.

The following is sample output from the **show appletalk interface brief** command:

```
Router# show appletalk interface brief

Interface  Address      Config      Status/Line Protocol  Atalk Protocol
TokenRing0 108.36      Extended   up                   down
TokenRing1 unassigned  not config'd administratively down  n/a
Ethernet0   10.82       Extended   up                   up
Serial0     unassigned  not config'd administratively down  n/a
Ethernet1   30.83       Extended   up                   up
Serial1     unassigned  not config'd administratively down  n/a
Serial2     unassigned  not config'd administratively down  n/a
Serial3     unassigned  not config'd administratively down  n/a
Serial4     unassigned  not config'd administratively down  n/a
Serial5     unassigned  not config'd administratively down  n/a
Fddi0      50001.82    Extended   administratively down  down
Ethernet2   unassigned  not config'd up                   n/a
Ethernet3   9993.137    Extended   up                   up
Ethernet4   40.82       Non-Extended up                   up
Ethernet5   unassigned  not config'd administratively down  n/a
Ethernet6   unassigned  not config'd administratively down  n/a
Ethernet7   unassigned  not config'd administratively down  n/a
```

Table 12 describes the fields shown in the display.

Table 12 show appletalk interface brief Field Descriptions

Field	Description
Interface	Interface type and number.
Address	Address assigned to the interface.
Config	How the interface is configured. Possible values are extended, nonextended, and not configured.

Table 12 show appletalk interface brief Field Descriptions (continued)

Field	Description
Status/Line Protocol	Whether the software processes that handle the line protocol believe the interface is usable (that is, whether <i>keepalives</i> are successful).
Atalk Protocol	Whether AppleTalk routing is up and running on the interface.

The following sample output displays the **show appletalk interface** command when AppleTalk RTMP stub mode is enabled. The last line of the output notes that this mode is turned on.

```
Router# show appletalk interface ethernet 2

Ethernet2 is up, line protocol is up
  AppleTalk cable range is 30-30
  AppleTalk address is 30.1, Valid
  AppleTalk zone is "Zone30-30"
  AppleTalk address gleaning is disabled
  AppleTalk route cache is enabled
  AppleTalk RTMP stub mode is enabled
```

Related Commands

Command	Description
appletalk access-group	Assigns an access list to an interface.
appletalk address	Enables nonextended AppleTalk routing on an interface.
appletalk cable-range	Enables an extended AppleTalk network.
appletalk client-mode	Allows users to access an AppleTalk zone when dialing into an asynchronous line (on Cisco routers, only via the auxiliary port).
appletalk discovery	Places an interface into discovery mode.
appletalk distribute-list in	Filters routing updates received from other routers over a specified interface.
appletalk distribute-list out	Filters routing updates sent to other routers.
appletalk free-trade-zone	Establishes a free-trade zone.
appletalk getzonelist-filter	Filters GZL replies.
appletalk glean-packets	Derives ARP table entries from incoming packets.
appletalk pre-fdditalk	Enables the recognition of pre-FDDI Talk packets.
appletalk protocol	Specifies the routing protocol to use on an interface.
appletalk route-cache	Enables fast switching on all supported interfaces.
appletalk rtmp-stub	Enables AppleTalk RTMP stub mode.
appletalk send-rtmps	Allows the Cisco IOS software to send routing updates to its neighbors.
appletalk zip-reply-filter	Configures a ZIP reply filter.
appletalk zone	Sets the zone name for the connected AppleTalk network.

show appletalk macip-clients

To display status information about all known MacIP clients, use the **show appletalk macip-clients** command in EXEC mode.

show appletalk macip-clients

Syntax Description This command has no arguments or keywords.

Command Modes EXEC

Command History	Release	Modification
	10.0	This command was introduced.

Examples The following is sample output from the **show appletalk macip-clients** command:

```
Router# show appletalk macip-clients

172.31.199.1@[2700ln,69a,72s] 45 secs    'S/W Test Lab'
```

[Table 13](#) describes the fields shown in the display.

Table 13 *show appletalk macip-clients Field Descriptions*

Field	Description
172.31.199.1@	Client IP address.
[2700ln,69a,72s]	DDP address of the registered entity, showing the network number, node address, and socket number.
45 secs	Time (in seconds) since the last NBP confirmation was received.
'S/W Test Lab'	Name of the zone to which the MacIP client is attached.

Related Commands	Command	Description
	show appletalk traffic	Displays statistics about AppleTalk traffic.

show appletalk macip-servers

To display status information about related servers, use the **show appletalk macip-servers** command in EXEC mode.

show appletalk macip-servers

Syntax Description This command has no arguments or keywords.

Command Modes EXEC

Command History	Release	Modification
	10.0	This command was introduced.

Usage Guidelines The information in the **show appletalk macip-servers** display can help you quickly determine the status of your MacIP configuration. In particular, the STATE field can help identify problems in your AppleTalk environment.

Examples The following is sample output from the **show appletalk macip-servers** command:

```
Router# show appletalk macip-servers

MACIP SERVER 1, IP 172.18.199.221, ZONE 'S/W Test Lab' STATE is server_up
Resource #1 DYNAMIC 172.18.199.1-172.18.199.10, 1/10 IP in use
Resource #2 STATIC 172.18.199.11-172.18.199.20, 0/10 IP in use
```

[Table 14](#) describes the fields shown in the display.

Table 14 *show appletalk macip-servers Field Descriptions*

Field	Description
MACIP SERVER 1	Number of the MacIP server. This number is assigned arbitrarily.
IP 172.18.199.221	IP address of the MacIP server.
ZONE 'S/W Test Lab'	AppleTalk server zone specified with the appletalk macip server command.

Table 14 show appletalk macip-servers Field Descriptions (continued)

Field	Description
STATE is server_up	State of the server. Table 16 lists the possible states. If the server remains in the “resource_wait” state, check that resources have been assigned to this server with either the appletalk macip dynamic or the appletalk macip static command.
Resource #1 DYNAMIC 172.18.199.1-172.18.199.10, 1/10 IP in use	Resource specifications defined in the appletalk macip dynamic and appletalk macip static commands. This list indicates whether the resource address was assigned dynamically or statically, identifies the IP address range associated with the resource specification, and indicates the number of active MacIP clients.

Use the **show appletalk macip-servers** command with **show appletalk interface** to identify AppleTalk network problems, as follows:

-
- Step 1** Determine the state of the MacIP server using **show appletalk macip-servers**. If the STATE field continues to indicate an anomalous status (something other than “server_up,” such as “resource_wait” or “zone_wait”), there is a problem.
- Step 2** Determine the status of AppleTalk routing and the specific interface using the **show appletalk interface** command.
- Step 3** If the protocol and interface are up, check the MacIP configuration commands for inconsistencies in the IP address and zone.
-

The STATE field of the **show appletalk macip-servers** command indicates the current state of each configured MacIP server. Each server operates according to the finite-state machine table described in [Table 15](#). [Table 16](#) describes the state functions listed in [Table 15](#). These are the states that are displayed by the **show appletalk macip-servers** command.

Table 15 MacIP Finite-State Machine Table

State	Event	New State	Notes
initial	ADD_SERVER	resource_wait	Server configured
resource_wait	TIMEOUT	resource_wait	Wait for resources
resource_wait	ADD_RESOURCE	zone_wait	Wait for zone seeding
zone_wait	ZONE_SEEDED	server_start	Register server
zone_wait	TIMEOUT	zone_wait	Wait until seeded
server_start	START_OK	reg_wait	Wait for server register
server_start	START_FAIL	del_server	Could not start (possible configuration error)
reg_wait	REG_OK	server_up	Registration successful

Table 15 *MacIP Finite-State Machine Table (continued)*

State	Event	New State	Notes
reg_wait	REG_FAIL	del_server	Registration failed (possible duplicate IP address)
reg_wait	TIMEOUT	reg_wait	Wait until register
server_up	TIMEOUT	send_confirms	NBP confirm all clients
send_confirms	CONFIRM_OK	server_up	
send_confirms	ZONE_DOWN	zone_wait	Zone or IP interface down; restart
*	ADD_RESOURCE	*	Ignore, except resource_wait
*	DEL_SERVER	del_server	“No server” statement (HALT)
*	DEL_RESOURCE	ck_resource	Ignore
ck_resource	YES_RESOURCES	*	Return to previous state
ck_resource	NO_RESOURCES	resource_wait	Shut down and wait for resources

Table 16 *Server States*

State	Description
ck_resource	The server verifies that at least one client range is available. If not, it deregisters NBP names and returns to the resource_wait state.
del_server	State at which all servers end. In this state, the server deregisters all NBP names, purges all clients, and deallocates server resources.
initial	The state at which all servers start.
resource-wait	The server waits until a client range for the server has been configured.
send_confirms	The server tickles active clients every minute, deletes clients that have not responded within the last 5 minutes, and checks IP and AppleTalk interfaces used by MacIP server. If the interfaces are down or have been reconfigured, the server restarts.
server_start	The server registers configured IPADDRESS and registers as IPGATEWAY. It then opens an ATP socket to listen for IP address assignment requests, sends NBP lookup requests for existing IPADDRESSES, and automatically adds clients with addresses within one of the configured client ranges.
server_up	The server has registered. Being in this state enables routing to client ranges. The server now responds to IP address assignment requests.

Table 16 Server States (continued)

State	Description
zone_wait	The server waits until the configured AppleTalk zone name for the server is up. The server will remain in this state if no such zone has been configured or if AppleTalk routing is not enabled.
*	An asterisk in the first column represents any state. An asterisk in the second column represents a return to the previous state.

Related Commands

Command	Description
appletalk macip dynamic	Allocates IP addresses to dynamic MacIP clients.
appletalk macip server	Establishes a MacIP server for a zone.
appletalk macip static	Allocates an IP address to be used by a MacIP client that has reserved a static IP address.
show appletalk interface	Displays the status of the AppleTalk interfaces configured in the Cisco IOS software and the parameters configured on each interface.
show appletalk traffic	Displays statistics about AppleTalk traffic.

show appletalk macip-traffic

To display statistics about MacIP traffic through the router, use the **show appletalk macip-traffic** command in privileged EXEC mode.

show appletalk macip-traffic

Syntax Description This command has no arguments or keywords.

Command Modes Privileged EXEC

Command History	Release	Modification
	10.0	This command was introduced.

Usage Guidelines Use the **show appletalk macip-traffic** command to obtain a detailed breakdown of MacIP traffic that is sent through a router from an AppleTalk to an IP network. The output from this command differs from that of the **show appletalk traffic** command, which shows normal AppleTalk traffic generated, received, or routed by the router.

Examples The following is sample output from the **show appletalk macip-traffic** command:

```
Router# show appletalk macip-traffic

-- MACIP Statistics
      MACIP_DDP_IN:      11062
      MACIP_DDP_IP_OUT:  10984
MACIP_DDP_NO_CLIENT_SERVICE:  78
      MACIP_IP_IN:      7619
      MACIP_IP_DDP_OUT:  7619
      MACIP_SERVER_IN:   62
      MACIP_SERVER_OUT:  52
      MACIP_SERVER_BAD_ATP: 10
      MACIP_SERVER_ASSIGN_IN: 26
      MACIP_SERVER_ASSIGN_OUT: 26
      MACIP_SERVER_INFO_IN: 26
      MACIP_SERVER_INFO_OUT: 26
```

[Table 17](#) describes the fields shown in the display.

Table 17 show appletalk macip-traffic Field Descriptions

Field	Description
MACIP_DDP_IN	Number of DDP packets received.
MACIP_DDP_IP_OUT	Number of DDP packets received that were sent to the IP network.
MACIP_DDP_NO_CLIENT_SERVICE	Number of DDP packets received for which there is no client.

Table 17 show appletalk macip-traffic Field Descriptions (continued)

Field	Description
MACIP_IP_IN	Number of IP packets received.
MACIP_IP_DDP_OUT	Number of IP packets received that were sent to the AppleTalk network.
MACIP_SERVER_IN	Number of packets destined for MacIP servers.
MACIP_SERVER_OUT	Number of packets sent by MacIP servers.
MACIP_SERVER_BAD_ATP	Number of MacIP allocation requests received with a bad request.
MACIP_SERVER_ASSIGN_IN	Number of MacIP allocation requests received asking for an IP address.
MACIP_SERVER_ASSIGN_OUT	Number of IP addresses assigned.
MACIP_SERVER_INFO_IN	Number of MacIP packets received requesting server information.
MACIP_SERVER_INFO_OUT	Number of server information requests answered.

Related Commands

Command	Description
show appletalk traffic	Displays statistics about AppleTalk traffic.

show appletalk name-cache

To display a list of Name Binding Protocol (NBP) services offered by nearby routers and other devices that support NBP, use the **show appletalk name-cache** command in privileged EXEC mode.

show appletalk name-cache

Syntax Description This command has no arguments or keywords.

Command Modes Privileged EXEC

Command History	Release	Modification
	10.0	This command was introduced.

Usage Guidelines The **show appletalk name-cache** command displays the information currently in the NBP name cache. Support for names allows you to easily identify and determine the status of any associated device. This can be important in AppleTalk internetworks where node numbers are dynamically generated.

You can authorize the **show appletalk name-cache** command to display any AppleTalk services of interest in local zones. This contrasts with the **show appletalk nbp** command, which you use to display services registered by routers.

Examples The following is sample output from the **show appletalk name-cache** command:

```
Router# show appletalk name-cache

AppleTalk Name Cache:
Net    Adr  Skt  Name                               Type           Zone
4160   19   8    gatekeeper                         SNMP Agent     Underworld
4160   19   254  gatekeeper.Ether4                  ciscoRouter    Underworld
4160   86   8    bones                               SNMP Agent     Underworld
4160   86   72   131.108.160.78                     IPADDRESS      Underworld
4160   86   254  bones.Ethernet0                     IPGATEWAY      Underworld
```

[Table 18](#) describes the fields shown in the display.

Table 18 *show appletalk name-cache Field Descriptions*

Field	Description
Net	AppleTalk network number or cable range.
Adr	Node address.
Skt	DDP socket number.
Name	Name of the service.

Table 18 *show appletalk name-cache Field Descriptions (continued)*

Field	Description
Type	Device type. The possible types vary, depending on the service. The following are the Cisco server types: <ul style="list-style-type: none"> • ciscoRouter—Server is a Cisco router. • SNMP Agent—Server is an SNMP agent. • IPGATEWAY—Active MacIP server names. • IPADDRESS—Active MacIP server addresses.
Zone	Name of the AppleTalk zone to which this address belongs.

Related Commands

Command	Description
show appletalk nbp	Displays the contents of the NBP name registration table.

show appletalk nbp

To display the contents of the Name Binding Protocol (NBP) name registration table, use the **show appletalk nbp** command in EXEC mode.

```
show appletalk nbp
```

Syntax Description This command has no arguments or keywords.

Command Modes EXEC

Command History	Release	Modification
	10.0	This command was introduced.

Usage Guidelines The **show appletalk nbp** command lets you identify specific AppleTalk nodes. It displays services registered by the router. In contrast, use the **show appletalk name-cache** command to display any AppleTalk services of interest in local zones.

Routers with active AppleTalk interfaces register each interface separately. The Cisco IOS software generates a unique interface NBP name by appending the interface type name and unit number to the router name. For example, for the router named “router” that has AppleTalk enabled on Ethernet interface 0 in the zone Marketing, the NBP registered name is as follows:

```
router.Ethernet0:ciscoRouter@Marketing
```

Registering each interface on the router provides you with an indication that the device is configured and operating properly.

One name is registered for each interface. Other service types are registered once for each zone.

The Cisco IOS software deregisters the NBP name if AppleTalk is disabled on the interface for any reason.

Examples The following is sample output from the **show appletalk nbp** command:

```
Router# show appletalk nbp

Net  Adr  Skt  Name                               Type           Zone
4160 211 254  pag.Ethernet0                     ciscoRouter    Low End SW Lab
4160 211   8  pag                               SNMP Agent     Low End SW Lab
4172  84 254  pag.TokenRing0                    ciscoRouter    LES Tokenring
4172  84   8  pag                               SNMP Agent     LES Tokenring
200  75 254  myrouter. Ethernet1                ciscoRouter    Marketing *
```

Table 19 describes the fields shown in the display, as well as other fields that may also be displayed.

Table 19 *show appletalk nbp Field Descriptions*

Field	Description
Net	AppleTalk network number.
Adr	Node address.
Skt	DDP socket number.
Name	Name of the service.
Type	Device type. The possible types vary, depending on the service. The following are the Cisco server types: <ul style="list-style-type: none"> ciscoRouter—Cisco routers displayed by port. SNMP Agent—SNMP agents displayed by zone if AppleTalk SNMP-over-DDP is enabled. IPGATEWAY—Active MacIP server names. IPADDRESS—Active MacIP server addresses.
Zone	Name of the AppleTalk zone to which this address belongs.
*	An asterisk in the right margin indicates that the name registration is pending confirmation.

Related Commands

Command	Description
show appletalk name-cache	Displays a list of NBP services offered by nearby routers and other devices that support NBP.

show appletalk neighbors

To display information about the AppleTalk routers that are directly connected to any of the networks to which this router is directly connected, use the **show appletalk neighbors** command in EXEC mode.

```
show appletalk neighbors [neighbor-address]
```

Syntax Description	<i>neighbor-address</i> (Optional) Displays information about the specified neighbor router.
---------------------------	--

Command Modes	EXEC
----------------------	------

Command History	Release	Modification
	10.0	This command was introduced.

Usage Guidelines	<p>If no neighbor address is specified, this command displays information about all AppleTalk routers. The local router determines the AppleTalk network topology from its neighboring routers and learns from them most of the other information it needs to support the AppleTalk protocols.</p>
-------------------------	--

Examples The following is sample output from the **show appletalk neighbors** command:

```
Router# show appletalk neighbors

AppleTalk neighbors:
 17037.2   anger.Ethernet0/0   Ethernet0/0, uptime 8:33:27, 2 secs
           Neighbor is reachable as a RTMP peer
 17037.108 Ethernet0/0, uptime 8:33:21, 7 secs
           Neighbor is reachable as a RTMP peer
 17037.248 Ethernet0/0, uptime 8:33:30, 4 secs
           Neighbor is reachable as a RTMP peer
 17046.2   anger.Ethernet0/1   Ethernet0/1, uptime 8:33:27, 2 secs
           Neighbor is reachable as a RTMP peer
 17435.87  firewall.Ethernet0/0 Ethernet0/3, uptime 8:33:27, 6 secs
           Neighbor is reachable as a RTMP peer
 17435.186 the-wall.Ethernet0 Ethernet0/3, uptime 8:33:24, 5 secs
           Neighbor is reachable as a RTMP peer
 17435.233 teach-gw.Ethernet0 Ethernet0/3, uptime 8:33:24, 7 secs
           Neighbor is reachable as a RTMP peer
 17036.1   other-gw.Ethernet5 Ethernet0/5, uptime 8:33:29, 9 secs
           Neighbor is reachable as a RTMP peer
 4021.5    boojum.Hssi4/0     Hssi1/0, uptime 10:49:02, 0 secs
           Neighbor has restarted 1 time in 8:33:11.
           Neighbor is reachable as a static peer
```

[Table 20](#) describes the fields shown in this display. Depending on the configuration of the **appletalk lookup-type** and **appletalk name-lookup-interval** commands, a node name as well as a node address also may be shown in this display.

Table 20 show appletalk neighbors Field Descriptions

Field	Description
31.86	AppleTalk address of the neighbor router.
Ethernet0/0	Router interface through which the neighbor router can be reached.
uptime 133:28:06	Amount of time (in hours, minutes, and seconds) that the Cisco IOS software has received this neighboring router's routing updates.
2 secs	Time (in seconds) since the software last received an update from the neighbor router.
Neighbor is reachable as a RTMP peer Neighbor is reachable as a static peer	Indicates how the route to this neighbor was learned.
Neighbor is down. Neighbor has restarted 1 time	Indicates whether neighbor is up or down, and number of times it has restarted in the specified time interval, displayed in the format hours:minutes:seconds.

The following is sample output from the **show appletalk neighbors** command when you specify the AppleTalk address of a particular neighbor:

```
Router# show appletalk neighbors 69.163

Neighbor 69.163, Ethernet0, uptime 268:00:52, last update 7 secs ago
  We have sent queries for 299 nets via 214 packets.
  Last query was sent 4061 secs ago.
  We received 152 replies and 0 extended replies.
  We have received queries for 14304 nets in 4835 packets.
  We sent 157 replies and 28 extended replies.
  We received 0 ZIP notifies.
  We received 0 obsolete ZIP commands.
  We received 4 miscellaneous ZIP commands.
  We received 0 unrecognized ZIP commands.
  We have received 92943 routing updates.
  Of the 92943 valid updates, 1320 entries were invalid.
  We received 1 routing update which were very late.
  Last update had 0 extended and 2 nonextended routes.
  Last update detail: 2 old
```

Table 21 describes the fields shown in this display. Depending on the configuration of the **appletalk lookup-type** and **appletalk name-lookup-interval** commands, a node name as well as a node address can be shown in this display.

Table 21 show appletalk neighbors Field Descriptions—Specific Address

Field	Description
Neighbor 69.163	AppleTalk address of the neighbor.
Ethernet0	Interface through which the router receives this neighbor's routing updates.

Table 21 show appletalk neighbors Field Descriptions—Specific Address (continued)

Field	Description
uptime 268:00:52	Amount of time (in hours, minutes, and seconds) that the Cisco IOS software has received this neighboring router's routing updates.
last update 7 secs ago	Time (in seconds) since the software last received an update from the neighbor router.
sent queries	Number of queries sent to neighbor networks and the number of query packets sent.
Last query was sent	Time (in seconds) since last query was sent.
received replies	Number of RTMP replies heard from this neighbor.
extended replies	Number of extended RTMP replies received from this neighbor.
ZIP notifies	Number of ZIP notify packets received from this neighbor.
obsolete ZIP commands	Number of nonextended-only (obsolete) ZIP commands received from this neighbor.
miscellaneous ZIP commands	Number of ZIP commands (for example, GNI, GZI, and GMZ) from end systems rather than from routers.
unrecognized ZIP commands	Number of bogus ZIP packets received from this neighbor.
routing updates	Number of RMTP updates received from this neighbor.
entries were invalid	Of the routing update packets received from this neighbor, the number of invalid entries discarded.
Last update detail	Of the routing update packets received from this neighbor, the number already known about.

Related Commands

Command	Description
appletalk lookup-type	Specifies which NBP service types are retained in the name cache.
appletalk name-lookup-interval	Sets the interval between service pollings by the router on its AppleTalk interfaces.

show appletalk remap

To display domain remapping information, use the **show appletalk remap** EXEC command.

```
show appletalk remap [domain domain-number [{in | out} [{to | from} domain-network]]
```

Syntax Description		
domain <i>domain-number</i>	(Optional) Number of an AppleTalk domain about which to display remapping information. It can be a decimal integer from 1 through 1,000,000.	
in	(Optional) Displays remapping information about inbound packets, that is, on packets entering the local segment of the domain.	
out	(Optional) Displays remapping information about outbound packets, that is on packets exiting from the local segment of the domain.	
to	(Optional) Displays information about the network number or cable range to which an address has been remapped.	
from	(Optional) Displays information about the original network number or cable range.	
<i>domain-network</i>	(Optional) Number of an AppleTalk network.	

Command Modes EXEC

Command History	Release	Modification
	10.3	This command was introduced.

Usage Guidelines If you omit all options, keywords, and arguments, the **show appletalk remap** command displays all remapping information about all domains.

Examples The following is sample output from the **show appletalk remap** command:

```
Router# show appletalk remap

AppleTalk Remapping Table :
-----

Domain 1 : Domain 1 State : Active
-----

Direction : IN

Domain Net (Cable)      Remapped to      Status
3 - 3                  100 - 100       Good

Direction : OUT

Domain Net (Cable)      Remapped to      Status
1 - 1                  200 - 200       Good
```

```

Domain 2 : Domain 2   State : Active
-----

Direction : IN

Domain Net (Cable)    Remapped to      Status

Direction : OUT

Domain Net (Cable)    Remapped to      Status
2      - 2            400 - 400        Good
100    - 100          401 - 401        Good

```

The following is sample output from the **show appletalk remap** command when you specify a domain number:

```

Router# show appletalk remap domain 1

AppleTalk Remapping Table :
-----

Domain 1 : Domain 1   State : Active
-----

Direction : IN

Domain Net (Cable)    Remapped to      Status
3      - 3            100 - 100        Good

Direction : OUT

Domain Net (Cable)    Remapped to      Status
1      - 1            201 - 201        Good

```

The following is sample output from the **show appletalk remap** command to display inbound remappings for AppleTalk network 100:

```

Router# show appletalk remap domain 1 in from 100

AppleTalk Remapping Table :
-----

```

For the Remap 100 the Domain net is 3

[Table 22](#) describes the fields shown in the display.

Table 22 *show appletalk remap Field Descriptions*

Field	Description
Domain	Number of the AppleTalk IP domain.
State	State of the domain. It can be either Active or Nonactive.
Direction	Indicates whether the mapping is an inbound one (for packets entering the local domain segment) or an outbound one (for packets leaving the local domain segment).
Domain Net (Cable)	Network number or cable range that is being remapped.

Table 22 show appletalk remap Field Descriptions (continued)

Field	Description
Remapped to	Number or range of numbers to which a network number or cable range has been remapped.
Status	<p>It can be one of the following values:</p> <ul style="list-style-type: none"> • Unassigned—The network number or cable range was just remapped. • Unzipped—The remapped network number or cable range is trying to acquire a zone list. This state is possible for inbound remapped network numbers only. • Suspect—The Cisco IOS software suspects that it already has this entry in the routing table, and it is performing loop detection for this entry. This state is possible for inbound remappings only. • Good—The remapped entry has a complete zone list and, for inbound remappings only, it is in the main routing table. • Bad—The remapping entry is about to be deleted from the remapping table.

Related Commands

Command	Description
appletalk domain remap-range	Remaps ranges of AppleTalk network numbers or cable ranges between two segments of a domain.

show appletalk route

To display all entries or specified entries in the AppleTalk routing table, use the **show appletalk route EXEC** command.

show appletalk route [*network* | *type number*]

Syntax Description		
<i>network</i>	(Optional)	Displays the routing table entry for the specified network.
<i>type number</i>	(Optional)	Displays the routing table entries for networks that can be reached via the specified interface type and number.

Command Modes EXEC

Command History	Release	Modification
	10.0	This command was introduced.
	12.2(13)T	The E - EIGRP field was removed from command output.

Usage Guidelines If you omit the arguments, this command displays all entries in the routing table.

Examples The following is sample output from the **show appletalk route** command for a nonextended AppleTalk network:

```
Router# show appletalk route

Codes: R - RTMP derived, C - connected, A - AURP
P - proxy, S - static
5 routes in internet
C Net 258 directly connected, 1431 uses, Ethernet0, zone Twilight
R Net 6 [1/G] via 258.179, 8 sec, 0 uses, Ethernet0, zone The O
C Net 11 directly connected, 472 uses, Ethernet1, zone No Parking
R Net 2154 [1/G] via 258.179, 8 sec, 6892 uses, Ethernet0, zone LocalTalk
S Net 1111 via 258.144, 0 uses, Ethernet0, no zone set
[hops/state] state can be one of G:Good, S:Suspect, B:Bad
```

The following is sample output from the **show appletalk route** command for an extended AppleTalk network:

```
Router# show appletalk route

Codes: R - RTMP derived, C - connected, A - AURP
P - proxy, S - static
5 routes in internet
E Net 10000 -10000 [1/G] via 300.199, 275 sec, Ethernet2, zone France
R Net 890 [2/G] via 4.129, 1 sec, Ethernet0, zone release lab
R Net 901 [2/G] via 4.129, 1 sec, Ethernet0, zone Dave's House
C Net 999-999 directly connected, Serial3, zone Magnolia Estates
R Net 2003 [4/G] via 80.129, 6 sec, Ethernet4, zone Bldg-13
```

The following is sample output from the **show appletalk route** command when AppleTalk load balancing is enabled. The output displayed shows additional equal-cost path entries.

```
Router# show appletalk route

Codes: R - RTMP derived, C - connected, A - AURP
       P - proxy, S - static
759 routes in internet. Up to 4 parallel paths allowed.

The first zone listed for each entry is its default (primary) zone.

R Net 20-20 [2/G] via 60.172, 1 sec, Ethernet1/2,
                 via 1010.68 1 sec, Ethernet1/3,
                 via 70.199, 2 sec, Ethernet1/5, zone zone20
R Net 32-32 [9/G] via 60172, 2 sec, Ethernet1/2
                 via 1010.68, 2 sec, Ethernet1/3,
                 via 70.199, 2 sec, Ethernet1/5,
                 Zone: "Executive Briefing Center"
R Net 43-43 [7/G] via 60.172, 2 sec, Ethernet1/2,
                 via 1010.68, 2 sec, Ethernet1/3,
                 via 70.199, 2 sec, Ethernet1/5, zone ISDN Tunnel
R Net 57-57 [6/G] via 60.172, 2 sec, Ethernet1/2,
                 via 1010.68, 2 sec, Ethernet1/3,
                 via 70.199, 2 sec, Ethernet1/5, zone zone-home-bumi
```

[Table 23](#) describes the fields shown in the two displays, as well as some fields not shown but that may also be displayed. Depending on the configuration of the **appletalk lookup-type** and **appletalk name-lookup-interval** global configuration commands, a node name may appear in this display instead of a node address.

Table 23 show appletalk route Field Descriptions

Field	Description
Codes:	Codes defining how the route was learned.
R - RTMP derived	Route learned from an RTMP update.
C - Connected	Directly connected network.
A - AURP	Route learned from an AURP update.
S - Static	Statically defined route.
P - Proxy	Proxy route. Proxy routes are included in outgoing RTMP updates as if they were directly connected routes (although they are not really directly connected), since they are not associated with any interface. Whenever an NBQ BrRq for the zone in question is generated by anyone anywhere in the internetwork, an NBP FwdReq is directed to any router connected to the proxy route. The Phase 2 router (which is the only router directly connected) converts the FwdReq to LkUps, which are understood by Phase 1 routers, and sends them to every network in the zone.
routes	Number of routes in the table.
Net	Network to which the route goes.
Net 999-999	Cable range to which the route goes.
directly connected	Indicates that the network is directly connected to the router.

Table 23 show appletalk route Field Descriptions (continued)

Field	Description
uses	Fair estimate of the number of times a route gets used. It actually indicates the number of times the route has been selected for use prior to operations such as access list filtering.
Ethernet	Possible interface through which updates to the remote network will be sent.
zone	Name of zone of which the destination network is a member.
[1/G]	<p>Number of hops to this network, followed by the state of the link to that network. The state can be one of the following letters:</p> <ul style="list-style-type: none"> • G—Link is good. • S—Link is suspect. • B—Link is bad. <p>The state is determined from the routing updates that occur at 10-second intervals. A separate and nonsynchronized event occurs at 20-second intervals, checking and flushing the ratings for particular routes that have not been updated. For each 20-second period that passes with no new routing information, a rating changes from G to S and then from S to B. After 1 minute with no updates, that route is flushed. Every time the Cisco IOS software receives a useful update, the status of the route in question is reset to G. Useful updates are those advertising a route that is as good or better than the one currently in the table.</p> <p>When an AppleTalk route is poisoned by another router, its metric gets changed to poisoned (that is, 31 hops). The software then will age this route normally during a holddown period, during which the route will still be visible in the routing table.</p>
via 258.179	Address of a router that is the next hop to the remote network.
via gatekeeper	Node name of a router that is the next hop to the remote network.
sec	Number of seconds that have elapsed since an RMTP update about this network was last received.

The following is sample output from the **show appletalk route** command when you specify a network number:

```
Router# show appletalk route 69
```

```
Codes: R - RTMP derived, C - connected, A - AURP
P - proxy, S - static
```

The first zone listed for each entry is its default (primary) zone.

```
R Net 69-69 [2/G] via gatekeeper, 0 sec, Ethernet0, zone Empty Guf
Route installed 125:20:21, updated 0 secs ago
```

```

Next hop: gatekeeper, 2 hops away
Zone list provided by gatekeeper
Route has been updated since last RTMP was sent
Valid zones: "Empty Guf"

```

Table 24 describes the fields shown in the display.

Table 24 show appletalk route Field Descriptions—Specified Network

Field	Description
Codes:	Codes defining how the route was learned.
R - RTMP derived	Route learned from an RTMP update.
C - Connected	Directly connected network.
A - AURP derived	Route learned from an AURP update.
P - Proxy	Proxy route.
S - Static	Static route.
routes in internet	Number of routes in the Apple Talk internet.
Net	Cable range to which the route goes. This is the number of the network you specified on the show appletalk route command line.
[2/G]	<p>Number of hops to this network, followed by the state of the link to that network. The state can be one of the following letters:</p> <ul style="list-style-type: none"> • G—Link is good. • S—Link is suspect. • B—Link is bad. <p>The state is determined from the routing updates that occur at 10-second intervals. A separate and nonsynchronized event occurs at 20-second intervals, checking and flushing the ratings for particular routes that have not been updated. For each 20-second period that passes with no new routing information, a rating changes from G to S and then from S to B. After 1 minute with no updates, that route is flushed. Every time the Cisco IOS software receives a useful update, the status of the route in question is reset to G. Useful updates are those advertising a route that is as good or better than the one currently in the table.</p> <p>When an AppleTalk route is poisoned by another router, its metric gets changed to poisoned (that is, 31 hops). The software then will age this route normally during a holddown period, during which the route will still be visible in the routing table.</p>
via gatekeeper	Address or node name of a router that is the next hop to the remote network.
0 sec	Number of seconds that have elapsed since an RMTP update about this network was last received.

Table 24 show appletalk route Field Descriptions—Specified Network (continued)

Field	Description
Ethernet0	Possible interface through which updates to the remote network will be sent.
zone Empty Guf	Name of zone of which the destination network is a member.
Route installed 125:20:21	Length of time (in hours, minutes, and seconds) since this route was first learned about.
updated 0 secs ago	Time (in seconds) since the software received an update for this route.
Next hop: gatekeeper	Address or node name of the router that is one hop away.
2 hops away	Number of hops to the network specified in the show appletalk route command line.
Zone list provided by gatekeeper	Address or node name of the router that provided the zone list included with the RTMP update.
Route has been updated since last RTMP was sent	Indicates whether the software has received a routing update from a neighboring router since the last time the software sent an RTMP update for this route.
Valid zones: "Empty Guf"	Zone names that are valid for this network.

Related Commands

Command	Description
appletalk lookup-type	Specifies which NBP service types are retained in the name cache.
appletalk maximum-paths	Defines the maximum number of equal-cost paths the router should use when balancing the traffic load.
appletalk name-lookup-interval	Sets the interval between service pollings by the router on its AppleTalk interfaces.
appletalk proxy-nbp	Assigns a proxy network number for each zone in which there is a router that supports only nonextended AppleTalk.
clear appletalk route	Deletes entries from the routing table.

show appletalk sockets

To display all information or specified information about process-level operation in the sockets of an AppleTalk interface, use the **show appletalk sockets** privileged EXEC command.

show appletalk sockets [*socket-number*]

Syntax Description	<i>socket-number</i>	(Optional) Displays information about the specified socket number.
---------------------------	----------------------	--

Command Modes	Privileged EXEC
----------------------	-----------------

Command History	Release	Modification
	10.0	This command was introduced.

Usage Guidelines	If no socket number is specified, this command displays information about all sockets.
-------------------------	--

Examples The following is sample output from the **show appletalk sockets** command when you do not specify a socket number:

```
Router# show appletalk sockets

Socket  Name      Owner           Waiting/Processed
1       RTMP      AT RTMP         0    148766
2       NIS       AT NBP          0    15642
4       AEP       AT Maintenance  0    0
6       ZIP       AT ZIP          0    13619
8       SNMP     AT SNMP         0    0
253    PingServ  AT Maintenance  0    0
```

The following is sample output from the **show appletalk sockets** command when you do specify a socket number:

```
Router# show appletalk sockets 6

6       ZIP       AT ZIP          0    13619
```

Table 25 describes the fields shown in these displays.

Table 25 *show appletalk sockets Field Descriptions*

Field	Description
Socket	Socket number.
Name	Name of the socket.
Owner	Process that is managing communication with this socket.
Waiting/Processed	Number of packets waiting to be processed by the socket, and number of packets that have been processed by the socket since it was established.

show appletalk static

To display information about the statically defined routes, including floating static routes, use the **show appletalk static** EXEC command.

```
show appletalk static
```

Syntax Description This command has no arguments or keywords.

Command Modes EXEC

Command History

Release	Modification
10.0	This command was introduced.

Examples

The following is sample output from the **show appletalk static** command:

```
Router# show appletalk static

      AppleTalk   Static   Entries
-----
Network   NextIR   Zone    Status
-----
100-109   1.10    Zone100  A
200       1.10    Zone200  A
300-309   1.10    Zone300  A(Floating)
```

[Table 26](#) describes the fields shown in the display.

Table 26 *show appletalk static Field Descriptions*

Field	Description
Network	For an extended AppleTalk network, the network range. For a nonextended AppleTalk network, the network number.
NextIR	The next internetwork router.
Zone	The AppleTalk zone name.
Status	The status of the route, which can be one of the following: <ul style="list-style-type: none"> A—The static route is active. A(Floating)—The floating static route is active. N/A—The static route is not active. N/A(Floating)—The floating static route is not active.

Related Commands

Command	Description
appletalk static cable-range	Defines a static route or a floating static route on an extended network.
appletalk static network	Defines a static route or a floating static route on a nonextended network.
show appletalk neighbors	Displays information about the AppleTalk routers that are directly connected to any of the networks to which this router is directly connected.
show appletalk route	Displays all entries or specified entries in the AppleTalk routing table.

show appletalk traffic

To display statistics about AppleTalk traffic, including MacIP traffic, use the **show appletalk traffic EXEC** command.

show appletalk traffic

Syntax Description This command has no arguments or keywords.

Command Modes EXEC

Command History	Release	Modification
	10.0	This command was introduced.
	12.2(13)T	The EIGRP section was removed from command output.

Usage Guidelines For MacIP traffic, an IP alias is established for each MacIP client and for the IP address of the MacIP server if it does not match an existing IP interface address. To display the client aliases, use the **show ip aliases** command.

Examples The following is sample output from the **show appletalk traffic** command:

```
Router# show appletalk traffic

AppleTalk statistics:
  Rcvd: 357471 total, 0 checksum errors, 264 bad hop count
        321006 local destination, 0 access denied
        0 for MacIP, 0 bad MacIP, 0 no client
        13510 port disabled, 2437 no listener
        0 ignored, 0 martians
  Bcast: 191881 received, 270406 sent
  Sent: 550293 generated, 66495 forwarded, 1840 fast forwarded, 0 loopback
        0 forwarded from MacIP, 0 MacIP failures
        436 encapsulation failed, 0 no route, 0 no source
  DDP: 387265 long, 0 short, 0 macip, 0 bad size
  NBP: 302779 received, 0 invalid, 0 proxies
        57875 replies sent, 59947 forwards, 418674 lookups, 432 failures
  RTMP: 108454 received, 0 requests, 0 invalid, 40189 ignored
        90170 sent, 0 replies
  AURP: 0 Open Requests, 0 Router Downs
        0 Routing Information sent, 0 Routing Information received
        0 Zone Information sent, 0 Zone Information received
        0 Get Zone Nets sent, 0 Get Zone Nets received
        0 Get Domain Zone List sent, 0 Get Domain Zone List received
AppleTalk statistics:
  0 bad sequence
  ATP: 0 received
  ZIP: 13619 received, 33633 sent, 32 netinfo
  Echo: 0 received, 0 discarded, 0 illegal
        0 generated, 0 replies sent
  Responder: 0 received, 0 illegal, 0 unknown
```

```

    0 replies sent, 0 failures
AARP: 85 requests, 149 replies, 100 probes
      84 martians, 0 bad encapsulation, 0 unknown
      278 sent, 0 failures, 29 delays, 315 drops
Lost: 0 no buffers
Unknown: 0 packets
Discarded: 130475 wrong encapsulation, 0 bad SNAP discriminator

```

Table 27 describes the fields shown in the display.

Table 27 show appletalk traffic Field Descriptions

Field	Description
Rcvd:	This section describes the packets received.
357741 total	Total number of packets received.
0 checksum errors	Number of packets that were discarded because their DDP checksum was incorrect. The DDP checksum is verified for packets that are directed to the router. It is not verified for forwarded packets.
264 bad hop count	Number of packets discarded because they had traveled too many hops.
321006 local destination	Number of packets addressed to the local router.
0 access denied	Number of packets discarded because they were denied by an access list.
0 for MacIP	Number of AppleTalk packets the Cisco IOS software received that were encapsulated within an IP packet.
0 bad MacIP	Number of bad MacIP packets the software received and discarded. These packets may have been malformed or may not have included a destination address.
0 no client	Number of packets discarded because they were directed to a nonexistent MacIP client.
13510 port disabled	Number of packets discarded because routing was disabled for that port (extended AppleTalk only). This is the result of a configuration error or a packet's being received while the software is in verification/discovery mode.
2437 no listener	Number of packets discarded because they were directed to a socket that had no services associated with it.
0 ignored	Number of routing update packets ignored because they were from a misconfigured neighbor or because routing was disabled.
0 martians	Number of packets discarded because they contained bogus information in the DDP header. What distinguishes this error from the others is that the data in the header is never valid as opposed to not being valid at a given point in time.
Bcast:	Number of broadcast packets sent and received.
191881 received	Number of broadcast packets received.
270406 sent	Number of broadcast packets sent.
Sent:	Number of packets transmitted.

Table 27 show appletalk traffic Field Descriptions (continued)

Field	Description
550293 generated	Number of packets generated.
66495 forwarded	Number of packets forwarded using routes derived from process switching.
1840 fast forwarded	Number of packets sent using routes from the fast-switching cache.
0 loopback	Number of packets that were broadcast out an interface on the router for which the device simulated reception of the packet because the interface does not support sending a broadcast packet to itself. The count is cumulative for all interfaces on the device.
0 forwarded from MacIP	Number of IP packets forwarded that were encapsulated within an AppleTalk DDP packet.
0 MacIP failures	Number of MacIP packets sent that were corrupted during the MacIP encapsulation process.
436 encapsulation failed	Number of packets the router could not send because encapsulation failed. This can happen because encapsulation of the DDP packet failed or because AARP address resolution failed.
0 no route	Number of packets the router could not send because it knew of no route to the destination.
0 no source	Number of packets the router sent when it did not know its own address. This should happen only if something is seriously wrong with the router or network configuration.
DDP:	This section describes DDP packets seen.
387265 long	Number of DDP long packets.
0 short	Number of DDP short packets.
0 macip	Number of IP packets encapsulated in an AppleTalk DDP packet that the router sent.
0 bad size	Number of packets whose physical packet length and claimed length differed.
NBP:	This section describes NBP packets.
302779 received	Total number of NBP packets received.
0 invalid	Number of invalid NBP packets received. Causes include invalid op code and invalid packet type.
0 proxies	Number of NBP proxy lookup requests received by the router when it was configured for NBP proxy transition usage.
57875 replies sent	Number of NBP replies sent.
59947 forwards	Number of NBP forward requests received or sent.
418674 lookups	Number of NBP lookups received.
432 failures	Generic counter that increments any time the NBP process experiences a problem.

Table 27 *show appletalk traffic Field Descriptions (continued)*

Field	Description
RTMP:	This section describes RTMP packets.
108454 received	Total number of RTMP packets received.
0 requests	Number of RTMP requests received.
0 invalid	Number of invalid RTMP packets received. Causes include invalid op code and invalid packet type.
40189 ignored	Number of RTMP packets ignored. One reason for this is that the interface is still in discovery mode and is not yet initialized.
90170 sent	Number of RTMP packets sent.
0 replies	Number of RTMP replies sent.
ATP:	This section describes ATP packets.
0 received	Number of ATP packets the router received.
ZIP:	This section describes ZIP packets.
13619 received	Number of ZIP packets the router received.
33633 sent	Number of ZIP packets the router sent.
32 netinfo	Number of packets that requested port configuration via ZIP GetNetInfo requests. These are commonly used during node startup and are occasionally used by some AppleTalk network management software packages.
Echo:	This section describes AEP packets.
0 received	Number of AEP packets the router received.
0 discarded	Number of AEP packets the router discarded.
0 illegal	Number of illegal AEP packets the router received.
0 generated	Number of AEP packets the router generated.
0 replies sent	Number of AEP replies the router sent.
Responder:	This section describes Responder Request packets.
0 received	Number of Responder Request packets the router received.
0 illegal	Number of illegal Responder Request packets the router received.
0 unknown	Number of Responder Request packets the router received that it did not recognize.
0 replies sent	Number of Responder Request replies the router sent.
0 failures	Number of Responder Request replies the router could not send.
AARP:	This section describes AARP packets.
85 requests	Number of AARP requests the router received.
149 replies	Number of AARP replies the router received.
100 probes	Number of AARP probe packets the router received.

Table 27 show appletalk traffic Field Descriptions (continued)

Field	Description
84 martians	Number of AARP packets the router did not recognize. If you start seeing an inordinate number of martians on an interface, check whether a bridge has been inserted into the network. When a bridge is starting up, it floods the network with AARP packets.
0 bad encapsulation	Number of AARP packets received that had an unrecognizable encapsulation.
0 unknown	Number of AARP packets the router did not recognize.
278 sent	Number of AARP packets the router sent.
0 failures	Number of AARP packets the router could not send.
29 delays	Number of AppleTalk packets delayed while waiting for the results of an AARP request.
315 drops	Number of AppleTalk packets dropped because an AARP request failed.
Lost: 0 no buffers	Number of packets lost because of lack of buffer space.
Unknown: 0 packets	Number of packets whose protocol could not be determined.
Discarded:	This section describes the number of packets that were discarded.
130475 wrong encapsulation	Number of packets discarded because they had the wrong encapsulation. That is, nonextended AppleTalk packets were on an extended AppleTalk network, or vice versa.
0 bad SNAP discrimination	Number of packets discarded because they had the wrong SNAP discriminator. This occurs when another AppleTalk device has implemented an obsolete or incorrect packet format.
AURP:	This section describes AppleTalk Update Routing Protocol packets.
0 open requests	Total number of open requests.
0 router downs	Number of router down packets received.
0 routing information sent	Number of routing information packets sent.
0 routing information received	Number of routing information packets received.
0 zone information sent	Number of ZIP packets sent.
0 zone information received	Number of ZIP packets received.
0 get zone nets sent	Number of get zone network packets sent requesting zone information.
0 get zone nets received	Number of get zone network packets received requesting zone information.
0 get domain zone list sent	Number of get domain zone list packets sent requesting domain zone list information.

Table 27 *show appletalk traffic Field Descriptions (continued)*

Field	Description
0 get domain zone list received	Number of get domain zone list packets received requesting domain zone list information.
0 bad sequence	Number of AURP packets received out of sequence.

Related Commands

Command	Description
clear appletalk traffic	Resets AppleTalk traffic counters.
show appletalk macip-traffic	Displays statistics about MacIP traffic through the router.
show ip aliases	Displays the IP addresses mapped to TCP ports (aliases) and SLIP addresses, which are treated similarly to aliases.

show appletalk zone

To display all entries or specified entries in the zone information table, use the **show appletalk zone** EXEC command.

```
show appletalk zone [zone-name]
```

Syntax Description

<i>zone-name</i>	(Optional) Displays the entry for the specified zone.
------------------	---

Command Modes

EXEC

Command History

Release	Modification
10.0	This command was introduced.

Usage Guidelines

If no zone name is specified, the command displays all entries in the zone information table.

You can use this command on extended and nonextended networks.

A zone name can be associated with multiple network addresses or cable ranges, or both. There is not a one-to-one correspondence between a zone name and a LAN; a zone name may correspond to one or more networks (LANs or network interfaces). This means that a zone name will effectively replace multiple network addresses in zone filtering. This is reflected in the output of the **show appletalk zone** command. For example, the zone named *Mt. View 1* in the following example is associated with two network numbers and four cable ranges.

Examples

The following is sample output from the **show appletalk zone** command:

```
Router# show appletalk zone

Name                Network(s)
Engineering         3 29-29 4042-4042
customer eng       19-19
CISCO IP            4140-4140
Dave's House        3876 3924 5007
Narrow Beam         4013-4013 4023-4023 4037-4037 4038-4038
Low End SW Lab      6160 4172-4172 9555-9555 4160-4160
Tir'n na'Og        199-199
Mt. View 1          7010-7010 7122 7142 7020-7020 7040-7040 7060-7060
Mt. View 2          7152 7050-7050
UDP                 1112-12
Empty Guf           69-69
Light               80
europe              2010 3010 3034 5004
Bldg-13             4032 5026 61669 3012 3025 3032 5025 5027
Bldg-17             3004 3024 5002 5006
```

The following is sample output from the **show appletalk zone** command when you specify a zone name:

```
Router# show appletalk zone CISCO IP
```

```

AppleTalk Zone Information for CISCO IP:
  Valid for nets: 4140-4140
  Not associated with any interface.
  Not associated with any access list.

```

Table 28 describes the fields shown in the display.

Table 28 *show appletalk zone Field Descriptions—Specific Zone Name*

Field	Description
AppleTalk Zone Information for CISCO IP:	Name of the zone.
Valid for nets: 4140-4140	Cable range(s) or network numbers assigned to this zone.
Not associated with any interface.	Interfaces that have been assigned to this zone.
Not associated with any access list.	Access lists that have been defined for this zone.

Related Commands

Command	Description
appletalk zone	Sets the zone name for the connected AppleTalk network.

test appletalk

To enter the test mode, use the **test appletalk** command in privileged EXEC mode.

```
test appletalk
```

Syntax Description This command has no arguments or keywords.

Command Modes Privileged EXEC

Command History	Release	Modification
	11.1	This command was introduced.

Usage Guidelines Use the **test appletalk** command to enter test mode. From test mode you can test the Name Binding Protocol (NBP) protocol.

The following display shows how to enter Appletalk test mode:

```
Router# test appletalk
Router(ataalk test)#
```

Type **?** to display the following list of test options:

```
Router(ataalk test)# ?
end      Exit AppleTalk test mode
nbp     AppleTalk NBP test commands
```

Use the **test appletalk** command with the **nbp** options to test and to perform informational lookups of NBP-registered entities. Use the NBP options when you find that AppleTalk zones are listed in the Chooser, but services in these zones are unavailable.

Type **nbp ?** to learn what NBP test commands you can use:

```
Router(ataalk test)# nbp ?
nbp confirm:      send out an NBP confirm packet to the specified entity
nbp lookup:       lookup an NVE. prompt for name, type and zone
nbp parameters:   display/change lookup parms (ntimes, ncecs, interval)
nbp poll:         for every zone, lookup all devices, using default
?:                print command list
end:              exit nbptest
```

The following list summarizes the **nbp** test commands you can use:

- **nbp confirm**—Sends out an NBP confirm packet to the specified entity.
- **nbp lookup**—Searches for NBP entities in a specific zone.
- **nbp parameters**—Sets the parameters used in subsequent lookup and pool tests.
- **nbp poll**—Searches for all devices in all zones.
- **?**—Displays the list of **nbp** tests.
- **end**—Exit from the **nbp** test commands.

The remainder of this section shows and explains the syntax and output of the various NBP test commands.

When running any of the NBP tests, you specify a nonprinting character by entering a three-character string that is the hexadecimal equivalent of the character. For example, type `:c5` to specify the test appletalk truncation wildcard.

This is the syntax of the **nbp confirm** command:

```
nbp confirm appletalk-address [:skt] object:type@zone
```

The syntax description is as follows:

<i>appletalk-address</i>	AppleTalk network address in the form <i>network.node</i> . The argument <i>network</i> is the 16-bit network number in the range 1 to 65,279. The argument <i>node</i> is the 8-bit node number in the range 0 to 254. Both numbers are decimal.
<i>:skt</i>	(Optional) Name of socket.
<i>object:type</i>	Name of device and the type of service. The colon (:) between <i>object</i> and <i>type</i> is required.
<i>@zone</i>	Name of the AppleTalk zone where the entity <i>object:type</i> resides.

Examples

The following is sample output from the **nbp confirm** command. In this example, the test sends a confirm packet to the entity *ciscoRouter* in zone *Engineering*.

```
Router(ataalk test)# nbp confirm 24279.173 my-mac:AFPServer@Engineering
confirmed my-mac:AFPServer@Engineering at 24279n,173a,250s
```

This is the syntax of the **nbp lookup** command:

```
nbp lookup object:type@zone
```

The syntax description is as follows:

<i>object:type</i>	Name of device and the type of service. The colon (:) between <i>object</i> and <i>type</i> is required.
<i>@zone</i>	Name of the AppleTalk zone where the entity <i>object:type</i> resides.

The following is sample output from the **nbp lookup** command:

```
Router(ataalk test)# nbp lookup =:macintosh:c5@engineering
(100n,50a,253s) [1]: 'userA:Macintosh IICx@engineering'
(100n,16a,251s) [1]: 'userB:Macintosh II@engineering'
(200n,24a,253s) [1]: 'userC:Macintosh IICI@engineering'
(200n,36a,251s) [1]: 'userD:Macintosh II@engineering'
(300n,21a,252s) [1]: 'userE:Macintosh SE/30@engineering'
test appletalk lookup request timed out
Processed 6 replies, 7 events
```

Table 29 describes the fields shown in the display.

Table 29 *nbp lookup Field Descriptions*

Field	Description
(100n,50a,253s) [1]	AppleTalk DDP address of the registered entity, in the format network, node address, and socket number. The number in brackets is either the current value of the field (if this is the first time you have invoked nbptest) or the value the field had the last time you invoked nbptest .
'userA:Macintosh IICx@engineering'	NBP enumerator:NBP entity string of the registered entity.
test appletalk lookup request timed out	Indicates whether replies were heard within the timeout interval.
Processed 6 replies, 7 events	Number of NBP replies received.

This is the syntax of the **nbp parameters** command:

nbp parameters *retransmissions replies interval*

The syntax description is as follows:

<i>retransmissions</i>	Maximum number of lookup retransmissions. This is a number from 1 to 5. The default value is 5.
<i>replies</i>	Maximum number of replies to accept for each lookup. This is a number from 1 to 500. The default is 1.
<i>interval</i>	Interval, in seconds, between each retry. This value is from 1 to 60 seconds. The default is 5 seconds.

The following is sample output of the **nbp parameters** command. In this example, the maximum number of retransmission is 1, the maximum number of replies is 100, and there are 10 seconds between each retry.

```
Router(ataalk test)# nbp parameters 1 100 10
```

The **nbp poll** command has no keywords or arguments. The following is sample output from the **nbp poll** command:

```
Router(ataalk test)# nbp poll

poll: sent 2 lookups
(100n,82a,252s) [1]: 'userA:Macintosh IICi@Zone one'
(200n,75a,254s) [1]: 'userB:Macintosh IICx@Zone two'
test appletalk polling completed.
Processed 2 replies, 2 events
```

Table 30 describes the fields shown in the display.

Table 30 *nbp poll Field Descriptions*

Field	Description
poll	Number of lookups the command sent.
(100n,82,252s) [1]	AppleTalk DDP address of the registered entity, in the format network, node address, and socket number. The number in brackets is either the current value of the field (if this is the first time you have invoked nbptest) or the value the field had the last time you invoked nbptest .
'userA:Macintosh IICI@Zone one'	NBP enumerator:NBP entity string of the registered entity.
test appletalk polling completed.	Indicates that the polling completed successfully.
Processed 2 replies, 2 events	Number of NBP replies received.

The following example enables the **appletalk nbp polling** command, which does not use any keywords or arguments:

```
Router (atalk test)# nbp poll
```

Related Commands

Command	Description
test flash	Tests Flash memory on MCI and envm Flash EPROM interfaces.
test interfaces	Tests the system interfaces on the modular router.
test memory	Performs a test of Multibus memory (including nonvolatile memory) on the modular router.