

debug tag-switching atm-cos

The **debug tag-switching atm-cos** command is replaced by the **debug mpls atm-cos** command. See the [debug mpls atm-cos](#) command for more information.

debug tag-switching atm-tdp api

The **debug tag-switching atm-tdp api** command is replaced by the **debug mpls atm-ldp api** command. See the [debug mpls atm-ldp api](#) command for more information.

debug tag-switching atm-tdp routes

The **debug tag-switching atm-tdp routes** command is replaced by the **debug mpls atm-ldp routes** command. See the [debug mpls atm-ldp routes](#) command for more information.

debug tag-switching atm-tdp states

The **debug tag-switching atm-tdp states** command is replaced by the **debug mpls atm-ldp states** command. See the [debug mpls atm-ldp states](#) command for more information.

debug tag-switching tdp advertisements

The **debug tag-switching tdp advertisements** command is replaced by the **debug mpls ldp advertisements** command. See the [debug mpls ldp advertisements](#) command for more information.

debug tag-switching tdp bindings

The **debug tag-switching tdp bindings** command is replaced by the **debug mpls ldp bindings** command. See the [debug mpls ldp bindings](#) command for more information.

debug tag-switching tdp directed-neighbors

The **debug tag-switching tdp peer directed-neighbors** command is replaced by the **debug mpls ldp targeted-neighbors** command. See the [debug mpls ldp targeted-neighbors](#) command for more information.

debug tag-switching tdp peer state-machine

The **debug tag-switching tdp peer state-machine** command is replaced by the **debug mpls ldp peer state-machine** command. See the [debug mpls ldp peer state-machine](#) command for more information.

debug tag-switching tdp pies received

The **debug tag-switching tdp pies received** command is replaced by the **debug mpls ldp session io** command. See the [debug mpls ldp session io](#) command for more information.

debug tag-switching tdp pies sent

The **debug tag-switching tdp pies sent** command is replaced by the **debug mpls ldp messages** command. See the [debug mpls ldp messages](#) command for more information.

debug tag-switching tdp session io

The **debug tag-switching tdp session io** command is replaced by the **debug mpls ldp session io** command. See the [debug mpls ldp session io](#) command for more information

debug tag-switching tdp session state-machine

The **debug tag-switching tdp session state-machine** command is replaced by the **debug mpls ldp session state-machine** command. See the [debug mpls ldp session state-machine](#) command for more information.

debug tag-switching tdp transport connections

The **debug tag-switching tdp transport connections** command is replaced by the **debug mpls ldp transport connections** command. See the [debug mpls ldp transport connections](#) command for more information.

debug tag-switching tdp transport events

The `debug tag-switching tdp transport events` command is replaced by the `debug mpls ldp transport events` command. See the [debug mpls ldp transport events](#) command for more information.

debug tag-switching xtagatm cross-connect

The **debug tag-switching xtagatm cross-connect** command is replaced by the **debug mpls xtagatm cross-connect** command. See the [debug mpls xtagatm cross-connect](#) command for more information.

debug tag-switching xtagatm errors

The **debug tag-switching xtagatm errors** command is replaced by the **debug mpls xtagatm errors** command. See the [debug mpls xtagatm errors](#) command for more information.

debug tag-switching xtagatm events

The **debug tag-switching xtagatm events** command is replaced by the **debug mpls xtagatm events** command. See the [debug mpls xtagatm events](#) command for more information.

debug tag-switching xtagatm vc

The **debug tag-switching xtagatm vc** command is replaced by the **debug mpls xtagatm vc** command. See the [debug mpls xtagatm vc](#) command for more information.