



# Introduction

---

This document describes the commands used to configure ATM features with Cisco IOS software.

Prior to Cisco IOS release 12.3(14)T the commands for configuring ATM features were presented in separate command reference books:

- The commands for configuring LAN ATM features were presented in the *Cisco IOS Switching Services Command Reference Book*
- The commands for configuring WAN ATM features were presented in the *Cisco IOS Wide-Area Networking Command Reference Book*.

Refer to the configuration chapters indicated here for configuration guidelines:

<b>For guidelines about configuring this feature...</b>	<b>Refer to the following <i>Cisco IOS Configuration Guide</i>...</b>
LAN ATM	<ul style="list-style-type: none"><li>• <a href="#">Cisco IOS Switching Services Configuration Guide, Release 12.3</a></li></ul>
WAN ATM	<ul style="list-style-type: none"><li>• <a href="#">Cisco IOS Wide-Area Networking Configuration Guide, Release 12.3</a></li></ul>



**Note**

A separate ATM configuration guide for all Cisco IOS ATM features will be published at a later date.

