



Cisco IOS Voice Commands: W

This chapter contains commands to configure and maintain Cisco IOS voice applications. The commands are presented in alphabetical order. Some commands required for configuring voice may be found in other Cisco IOS command references. Use the command reference master index or search online to find these commands.

For detailed information on how to configure these applications and features, refer to the *Cisco IOS Voice Configuration Guide*.

watcher all

To allow an external watcher to monitor an internal presence, use the **watcher all** command in presence configuration mode. To disable monitoring by external watchers, use the **no** form of this command.

watcher all

no watcher all

Syntax Description This command has no arguments or keywords.

Command Default Only internal watchers are allowed when presence is enabled.

Command Modes Presence configuration (config-presence)

Command History	Release	Modification
	12.4(11)XJ	This command was introduced.
	12.4(15)T	This command was integrated into Cisco IOS Release 12.4(15)T.

Usage Guidelines This command allows external watchers on a remote router connected through a SIP trunk to monitor internal directory numbers. You must enable the **allow watch** command on the internal directory numbers that are watched. To allow external watching from the remote router, you must enable the **allow subscribe** command on the remote router.

Examples The following example shows how to enable external watching of an internal presence:

```
Router(config)# presence
Router(config-presence)# watcher all
```

Related Commands	Command	Description
	allow subscribe	Allows internal watchers to monitor external presentities.
	allow watch	Allows a directory number on a phone registered to Cisco Unified CME to be watched in a presence service.
	presence	Enables presence service on the router and enters presence configuration mode.
	presence enable	Allows incoming presence requests from SIP trunks.
	server	Specifies the IP address of a presence server for sending presence requests from internal watchers to external presence entities.

Command	Description
show presence global	Displays configuration information about the presence service.
show presence subscription	Displays information about active presence subscriptions.

■ watcher all