

Introduction

This document describes the commands used to configure ATM features with Cisco IOS software. ATM commands are used to configure ATM interfaces and to configure serial interfaces for ATM access. For ATM configuration information and examples, refer to the *Cisco IOS Asynchronous Transfer Mode Configuration Guide*.

