



Enabling or Disabling Cisco Express Forwarding or Distributed Cisco Express Forwarding to Customize Switching and Forwarding for Dynamic Networks

First Published: May 2, 2005

Last Updated: July 11, 2008

This module contains information about Cisco Express Forwarding and describes the required and optional tasks for enabling or disabling Cisco Express Forwarding and distributed Cisco Express Forwarding. Cisco Express Forwarding is an advanced Layer 3 IP switching technology. It optimizes network performance and scalability for all kinds of networks: those that carry small amounts of traffic and those that carry large amounts of traffic in complex patterns, such as the Internet and networks characterized by intensive web-based applications or interactive sessions.

Finding Feature Information

Your software release may not support all the features documented in this module. For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the [“Feature Information for Enabling or Disabling Cisco Express Forwarding or Distributed Cisco Express Forwarding”](#) section on page 13.

Use Cisco Feature Navigator to find information about platform support and Cisco IOS and Catalyst OS software image support. To access Cisco Feature Navigator, go to <http://www.cisco.com/go/cfn>. An account on Cisco.com is not required.



Americas Headquarters:

Cisco Systems, Inc., 170 West Tasman Drive, San Jose, CA 95134-1706 USA

Contents

- [Prerequisites for Enabling or Disabling Cisco Express Forwarding or Distributed Cisco Express Forwarding, page 2](#)
- [Restrictions for Enabling or Disabling Cisco Express Forwarding or Distributed Cisco Express Forwarding, page 2](#)
- [Information About Enabling or Disabling Cisco Express Forwarding or Distributed Cisco Express Forwarding, page 3](#)
- [How to Enable or Disable Central Cisco Express Forwarding or Distributed Cisco Express Forwarding, page 5](#)
- [Configuration Examples for Enabling or Disabling Central Cisco Express Forwarding or Distributed Cisco Express Forwarding, page 8](#)
- [Additional References, page 10](#)
- [Feature Information for Enabling or Disabling Cisco Express Forwarding or Distributed Cisco Express Forwarding, page 13](#)
- [Glossary, page 14](#)

Prerequisites for Enabling or Disabling Cisco Express Forwarding or Distributed Cisco Express Forwarding

Cisco Express Forwarding requires a software image that includes Cisco Express Forwarding and IP routing enabled on the switch or router.

Restrictions for Enabling or Disabling Cisco Express Forwarding or Distributed Cisco Express Forwarding

Central Cisco Express Forwarding or distributed Cisco Express Forwarding has the following restrictions:

- The Cisco 12000 Series Internet routers operate only in distributed Cisco Express Forwarding mode.
- If you enable Cisco Express Forwarding and then create an access list that uses the **log** keyword, the packets that match the access list are not Cisco Express Forwarding switched. They are process switched. Logging disables Cisco Express Forwarding.
- Distributed Cisco Express Forwarding switching cannot be configured on the same Versatile Interface Processor (VIP) card on which distributed fast switching is configured.
- Distributed Cisco Express Forwarding is not supported on Cisco 7200 series routers.

Restrictions for Cisco Express Forwarding or Distributed Cisco Express Forwarding Operation on an Interface

- On the Cisco 12000 Series Internet Router, you must not disable distributed Cisco Express Forwarding on an interface.
- Not all switching methods are available on all platforms.

Information About Enabling or Disabling Cisco Express Forwarding or Distributed Cisco Express Forwarding

Before enabling or disabling Cisco Express Forwarding or distributed Cisco Express Forwarding, you should understand the following:

- [Cisco Platform Support for Central Cisco Express Forwarding and Distributed Cisco Express Forwarding, page 3](#)
- [When to Enable or Disable Central Cisco Express Forwarding Operation on a Router, page 4](#)
- [When to Enable Distributed Cisco Express Forwarding Operation on a Line Card, page 4](#)
- [When to Enable or Disable Cisco Express Forwarding Operation on an Interface, page 4](#)

For links to information about other Cisco Express Forwarding and distributed Cisco Express Forwarding features you can configure, refer to the following section:

- [How to Enable or Disable Central Cisco Express Forwarding or Distributed Cisco Express Forwarding, page 5](#)

Cisco Platform Support for Central Cisco Express Forwarding and Distributed Cisco Express Forwarding

Cisco Express Forwarding is enabled by default on most Cisco platforms running Cisco IOS software Release 12.0 or later. When Cisco Express Forwarding is enabled on a router, the Route Processor (RP) performs the express forwarding.

To find out if Cisco Express Forwarding is enabled on your platform, enter the **show ip cef** command. If Cisco Express Forwarding is enabled, you receive output that looks like this:

```
Router# show ip cef
```

Prefix	Next Hop	Interface
[...]		
10.2.61.8/24	192.168.100.1	FastEthernet1/0/0
	192.168.101.1	FastEthernet6/1
[...]		

If Cisco Express Forwarding is not enabled on your platform, the output for the **show ip cef** command looks like this:

```
Router# show ip cef
```

```
%CEF not running
```

Distributed Cisco Express Forwarding is enabled by default on the Catalyst 6500 series switch, the Cisco 7500 series router, and the Cisco 12000 Series Internet Router. When distributed Cisco Express Forwarding is enabled on your platform, the line cards perform the express forwarding.

If Cisco Express Forwarding is not enabled on your platform, use the **ip cef** command to enable central Cisco Express Forwarding or the **ip cef distributed** command to enable distributed Cisco Express Forwarding.

When to Enable or Disable Central Cisco Express Forwarding Operation on a Router

Enable central Cisco Express Forwarding operation when line cards are not available for Cisco Express Forwarding switching or when you need to use features not compatible with distributed Cisco Express Forwarding switching. When central Cisco Express Forwarding operation is enabled, the Cisco Express Forwarding Forwarding Information Base (FIB) and adjacency tables reside on the RP, and the RP performs express forwarding.

Disable central Cisco Express Forwarding on a router when you want to turn off central Cisco Express Forwarding on the router and on all interfaces on the router. You might want to do this if your router and router interfaces are configured with a feature that central Cisco Express Forwarding or distributed Cisco Express Forwarding does not support.

To disable central Cisco Express Forwarding on a router and on all interfaces on the router, use the **no ip cef** command.

When to Enable Distributed Cisco Express Forwarding Operation on a Line Card

Enable distributed Cisco Express Forwarding on a line card when you want the line card to perform express forwarding so that the RP can handle routing protocols or switch packets from legacy interface processors. When distributed Cisco Express Forwarding is enabled, line cards, such as the VIP line cards or the Cisco 12000 Series Internet Router line cards, maintain an identical copy of the FIB and adjacency tables. The line cards perform express forwarding between port adapters, thus relieving the RP of involvement in the switching operation. distributed Cisco Express Forwarding uses an interprocess communication (IPC) mechanism to ensure synchronization of FIB tables and adjacency tables on the RP and line cards.

The Cisco 12000 Series Internet routers operate only in distributed Cisco Express Forwarding mode. In other routers you can mix various types of line cards in the same router, and all of the line cards you are using need not support Cisco Express Forwarding. When a line card that does not support Cisco Express Forwarding receives a packet, the line card forwards the packet to the next higher switching layer (the RP) or forwards the packet to the next hop for processing. This structure allows legacy interface processors to exist in the router with newer interface processors.



Note

When you enable distributed Cisco Express Forwarding globally, all interfaces that support distributed Cisco Express Forwarding are enabled by default.

When to Enable or Disable Cisco Express Forwarding Operation on an Interface

You need to decide whether or not you want Cisco Express Forwarding operation on an interface. In some instances, you might want to disable Cisco Express Forwarding or distributed Cisco Express Forwarding on a particular interface because that interface is configured with a feature that Cisco Express Forwarding or distributed Cisco Express Forwarding does not support. Because all interfaces that support Cisco Express Forwarding or distributed Cisco Express Forwarding are enabled by default when you enable Cisco Express Forwarding operation globally, you must use the **no** form of the **ip route-cache cef** command to turn off Cisco Express Forwarding operation on a particular interface. To reenabling Cisco Express Forwarding, use the **ip route-cache cef** command. To reenabling distributed Cisco Express Forwarding, use the **ip route-cache distributed** command.

Disabling Cisco Express Forwarding or distributed Cisco Express Forwarding on an interface disables Cisco Express Forwarding switching for packets forwarded to the interface, but has no effect on packets forwarded out of the interface.

When you disable Cisco Express Forwarding or distributed Cisco Express Forwarding, Cisco IOS software switches packets received on the interface using the next fastest switching path. For Cisco Express Forwarding, the next fastest switching path is fast switching on the RP. For distributed Cisco Express Forwarding, the next fastest switching path is Cisco Express Forwarding on the RP.

The input interface determines the Cisco IOS switching path that a packet takes. Consider the following rules of thumb when enabling or disabling switching methods on a particular interface:

- You need Cisco Express Forwarding to be enabled on the incoming interface for packets to be Cisco Express Forwarding switched.
- Because Cisco Express Forwarding makes the forwarding decision on input, you need to use the **no ip route-cache cef** command on the ingress interface if you want to disable Cisco Express Forwarding.
- In contrast, because Cisco IOS builds a fast-switching cache entry after switching a packet, a packet coming in on a process-switched interface and going out through a fast-switched interface is fast switched.
- If you want to disable fast switching, use the **no ip route-cache** command on the egress interface.

How to Enable or Disable Central Cisco Express Forwarding or Distributed Cisco Express Forwarding

To enable or disable Cisco Express Forwarding or distributed Cisco Express Forwarding, perform either of the following tasks depending on whether you want to enable or disable Cisco Express Forwarding or distributed Cisco Express Forwarding on the router or to enable or disable Cisco Express Forwarding or distributed Cisco Express Forwarding on an interface:

- [Enabling or Disabling Cisco Express Forwarding or Distributed Cisco Express Forwarding Operation on a Router, page 5](#) (optional)
- [Enabling or Disabling Cisco Express Forwarding or Distributed Cisco Express Forwarding Operation on an Interface, page 7](#) (optional)

Enabling or Disabling Cisco Express Forwarding or Distributed Cisco Express Forwarding Operation on a Router

Perform the following task to enable or disable Cisco Express Forwarding or distributed Cisco Express Forwarding operation on a router. Cisco Express Forwarding can optimize your network performance and scalability.

SUMMARY STEPS

1. **enable**
2. **show ip cef [vrf vrf-name] [unresolved [detail]] | [detail | summary]**
3. **configure terminal**

4. `[no] ip cef`
or
`[no] ip cef distributed`
5. `exit`
6. `show ip cef [vrf vrf-name] [unresolved [detail] | [detail | summary]]`

DETAILED STEPS

	Command or Action	Purpose
Step 1	<code>enable</code> Example: Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none">• Enter your password if prompted.
Step 2	<code>show ip cef [vrf vrf-name] [unresolved [detail]] [detail [summary]]</code> Example: Router# show ip cef	Displays entries in the forwarding information base (FIB). Use this command to determine if Cisco Express Forwarding is enabled globally and on a particular interface. If Cisco Express Forwarding is not enabled, the output displays: %CEF not running
Step 3	<code>configure terminal</code> Example: Router# configure terminal	Enters global configuration mode.
Step 4	<code>[NO] ip cef</code> or <code>[NO] ip cef distributed</code> Example: Router(config)# ip cef or Example: Router(config)# ip cef distributed	Enables Cisco Express Forwarding on the route processor card. or Enables distributed Cisco Express Forwarding operation. Cisco Express Forwarding information is distributed to line cards. Line cards perform express forwarding.
Step 5	<code>exit</code> Example: Router(config)# end	Exits to privileged EXEC mode.
Step 6	<code>show ip cef [vrf vrf-name] [unresolved [detail] [detail summary]]</code> Example: Router# show ip cef	Displays entries in the FIB. Use this command to verify that Cisco Express Forwarding is enabled. If Cisco Express Forwarding is enabled, the output displays destination prefixes, next-hop IP addresses, and next-hop interfaces.

Enabling or Disabling Cisco Express Forwarding or Distributed Cisco Express Forwarding Operation on an Interface

Perform the following task to enable or disable Cisco Express Forwarding or distributed Cisco Express Forwarding operation on an interface. Cisco Express Forwarding can optimize your network performance and scalability.

SUMMARY STEPS

1. **enable**
2. **show cef interface** *[type number]* **[statistics]** **[detail]**
3. **configure terminal**
4. **interface** *type slot/port* or **interface** *type slot/port-adapter/port*
5. **[no] ip route-cache cef** or **ip route-cache cef**
or
[no] ip route-cache distributed
6. **end**
7. **show cef interface** *[type number]* **[statistics]** **[detail]**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none">• Enter your password if prompted.
Step 2	show cef interface <i>[type number]</i> [statistics] [detail] Example: Router# show cef interface fastethernet 1/0/0	Displays detailed Cisco Express Forwarding information for a specified interface or for all interfaces. Look for “IP CEF switching enabled” or “IP Distributed CEF switching enabled” in the output.
Step 3	configure terminal Example: Router# configure terminal	Enters global configuration mode.

	Command or Action	Purpose
Step 4	<pre>interface type slot/port</pre> <p>or</p> <pre>interface type slot/port-adapter/port</pre> <p>Example: <pre>Router(config)# interface ethernet 1/1</pre> <p>or</p> <pre>Router(config)# interface fastethernet 1/0/0</pre></p>	<p>Configures an interface type and enters interface configuration mode.</p> <ul style="list-style-type: none"> The <i>type</i> argument specifies the type of interface to be configured. The <i>slot/</i> argument specifies the slot number. Refer to the appropriate hardware manual for slot and port information. The <i>port</i> argument specifies the port number. Refer to the appropriate hardware manual for slot and port information. The <i>port-adapter/</i> argument specifies the port adapter number. Refer to the appropriate hardware manual for information about port adapter compatibility.
Step 5	<pre>[no] ip route-cache cef</pre> <p>or</p> <pre>[no] ip route-cache distributed</pre> <p>Example: <pre>Router(config-if)# no ip route-cache cef</pre> <p>or</p> <p>Example: <pre>Router(config-if)# no ip route-cache distributed</pre></p> </p>	<p>Disables Cisco Express Forwarding operation on an interface or enables Cisco Express Forwarding operation on an interface after Cisco Express Forwarding operation was disabled.</p> <p>or</p> <p>Disables distributed Cisco Express Forwarding operation on an interface or enables distributed Cisco Express Forwarding operation on an interface after distributed Cisco Express Forwarding operation was disabled.</p>
Step 6	<pre>end</pre> <p>Example: <pre>Router(config)# end</pre></p>	<p>Exits to privileged EXEC mode.</p>
Step 7	<pre>show cef interface [type number] [statistics] [detail]</pre> <p>Example: <pre>Router# show cef interface fastethernet 1/0/0</pre></p>	<p>Displays detailed Cisco Express Forwarding information for a specified interface or for all interfaces.</p> <p>Verify that “IP CEF switching enabled” or “IP Distributed CEF switching enabled” is displayed in the output.</p>

Configuration Examples for Enabling or Disabling Central Cisco Express Forwarding or Distributed Cisco Express Forwarding

This section contains the following configuration examples:

- [Enabling or Disabling Cisco Express Forwarding or Distributed Cisco Express Forwarding Operation: Examples, page 9](#)
- [Enabling or Disabling Central Cisco Express Forwarding or Distributed Cisco Express Forwarding Operation on an Interface: Examples, page 9](#)

Enabling or Disabling Cisco Express Forwarding or Distributed Cisco Express Forwarding Operation: Examples

Cisco Express Forwarding is enabled by default on the Cisco 7100, 7200, and 7500 series routers. You might want to disable Cisco Express Forwarding if your router and router interfaces are configured with a feature that Cisco Express Forwarding does not support. The following example shows how to disable Cisco Express Forwarding on a router and on all interfaces on the router:

```
configure terminal
!
no ip cef
end
```

Distributed Cisco Express Forwarding is enabled by default on the Cisco 6500 and 12000 series routers. The following example shows how to enable distributed Cisco Express Forwarding on the line cards of a router, such as the Cisco 7500 series router, that supports distributed Cisco Express Forwarding:

```
configure terminal
!
ip cef distributed
end
```

You might want to disable distributed Cisco Express Forwarding if your router and router interfaces are configured with a feature that distributed Cisco Express Forwarding does not support. The following example shows how to disable distributed Cisco Express Forwarding on a router:

```
configure terminal
!
no ip cef distributed
end
```

Enabling or Disabling Central Cisco Express Forwarding or Distributed Cisco Express Forwarding Operation on an Interface: Examples

All interfaces that support Cisco Express Forwarding operation (central Cisco Express Forwarding or distributed Cisco Express Forwarding) are enabled by default when you enable Cisco Express Forwarding operation globally. You might want to disable central Cisco Express Forwarding or distributed Cisco Express Forwarding on a particular interface if that interface is configured with a feature that central Cisco Express Forwarding or distributed Cisco Express Forwarding does not support.

The following example shows how to disable central Cisco Express Forwarding on a particular interface:

```
configure terminal
!
interface ethernet 1/1
 no ip route-cache cef
end
```

The following example shows how to reenabling central Cisco Express Forwarding operation on an interface:

```
configure terminal
!
interface ethernet 1/1
 ip route-cache cef
end
```

The following example shows how to disable distributed Cisco Express Forwarding on Ethernet interface 0:

```

configure terminal
!
interface e0
  no ip route-cache distributed
end

```

The following example shows how to reenable distributed Cisco Express Forwarding operation on Ethernet interface 0:

```

configure terminal
!
ip cef distributed
!
interface e0
# ip route-cache distributed
end

```

The following example shows how to enable Cisco Express Forwarding operation on the router (globally) and turn off Cisco Express Forwarding operation on Ethernet interface 0:

```

configure terminal
!

ip cef
!
interface e0
  no ip route-cache cef
end

```

The following example shows how to enable distributed Cisco Express Forwarding operation on the router (globally) and turn off Cisco Express Forwarding operation on Ethernet interface 0:

```

configure terminal
!
ip cef distributed

interface e0
  no ip route-cache cef
end

```

The following example shows how to reenable distributed Cisco Express Forwarding operation on Ethernet interface 0:

```

configure terminal
!
ip cef distributed
!
interface e0
  ip route-cache distributed
end

```

Additional References

The following sections provide references related to enabling or disabling central Cisco Express Forwarding or distributed Cisco Express Forwarding.

Related Documents

Related Topic	Document Title
IP switching commands: complete command syntax, command modes, command history, defaults, usage guidelines, and examples.	Cisco IOS IP Switching Command Reference
List of the features documented in the Cisco Express Forwarding modules	Cisco Express Forwarding Features Roadmap
Overview of the Cisco Express Forwarding feature	Cisco Express Forwarding Overview
Tasks for verifying Cisco Express Forwarding information on your router	Configuring Basic Cisco Express Forwarding for Improved Performance, Scalability, and Resiliency in Dynamic Networks
Tasks for configuring a load-balancing scheme for Cisco Express Forwarding	Configuring a Load-Balancing Scheme for Cisco Express Forwarding Traffic
Tasks for configuring Cisco Express Forwarding consistency checkers	Configuring Cisco Express Forwarding Consistency Checkers for Route Processors and Line Cards
Tasks for configuring epochs for Cisco Express Forwarding tables	Configuring Epochs to Clear and Rebuild Cisco Express Forwarding and Adjacency Tables
Tasks for configuring and verifying Cisco Express Forwarding network accounting	Configuring Cisco Express Forwarding Network Accounting
Tasks for customizing the display of recorded Cisco Express Forwarding events	Customizing the Display of Recorded Cisco Express Forwarding Events
Troubleshooting tips for incomplete adjacencies	Troubleshooting Incomplete Adjacencies with CEF
Description and use of the Cisco Express Forwarding consistency checkers available for the Cisco 7500 and 12000 series routers	Troubleshooting Prefix Inconsistencies with Cisco Express Forwarding
Information about troubleshooting Cisco Express Forwarding routing loops and suboptimal routing	Troubleshooting Cisco Express Forwarding Routing Loops
Causes of common Cisco Express Forwarding-related error messages on platforms running distributed Cisco Express Forwarding switching (Cisco 7500 series routers and Cisco 12000 Series Internet routers) and how to troubleshoot them	Troubleshooting Cisco Express Forwarding-Related Error Messages
Explanation of and troubleshooting information for the Cisco IOS software implementation of Layer 3 load balancing across multiple parallel links when Cisco Express Forwarding is used	Troubleshooting Load Balancing Over Parallel Links Using Cisco Express Forwarding
QoS features that require Cisco Express Forwarding	When Is CEF Required for Quality of Service
Cisco Express Forwarding command changes for MPLS HA application and the MFI infrastructure in Cisco IOS 12.2S releases	Cisco Express Forwarding: Command Changes

Standards

Standards	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	—

MIBs

MIBs	MIBs Link
No new or modified MIBs are supported by this feature, and support for existing MIBs has not been modified by this feature.	To locate and download MIBs for selected platforms, Cisco IOS releases, and feature sets, use Cisco MIB Locator found at the following URL: http://www.cisco.com/go/mibs

RFCs

RFCs	Title
No new or modified RFCs are supported by this feature, and support for existing RFCs has not been modified by this feature.	—

Technical Assistance

Description	Link
<p>The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.</p> <p>To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.</p> <p>Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.</p>	http://www.cisco.com/cisco/web/support/index.html

Feature Information for Enabling or Disabling Cisco Express Forwarding or Distributed Cisco Express Forwarding

Table 1 lists the release history for this feature.

For information on a feature in this technology that is not documented here, see the [Cisco Express Forwarding Features Roadmap](#).

Use Cisco Feature Navigator to find information about platform support and software image support. Cisco Feature Navigator enables you to determine which Cisco IOS and Catalyst OS software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to <http://www.cisco.com/go/cfn>. An account on Cisco.com is not required.



Note

Table 1 lists only the Cisco IOS software release that introduced support for a given feature in a given Cisco IOS software release train. Unless noted otherwise, subsequent releases of that Cisco IOS software release train also support that feature.

Table 1 Feature Information for Enabling or Disabling Cisco Express Forwarding or Distributed Cisco Express Forwarding

Feature Name	Releases	Feature Configuration Information
This table is intentionally left blank because no features were introduced or modified in Cisco IOS Release 12.2(1) or later. This table will be updated when feature information is added to this module.	—	—

Glossary

adjacency—A relationship formed between selected neighboring routers and end nodes for the purpose of exchanging routing information. Adjacency is based upon the use of a common media segment by the routers and nodes involved.

Cisco Express Forwarding—A Layer 3 switching technology. Cisco Express Forwarding can also refer to central Cisco Express Forwarding mode, one of two modes of Cisco Express Forwarding operation. Cisco Express Forwarding enables a Route Processor to perform express forwarding. Distributed Cisco Express Forwarding is the other mode of Cisco Express Forwarding operation.

distributed Cisco Express Forwarding—A mode of Cisco Express Forwarding operation in which line cards (such as Versatile Interface Processor (VIP) line cards) maintain identical copies of the forwarding information base (FIB) and adjacency tables. The line cards perform the express forwarding between port adapters; this relieves the Route Switch Processor of involvement in the switching operation.

FIB—forwarding information base. A component of Cisco Express Forwarding that is conceptually similar to a routing table or information base. The router uses the FIB lookup table to make destination-based switching decisions during Cisco Express Forwarding operation. The router maintains a mirror image of the forwarding information in an IP routing table.

GRE—generic routing encapsulation. A tunneling protocol developed by Cisco that enables encapsulation of a wide variety of protocol packet types inside IP tunnels. GRE creates a virtual point-to-point link to Cisco routers at remote points over an IP internetwork. By connecting multiprotocol subnetworks in a single-protocol backbone environment, IP tunneling using GRE allows the expansion of a network across a single-protocol backbone environment.

IPC—interprocess communication. The mechanism that enables the distribution of Cisco Express Forwarding tables from the Route Switch Processor (RSP) to the line card when the router is operating in distributed Cisco Express Forwarding mode.

label disposition—The removal of Multiprotocol Label Switching (MPLS) headers at the edge of a network. In MPLS label disposition, packets arrive on a router as MPLS packets and, with the header removed, are transmitted as IP packets.

label imposition—The action of putting a label on a packet.

LER—label edge router. A router that performs label imposition.

LFIB—Label Forwarding Information Base. The data structure used by switching functions to switch labeled packets.

LIB—Label information base. A database used by a label switch router (LSR) to store labels learned from other LSRs, as well as labels assigned by the local LSR.

line card—A general term for an interface processor that can be used in various Cisco products. For example, a Versatile Interface Processor (VIP) is a line card for the Cisco 7500 series router.

LSP—label switched path. A sequence of hops (Router 0...Router n). A packet travels from R0 to Rn by means of label switching mechanisms. An LSP can be chosen dynamically, based on normal routing mechanisms, or you can configure the LSP manually.

LSR—label switch router. A Layer 3 router that forwards a packet based on the value of a label encapsulated in the packet.

MPLS—Multiprotocol Label Switching. An emerging industry standard for the forwarding of packets along the normal routing paths (sometimes called MPLS hop-by-hop forwarding).

prefix—The network address portion of an IP address. A prefix is specified by a network and mask and is generally represented in the format network/mask. The mask indicates which bits are the network bits. For example, 1.0.0.0/16 means that the first 16 bits of the IP address are masked, making them the network bits. The remaining bits are the host bits. In this example, the network number is 10.0.

RIB—Routing Information Base. A central repository of routes that contains Layer 3 reachability information and destination IP addresses or prefixes. The RIB is also known as the routing table.

RP—Route Processor. The processor module in the Cisco 7000 series routers that contains the CPU, system software, and most of the memory components that are used in the router. It is sometimes called a supervisory processor.

RSP—Route Switch Processor. The processor module used in the Cisco 7500 series routers that integrates the functions of the Route Processor (RP) and the Switch Processor (SP).

SP—Switch Processor. Cisco 7000-series processor module that acts as the administrator for all CxBus activities. It is also sometimes called a CiscoBus controller.

VIP—Versatile Interface Processor. An interface card used in Cisco 7000 and Cisco 7500 series routers. The VIP provides multilayer switching and runs Cisco IOS software.

VPN—Virtual Private Network. The result of a router configuration that enables IP traffic to use tunneling to travel securely over a public TCP/IP network.

VRF—A Virtual Private Network (VPN) routing/forwarding instance. A VRF consists of an IP routing table, a derived forwarding table, a set of interfaces that use the forwarding table, and a set of rules and routing protocols that determine what goes into the forwarding table. In general, a VRF includes the routing information that defines a customer VPN site that is attached to a PE router.

CCDE, CCENT, CCSI, Cisco Eos, Cisco HealthPresence, Cisco IronPort, the Cisco logo, Cisco Nurse Connect, Cisco Pulse, Cisco SensorBase, Cisco StackPower, Cisco StadiumVision, Cisco TelePresence, Cisco Unified Computing System, Cisco WebEx, DCE, Flip Channels, Flip for Good, Flip Mino, Flipshare (Design), Flip Ultra, Flip Video, Flip Video (Design), Instant Broadband, and Welcome to the Human Network are trademarks; Changing the Way We Work, Live, Play, and Learn, Cisco Capital, Cisco Capital (Design), Cisco:Financed (Stylized), Cisco Store, Flip Gift Card, and One Million Acts of Green are service marks; and Access Registrar, Aironet, AllTouch, AsyncOS, Bringing the Meeting To You, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, CCVP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Lumin, Cisco Nexus, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Collaboration Without Limitation, Continuum, EtherFast, EtherSwitch, Event Center, Explorer, Follow Me Browsing, GainMaker, iLYNX, IOS, iPhone, IronPort, the IronPort logo, Laser Link, LightStream, Linksys, MeetingPlace, MeetingPlace Chime Sound, MGX, Networkers, Networking Academy, PCNow, PIX, PowerKEY, PowerPanels, PowerTV, PowerTV (Design), PowerVu, Prisma, ProConnect, ROSA, SenderBase, SMARTnet, Spectrum Expert, StackWise, WebEx, and the WebEx logo are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0910R)

Any Internet Protocol (IP) addresses used in this document are not intended to be actual addresses. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses in illustrative content is unintentional and coincidental.

© 2005–2008 Cisco Systems, Inc. All rights reserved.

