



# Implementing Mobile IPv6

---

**First Published: March 28, 2005**  
**Last Updated: November 11, 2008**

Mobile IP is part of both IPv4 and IPv6 standards. Mobile IP allows a host device to be identified by a single IP address even though the device may move its physical point of attachment from one network to another. Regardless of movement between different networks, connectivity at the different points is achieved seamlessly without user intervention. Roaming from a wired network to a wireless or wide-area network is also done with ease. Mobile IP provides ubiquitous connectivity for users, whether they are within their enterprise networks or away from home.

This document provides information about Mobile IPv6.

## Finding Feature Information

Your software release may not support all the features documented in this module. For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the [“Feature Information for Implementing Mobile IPv6”](#) section on page 29.

Use Cisco Feature Navigator to find information about platform support and Cisco IOS and Catalyst OS software image support. To access Cisco Feature Navigator, go to <http://www.cisco.com/go/cfn>. An account on Cisco.com is not required.

## Contents

- [Finding Feature Information, page 1](#)
- [Restrictions for Implementing Mobile IPv6, page 2](#)
- [Information About Implementing Mobile IPv6, page 2](#)
- [How to Implement Mobile IPv6, page 7](#)
- [Configuration Examples for Implementing Mobile IPv6, page 24](#)
- [Additional References, page 27](#)



---

**Americas Headquarters:**  
**Cisco Systems, Inc., 170 West Tasman Drive, San Jose, CA 95134-1706 USA**

© 2005–2008 Cisco Systems, Inc. All rights reserved.

- [Feature Information for Implementing Mobile IPv6, page 29](#)

## Restrictions for Implementing Mobile IPv6

When using the network mobility (NEMO) basic support protocol feature, users should not enable any IPv6 routing protocols on any of the roaming interfaces.

## Information About Implementing Mobile IPv6

Before you configure Mobile IPv6 for Cisco IOS software, you should understand the following concepts:

- [Mobile IPv6 Overview, page 2](#)
- [How Mobile IPv6 Works, page 2](#)
- [IPv6 NEMO, page 3](#)
- [Mobile IPv6 Home Agent, page 3](#)
- [Packet Headers in Mobile IPv6, page 5](#)
- [IPv6 Neighbor Discovery with Mobile IPv6, page 5](#)
- [Mobile IPv6 Tunnel Optimization, page 6](#)
- [IPv6 Host Group Configuration, page 6](#)

## Mobile IPv6 Overview

Mobile IPv4 provides an IPv4 node with the ability to retain the same IPv4 address and maintain uninterrupted network and application connectivity while traveling across networks. In Mobile IPv6, the IPv6 address space enables Mobile IP deployment in any kind of large environment. No foreign agent is needed to use Mobile IPv6.

System infrastructures do not need an upgrade to accept Mobile IPv6 nodes. IPv6 autoconfiguration simplifies mobile node (MN) Care of Address (CoA) assignment.

Mobile IPv6 benefits from the IPv6 protocol itself; for example, Mobile IPv6 uses IPv6 option headers (routing, destination, and mobility) and benefits from the use of neighbor discovery.

Mobile IPv6 provides optimized routing, which helps avoid triangular routing. Mobile IPv6 nodes work transparently even with nodes that do not support mobility (although these nodes do not have route optimization).

Mobile IPv6 is fully backward-compatible with existing IPv6 specifications. Therefore, any existing host that does not understand the new mobile messages will send an error message, and communications with the mobile node will be able to continue, albeit without the direct routing optimization.

## How Mobile IPv6 Works

To implement Mobile IPv6, you need a home agent on the home subnet on which the mobile node's home address resides. The IPv6 home address (HA) is assigned to the mobile node. The mobile node obtains a new IPv6 address (the CoA) on networks to which it connects. The home agent accepts BUs from the

mobile node informing the agent of the mobile node's location. The home agent then acts as proxy for the mobile node, intercepting traffic to the mobile node's home address and tunneling it to the mobile node.

The mobile node informs a home agent on its original home network about its new address, and the correspondent node communicates with the mobile node about the CoA. Because of the use of ingress filtering, the mobile node reverses tunnel return traffic to the home agent, so that the mobile node source address (that is, its home address) will always be topographically correct.

Mobile IPv6 is the ability of a mobile node to bypass the home agent when sending IP packets to a correspondent node. Optional extensions make direct routing possible in Mobile IPv6, though the extensions might not be implemented in all deployments of Mobile IPv6.

Direct routing is built into Mobile IPv6, and the direct routing function uses the IPv6 routing header and the IPv6 destination options header. The routing header is used for sending packets to the mobile node using its current CoA, and the new home address destination option is used to include the mobile node's home address, because the current CoA is the source address of the packet.

## IPv6 NEMO

The NEMO basic support protocol enables mobile IPv6 networks to attach to different points in the Internet. This protocol is an extension of Mobile IPv6 and allows session continuity for every node in the mobile network as the network moves. NEMO also allows every node in the mobile network to be reachable while the user is moving. The mobile router, which connects the network to the Internet, runs the NEMO basic support protocol with its home agent (HA). NEMO allows network mobility to be transparent to the nodes inside the mobile network.

The NEMO router maintains a mobile route, which is the default route for IPv6 over the roaming interface.

## Mobile IPv6 Home Agent

The home agent is one of three key components in Mobile IPv6. The home agent works with the correspondent node and mobile node to enable Mobile IPv6 functionality:

- Home agent—The home agent maintains an association between the mobile node's home IPv4 or IPv6 address and its CoA (loaned address) on the foreign network.
- Correspondent node—The correspondent node is the destination IPv4 or IPv6 host in session with a mobile node.
- Mobile node—An IPv4 or IPv6 host that maintains network connectivity using its home IPv4 or IPv6 address, regardless of the link (or network) to which it is connected.

The following sections describe Mobile IPv6 home agent functionality:

- [Binding Cache in Mobile IPv6 Home Agent, page 4](#)
- [Binding Update List in Mobile IPv6 Home Agent, page 4](#)
- [Home Agents List, page 4](#)
- [NEMO-Compliant Home Agent, page 4](#)

## Binding Cache in Mobile IPv6 Home Agent

A separate binding cache is maintained by each IPv6 node for each of its IPv6 addresses. When the router sends a packet, it searches the binding cache for an IPv6 address before it searches the neighbor discovery conceptual destination cache.

The binding cache for any one of a node's IPv6 addresses may contain one entry for each mobile node home address. The contents of all of a node's binding cache entries are cleared when it reboots.

Binding cache entries are marked either as home registration or correspondent registration entries. A home registration entry is deleted when its binding lifetime expires; other entries may be replaced at any time through a local cache replacement policy.

## Binding Update List in Mobile IPv6 Home Agent

A binding update (BU) list is maintained by each mobile node. The BU list records information for each BU sent by this mobile node whose lifetime has not yet expired. The BU list includes all BUs sent by the mobile node—those bindings sent to correspondent nodes, and those bindings sent to the mobile node's home agent.

The mobility extension header has a new routing header type and a new destination option, and it is used during the BU process. This header is used by mobile nodes, correspondent nodes, and home agents in all messaging related to the creation and management of bindings.

## Home Agents List

A home agents list is maintained by each home agent and each mobile node. The home agents list records information about each home agent from which this node has recently received a router advertisement in which the home agent (H) bit is set.

Each home agent maintains a separate home agents list for each link on which it is serving as a home agent. This list is used by a home agent in the dynamic home agent address discovery mechanism. Each roaming mobile node also maintains a home agents list that enables it to notify a home agent on its previous link when it moves to a new link.

## NEMO-Compliant Home Agent

Protocol extensions to Mobile IPv6 are used to enable support for network mobility. The extensions are backward-compatible with existing Mobile IPv6 functionality. A NEMO-compliant home agent can operate as a Mobile IPv6 home agent.

The dynamic home agent address discovery (DHAAD) mechanism allows a mobile node to discover the address of the home agent on its home link. The following list describes DHAAD functionality and features:

- The mobile router sends Internet Control Message Protocol (ICMP) home agent address discovery requests to the Mobile IPv6 home agent's anycast address for the home subnet prefix.
- A new flag (R) is introduced in the DHAAD request message, indicating the desire to discover home agents that support mobile routers. This flag is added to the DHAAD reply message as well.
- On receiving the home agent address discovery reply message, the mobile router discovers the home agents operating on the home link.
- The mobile router attempts home registration to each of the home agents until its registration is accepted. The mobile router waits for the recommended length of time between its home registration attempts with each of its home registration attempts.

## Implicit Prefix Registration

When using implicit prefix registration, the mobile router does not register any prefixes as part of the binding update with its home agent. This function requires a static configuration at the home agent, and the home agent must have the information of the associated prefixes with the given mobile router for it to set up route forwarding.

## Explicit Prefix Registration

When using explicit prefix registration, the mobile router presents a list of prefixes to the home agent as part of the binding update procedure. If the home agent determines that the mobile router is authorized to use these prefixes, it sends a bind acknowledgment message.

## Packet Headers in Mobile IPv6

The basic IPv6 packet header has 8 fields with a total size of 40 octets (320 bits). Fields were removed from the IPv6 header compared with the IPv4 header because, in IPv6, fragmentation is not handled by routers and checksums at the network layer are not used. Instead, fragmentation in IPv6 is handled by the source of a packet and checksums at the data link layer and transport layer are used. Additionally, the basic IPv6 packet header and options field are aligned to 64 bits, which can facilitate the processing of IPv6 packets.

Mobile IPv6 uses the routing and destination option headers for communications between the mobile node and the correspondent node. The new mobility option header is used only for the BU process.

Several ICMP message types have been defined to support Mobile IPv6. IPv6 access lists can be configured to allow IPv6 access list entries matching Mobile-IPv6-specific ICMP messages to be configured and to allow the definition of entries to match packets containing Mobile IPv6 extension headers.

For further information on IPv6 packet headers, refer to the [Implementing IPv6 Addressing and Basic Connectivity](#) module.

## IPv6 Neighbor Discovery with Mobile IPv6

The IPv6 neighbor discovery feature has the following modifications to allow the feature to work with Mobile IPv6:

- Modified router advertisement message format—has a single flag bit that indicates home agent service
- Modified prefix information option format—allows a router to advertise its global address
- New advertisement interval option format
- New home agent information option format
- Changes to sending router advertisements
- Provide timely movement detection for mobile nodes

## IPv6 Neighbor Discovery Duplicate Address Detection in NEMO

IPv6 routers are required to run duplicate address detection (DAD) on all IPv6 addresses obtained in stateless and stateful autoconfiguration modes before assigning them to any of its interfaces. Whenever a mobile router roams and obtains an IPv6 address, the mobile router must perform DAD on the newly obtained care-of address and on its link-local address in order to avoid address collisions.

However, the DAD feature adds significant handoff delays in certain Layer 2 environments. These delays may be avoided by using optimistic DAD techniques. NEMO supports optimization options for omitting DAD on care-of address or on both the care-of address and link-local address.

For further information on IPv6 neighbor discovery, refer to the *Implementing IPv6 Addressing and Basic Connectivity* module.

## Mobile IPv6 Tunnel Optimization

Mobile IPv6 tunnel optimization enables routing over a native IPv6 tunnel infrastructure, allowing Mobile IPv6 to use all IPv6 tunneling infrastructure features, such as Cisco Express Forwarding switching support.

After the home agent receives a valid BU request from a mobile node, it sets up its endpoint of the bidirectional tunnel. This process involves creating a logical interface with the encapsulation mode set to IPv6/IPv6, the tunnel source to the home agent's address on the mobile node's home link, and the tunnel destination set to the mobile node's registered care-of address. A route will be inserted into the routing table for the mobile node's home address via the tunnel.

## IPv6 Host Group Configuration

Users can create mobile user or group policies using the IPv6 host group configuration. The host group profile lookup interface will allow the lookup of the profile associated with the sender of the BU using any of the search keys:

- Profile name
- IPv6 address
- Network address identifier (NAI)

The host profile lookup interface also specifies the authentication properties for the IPv6 mobile node by creating either a unidirectional or bidirectional security parameter index (SPI).

A group profile is activated after the SPI option is configured and either an NAI or an IPv6 address is configured. In addition, a profile is deactivated if the minimum required options are not configured. If any active profile that has active bindings gets deactivated or removed, all bindings associated to that profile are revoked.

## Mobile IPv6 Node Identification Based on NAI

A mobile node can identify itself using its home address as an identifier. The Mobile IPv6 protocol messages use this identifier in their registration messages. However, for certain deployments it is essential that the mobile node has the capability to identify itself using a logical identifier, such as NAI, rather than a network address. The mobile node identifier option for Mobile IPv6 allows a mobile node to be identified by NAI rather than IPv6 address. This feature enables the network to give a dynamic IPv6

address to a mobile node and authenticate the mobile node using authentication, authorization, and accounting (AAA). This option should be used when either Internet Key Exchange (IKE) or IPsec is not used for protecting BUs or binding acknowledgments (BAs).

In order to provide roaming services, a standardized method, such as NAI or a mobile node home address, is needed for identifying users. Roaming may be loosely defined as the ability to use any one of multiple Internet service providers (ISPs) while maintaining a formal, customer-vendor relationship with only one. Examples of where roaming capabilities might be required include ISP confederations and ISP-provided corporate network access support. Other entities interested in roaming capability may include the following:

- Regional ISPs, operating within a particular state or province, that want to combine efforts with those of other regional providers to offer dialup service over a wider area.
- National ISPs that want to combine their operations with those of one or more ISPs in another country to offer more comprehensive dialup service in a group of countries or on a continent.
- Wireless LAN hot spots that provide service to one or more ISPs.
- Businesses that want to offer their employees a comprehensive package of dialup services on a global basis. Those services may include Internet access and secure access to corporate intranets using a VPN.

## Authentication Protocol for Mobile IPv6

The authentication protocol for Mobile IPv6 support secures mobile node and home agent signaling using the MN-HA mobility message authentication option, which authenticates the BU and BA messages based on the shared-key-based security association between the mobile node (MN) and the HA. This feature allows Mobile IPv6 to be deployed in a production environment where a non-IPsec authentication method is required. MN-HA consists of a mobility SPI, a shared key, an authentication algorithm, and the mobility message replay protection option.

The mobility SPI is a number from 256 through 4,294,967,296. The key consists of an arbitrary value and is 16 octets in length. The authentication algorithm used is HMAC\_SHA1. The replay protection mechanism may use either the sequence number option or the time-stamp option. The MN-HA mobility message authentication option must be the last option in a message with a mobility header if it is the only mobility message authentication option in the message.

When a BU or BA message is received without the MN-HA option and the entity receiving it is configured to use the MN-HA option or has the shared-key-based mobility security association for the mobility message authentication option, the entity discards the received message.

The mobility message replay protection option allows the home agent to verify that a BU has been freshly generated by the mobile node and not replayed by an attacker from some previous BU. This functionality is especially useful for cases where the home agent does not maintain stateful information about the mobile node after the binding entry has been removed. The home agent performs the replay protection check after the BU has been authenticated. The mobility message replay protection option is used by the mobile node for matching the BA with the BU. When the home agent receives the mobility message replay protection option in BU, it must include the mobility message replay protection option in the BA.

## How to Implement Mobile IPv6

The following tasks explain how to enable and configure Mobile IPv6:

- [Enabling Mobile IPv6 on the Router, page 8](#)

- [Configuring Binding Information for Mobile IPv6](#), page 9
- [Enabling and Configuring NEMO on the IPv6 Mobile Router](#), page 10
- [Enabling NEMO on the IPv6 Mobile Router Home Agent](#), page 12
- [Enabling Roaming on the IPv6 Mobile Router Interface](#), page 13
- [Filtering Mobile IPv6 Protocol Headers and Options](#), page 14
- [Controlling ICMP Unreachable Messages](#), page 15
- [Verifying Native IPv6 Tunneling for Mobile IPv6](#), page 16
- [Configuring and Verifying Host Groups for Mobile IPv6](#), page 17
- [Customizing Mobile IPv6 on the Interface](#), page 19
- [Monitoring and Maintaining Mobile IPv6 on the Router](#), page 20

## Enabling Mobile IPv6 on the Router

The following task describes how to enable Mobile IPv6 on a specified interface and display Mobile IPv6 information. You can customize interface configuration parameters before you start Mobile IPv6 (see the “[Customizing Mobile IPv6 on the Interface](#)” section on page 19) or while Mobile IPv6 is in operation.

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface** *type number*
4. **ipv6 mobile home-agent** [**preference** *preference-value*]
5. **exit**
6. **exit**
7. **show ipv6 mobile globals**
8. **show ipv6 mobile home-agent** [*interface-type interface-number* [*prefix*]]

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>enable</b>  <b>Example:</b> Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
Step 2	<b>configure terminal</b>  <b>Example:</b> Router# configure terminal	Enters global configuration mode.

	Command or Action	Purpose
Step 3	<b>interface</b> <i>type number</i>  <b>Example:</b> Router(config)# interface Ethernet 2	Specifies an interface type and number, and places the router in interface configuration mode.
Step 4	<b>ipv6 mobile home-agent</b> [ <b>preference preference-value</b> ]  <b>Example:</b> Router(config-if)# ipv6 mobile home-agent	Initializes and starts the Mobile IPv6 home agent on a specific interface.
Step 5	<b>exit</b>  <b>Example:</b> Router(config-if)# exit	Exits interface configuration mode, and returns the router to global configuration mode.
Step 6	<b>exit</b>  <b>Example:</b> Router(config)# exit	Exits global configuration mode, and returns the router to privileged EXEC mode.
Step 7	<b>show ipv6 mobile globals</b>  <b>Example:</b> Router# show ipv6 mobile globals	Displays global Mobile IPv6 parameters.
Step 8	<b>show ipv6 mobile home-agent</b> [ <i>interface-type interface-number</i> [ <i>prefix</i> ]]  <b>Example:</b> Router# show ipv6 mobile home-agent	Displays local and discovered neighboring home agents.

## Configuring Binding Information for Mobile IPv6

Before you start Mobile IPv6 on a specified interface, you can configure binding information on the router. The following task describes how to configure and verify binding information on the IPv6 router.

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **ipv6 mobile home-agent**
4. **binding** [**access** *access-list-name* | *auth-option* | *seconds* | *maximum* | *refresh*]
5. **exit**
6. **exit**
7. **show ipv6 mobile binding** [**care-of-address** *address* | **home-address** *address* | *interface-type interface-number*]
8. **show ipv6 mobile traffic**

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>enable</b>  <b>Example:</b> Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>Enter your password if prompted.</li> </ul>
Step 2	<b>configure terminal</b>  <b>Example:</b> Router# configure terminal	Enters global configuration mode.
Step 3	<b>ipv6 mobile home-agent</b>  <b>Example:</b> Router(config)# ipv6 mobile home-agent	Places the router in home-agent configuration mode.
Step 4	<b>binding</b> [ <b>access</b> <i>access-list-name</i>   <i>auth-option</i>   <i>seconds</i>   <i>maximum</i>   <i>refresh</i> ]  <b>Example:</b> Router(config-ha)# binding	Configures binding options for the Mobile IPv6 home agent feature.
Step 5	<b>exit</b>  <b>Example:</b> Router(config-ha)# exit	Exits home-agent configuration mode, and returns the router to global configuration mode.
Step 6	<b>exit</b>  <b>Example:</b> Router(config)# exit	Exits global configuration mode, and returns the router to privileged EXEC mode.
Step 7	<b>show ipv6 mobile binding</b> [ <b>care-of-address</b> <i>address</i>   <b>home-address</b> <i>address</i>   <i>interface-type</i> <i>interface-number</i> ]  <b>Example:</b> Router# show ipv6 mobile binding	Displays information about the binding cache.
Step 8	<b>show ipv6 mobile traffic</b>  <b>Example:</b> Router# show ipv6 mobile traffic	Displays information about BUs received and BAs sent.

## Enabling and Configuring NEMO on the IPv6 Mobile Router

The NEMO basic support protocol enables mobile IPv6 networks to attach to different points in the Internet. This task describes how to enable and configure NEMO on the IPv6 mobile router, and how to verify NEMO configuration.

## SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **ipv6 mobile router**
4. **home-network** *ipv6-prefix* [**discover**] [**priority** *priority-number*]
5. **home-address** **home-network** {*ipv6-address-identifier* | **eui-64**}
6. **explicit-prefix**
7. **register** {**extend** **expire** *seconds* **retry** *number* **interval** *seconds* | **lifetime** *seconds* | **retransmit** **initial** *milliseconds* **maximum** *milliseconds* **retry** *number*}
8. **exit**
9. **exit**
10. **show ipv6 mobile router** [**running-config** | **status**]

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>enable</b>  <b>Example:</b> Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"><li>• Enter your password if prompted.</li></ul>
Step 2	<b>configure terminal</b>  <b>Example:</b> Router# configure terminal	Enters global configuration mode.
Step 3	<b>ipv6 mobile router</b>  <b>Example:</b> Router(config)# ipv6 mobile router	Enables IPv6 NEMO functionality on a router, and places the router in IPv6 mobile router configuration mode.
Step 4	<b>home-network</b> <i>ipv6-prefix</i> [ <b>discover</b> ] [ <b>priority</b> <i>priority-number</i> ]  <b>Example:</b> Router(IPv6-mobile-router)# home-network 2001::/32	Specifies the home network's IPv6 prefix on the mobile router.
Step 5	<b>home-address</b> <b>home-network</b> { <i>ipv6-address-identifier</i>   <b>eui-64</b> }	Specifies the home address using the home network or interface identifier.
Step 6	<b>explicit-prefix</b>  <b>Example:</b> Router(IPv6-mobile-router)# explicit-prefix	Registers IPv6 prefixes connected to the IPv6 mobile router.

	Command or Action	Purpose
Step 7	<pre>register {extend expire seconds retry number interval seconds   lifetime seconds   retransmit initial milliseconds maximum milliseconds retry number}</pre> <p><b>Example:</b> Router(IPv6-mobile-router)# register lifetime 600</p>	Controls the registration parameters of the IPv6 mobile router.
Step 8	<pre>exit</pre> <p><b>Example:</b> Router(IPv6-mobile-router)# exit</p>	Exits IPv6 mobile router configuration mode, and returns the router to global configuration mode.
Step 9	<pre>exit</pre> <p><b>Example:</b> Router(config)# exit</p>	Exits global configuration mode, and returns the router to privileged EXEC mode.
Step 10	<pre>show ipv6 mobile router [running-config   status]</pre> <p><b>Example:</b> Router# show ipv6 mobile router</p>	Displays configuration information and monitoring statistics about the IPv6 mobile router.

## Enabling NEMO on the IPv6 Mobile Router Home Agent

This task describes how to enable and configure NEMO on the IPv6 mobile router home agent.

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **ipv6 router nemo**
4. **distance** [*mobile-distance*]

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<pre>enable</pre> <p><b>Example:</b> Router&gt; enable</p>	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
Step 2	<pre>configure terminal</pre> <p><b>Example:</b> Router# configure terminal</p>	Enters global configuration mode.

	Command or Action	Purpose
Step 3	<code>ipv6 router nemo</code>  <b>Example:</b> Router(config)# ipv6 router nemo	Enables the NEMO routing process on the home agent and place the router in router configuration mode.
Step 4	<code>distance [mobile-distance]</code>  <b>Example:</b> Router(config-rtr)# distance 10	Defines an administrative distance for NEMO routes.

## Enabling Roaming on the IPv6 Mobile Router Interface

This task describes how to enable roaming on the IPv6 mobile router interface.

### SUMMARY STEPS

1. `enable`
2. `configure terminal`
3. `interface type number`
4. `ipv6 mobile router-service roam [bandwidth-efficient | cost-efficient | optimistic | semi-optimistic | priority value]`

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<code>enable</code>  <b>Example:</b> Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
Step 2	<code>configure terminal</code>  <b>Example:</b> Router# configure terminal	Enters global configuration mode.
Step 3	<code>interface type number</code>  <b>Example:</b> Router(config)# interface ethernet 0/0	Specifies the interface type and number, and enters interface configuration mode.
Step 4	<code>ipv6 mobile router-service roam [bandwidth-efficient   cost-efficient   optimistic   semi-optimistic   priority value]</code>  <b>Example:</b> Router(config-if)# ipv6 mobile router-service roam	Enables the IPv6 mobile router interface to roam.

## Filtering Mobile IPv6 Protocol Headers and Options

IPv6 extension headers have been developed to support the use of option headers specific to Mobile IPv6. The IPv6 mobility header, the type 2 routing header, and the destination option header allow the configuration of IPv6 access list entries that match Mobile-IPv6-specific ICMPv6 messages and allow the definition of entries to match packets that contain the new and modified IPv6 extension headers.

This task describes how to enable filtering of Mobile IPv6 protocol headers and options. For more information on how to create, configure, and apply IPv6 access lists, refer to the *Implementing Traffic Filters and Firewalls for IPv6 Security* module.

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **ipv6 access-list** *access-list-name*
4. **permit icmp** { *source-ipv6-prefix/prefix-length* | **any** | **host** *source-ipv6-address* | **auth** } [*operator* [*port-number*]] { *destination-ipv6-prefix/prefix-length* | **any** | **host** *destination-ipv6-address* | **auth** } [*operator* [*port-number*]] [*icmp-type* [*icmp-code*] | *icmp-message*] [**dest-option-type** [*doh-number* | *doh-type*]] [**dscp** *value*] [**flow-label** *value*] [**fragments**] [**log**] [**log-input**] [**mobility**] [**mobility-type** [*mh-number* | *mh-type*]] [**routing**] [**routing-type** *routing-number*] [**sequence** *value*] [**time-range** *name*]  
or  
**deny icmp** { *source-ipv6-prefix/prefix-length* | **any** | **host** *source-ipv6-address* | **auth** } [*operator* [*port-number*]] { *destination-ipv6-prefix/prefix-length* | **any** | **host** *destination-ipv6-address* | **auth** } [*operator* [*port-number*]] [*icmp-type* [*icmp-code*] | *icmp-message*] [**dest-option-type** [*doh-number* | *doh-type*]] [**dscp** *value*] [**flow-label** *value*] [**fragments**] [**log**] [**log-input**] [**mobility**] [**mobility-type** [*mh-number* | *mh-type*]] [**routing**] [**routing-type** *routing-number*] [**sequence** *value*] [**time-range** *name*]

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>enable</b>  <b>Example:</b> Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
Step 2	<b>configure terminal</b>  <b>Example:</b> Router# configure terminal	Enters global configuration mode.

Command or Action	Purpose
<p><b>Step 3</b> <code>ipv6 access-list access-list-name</code></p> <p><b>Example:</b> Router(config)# ipv6 access-list list1</p>	<p>Defines an IPv6 access list and places the router in IPv6 access list configuration mode.</p>
<p><b>Step 4</b> <code>permit icmp {source-ipv6-prefix/prefix-length   any   host source-ipv6-address   auth} [operator [port-number]] {destination-ipv6-prefix/prefix-length   any   host destination-ipv6-address   auth} [operator [port-number]] [icmp-type [icmp-code]   icmp-message] [dest-option-type [doh-number   doh-type]] [dscp value] [flow-label value] [fragments] [log] [log-input] [mobility] [mobility-type [mh-number   mh-type]] [routing] [routing-type routing-number] [sequence value] [time-range name]</code></p> <p>or</p> <p><code>deny icmp {source-ipv6-prefix/prefix-length   any   host source-ipv6-address   auth} [operator [port-number]] {destination-ipv6-prefix/prefix-length   any   host destination-ipv6-address   auth} [operator [port-number]] [icmp-type [icmp-code]   icmp-message] [dest-option-type [doh-number   doh-type]] [dscp value] [flow-label value] [fragments] [log] [log-input] [mobility] [mobility-type [mh-number   mh-type]] [routing] [routing-type routing-number] [sequence value] [time-range name]</code></p> <p><b>Example:</b> Router(config-ipv6-acl)# permit icmp host 2001:0DB8:0:4::32 any routing-type 2</p> <p>or</p> <p>Router(config-ipv6-acl)# deny icmp host 2001:0DB8:0:4::32 any routing-type 2</p>	<p>Specifies permit or deny conditions for Mobile-IPv6-specific option headers in an IPv6 access list.</p> <ul style="list-style-type: none"> <li>• The <i>icmp-type</i> argument can be (but is not limited to) one of the following Mobile-IPv6-specific options: <ul style="list-style-type: none"> <li>– dhaad-request—numeric value is 144</li> <li>– dhaad-reply—numeric value is 145</li> <li>– mpd-solicitation—numeric value is 146</li> <li>– mpd-advertisement—numeric value is 147</li> </ul> </li> <li>• When the <b>dest-option-type</b> keyword with the <i>doh-number</i> or <i>doh-type</i> argument is used, IPv6 packets are matched against the destination option extension header within each IPv6 packet header.</li> <li>• When the <b>mobility</b> keyword is used, IPv6 packets are matched against the mobility extension header within each IPv6 packet header.</li> <li>• When the <b>mobility-type</b> keyword with the <i>mh-number</i> or <i>mh-type</i> argument is used, IPv6 packets are matched against the mobility-type option extension header within each IPv6 packet header.</li> <li>• When the <b>routing-type</b> keyword and <i>routing-number</i> argument are used, IPv6 packets are matched against the routing-type option extension header within each IPv6 packet header.</li> </ul>

## Controlling ICMP Unreachable Messages

When IPv6 is unable to route a packet, it generates an appropriate ICMP unreachable message directed toward the source of the packet. This task describes how to control ICMP unreachable messages for any packets arriving on a specified interface.

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface type number**
4. **ipv6 unreachable**

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>enable</b>  <b>Example:</b> Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>Enter your password if prompted.</li> </ul>
Step 2	<b>configure terminal</b>  <b>Example:</b> Router# configure terminal	Enters global configuration mode.
Step 3	<b>interface</b> <i>type number</i>  <b>Example:</b> Router(config)# interface ethernet 0/0	Specifies the interface type and number, and enters interface configuration mode.
Step 4	<b>ipv6 unreachable</b>  <b>Example:</b> Router(config-if)# ipv6 unreachable	Enables the generation of ICMPv6 unreachable messages for any packets arriving on the specified interface.

## Verifying Native IPv6 Tunneling for Mobile IPv6

The following task shows how to verify IPv6 tunnel information in Mobile IPv6.

Using the native IPv6 tunneling (or generic routing encapsulation [GRE]) infrastructure improves the scalability and switching performance of the home agent. After the home agent sends a BU from a mobile node, a tunnel interface is created with the encapsulation mode set to IPv6/IPv6, the source address set to that of the home agent address on the home interface of the mobile node, and the tunnel destination set to that of the CoA of the mobile node.

These features are transparent and need not be configured in order to work with Mobile IPv6. For further information on IPv6 tunneling and how to implement GRE tunneling in IPv6, see the *Implementing Tunneling for IPv6* module.

## SUMMARY STEPS

- enable**
- show ipv6 mobile tunnels** [**summary** | **tunnel** *if-number*]

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>enable</b>  <b>Example:</b> Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
Step 2	<b>show ipv6 mobile tunnels</b> [ <b>summary</b>   <b>tunnel</b> <i>if-number</i> ]  <b>Example:</b> Router# show ipv6 mobile tunnels	Lists the Mobile IPv6 tunnels on the home agent.

## Configuring and Verifying Host Groups for Mobile IPv6

This task describes how to configure and verify host group information for Mobile IPv6.

Users can create mobile user or group policies using the host group configuration. The host group profile lookup interface will allow the lookup of the profile associated with the sender of the BU using the sender's profile name, IPv6 address, or NAI. The host profile lookup interface also specifies the authentication properties for the IPv6 mobile node by creating either a unidirectional or bidirectional SPI.

A mobile node can identify itself using its profile name or home address as an identifier, which the Mobile IPv6 protocol messages use as an identifier in their registration messages. However, for certain deployments it is essential that the mobile node has the capability to identify itself using a logical identifier such as NAI rather than a network address.

### Restrictions

- You cannot configure two host group profiles with the same IPv6 address when using the IPv6 address option.
- You cannot configure a profile with the NAI option set to a realm name and the address option set to a specific IPv6 address. You can either remove the NAI option or specify a fully qualified user name for the NAI option.

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **ipv6 mobile home-agent**
4. **binding** [**access** *access-list-name* | *auth-option* | *seconds* | *maximum* | *refresh*]
5. **host group** *profile-name*
6. **address** {*ipv6-address* | **autoconfig**}
7. **nai** [**realm** | **user** | **macaddress**] {*user@realm* | *@realm*}

8. **authentication** {**inbound-spi** {*hex-in* | **decimal** *decimal-in*} **outbound-spi** {*hex-out* | **decimal** *decimal-out*} | **spi** {*hex-value* | **decimal** *decimal-value*}} **key** {*ascii string* | *hex string*} [**algorithm** *algorithm-type*] [**replay within** *seconds*]
9. **exit**
10. **exit**
11. **show ipv6 mobile host groups** [*profile-name*]

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>enable</b>  <b>Example:</b> Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"><li>Enter your password if prompted.</li></ul>
Step 2	<b>configure terminal</b>  <b>Example:</b> Router# configure terminal	Enters global configuration mode.
Step 3	<b>ipv6 mobile home-agent</b>  <b>Example:</b> Router(config)# ipv6 mobile home-agent	Places the router in home-agent configuration mode.
Step 4	<b>binding</b> [ <b>access</b> <i>access-list-name</i>   <i>auth-option</i>   <i>seconds</i>   <i>maximum</i>   <i>refresh</i> ]  <b>Example:</b> Router(config-ha)# binding 15	Configures binding options for the Mobile IPv6 home agent feature.
Step 5	<b>host group</b> <i>profile-name</i>  <b>Example:</b> Router(config-ha)# host group profile1	Creates a host configuration in Mobile IPv6. <ul style="list-style-type: none"><li>Multiple instances with different profile names can be created and used.</li></ul>
Step 6	<b>address</b> { <i>ipv6-address</i>   <b>autoconfig</b> }  <b>Example:</b> Router(config-ha)# address baba::1	Specifies the home address of the IPv6 mobile node.
Step 7	<b>nai</b> [ <b>realm</b>   <b>user</b>   <b>macaddress</b> ] { <i>user@realm</i>   <i>@realm</i> }  <b>Example:</b> Router(config-ha)# nai @cisco.com	Specifies the NAI for the IPv6 mobile node.

	Command or Action	Purpose
Step 8	<b>authentication</b> { <b>inbound-spi</b> { <i>hex-in</i>   <b>decimal</b> <i>decimal-in</i> } <b>outbound-spi</b> { <i>hex-out</i>   <b>decimal</b> <i>decimal-out</i> }   <b>spi</b> { <i>hex-value</i>   <b>decimal</b> <i>decimal-value</i> }} <b>key</b> { <i>ascii string</i>   <b>hex</b> <i>string</i> } [ <b>algorithm</b> <i>algorithm-type</i> ] [ <b>replay</b> <i>within seconds</i> ]  <b>Example:</b> Router(config-ha)# authentication spi 500 key ascii cisco	Specifies the authentication properties for the IPv6 mobile node by creating either a unidirectional or bidirectional SPI.
Step 9	<b>exit</b>  <b>Example:</b> Router(config-ha)# exit	Exits home-agent configuration mode, and returns the router to global configuration mode.
Step 10	<b>exit</b>  <b>Example:</b> Router(config)# exit	Exits global configuration mode, and returns the router to privileged EXEC mode.
Step 11	<b>show ipv6 mobile host groups</b> [ <i>profile-name</i> ]  <b>Example:</b> Router# show ipv6 mobile host groups	Displays information about Mobile IPv6 host groups.

## Customizing Mobile IPv6 on the Interface

This task describes several ways to customize interface configuration parameters for your router configuration, such as:

- Configuring an advertisement interval option to be sent in router advertisements (RAs)
- Configuring which IPv6 prefixes are included in IPv6 RAs
- Configuring the interval between IPv6 RA transmissions on an interface

You can set these interface configuration parameters before you start Mobile IPv6 or while Mobile IPv6 is in operation. You can customize any of these parameters, as desired.

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface** *type number*
4. **ipv6 mobile home-agent** [**preference** *preference-value*]
5. **ipv6 nd advertisement-interval**
6. **ipv6 nd prefix** {*ipv6-prefix/prefix-length* | **default**} [[*valid-lifetime preferred-lifetime* | **at valid-date preferred-date**] | **infinite** | **no-advertise** | **off-link** | **no-rtr-address** | **no-autoconfig**]
7. **ipv6 nd ra interval** {*maximum-secs [minimum-secs]* | **msec** *maximum-msecs [minimum-msecs]*}

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>enable</b>  <b>Example:</b> Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>Enter your password if prompted.</li> </ul>
Step 2	<b>configure terminal</b>  <b>Example:</b> Router# configure terminal	Enters global configuration mode.
Step 3	<b>interface</b> <i>type number</i>  <b>Example:</b> Router(config)# interface serial 3	Specifies an interface type and number, and places the router in interface configuration mode.
Step 4	<b>ipv6 mobile home-agent</b> [ <b>preference</b> <i>preference-value</i> ]  <b>Example:</b> Router(config-if)# ipv6 mobile home-agent preference 10	Configures the Mobile IPv6 home agent preference value on the interface.
Step 5	<b>ipv6 nd advertisement-interval</b>  <b>Example:</b> Router(config-if)# ipv6 nd advertisement-interval	Configures the advertisement interval option to be sent in RAs.
Step 6	<b>ipv6 nd prefix</b> { <i>ipv6-prefix/prefix-length</i>   <b>default</b> } [[ <i>valid-lifetime preferred-lifetime</i>   <b>at valid-date preferred-date</b> ]   <b>infinite</b>   <b>no-advertise</b>   <b>off-link</b>   <b>no-rtr-address</b>   <b>no-autoconfig</b> ]  <b>Example:</b> Router(config-if)# ipv6 nd prefix 2001:0DB8::/35 1000 900	Configures which IPv6 prefixes are included in IPv6 RAs.
Step 7	<b>ipv6 nd ra interval</b> { <i>maximum-secs</i> [ <i>minimum-secs</i> ]   <b>msec</b> <i>maximum-msecs</i> [ <i>minimum-msecs</i> ]}  <b>Example:</b> Router(config-if)# ipv6 nd ra interval 201	Configures the interval between IPv6 RA transmissions on an interface.

## Monitoring and Maintaining Mobile IPv6 on the Router

This task describes many ways to monitor and maintain a Mobile IPv6 router, such as:

- Clear the Mobile IPv6 binding cache on a router
- Clear the neighboring home agents list

- Clear counters associated with Mobile IPv6
- Enable display of debugging information for Mobile IPv6
- Display memory used by the Mobile IPv6 internal structure

This task is optional, and these commands are used only as necessary to clear or display Mobile IPv6 information or enable Mobile IPv6 debugging.

## SUMMARY STEPS

1. **enable**
2. **clear ipv6 mobile binding** [*care-of-address prefix* | **home-address prefix** | *interface-type interface-number*]
3. **clear ipv6 mobile home-agents** [*interface-type interface-number*]
4. **clear ipv6 mobile traffic**
5. **debug ipv6 mobile** {**binding-cache** | **forwarding** | **home-agent** | **registration**}
6. **debug ipv6 mobile networks**
7. **debug ipv6 mobile router** [**detail**]

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>enable</b>  <b>Example:</b> Router> enable	Enables privileged EXEC mode.  <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
Step 2	<b>clear ipv6 mobile binding</b> [ <i>care-of-address prefix</i>   <b>home-address prefix</b>   <i>interface-type interface-number</i> ]  <b>Example:</b> Router# clear ipv6 mobile binding	Clears the Mobile IPv6 binding cache on a router.
Step 3	<b>clear ipv6 mobile home-agents</b> [ <i>interface-type interface-number</i> ]  <b>Example:</b> Router# clear ipv6 mobile home-agents	Clears the neighboring home agents list.
Step 4	<b>clear ipv6 mobile traffic</b>  <b>Example:</b> Router# clear ipv6 mobile traffic	Clears the counters associated with Mobile IPv6.
Step 5	<b>debug ipv6 mobile</b> { <b>binding-cache</b>   <b>forwarding</b>   <b>home-agent</b>   <b>registration</b> }  <b>Example:</b> Router# debug ipv6 mobile registration	Enables the display of debugging information for Mobile IPv6.

	Command or Action	Purpose
Step 6	<code>debug ipv6 mobile networks</code>  <b>Example:</b> Router# <code>debug ipv6 mobile networks</code>	Displays debugging messages for IPv6 mobile networks.
Step 7	<code>debug ipv6 mobile router [detail]</code>  <b>Example:</b> Router# <code>debug ipv6 mobile router</code>	Displays debugging messages for the IPv6 mobile router.

## Examples

The following sections provides sample **show** command output to verify Mobile IPv6 configuration and operation:

- [Sample Output from the show ipv6 mobile binding Command, page 22](#)
- [Sample Output from the show ipv6 mobile globals Command, page 22](#)
- [Sample Output from the show ipv6 mobile home-agent Command, page 23](#)
- [Sample Output from the show ipv6 mobile host groups Command, page 23](#)
- [Sample Output from the show ipv6 mobile router Command, page 23](#)
- [Sample Output from the show ipv6 mobile traffic Command, page 23](#)
- [Sample Output from the show ipv6 mobile tunnels Command, page 24](#)

### Sample Output from the show ipv6 mobile binding Command

The following example displays information about the binding cache:

```
Router # show ipv6 mobile binding

Mobile IPv6 Binding Cache Entries:
2001:DB8:2000::1111
via care-of address 2001:DB8::A8BB:CCFF:FE01:F611
home-agent 2001:DB8:2000::2001
Prefix 2001:DB8:8000::/64
Prefix 2001:DB8:2000::1111/128
Prefix 2001:DB8:1000::1111/128 installed
state ACTIVE, sequence 23, flags AHR1K
lifetime: remaining 44 (secs), granted 60 (secs), requested 60 (secs)
interface Ethernet0/2
tunnel interface Tunnel0
0 tunneled, 0 reversed tunneled
Selection matched 1 bindings
```

### Sample Output from the show ipv6 mobile globals Command

In the following example, the **show ipv6 mobile globals** command displays the binding parameters:

```
Router# show ipv6 mobile globals

Mobile IPv6 Global Settings:

1 Home Agent service on following interfaces:
  Ethernet1/2
Bindings:
  Maximum number is unlimited.
```

```

1 bindings are in use
1 bindings peak
Binding lifetime permitted is 262140 seconds
Recommended refresh time is 300 seconds

```

### Sample Output from the show ipv6 mobile home-agent Command

In the following example, the fact that no neighboring mobile home agents were found is displayed:

```

Router# show ipv6 mobile home-agent

Home Agent information for Ethernet1/3
Configured:
  FE80::20B:BFFF:FE33:501F
  preference 0 lifetime 1800
  global address 2001:0DB8:1::2/64
Discovered Home Agents:
  FE80::4, last update 0 min
  preference 0 lifetime 1800
  global address 2001:0DB8:1::4/64

```

### Sample Output from the show ipv6 mobile host groups Command

In the following example, information about a host group named localhost is displayed:

```

Router# show ipv6 mobile host groups

Mobile IPv6 Host Configuration
Mobile Host List:

Host Group Name: localhost
NAI: sai@cisco.com
Address: CAB:C0:CA5A:CA5A::CA5A

Security Association Entry:
  SPI: (Hex: 501) (Decimal Int: 1281)
  Key Format: Hex      Key: baba
  Algorithm: HMAC_SHA1
  Replay Protection: On      Replay Window: 6 secs

```

### Sample Output from the show ipv6 mobile router Command

The following example provides information about the IPv6 mobile router status when the router configured with IPv6 NEMO:

```

Router# show ipv6 mobile router

Mobile Reverse Tunnel established
-----
using Nemo Basic mode
Home Agent: 2001:DB8:2000::2001
CareOf Address: 2001:DB8::A8BB:CCFF:FE01:F611
Attachment Router: FE80::A8BB:CCFF:FE01:F511
Attachment Interface: Ethernet1/1
Home Network: 2001:DB8:2000:0:FDFE:FFFF:FFFF:FFFE/64
Home Address: 2001:DB8:2000::1111

```

### Sample Output from the show ipv6 mobile traffic Command

In the following example, information about Mobile IPv6 traffic is displayed:

```

Router# show ipv6 mobile traffic

MIPv6 statistics:
  Rcvd: 6477 total
      0 truncated, 0 format errors

```

```

    0 checksum errors
    Binding Updates received:6477
    0 no HA option, 0 BU's length
    0 options' length, 0 invalid CoA
    Sent: 6477 generated
    Binding Acknowledgements sent:6477
    6477 accepted (0 prefix discovery required)
    0 reason unspecified, 0 admin prohibited
    0 insufficient resources, 0 home reg not supported
    0 not home subnet, 0 not home agent for node
    0 DAD failed, 0 sequence number
    Binding Errors sent:0
    0 no binding, 0 unknown MH

Home Agent Traffic:
    6477 registrations, 0 deregistrations
    00:00:23 since last accepted HA registration
    unknown time since last failed HA registration
    unknown last failed registration code
    Traffic forwarded:
    0 tunneled, 0 reversed tunneled
    Dynamic Home Agent Address Discovery:
    1 requests received, 1 replies sent
    Mobile Prefix Discovery:
    0 solicitations received, 0 advertisements sent

```

### Sample Output from the show ipv6 mobile tunnels Command

The following example displays information about the Mobile IPv6 tunnels on the home agent:

```
Router# show ipv6 mobile tunnels
```

```

Tunnel1:
Source: 2001:0DB1:1:1
Destination: 2001:0DB1:2:1
Encapsulation Mode: IPv6/IPv6
Egress Interface: Ethernet 1/0
Switching Mode: Process
Keep-Alive: Not Supported
Path MTU Discovery: Enabled
Input: 20 packets, 1200 bytes, 0 drops
Output: 20 packets, 1200 bytes, 0 drops
NEMO Options: Not Supported

```

## Configuration Examples for Implementing Mobile IPv6

This section provides the following configuration examples:

- [Enabling Mobile IPv6 on the Router: Example, page 25](#)
- [Enabling and Configuring NEMO on the IPv6 Mobile Router: Example, page 25](#)
- [Enabling NEMO on the IPv6 Mobile Router Home Agent: Example, page 26](#)
- [Enabling Roaming on the IPv6 Mobile Router Interface: Example, page 27](#)
- [Configuring Host Groups for Mobile IPv6: Example, page 27](#)

## Enabling Mobile IPv6 on the Router: Example

The following example shows how to configure and enable Mobile IPv6 on a specified interface:

```
Router> enable
Router# config terminal
Router(config)# interface Ethernet 1
Router(config-if)# ipv6 mobile home-agent
```

## Enabling and Configuring NEMO on the IPv6 Mobile Router: Example

The following example shows how to enable and configure NEMO on the IPv6 mobile router. The /128 subnet must be used; otherwise, the IPv6 mobile router will fail to register because it will believe the home network is locally connected:

```
ipv6 unicast-routing
!
interface Loopback0
no ip address
ipv6 address 2001:0DB8:2000::1111/128
ipv6 nd ra mtu suppress
!
interface Loopback1
no ip address
ipv6 address 2001:0DB8:1000::1111/128
ipv6 nd ra mtu suppress
!
interface Ethernet0/0
description Roaming Interface to AR2
no ip address
ipv6 address autoconfig
ipv6 enable
ipv6 nd ns-interval 5000
ipv6 mobile router-service roam
ipv6 rip home enable
!
interface Ethernet0/1
description Mobile Network Interface
no ip address
ipv6 address 2001:0DB8:8000::8001/64
ipv6 enable
ipv6 nd advertisement-interval
ipv6 nd ra interval msec 1000
ipv6 rip home enable
!
interface Ethernet1/1
description Roaming Interface to AR1
no ip address
ipv6 address autoconfig
ipv6 enable
ipv6 nd ns-interval 5000
ipv6 mobile router-service roam priority 99
ipv6 rip home enable
!
ipv6 router rip home
!
ipv6 mobile router
host group mr-host-group
nai mr1@cisco.com
address 2001:0DB8:2000::2001
authentication spi hex 100 key ascii hi
```

```

exit
home-network 2001:0DB8:2000::/64 discover priority 127
home-network 2001:0DB8:1000::/64 discover
home-address home-network ::1111
explicit-prefix
register lifetime 60
register retransmit initial 1000 maximum 1000 retry 1
register extend expire 20 retry 1 interval 1

```

## Enabling NEMO on the IPv6 Mobile Router Home Agent: Example

The following example shows how to enable and configure NEMO on the IPv6 mobile router home agent. The anycast address is needed for DHAAD to work. The **redistribute nemo** command redistributes NEMO routes into the routing protocol:

```

ipv6 unicast-routing
!
interface Ethernet0/2
description To Network
no ip address
no ipv6 address
ipv6 address 2001:0DB8:2000::2001/64
ipv6 address 2001:0DB8:2000::FDFD:FFFF:FFFF:FFFE/64 anycast
ipv6 enable
ipv6 nd advertisement-interval
ipv6 nd ra lifetime 2
ipv6 nd ra interval msec 1000
ipv6 mobile home-agent preference 100
ipv6 mobile home-agent
ipv6 rip home enable
!
interface Ethernet2/2
description To CN2
no ip address
no ipv6 address
ipv6 address 2001:0DB8:3000::3001/64
ipv6 enable
ipv6 rip home enable
!
ipv6 router nemo
!
ipv6 router rip home
redistribute nemo
poison-reverse
!
ipv6 mobile home-agent
host group mr-host-group
nai mr1@cisco.com
address 2001:0DB8:2000::1111
authentication spi hex 100 key ascii hi
exit
host group mr2-host-group
nai mr2@cisco.com
address 2001:0DB8:2000::2222
authentication spi decimal 512 key hex 12345678123456781234567812345678
exit

```

## Enabling Roaming on the IPv6 Mobile Router Interface: Example

The following example shows how to enable roaming on the IPv6 mobile router interface:

```
Router(config)# interface ethernet 0/0
Router(config-if)# ipv6 mobile router-service roam
```

## Configuring Host Groups for Mobile IPv6: Example

The following example shows how to configure a Mobile IPv6 host group named group1:

```
ipv6 mobile host group group1
  nai sri@cisco.com
  address autoconfig
  authentication spi 500 key ascii cisco
```

## Additional References

The following sections provide references related to the Implementing Mobile IPv6 feature.

## Related Documents

Related Topic	Document Title
IPv6 supported feature list	<a href="#">Start Here: Cisco IOS Software Release Specifics for IPv6 Features</a>
IPv6 commands: complete command syntax, command mode, defaults, usage guidelines, and examples	<a href="#">Cisco IOS IPv6 Command Reference</a>
IPv6 simplified packet headers, IPv6 neighbor discovery, IPv6 stateless autoconfiguration, IPv6 stateful autoconfiguration	“ <a href="#">Implementing IPv6 Addressing and Basic Connectivity</a> ” module of the <i>Cisco IOS IPv6 Configuration Guide</i>
IPv6 access lists	“ <a href="#">Implementing Traffic Filters and Firewalls for IPv6 Security</a> ” module of the <i>Cisco IOS IPv6 Configuration Guide</i>
IPv6 tunneling	“ <a href="#">Implementing Tunneling for IPv6</a> ” module of the <i>Cisco IOS IPv6 Configuration Guide</i>
IPv4 mobility configuration and commands	<ul style="list-style-type: none"> <li><a href="#">Cisco IOS IP Mobility Configuration Guide</a></li> <li><a href="#">Cisco IOS IP Mobility Command Reference</a></li> </ul>

## Standards

Standards	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	—

## MIBs

MIBs	MIBs Link
No new or modified MIBs are supported, and support for existing MIBs has not been modified.	To locate and download MIBs for selected platforms, Cisco IOS releases, and feature sets, use Cisco MIB Locator found at the following URL: <a href="http://www.cisco.com/go/mibs">http://www.cisco.com/go/mibs</a>

## RFCs

RFCs	Title
RFC 3775	<i>Mobility Support in IPv6</i>
RFC 3846	<i>Mobile IPv4 Extension for Carrying Network Access Identifiers</i>
RFC 3963	<i>Network Mobility (NEMO) Basic Support Protocol</i>
RFC 4282	<i>The Network Access Identifier</i>
RFC 4283	<i>Mobile Node Identifier Option for Mobile IPv6 (MIPv6)</i>
RFC 4285	<i>Authentication Protocol for Mobile IPv6</i>
draft-ietf-nemo-terminology	<i>Network Mobility Support Terminology</i>
draft-ietf-nemo-home-network-models	<i>NEMO Home Network Models</i>
draft-thubert-nemo-ipv4-traversal	<i>IPv4 Traversal for MIPv6 Mobile Routers</i>

## Technical Assistance

Description	Link
<p>The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.</p> <p>To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.</p> <p>Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.</p>	<a href="http://www.cisco.com/techsupport">http://www.cisco.com/techsupport</a>

# Feature Information for Implementing Mobile IPv6

Table 1 lists the features in this module and provides links to specific configuration information. Only features that were introduced or modified in Cisco IOS Release 12.3(14)T or a later release appear in the table.

For information about a feature in this technology that is not documented here, see the [Start Here: Cisco IOS Software Release Specifies for IPv6 Features](#) roadmap.

Not all commands may be available in your Cisco IOS software release. For release information about a specific command, see the command reference documentation.

Use Cisco Feature Navigator to find information about platform support and software image support. Cisco Feature Navigator enables you to determine which Cisco IOS and Catalyst OS software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to <http://www.cisco.com/go/cfn>. An account on Cisco.com is not required.


**Note**

Table 1 lists only the Cisco IOS software release that introduced support for a given feature in a given Cisco IOS software release train. Unless noted otherwise, subsequent releases of that Cisco IOS software release train also support that feature.

**Table 1** Feature Information for Implementing Mobile IPv6

Feature Name	Releases	Feature Information
Mobile IPv6 Home Agent	12.3(14)T 12.4	<p>The Mobile IPv6 feature uses the IPv6 address space to enable Mobile IP deployment in any kind of large environment. No foreign agent is needed to use Mobile IPv6.</p> <p>The following sections provide information about this feature:</p> <ul style="list-style-type: none"> <li>• <a href="#">Mobile IPv6 Home Agent, page 3</a></li> <li>• <a href="#">Enabling Mobile IPv6 on the Router, page 8</a></li> <li>• <a href="#">Configuring Binding Information for Mobile IPv6, page 9</a></li> <li>• <a href="#">Customizing Mobile IPv6 on the Interface, page 19</a></li> <li>• <a href="#">Enabling Mobile IPv6 on the Router: Example, page 25</a></li> </ul>
IPv6 ACL Extensions for Mobile IPv6	12.4(2)T 12.2(33)SRB 12.2(33)SXI	<p>IPv6 access lists can be configured to allow IPv6 access list entries matching Mobile-IPv6-specific ICMP messages to be configured and to allow the definition of entries to match packets containing Mobile IPv6 extension headers.</p> <p>The following sections provide information about this feature:</p> <ul style="list-style-type: none"> <li>• <a href="#">Packet Headers in Mobile IPv6, page 5</a></li> <li>• <a href="#">Filtering Mobile IPv6 Protocol Headers and Options, page 14</a></li> <li>• <a href="#">Controlling ICMP Unreachable Messages, page 15</a></li> </ul>

**Table 1**      **Feature Information for Implementing Mobile IPv6 (continued)**

Feature Name	Releases	Feature Information
Mobile IP—Mobile IPv6 HA phase 2	12.4(11)T	<p>This phase of development for Mobile IPv6 includes support for NAI, alternate authentication, and native IPv6 tunnel infrastructure.</p> <p>The following sections provide information about these features:</p> <ul style="list-style-type: none"> <li>• <a href="#">Mobile IPv6 Tunnel Optimization, page 6</a></li> <li>• <a href="#">IPv6 Host Group Configuration, page 6</a></li> <li>• <a href="#">Mobile IPv6 Node Identification Based on NAI, page 6</a></li> <li>• <a href="#">Authentication Protocol for Mobile IPv6, page 7</a></li> <li>• <a href="#">Verifying Native IPv6 Tunneling for Mobile IPv6, page 16</a></li> <li>• <a href="#">Configuring and Verifying Host Groups for Mobile IPv6, page 17</a></li> <li>• <a href="#">Configuring Host Groups for Mobile IPv6: Example, page 27</a></li> </ul>
Mobile Networks v6—Basic NEMO	12.4(20)T	<p>The network mobility (NEMO) basic support protocol enables mobile IPv6 networks to attach to different points in the Internet.</p> <p>The following sections provide information about this feature:</p> <ul style="list-style-type: none"> <li>• <a href="#">IPv6 NEMO, page 3</a></li> <li>• <a href="#">NEMO-Compliant Home Agent, page 4</a></li> <li>• <a href="#">IPv6 Neighbor Discovery Duplicate Address Detection in NEMO, page 6</a></li> <li>• <a href="#">Enabling and Configuring NEMO on the IPv6 Mobile Router, page 10</a></li> <li>• <a href="#">Enabling NEMO on the IPv6 Mobile Router Home Agent, page 12</a></li> <li>• <a href="#">Enabling Roaming on the IPv6 Mobile Router Interface, page 13</a></li> <li>• <a href="#">Enabling and Configuring NEMO on the IPv6 Mobile Router: Example, page 25</a></li> <li>• <a href="#">Enabling NEMO on the IPv6 Mobile Router Home Agent: Example, page 26</a></li> <li>• <a href="#">Enabling Roaming on the IPv6 Mobile Router Interface: Example, page 27</a></li> </ul>

CCDE, CCENT, CCSI, Cisco Eos, Cisco HealthPresence, Cisco IronPort, the Cisco logo, Cisco Nurse Connect, Cisco Pulse, Cisco SensorBase, Cisco StackPower, Cisco StadiumVision, Cisco TelePresence, Cisco Unified Computing System, Cisco WebEx, DCE, Flip Channels, Flip for Good, Flip Mino, Flipshare (Design), Flip Ultra, Flip Video, Flip Video (Design), Instant Broadband, and Welcome to the Human Network are trademarks; Changing the Way We Work, Live, Play, and Learn, Cisco Capital, Cisco Capital (Design), Cisco:Financed (Stylized), Cisco Store, Flip Gift Card, and One Million Acts of Green are service marks; and Access Registrar, Aironet, AllTouch, AsyncOS, Bringing the Meeting To You, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, CCVP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Lumin, Cisco Nexus, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Collaboration Without Limitation, Continuum, EtherFast, EtherSwitch, Event Center, Explorer, Follow Me Browsing, GainMaker, iLUNIX, IOS, iPhone, IronPort, the IronPort logo, Laser Link, LightStream, Linksys, MeetingPlace, MeetingPlace Chime Sound, MGX, Networkers, Networking Academy, PCNow, PIX, PowerKEY, PowerPanels, PowerTV, PowerTV (Design), PowerVu, Prisma, ProConnect, ROSA, SenderBase, SMARTnet, Spectrum Expert, StackWise, WebEx, and the WebEx logo are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0910R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses in illustrative content is unintentional and coincidental.

© 2001–2009 Cisco Systems, Inc. All rights reserved.

