



# ATM PVC Bundle Enhancement — MPLS EXP-Based PVC Selection

---

## Feature History

| Release  | Modification                 |
|----------|------------------------------|
| 12.2(8)T | This feature was introduced. |

This document describes the ATM PVC Bundle Enhancement — MPLS EXP-Based PVC Selection feature in Cisco IOS Release 12.2(8)T. It includes the following sections:

- [Feature Overview, page 1](#)
- [Supported Platforms, page 4](#)
- [Supported Standards, MIBs, and RFCs, page 5](#)
- [Configuration Tasks, page 6](#)
- [Configuration Examples, page 9](#)
- [Command Reference, page 13](#)

## Feature Overview

The ATM PVC Bundle Enhancement — MPLS EXP-Based PVC Selection feature is an extension to the IP to ATM Class of Service feature suite. The IP to ATM Class of Service feature suite, using virtual circuit (VC) support and bundle management, maps quality of service (QoS) characteristics between IP and ATM. It provides customers who have multiple VCs (with varying qualities of service to the same destination) the ability to build a QoS differentiated network.

The IP to ATM Class of Service feature suite allowed customers to use IP precedence level as the selection criteria for packet forwarding. This new feature now gives customers the option of using the Multiprotocol Label Switching (MPLS) experimental (EXP) level as an additional selection criteria for packet forwarding.



---

**Americas Headquarters:**  
Cisco Systems, Inc., 170 West Tasman Drive, San Jose, CA 95134-1706 USA

© 2007 Cisco Systems, Inc. All rights reserved.

**Note**


If a selection criteria for packet forwarding is not selected (that is, if the packet is unlabeled), this new feature uses the IP precedence level as the default selection criteria.

For more information about the IP to ATM Class of Service feature suite, see the “[Configuring IP to ATM Class of Service](#)” module.

## VC Bundle Support and Bundle Management

ATM VC bundle management allows you to configure multiple VCs that have different QoS characteristics between any pair of ATM-connected routers. As shown in [Figure 1](#), these VCs are grouped in a bundle and are referred to as bundle members.

**Figure 1** ATM VC Bundle

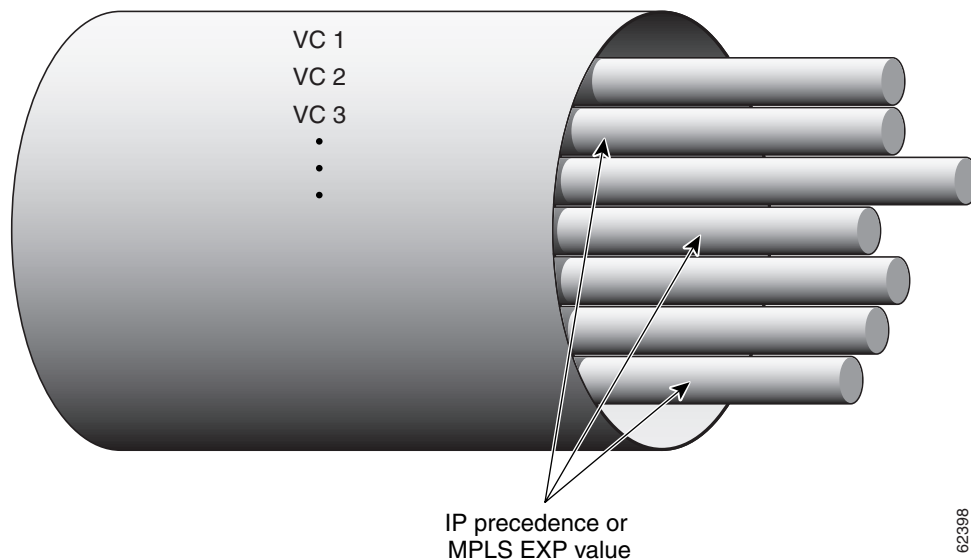


ATM VC bundle management allows you to define an ATM VC bundle and add VCs to it. Each VC of a bundle has its own ATM traffic class and ATM traffic parameters. You can apply attributes and characteristics to discrete VC bundle members, or you can apply them collectively at the bundle level.

Using VC bundles, you can create differentiated service by flexibly distributing MPLS EXP levels over the different VC bundle members. You can map a single MPLS EXP level, or a range of these levels, to each discrete VC in the bundle, thereby enabling individual VCs in the bundle to carry packets marked with different MPLS EXP levels. You can use Weighted Random Early Detection (WRED) or distributed WRED (dWRED) to further differentiate service across traffic that has different MPLS EXP levels.

To determine which VC in the bundle to use to forward a packet to its destination, the ATM VC bundle management software matches MPLS EXP levels between packets and VCs (see [Figure 2](#)). IP traffic is sent to the next hop address for the bundle because all VCs in a bundle share the same destination, but the VC used to carry a packet depends on the value set for that packet in the MPLS EXP level of the type of service (ToS) byte of its header. The ATM VC bundle management software matches the MPLS EXP level of the packet to the MPLS EXP levels assigned to a VC, sending the packet out on the appropriate VC. Moreover, the ATM VC bundle management software allows you to configure how traffic will be redirected when the VC to which the packet was initially directed goes down. [Figure 2](#) illustrates how

the ATM VC bundle management software determines which permanent virtual circuit (PVC) bundle member to use to carry a packet and how WRED (or dWRED) is used to differentiate traffic on the same VC.

**Figure 2** ATM VC Bundle PVC Selection for Packet Transfer

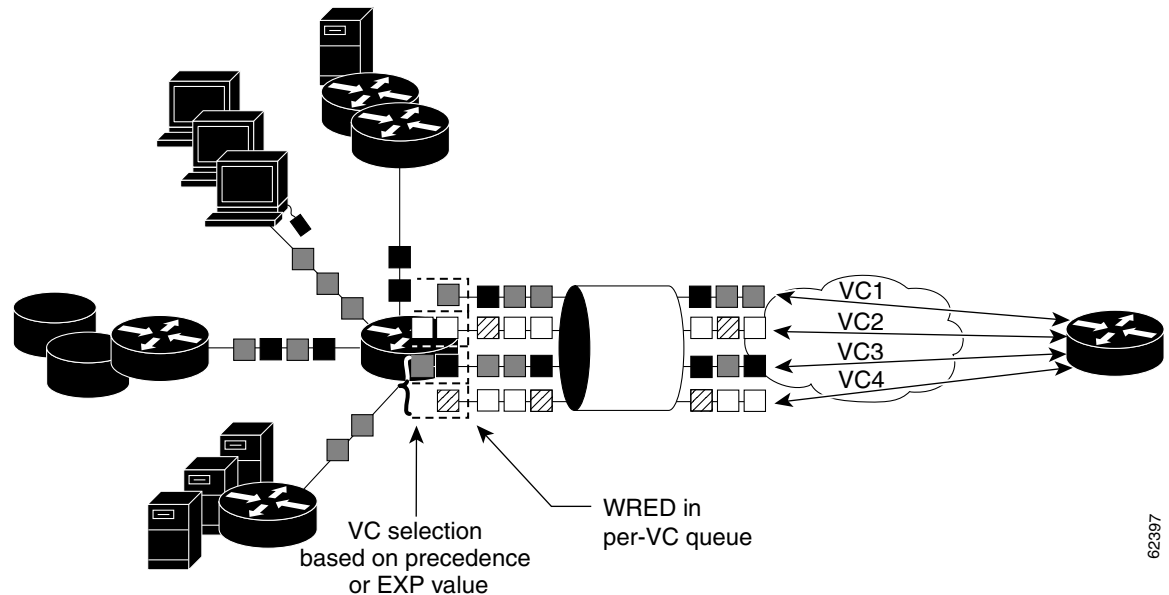

The support of multiple parallel ATM VCs allows you to create stronger service differentiation at the IP layer. For instance, you might want to configure the network to provide IP traffic belonging to real-time class of service (CoS) (such as Voice over IP traffic) on an ATM VC with strict constraints (constant bit rate (CBR) or variable bit rate real-time (VBR-rt), for example), while also allowing the network to transport nonreal-time traffic over a more elastic ATM unspecified bit rate (UBR) PVC. UBR is effectively the ATM version of best-effort service. Using a configuration such as this would allow you to make full use of your network capacity.

## Benefits

### Improved System Performance

This feature is designed to provide a true working solution to class-based services, without the investment of new ATM network infrastructures. Now networks can offer different service classes (sometimes termed *differential service classes*) across the entire WAN, not just the routed portion. Mission-critical applications can be given exceptional service during periods of high network usage and congestion. In addition, noncritical traffic can be restricted in its network usage, ensuring greater QoS for more important traffic and user types.

### Additional Selection Criteria

This new feature now gives customers the option of using the MPLS EXP level, in addition to IP precedence, as a selection criteria for packet forwarding.

## Restrictions

- This feature requires ATM PVC management, as well as Forwarding Information Base (FIB) and Tag Forwarding Information Base (TFIB) switching functionality.
- This feature is not supported on either the ATM interface processor (AIP) or the ATM Lite port adapter (PA-A1).
- The router at the remote end of the network must be using a version of Cisco IOS that supports MPLS and ATM PVC management.

## Related Features and Technologies

This feature is similar to the IP to ATM Class of Service feature suite, which is documented in the [“Configuring IP to ATM Class of Service”](#) module.

## Related Documents

- [Cisco IOS Quality of Service Solutions Command Reference](#)
- [Cisco IOS Switching Services Command Reference](#)
- [“Frame Relay PVC Bundles with QoS Support for IP and MPLS”](#) module
- [Cisco IOS Wide-Area Networking Command Reference](#)
- [“IP to ATM SVC Bundles for Class of Service \(CoS\) Mapping”](#) module
- [“MPLS Label Distribution Protocol \(LDP\) Overview”](#) module

## Supported Platforms

- Cisco 3600 series  
The ATM Adapter PA-A3 is not supported on either the Cisco 3620 router or the Cisco 3640 router. Because certain QoS features (for example, WRED) require the ATM Adapter PA-A3, specific limitations may apply. For more information about platform and feature support, refer to Cisco Feature Navigator (described below).
- Cisco 3725
- Cisco 3745
- Cisco 7200 series
- Cisco 7500 series

### Determining Platform Support Through Cisco Feature Navigator

Cisco IOS software is packaged in feature sets that support specific platforms. To get updated information regarding platform support for this feature, access Cisco Feature Navigator. Cisco Feature Navigator dynamically updates the list of supported platforms as new platform support is added for the feature.

Cisco Feature Navigator is a web-based tool that enables you to quickly determine which Cisco IOS software images support a specific set of features and which features are supported in a specific Cisco IOS image. You can search by feature or release. Under the release section, you can compare releases side by side to display both the features unique to each software release and the features in common.

To access Cisco Feature Navigator, you must have an account on Cisco.com. If you have forgotten or lost your account information, send a blank e-mail to [cco-locksmith@cisco.com](mailto:cco-locksmith@cisco.com). An automatic check will verify that your e-mail address is registered with Cisco.com. If the check is successful, account details with a new random password will be e-mailed to you. Qualified users can establish an account on Cisco.com by following the directions at <http://www.cisco.com/register>.

Cisco Feature Navigator is updated regularly when major Cisco IOS software releases and technology releases occur. For the most current information, go to the Cisco Feature Navigator home page at the following URL:

<http://www.cisco.com/go/fn>

## Supported Standards, MIBs, and RFCs

### Standards

No new or modified standards are supported by this feature.

### MIBs

No new or modified MIBs are supported by this feature.

To obtain lists of supported MIBs by platform and Cisco IOS release, and to download MIB modules, go to the Cisco MIB website on Cisco.com at the following URL:

<http://www.cisco.com/public/sw-center/netmgmt/cmtk/mibs.shtml>

### RFCs

No new or modified RFCs are supported by this feature.

## Configuration Tasks

See the following sections for configuration tasks for the ATM PVC Bundle Enhancement — MPLS EXP-Based PVC Selection feature. Each task in the list is identified as either required or optional.

- [Enabling MPLS](#) (required)
- [Creating a VC Bundle](#) (required)
- [Applying Parameters to Bundles](#) (required)
  - [Configuring Bundle-Level Parameters](#) (required)
  - [Configuring a VC Bundle Member Directly](#) (optional)
  - [Configuring VC Class Parameters to Apply to a Bundle](#) (optional)
  - [Attaching a Class to a Bundle](#) (optional)
- [Verifying the Configuration](#) (optional)

### Enabling MPLS

To enable MPLS, use the following commands beginning in global configuration mode:

|        | Command  | Purpose   |
|--------|--|---|
| Step 1 | Router(config)# <b>ip cef</b>  | Enables Cisco Express Forwarding (CEF) on the Route Processor (RP) card. An optional keyword <b>distributed</b> can be used with this command to enable distributed CEF (dCEF) for the Versatile Interface Processor (VIP)-based platforms. |
| Step 2 | Router(config)# <b>mpls label protocol ldp</b>                             | Specifies the default label distribution protocol for a platform.   |
| Step 3 | Router(config)# <b>interface</b> <i>type number</i><br>[ <i>name-tag</i> ] | Configures an interface type and enters interface configuration mode.   |
| Step 4 | Router(config-if)# <b>mpls ip</b>  | Enables MPLS forwarding of IPv4 packets along normally routed paths for the platform.   |

### Creating a VC Bundle

To create a bundle and enter bundle configuration mode in which you can assign attributes and parameters to the bundle and to all of its member VCs, use the following command in interface configuration mode:

| Command   | Purpose  |
|---|--|
| Router(config-if)# <b>bundle</b> <i>bundle-name</i> | Creates the specified bundle and enters bundle configuration mode. |

## Applying Parameters to Bundles

Parameters (or attributes) can be applied to bundles either by applying the parameters directly to the bundle or by applying the parameters to a VC class assigned to the bundle.

Applying parameters by using VC classes assigned to the bundle allows you to apply multiple parameters at once because you apply the VC class to the bundle and to all of its VC members. This method allows you to apply a parameter across all VCs for the bundle, after which (for some parameters) you can later modify that parameter for individual VCs. After configuring the parameters for the VC class, you need to attach the VC class to the bundle.

Parameters applied directly to a bundle take priority over those applied to VC classes assigned to the bundle. Parameters applied to VC classes assigned to the bundle take priority over those applied to individual VCs.



### Note

Note that some parameters applied through a VC class or directly to the bundle can be superseded by commands that you directly apply to individual VCs in bundle-vc configuration mode.

To begin applying parameters to bundles, complete the procedure in the section “[Configuring Bundle-Level Parameters](#).”

## Configuring Bundle-Level Parameters

To begin configuring parameters that apply to the bundle and to all of its members, use the following commands in bundle configuration mode, as needed:

| Command  | Purpose  |
|--|--|
| Router(config-if-atm-bundle)# <b>protocol</b><br><i>protocol</i> { <i>protocol-address</i>   <b>inarp</b> }<br>[[ <b>no</b> ] <b>broadcast</b> ] | Configures a static map or enables Inverse Address Resolution Protocol (Inverse ARP) or Inverse ARP broadcasts for the bundle. |
| Router(config-if-atm-bundle)# <b>encapsulation</b><br><i>aal-encap</i>   | Configures the ATM adaptation layer (AAL) and encapsulation type for the bundle.   |

## What's Next?

Next, decide if you want to configure the VC bundle member directly or use a VC class attached to a bundle. To configure the VC bundle member directly, complete just the procedure in the “[Configuring a VC Bundle Member Directly](#)” section. To use a VC class attached to a bundle, instead complete the procedures in both the “[Configuring VC Class Parameters to Apply to a Bundle](#)” section and the “[Attaching a Class to a Bundle](#)” section.

## Configuring a VC Bundle Member Directly

To configure an individual VC bundle member directly, use the following commands in bundle-vc configuration mode, as needed. To enter bundle-vc configuration mode, use the **pvc-bundle** command.

| Command   | Purpose   |
|---|---|
| Router(config-if-atm-member)# <b>ubr</b> <i>output-pcr</i> [ <i>input-pcr</i> ]   | Configures the VC for UBR QoS and specifies the output peak cell rate (PCR) for it.   |
| Router(config-if-atm-member)# <b>vbr-nrt</b> <i>output-pcr</i> <i>output-scr</i> <i>output-mbs</i> [ <i>input-pcr</i> ] [ <i>input-scr</i> ] [ <i>input-mbs</i> ] | Configures the VC for variable bit rate nonreal-time (VBR-nrt) QoS and specifies the output PCR, output sustainable cell rate, and output maximum burst cell size for it. |
| Router(config-if-atm-member)# <b>mpls experimental</b> [ <b>other</b>   <i>range</i> ]  | Configures the MPLS EXP levels for the VC.  |
| Router(config-if-atm-member)# <b>bump</b> { <b>implicit</b>   <b>explicit</b> <i>precedence-level</i>   <b>traffic</b> }  | Configures the bumping rules for the VC.  |
| Router(config-if-atm-member)# <b>protect</b> { <b>group</b>   <b>vc</b> }   | Configures the VC to belong to the protected group of the bundle or to be an individually protected VC bundle member.   |

## Configuring VC Class Parameters to Apply to a Bundle

To configure a VC class to contain commands that configure all VC members of a bundle when the class is applied to that bundle, use the following command in `vc-class` configuration mode. To enter `vc-class` configuration mode, use the **vc-class atm** command.

| Command   | Purpose   |
|---|---|
| Router(config-vc-class)# <b>oam-bundle</b> [ <b>manage</b> ] [ <i>frequency</i> ] | Enables end-to-end F5 Operation, Administration, and Maintenance (OAM) loopback cell generation and OAM management for all VCs in the bundle. |

In addition to the **oam-bundle** command, you can add the following commands to a VC class to be used to configure a bundle: **broadcast**, **encapsulation**, **inarp**, **oam retry**, and **protocol**. For information on these commands, including configuration tasks and command syntax, refer to the *Cisco IOS Wide-Area Networking Configuration Guide*, Release 12.2 and the *Cisco IOS Wide-Area Networking Command Reference*, Release 12.2.



### Note

If you are using a VC class to configure the bundle, you must attach the VC class to the bundle. To do this, complete the procedure in the section “[Attaching a Class to a Bundle](#).”

## Attaching a Class to a Bundle

To attach a VC class containing bundle-level configuration commands to a bundle, use the following command in bundle configuration mode. To enter bundle configuration mode, use the **bundle** command.

| Command  | Purpose   |
|--|---|
| Router(config-if-atm-bundle)# <b>class-bundle</b> <i>vc-class-name</i> | Configures a bundle with the bundle-level commands contained in the specified VC class. |

## Verifying the Configuration

To verify the configuration of the feature, use the following commands in EXEC mode, as needed:

| Command  | Purpose   |
|--|---|
| Router# <code>debug atm bundle error</code>      | Displays debug messages for PVC bundle errors.  |
| Router# <code>debug atm bundle events</code>     | Displays PVC bundle events.   |
| Router# <code>show atm map</code>                | Displays the list of all configured ATM static maps to remote hosts on an ATM network.                      |
| Router# <code>show atm bundle bundle-name</code> | Displays the bundle attributes assigned to each VC member and the current working status of the VC members. |
| Router# <code>show mpls forwarding-table</code>  | Displays the contents of the MPLS FIB.  |

## Configuration Examples

This section provides the following configuration example:

- [VC Bundle Configuration Using a VC Class Example](#)

### VC Bundle Configuration Using a VC Class Example

This example configures VC bundle management on a router that uses Intermediate System-to-Intermediate System (IS-IS) as its IP routing protocol.

#### Bundle-Class Class

At the outset, this configuration defines a VC class called “bundle-class,” which includes commands that set VC parameters. When the class bundle-class is applied at the bundle level, these parameters are applied to all VCs that belong to the bundle. Note that any commands applied directly to an individual VC of a bundle in bundle-vc mode take precedence over commands applied globally at the bundle level. Taking into account hierarchy precedence rules, VCs belonging to any bundle to which the class bundle-class is applied will be characterized by the following parameters: aal5snap encapsulation, broadcast on, use of Inverse ARP to resolve IP addresses, and OAM enabled.

```
router isis
 net 49.0000.0000.0000.1111.00

vc-class atm bundle-class
 encapsulation aal5snap
 broadcast
 protocol ip inarp
 oam-bundle manage 3
 oam 4 3 10
```

The following four sections of the configuration define specific VC classes. Each of these classes contains commands used to specify parameters that can then be applied to individual VCs in a bundle by assigning the class to that VC.

## Control-Class Class

When the class called “control-class” is applied to a VC, the VC carries traffic whose MPLS EXP level is 7. When the VC to which this class is assigned goes down, it takes the bundle down with it because this class makes the VC a protected one. The QoS type of a VC using this class is vbr-nrt.

```
vc-class atm control-class
mpls experimental 7
protect vc
vbr-nrt 1000 5000 32
```

## Premium-Class Class

When the class called “premium-class” is applied to a VC, the VC carries traffic whose MPLS EXP levels are 6 and 5. The VC does not allow other traffic to be bumped onto it. When the VC to which this class is applied goes down, its bumped traffic will be redirected to a VC whose MPLS EXP level is 7. This class makes a VC a member of the protected group of the bundle. When all members of a protected group go down, the bundle goes down. The QoS type of a VC using this class is vbr-nrt.

```
vc-class atm premium-class
mpls experimental 6-5
no bump traffic
protect group
bump explicitly 7
vbr-nrt 20000 10000 32
```

## Priority-Class Class

When the class called “priority-class” is applied to a VC, the VC is configured to carry traffic with an MPLS EXP level in the 4 – 2 range. The VC uses the implicit bumping rule, it allows traffic to be bumped, and it belongs to the protected group of the bundle. The QoS type of a VC using this class isubr+.

```
vc-class atm priority-class
mpls experimental 4-2
protect group
ubr+ 10000 3000
```

## Basic-Class Class

When the class called “basic-class” is applied to a VC, the VC is configured through the **mpls experimental other** command to carry traffic with MPLS EXP levels not specified in the profile. The VC using this class belongs to the protected group of the bundle. The QoS type of a VC using this class isubr.

```
vc-class atm basic-class
mpls experimental other
protect group
ubr 10000
```

The following sets of commands configure three bundles that the router subinterface uses to connect to three of its neighbors. These bundles are called “new-york,” “san-francisco,” and “los-angeles.” Bundle new-york has four VC members, bundle san-francisco has four VC members, and bundle los-angeles has three VC members.

## new-york Bundle

The first part of this example specifies the IP address of the subinterface, the router protocol—the router uses IS-IS as an IP routing protocol—and it creates the first bundle called “new-york” and enters bundle configuration mode:

```
interface a1/0.1 multipoint
 ip address 10.0.0.1 255.255.255.0
 ip router isis
 bundle new-york
```

From within bundle configuration mode, the next portion of the configuration uses two protocol commands to enable IP and Open Systems Interconnect (OSI) traffic flows in the bundle. The OSI routing packets will use the highest MPLS EXP VC in the bundle. The OSI data packets, if any, will use the lowest MPLS EXP VC in the bundle. If configured, other protocols, such as Internet Packet Exchange (IPX) or AppleTalk, will always use the lowest MPLS EXP VC in the bundle.

As the indentation levels of the preceding and following commands suggest, subordinate to bundle new-york is a command that configures its protocol and a command that applies the class called “bundle-class” to it.

```
protocol ip 1.1.1.2 broadcast
protocol clns 49.0000.0000.2222.00 broadcast
class-bundle bundle-class
```

The class called “bundle-class,” which is applied to the bundle new-york, includes a **protocol ip inarp** command. According to inheritance rules, **protocol ip**, configured at the bundle level, takes precedence over **protocol ip inarp** specified in the class bundle-class.

The next set of commands beginning with **pvc-bundle ny-control 207**, which are further subordinate, add four VCs (called “ny-control,” “ny-premium,” “ny-priority,” and “ny-basic”) to the bundle new-york. A particular class—that is, one of the classes predefined in this configuration example—is applied to each VC to configure it with parameters specified by commands included in the class.

As is the case for this configuration, to configure individual VCs belonging to a bundle, the router must be in bundle mode for the mother bundle. For each VC belonging to the bundle, the subordinate mode is pvc-mode for the specific VC.

The following commands configure the individual VCs for the bundle new-york:

```
pvc-bundle ny-control 207
 class-vc control-class
pvc-bundle ny-premium 206
 class-vc premium-class
pvc-bundle ny-priority 204
 class-vc priority-class
pvc-bundle ny-basic 201
 class-vc basic-class
```

## san-francisco Bundle

The following set of commands create and configure a bundle called “san-francisco.” At the bundle configuration level, the configuration commands included in the class bundle-class are ascribed to the bundle san-francisco and to the individual VCs that belong to the bundle. Then, the **pvc-bundle** command is executed for each individual VC to add it to the bundle. After a VC is added and bundle-vc configuration mode is entered, a particular, preconfigured class is assigned to the VC. The configuration commands comprising that class are used to configure the VC. Rules of hierarchy apply at this point. Command parameters contained in the applied class are superseded by the same parameters applied at the bundle configuration level, which are superseded by the same parameters applied directly to a VC.

```

bundle san-francisco
protocol clns 49.0000.0000.0000.333.00 broadcast
inarp 1
class-bundle bundle-class
pvc-bundle sf-control 307
  class-vc control-class
pvc-bundle sf-premium 306
  class-vc premium-class
pvc-bundle sf-priority 304
  class-vc priority-class
pvc-bundle sf-basic 301
  class-vc basic-class

```

## los-angeles Bundle

The following set of commands create and configure a bundle called “los-angeles.” At the bundle configuration level, the configuration commands included in the class `bundle-class` are ascribed to the bundle `los-angeles` and to the individual VCs that belong to the bundle. Then, the **pvc-bundle** command is executed for each individual VC to add it to the bundle. After a VC is added and `bundle-vc` configuration mode is entered, the MPLS EXP level is set for the VC, and the VC is either configured as a member of a protected group (`protect group`) or as an individually protected VC. A particular class is then assigned to each VC to further characterize it. Rules of hierarchy apply. Parameters of commands applied directly and discretely to a VC take precedence over the same parameters applied within a class to the VC at the `bundle-vc` configuration level, which take precedence over the same parameters applied to the entire bundle at the bundle configuration level.

```

bundle los-angeles
protocol ip 1.1.1.4 broadcast
protocol clns 49.0000.0000.4444.00 broadcast
inarp 1
class-bundle bundle-class
pvc-bundle la-high 407
  mpls experimental 7-5
  protect vc
  class-vc premium-class
pvc-bundle la-mid 404
  mpls experimental 4-2
  protect group
  class-vc priority-class
pvc-bundle la-low 401
  mpls experimental other
  protect group
  class-vc basic-class

```

# Command Reference

The following commands are introduced or modified in the feature or features documented in this module. For information about these commands, see the *Cisco IOS Quality of Service Solutions Command Reference* at [http://www.cisco.com/en/US/docs/ios/qos/command/reference/qos\\_book.html](http://www.cisco.com/en/US/docs/ios/qos/command/reference/qos_book.html). For information about all Cisco IOS commands, use the Command Lookup Tool at <http://tools.cisco.com/Support/CLILookup> or a Cisco IOS master commands list.

## New Commands

- **mpls experimental**

## Modified Commands

- **show mpls forwarding-table**

---

CCDE, CCENT, CCSI, Cisco Eos, Cisco HealthPresence, Cisco IronPort, the Cisco logo, Cisco Nurse Connect, Cisco Pulse, Cisco SensorBase, Cisco StackPower, Cisco StadiumVision, Cisco TelePresence, Cisco Unified Computing System, Cisco WebEx, DCE, Flip Channels, Flip for Good, Flip Mino, Flipshare (Design), Flip Ultra, Flip Video, Flip Video (Design), Instant Broadband, and Welcome to the Human Network are trademarks; Changing the Way We Work, Live, Play, and Learn, Cisco Capital, Cisco Capital (Design), Cisco:Financed (Stylized), Cisco Store, Flip Gift Card, and One Million Acts of Green are service marks; and Access Registrar, Aironet, AllTouch, AsyncOS, Bringing the Meeting To You, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, CCVP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Lumin, Cisco Nexus, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Collaboration Without Limitation, Continuum, EtherFast, EtherSwitch, Event Center, Explorer, Follow Me Browsing, GainMaker, iLYNX, IOS, iPhone, IronPort, the IronPort logo, Laser Link, LightStream, Linksys, MeetingPlace, MeetingPlace Chime Sound, MGX, Networkers, Networking Academy, PCNow, PIX, PowerKEY, PowerPanels, PowerTV, PowerTV (Design), PowerVu, Prisma, ProConnect, ROSA, SenderBase, SMARTnet, Spectrum Expert, StackWise, WebEx, and the WebEx logo are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

---

All other trademarks mentioned in this document or website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0910R)

Any Internet Protocol (IP) addresses used in this document are not intended to be actual addresses. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses in illustrative content is unintentional and coincidental.

© 2007 Cisco Systems, Inc. All rights reserved.

