



## Configuring RSVP Support for Frame Relay

---

This chapter describes the tasks for configuring the RSVP Support for Frame Relay feature.

For complete conceptual information, see the “[Signalling Overview](#)” module.

For a complete description of the RSVP Support for Frame Relay commands in this chapter, see the [Cisco IOS Quality of Service Solutions Command Reference](#). To locate documentation of other commands that appear in this chapter, use the command reference master index or search online.

Use Cisco Feature Navigator to find information about platform support and Cisco IOS and Catalyst OS software image support. To access Cisco Feature Navigator, go to <http://www.cisco.com/go/cfn>. An account on Cisco.com is not required.

## RSVP Support for Frame Relay Configuration Task List

To configure Resource Reservation Protocol (RSVP) support for Frame Relay, perform the tasks described in the following sections. Each task is identified as either optional or required.

- [Enabling Frame Relay Encapsulation on an Interface](#) (Required)
- [Configuring a Virtual Circuit](#) (Required)
- [Enabling Frame Relay Traffic Shaping on an Interface](#) (Required)
- [Enabling Enhanced Local Management Interface](#) (Optional)
- [Enabling RSVP on an Interface](#) (Required)
- [Specifying a Traffic Shaping Map Class for an Interface](#) (Required)
- [Defining a Map Class with WFQ and Traffic Shaping Parameters](#) (Required)
- [Specifying the CIR](#) (Required)
- [Specifying the Minimum CIR](#) (Optional)
- [Enabling WFQ](#) (Required)
- [Enabling FRF.12](#) (Required)
- [Configuring a Path](#) (Optional)
- [Configuring a Reservation](#) (Optional)
- [Verifying RSVP Support for Frame Relay](#) (Optional)



---

**Americas Headquarters:**  
**Cisco Systems, Inc., 170 West Tasman Drive, San Jose, CA 95134-1706 USA**

© 2007 Cisco Systems, Inc. All rights reserved.

- [Monitoring and Maintaining RSVP Support for Frame Relay \(Optional\)](#)

See the end of this chapter for the section “[RSVP Support for Frame Relay Configuration Examples](#).”

## Enabling Frame Relay Encapsulation on an Interface

To enable Frame Relay encapsulation on an interface, use the following commands beginning in global configuration mode:

	Command	Purpose
Step 1	Router(config)# <b>interface</b> s3/0	Enables an interface (for example, serial interface 3/0) and enters configuration interface mode.
Step 2	Router(config-if)# <b>encapsulation frame-relay</b> [cisco   ietf]	Enables Frame Relay and specifies the encapsulation method.

## Configuring a Virtual Circuit

To configure a virtual circuit (VC), use the following command in interface configuration mode:

Command	Purpose
Router(config-if)# <b>frame-relay interface-dlci</b> dlci	Assigns a data-link connection identifier (DLCI) to a specified Frame Relay subinterface on a router or access server.

## Enabling Frame Relay Traffic Shaping on an Interface

To enable Frame Relay Traffic Shaping (FRTS) on an interface, use the following command in interface configuration mode:

Command	Purpose
Router(config-if)# <b>frame-relay traffic-shaping</b>	Enables traffic shaping and per-VC queuing for all permanent virtual circuits (PVCs) and switched virtual circuits (SVCs) on a Frame Relay interface.

## Enabling Enhanced Local Management Interface

To enable enhanced Local Management Interface (LMI), use the following command in interface configuration mode:

Command	Purpose
Router(config-if)# <b>frame-relay lmi-type</b>	Selects the LMI type.

## Enabling RSVP on an Interface

To enable RSVP on an interface, use the following command in interface configuration mode:

Command	Purpose
Router(config-if)# <b>ip rsvp bandwidth</b>	Enables RSVP on an interface.

## Specifying a Traffic Shaping Map Class for an Interface

To specify a traffic shaping map class for an interface, use the following command in interface configuration mode:

Command	Purpose
Router(config-if)# <b>frame-relay class</b> <i>name</i>	Associates a map class with an interface or subinterface.

## Defining a Map Class with WFQ and Traffic Shaping Parameters

To define a map class with weighted fair queueing (WFQ) and traffic shaping parameters, use the following command in global configuration mode:

Command	Purpose
Router(config)# <b>map-class frame-relay</b> <i>map-class-name</i>	Defines parameters for a specified class.

## Specifying the CIR

To specify the committed information rate (CIR), use the following command in map-class configuration mode:

Command	Purpose
Router(config-map-class)# <b>frame-relay cir</b> { <b>in</b>   <b>out</b> } <i>bps</i>	Specifies the maximum incoming or outgoing CIR for a Frame Relay VC.

## Specifying the Minimum CIR

To specify the minimum acceptable incoming or outgoing CIR (minCIR) for a Frame Relay VC, use the following command in map-class configuration mode:

Command	Purpose
Router(config-map-class)# <b>frame-relay mincir</b> {in   out} <i>bps</i>	Specifies the minimum acceptable incoming or outgoing CIR for a Frame Relay VC.  <b>Note</b> If the minCIR is not configured, then the admission control value is the CIR/2.

## Enabling WFQ

To enable WFQ, use the following command in map-class configuration mode:

Command	Purpose
Router(config-map-class)# <b>frame-relay fair-queue</b>	Enables WFQ on a PVC.

## Enabling FRF.12

To enable FRF.12, use the following command in map-class configuration mode:

Command	Purpose
Router(config-map-class)# <b>frame-relay fragment</b> <i>fragment-size</i>	Enables Frame Relay fragmentation on a PVC.

## Configuring a Path

To configure a path, use the following command in global configuration mode:

Command	Purpose
Router(config)# <b>ip rsvp sender</b>	Specifies the RSVP path parameters, including the destination and source addresses, the protocol, the destination and source ports, the previous hop address, the average bit rate, and the burst size.

## Configuring a Reservation

To configure a reservation, use the following command in global configuration mode:

Command	Purpose
Router(config)# <b>ip rsvp reservation</b>	Specifies the RSVP reservation parameters, including the destination and source addresses, the protocol, the destination and source ports, the next hop address, the next hop interface, the reservation style, the service type, the average bit rate, and the burst size.

## Verifying RSVP Support for Frame Relay

The following sections contain the procedures for verifying RSVP support for Frame Relay in either a multipoint configuration or a point-to-point configuration.

### Multipoint Configuration

To verify RSVP support for Frame Relay in a multipoint configuration, perform the following steps:

- Step 1** Enter the **show ip rsvp installed** command to display information about interfaces and their admitted reservations. The output in the following example shows that serial subinterface 3/0.1 has two reservations:

```
Router# show ip rsvp installed
```

```
RSVP:Serial3/0
BPS      To                From                Protoc DPort   Sport   Weight Conversation
RSVP:Serial3/0.1
BPS      To                From                Protoc DPort   Sport   Weight Conversation
40K      145.20.22.212    145.10.10.211     UDP    10      10      0        24
50K      145.20.21.212    145.10.10.211     UDP    10      10      6        25
```



**Note** Weight 0 is assigned to voice-like flows, which proceed to the priority queue.

- Step 2** Enter the **show ip rsvp installed detail** command to display additional information about interfaces, subinterfaces, DLCI PVCs, and their current reservations.



**Note** In the following output, the first flow gets a reserved queue with a weight > 0, and the second flow gets the priority queue with a weight = 0.

```
Router# show ip rsvp installed detail
```

```
RSVP:Serial3/0 has the following installed reservations
RSVP:Serial3/0.1 has the following installed reservations
RSVP Reservation. Destination is 145.20.21.212, Source is 145.10.10.211,
  Protocol is UDP, Destination port is 10, Source port is 10
  Reserved bandwidth:50K bits/sec, Maximum burst:1K bytes, Peak rate:50K bits/sec
QoS provider for this flow:
  WFQ on FR PVC dlci 101 on Se3/0: RESERVED queue 25. Weight:6
  Data given reserved service:0 packets (0M bytes)
  Data given best-effort service:0 packets (0 bytes)
  Reserved traffic classified for 68 seconds
  Long-term average bitrate (bits/sec):0M reserved, 0M best-effort
RSVP Reservation. Destination is 145.20.22.212, Source is 145.10.10.211,
  Protocol is UDP, Destination port is 10, Source port is 10
```

```

Reserved bandwidth:40K bits/sec, Maximum burst:1K bytes, Peak rate:40K bits/sec
QoS provider for this flow:
  WFQ on FR PVC dlci 101 on Se3/0: PRIORITY queue 24.  Weight:0
Data given reserved service:0 packets (0M bytes)
Data given best-effort service:0 packets (0 bytes)
Reserved traffic classified for 707 seconds
Long-term average bitrate (bits/sec):0M reserved, 0M best-effort

```

---

## Point-to-Point Configuration

To verify RSVP support for Frame Relay in a point-to-point configuration, perform the following steps:

- Step 1** Enter the **show ip rsvp installed** command to display information about interfaces and their admitted reservations. The output in the following example shows that serial subinterface 3/0.1 has one reservation, and serial subinterface 3/0.2 has one reservation.

```

Router# show ip rsvp installed

RSVP:Serial3/0
BPS   To           From           Protoc DPort  Sport
RSVP:Serial3/0.1
BPS   To           From           Protoc DPort  Sport
50K   145.20.20.212 145.10.10.211  UDP   10    10

RSVP:Serial3/0.2
BPS   To           From           Protoc DPort  Sport
10K   145.20.21.212 145.10.10.211  UDP   11    11

```



### Note

Weight 0 is assigned to voice-like flows, which proceed to the priority queue.

- Step 2** Enter the **show ip rsvp installed detail** command to display additional information about interfaces, subinterfaces, DLCI PVCs, and their current reservations.



### Note

In the following output, the first flow with a weight > 0 gets a reserved queue and the second flow with a weight = 0 gets the priority queue.

```

Router# show ip rsvp installed detail

RSVP:Serial3/0 has the following installed reservations
RSVP:Serial3/0.1 has the following installed reservations
RSVP Reservation. Destination is 145.20.20.212, Source is 145.10.10.211,
  Protocol is UDP, Destination port is 10, Source port is 10
  Reserved bandwidth:50K bits/sec, Maximum burst:1K bytes, Peak rate:50K bits/sec
QoS provider for this flow:
  WFQ on FR PVC dlci 101 on Se3/0: RESERVED queue 25.  Weight:6
  Data given reserved service:415 packets (509620 bytes)
  Data given best-effort service:0 packets (0 bytes)
  Reserved traffic classified for 862 seconds
  Long-term average bitrate (bits/sec):4724 reserved, 0M best-effort
RSVP Reservation. Destination is 145.20.20.212, Source is 145.10.10.211,
  Protocol is UDP, Destination port is 11, Source port is 11
  Reserved bandwidth:10K bits/sec, Maximum burst:1K bytes, Peak rate:10K bits/sec
QoS provider for this flow:
  WFQ on FR PVC dlci 101 on Se3/0: PRIORITY queue 24.  Weight:0
  Data given reserved service:85 packets (104380 bytes)
  Data given best-effort service:0 packets (0 bytes)

```

```

Reserved traffic classified for 875 seconds
Long-term average bitrate (bits/sec):954 reserved, 0M best-effort
RSVP:Serial3/0.2 has the following installedreservations

RSVP Reservation. Destination is 145.20.21.212, Source is 145.10.10.211,

Protocol is UDP, Destination port is 11, Source port is 11
Reserved bandwidth:10K bits/sec, Maximum burst:1K bytes, Peak rate:10Kbits/sec
QoS provider for this flow:
  WFQ on FR PVC dlc1 101 on Se3/0:PRIORITY queue 24. Weight:0
Data given reserved service:85 packets (104380 bytes)
Data given best-effort service:0 packets (0 bytes)
Reserved traffic classified for 875 seconds
Long-term average bitrate (bits/sec):954 reserved, 0M best-effort

```

## Monitoring and Maintaining RSVP Support for Frame Relay

To monitor and maintain RSVP support for Frame Relay, use the following commands in EXEC mode, as needed:

Command	Purpose
Router# <b>show ip rsvp installed</b>	Displays information about interfaces and their admitted reservations.
Router# <b>show ip rsvp installed detail</b>	Displays additional information about interfaces, DLCIs, and their admitted reservations.
Router# <b>show queueing</b>	Displays all or selected configured queueing strategies.

## RSVP Support for Frame Relay Configuration Examples

The following sections provide RSVP support for Frame Relay configuration examples:


- [Multipoint Configuration Example](#)
- [Point-to-Point Configuration Example](#)

For information on how to configure the RSVP Support for Frame Relay feature, see the section “[RSVP Support for Frame Relay Configuration Task List](#)” in this chapter.

### Multipoint Configuration Example

[Figure 1](#) shows a multipoint interface configuration commonly used in Frame Relay environments in which multiple PVCs are configured on the same subinterface at router R1.

Figure 1 Multipoint Interface Configuration

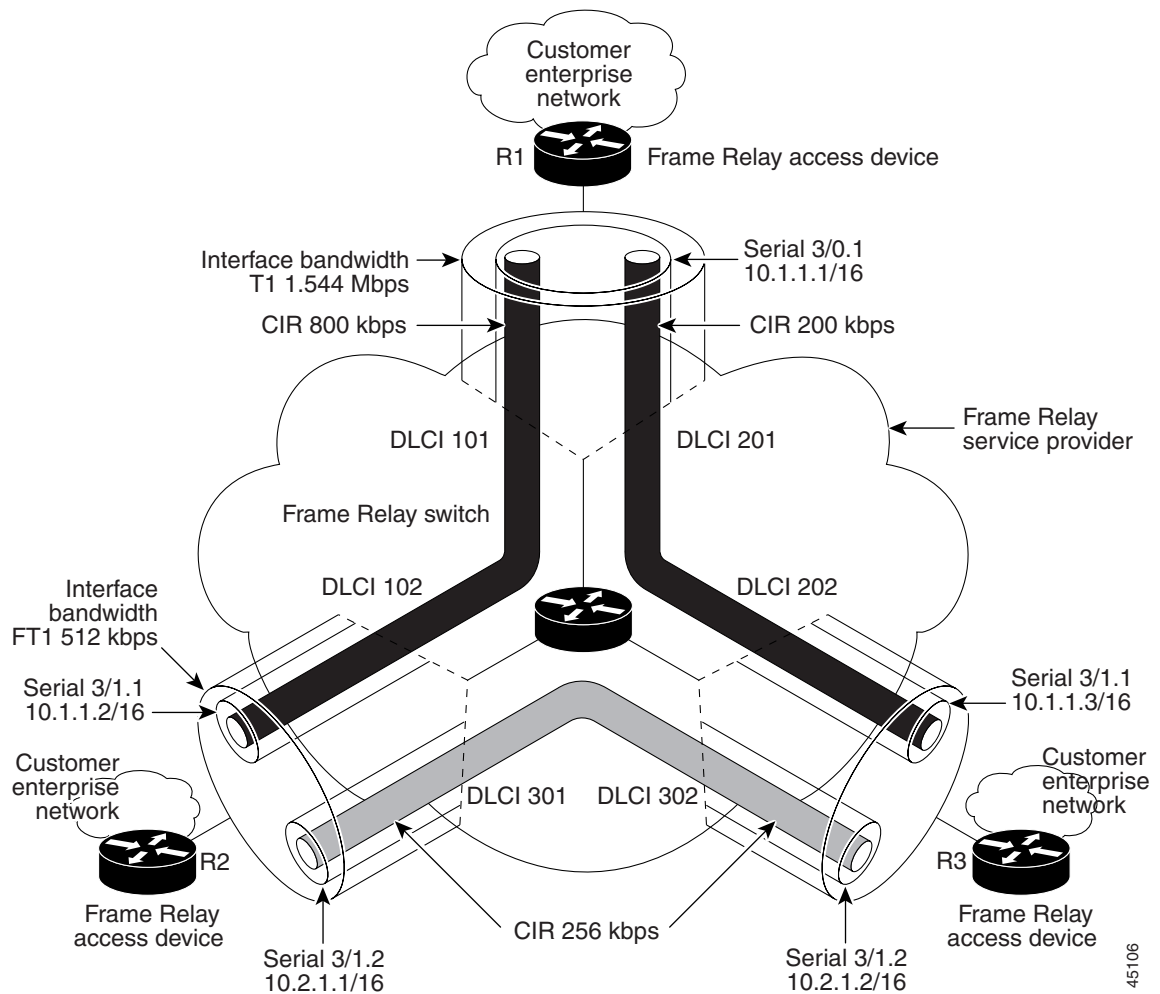

RSVP performs admission control based on the minCIR of DLCI 101 and DLCI 201. The congestion point is not the 10.1.1.1/16 subinterface, but the CIR of DLCI 101 and DLCI 201.

The following example is a sample output for serial interface 3/0:

```
interface Serial3/0
 no ip address
 encapsulation frame-relay
 max-reserved-bandwidth 20
 no fair-queue
 frame-relay traffic-shaping
 frame-relay lmi-type cisco
 ip rsvp bandwidth 350 350
!
interface Serial3/0.1 multipoint
 ip address 10.1.1.1 255.255.0.0
 frame-relay interface-dlci 101
 class fr-voip
 frame-relay interface-dlci 201
 class fast-vcs
 ip rsvp bandwidth 350 350

ip rsvp pq-profile 6000 2000 ignore-peak-value
```

```
!  
!  
map-class frame-relay fr-voip  
  frame-relay cir 800000  
  frame-relay bc 8000  
  frame-relay mincir 128000  
  frame-relay fragment 280  
  no frame-relay adaptive-shaping  
  frame-relay fair-queue  
!  
map-class frame-relay fast-vcs  
  frame-relay cir 200000  
  frame-relay bc 2000  
  frame-relay mincir 60000  
  frame-relay fragment 280  
  no frame-relay adaptive-shaping  
  frame-relay fair-queue  
!
```

**Note**

---


When FRTS is enabled, the Frame Relay Committed Burst (Bc) value (in bits) should be configured to a maximum of 1/100th of the CIR value (in bits per second). This configuration ensures that the FRTS token bucket interval (Bc/CIR) does not exceed 10 Ms, and that voice packets are serviced promptly.

---

## Point-to-Point Configuration Example

Figure 2 shows a point-to-point interface configuration commonly used in Frame Relay environments in which one PVC per subinterface is configured at router R1.

**Figure 2** Sample Point-to-Point Interface Configuration

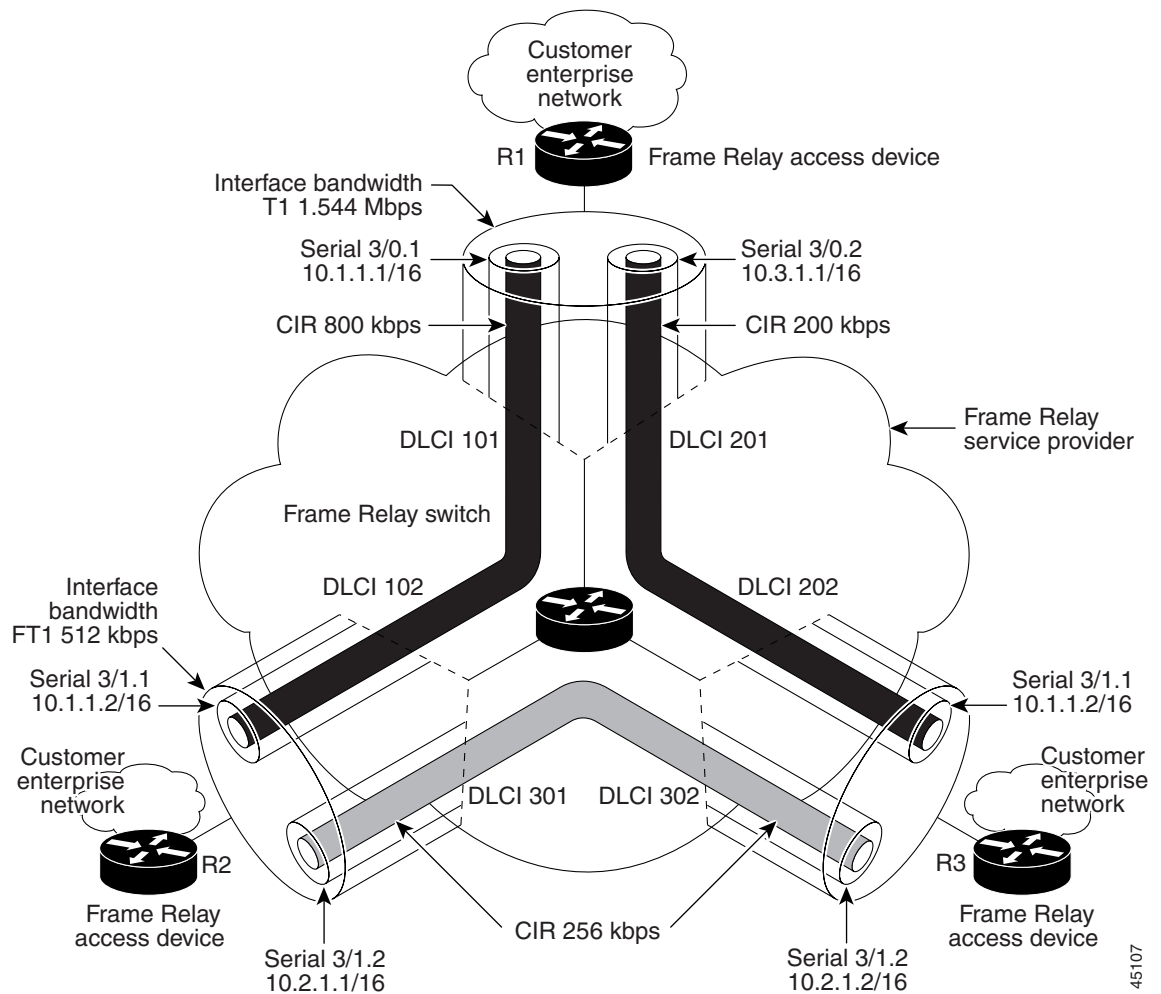

Notice that the router interface bandwidth for R1 is T1 (1.544 Mbps), whereas the CIR value of DLCI 201 toward R3 is 256 kbps. For traffic flows from R1 to R3 over DLCI 201, the congestion point is the CIR for DLCI 201. As a result, RSVP performs admission control based on the minCIR and reserves resources, including queues and bandwidth, on the WFQ system that runs on each DLCI.

The following example is sample output for serial interface 3/0:

```
interface Serial3/0
no ip address
encapsulation frame-relay
max-reserved-bandwidth 20
no fair-queue
frame-relay traffic-shaping
frame-relay lmi-type cisco
ip rsvp bandwidth 500 500
!
interface Serial3/0.1 point-to-point
ip address 10.1.1.1 255.255.0.0
frame-relay interface-dlci 101
class fr-voip
ip rsvp bandwidth 350 350
!
interface Serial3/0.2 point-to-point
```

```
ip address 10.3.1.1 255.255.0.0
frame-relay interface-dlci 201
  class fast-vcs
ip rsvp bandwidth 150 150

ip rsvp pq-profile 6000 2000 ignore-peak-value
!
!
map-class frame-relay fr-voip
  frame-relay cir 800000
  frame-relay bc 8000
  frame-relay mincir 128000
  frame-relay fragment 280
  no frame-relay adaptive-shaping
  frame-relay fair-queue
```

**Note**

When FRTS is enabled, the Frame Relay Committed Burst (Bc) value (in bits) should be configured to a maximum of 1/100th of the CIR value (in bits per second). This configuration ensures that the FRTS token bucket interval (Bc/CIR) does not exceed 10 Ms, and that voice packets are serviced promptly.

CCDE, CCENT, CCSI, Cisco Eos, Cisco HealthPresence, Cisco IronPort, the Cisco logo, Cisco Lumin, Cisco Nexus, Cisco Nurse Connect, Cisco Pulse, Cisco StackPower, Cisco StadiumVision, Cisco TelePresence, Cisco Unified Computing System, Cisco WebEx, DCE, Flip Channels, Flip for Good, Flip Mino, Flipshare (Design), Flip Ultra, Flip Video, Flip Video (Design), Instant Broadband, and Welcome to the Human Network are trademarks; Changing the Way We Work, Live, Play, and Learn, Cisco Capital, Cisco Capital (Design), Cisco:Financed (Stylized), Cisco Store, and Flip Gift Card are service marks; and Access Registrar, Aironet, AllTouch, AsyncOS, Bringing the Meeting To You, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, CCVP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Collaboration Without Limitation, Continuum, EtherFast, EtherSwitch, Event Center, Explorer, Fast Step, Follow Me Browsing, FormShare, GainMaker, GigaDrive, HomeLink, iLYNX, Internet Quotient, IOS, iPhone, iQuick Study, IronPort, the IronPort logo, Laser Link, LightStream, Linksys, MediaTone, MeetingPlace, MeetingPlace Chime Sound, MGX, Networkers, Networking Academy, Network Registrar, PCNow, PIX, PowerKEY, PowerPanels, PowerTV, PowerTV (Design), PowerVu, Prisma, ProConnect, ROSA, ScriptShare, SenderBase, SMARTnet, Spectrum Expert, StackWise, The Fastest Way to Increase Your Internet Quotient, TransPath, WebEx, and the WebEx logo are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0908R)

Any Internet Protocol (IP) addresses used in this document are not intended to be actual addresses. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses in illustrative content is unintentional and coincidental.

© 2007 Cisco Systems, Inc. All rights reserved.

