



## INDEX

---

<b>AR</b>	Cisco IOS XR Advanced System Command Reference
<b>HR</b>	Cisco IOS XR Interface and Hardware Component Command Reference
<b>IR</b>	Cisco IOS XR IP Addresses and Services Command Reference
<b>MCR</b>	Cisco IOS XR Multicast Command Reference
<b>MNR</b>	Cisco IOS XR System Monitoring Command Reference
<b>MPR</b>	Cisco IOS XR MPLS Command Reference
<b>QR</b>	Cisco IOS XR Modular Quality of Service Command Reference
<b>RR</b>	Cisco IOS XR Routing Command Reference
<b>SBR</b>	Cisco IOS XR Session Border Controller Command Reference
<b>SMR</b>	Cisco IOS XR System Management Command Reference
<b>SR</b>	Cisco IOS XR System Security Command Reference
<b>VFR</b>	Cisco IOS XR Virtual Firewall Command Reference

---

### A

abort command	<a href="#">SMR-100</a>
absolute-timeout command	<a href="#">SMR-810</a>
access-class command	<a href="#">SMR-812</a>
access-group (NTP) command	<a href="#">SMR-536</a>
admin command	<a href="#">SMR-102</a>
affinity location-set command	<a href="#">SMR-606</a>
affinity location-type command	<a href="#">SMR-608</a>
affinity program command	<a href="#">SMR-610</a>
affinity self command	<a href="#">SMR-612</a>
alias command	<a href="#">SMR-104</a>
apply template command	<a href="#">SMR-107</a>
authenticate (NTP) command	<a href="#">SMR-538</a>
authentication-key (NTP) command	<a href="#">SMR-540</a>
autocommand command	<a href="#">SMR-814</a>

---

### B

banner exec command	<a href="#">SMR-817</a>
banner incoming command	<a href="#">SMR-819</a>

banner login command	<a href="#">SMR-821</a>
banner motd command	<a href="#">SMR-823</a>
banner prompt-timeout command	<a href="#">SMR-825</a>
broadcast client command	<a href="#">SMR-544</a>
broadcast command	<a href="#">SMR-542</a>
broadcastdelay command	<a href="#">SMR-546</a>

---

### C

cd command	<a href="#">SMR-288</a>
cdp advertise v1 command	<a href="#">SMR-52</a>
cdp command	<a href="#">SMR-50</a>
cdp holdtime command	<a href="#">SMR-54</a>
cdp log adjacency changes command	<a href="#">SMR-56</a>
cdp timer command	<a href="#">SMR-58</a>
ce tftp server command	<a href="#">SMR-330</a>
cfs check command	<a href="#">SMR-290</a>
clear (exec) command	<a href="#">SMR-109</a>
clear (global) command	<a href="#">SMR-111</a>
clear cdp counters command	<a href="#">SMR-60</a>
clear cdp table command	<a href="#">SMR-62</a>
clear-classic-config command	<a href="#">SMR-292</a>
clear comment command	<a href="#">SMR-113</a>
clear configuration commits command	<a href="#">SMR-115</a>
clear configuration inconsistency command	<a href="#">SMR-117</a>
clear configuration inconsistency replica command	<a href="#">SMR-120</a>
clear configuration sessions command	<a href="#">SMR-122</a>
clear context command	<a href="#">SMR-614</a>
clear delay command	<a href="#">SMR-574</a>
clear install label command	<a href="#">SMR-430</a>
clear install log-history oldest command	<a href="#">SMR-431</a>
clear install rollback oldest command	<a href="#">SMR-433</a>

clear interface (track) command [SMR-575](#)  
clear license command [SMR-244](#)  
clear license log command [SMR-245](#)  
clear line command [SMR-828](#)  
clear line vty command [SMR-830](#)  
clear mbus-statistics location command [SMR-331](#)  
clear object command [SMR-577](#)  
clear route ipv4 command [SMR-578](#)  
clear snmp counters command [SMR-706](#)  
clear type line-protocol state command [SMR-579](#)  
clear type list boolean command [SMR-580](#)  
clear type route reachability command [SMR-581](#)  
clear vrf (track) command [SMR-582](#)  
cli interactive syntax check command [SMR-831](#)  
cli whitespace completion command [SMR-833](#)  
clock read-calendar command [SMR-80](#)  
clock set command [SMR-82](#)  
clock summer-time command [SMR-84](#)  
clock timezone command [SMR-86](#)  
clock update-calendar command [SMR-90](#)  
commit command [SMR-124](#)  
config-register command [SMR-14](#)  
configure command [SMR-128](#)  
copy command [SMR-293](#)

---

## D

databits command [SMR-835](#)  
delay command [SMR-583](#)  
delete command [SMR-299](#)  
description (interface) command [SMR-131](#)  
dir command [SMR-301](#)  
disconnect-character command [SMR-838](#)  
disconnect command [SMR-837](#)  
do command [SMR-133](#)  
dsc serial command [SMR-332](#)  
dumpcore command [SMR-616](#)

---

## E

end command [SMR-135](#)  
end-template command [SMR-137](#)  
env disable command [SMR-334](#)  
env power-supply command [SMR-336](#)  
erase nvram  
    command [SMR-303](#)  
erase nvram-raw  
    command [SMR-305](#)  
escape-character command [SMR-840](#)  
exception filepath command [SMR-619](#)  
exception pakmem command [SMR-623](#)  
exception sparse command [SMR-625](#)  
exception sprsize command [SMR-627](#)  
exec-timeout command [SMR-842](#)  
exit command [SMR-139](#)

---

## F

facility-alarm contacts command [SMR-338](#)  
flowcontrol hardware command [SMR-844](#)  
follow command [SMR-629](#)  
format command [SMR-306](#)  
fsck command [SMR-309](#)

---

## H

hostname command [SMR-141](#)  
http server command [SMR-528](#)  
hw-module boot override command [SMR-340](#)  
hw-module linecard throughput (Cisco XR 12000 Series Router) command [SMR-246](#)  
hw-module linecard throughput (CRS-1) command [SMR-248](#)  
hw-module location (Cisco CRS-1) command [SMR-344](#)  
hw-module location (Cisco XR 12000 Series Router) command [SMR-342](#)  
hw-module port command [SMR-346](#)

hw-module power command [SMR-348](#)  
 hw-module power disable command [SMR-350](#)  
 hw-module reset auto command [SMR-352](#)  
 hw-module reset auto disable command [SMR-354](#)  
 hw-module shutdown command [SMR-356](#)  
 hw-module subslot reload command [SMR-358](#)  
 hw-module subslot shutdown command [SMR-360](#)

---

**I**

index persistence command [SMR-707](#)  
 install abort command [SMR-435](#)  
 install activate command [SMR-437](#)  
 install add command [SMR-444](#)  
 install attach command [SMR-450](#)  
 install auto-abort-timer stop command [SMR-452](#)  
 install commit command [SMR-454](#)  
 install deactivate command [SMR-456](#)  
 install label command [SMR-461](#)  
 install remove command [SMR-464](#)  
 install rollback to command [SMR-468](#)  
 install verify healthcheck command [SMR-472](#)  
 install verify packages command [SMR-475](#)  
 interface (NTP) command [SMR-547](#)  
 interface (track) command [SMR-585](#)

---

**L**

length command [SMR-846](#)  
 license add command [SMR-250](#)  
 license backup command [SMR-252](#)  
 license move command [SMR-254](#)  
 license move slot command [SMR-256](#)  
 license pool create command [SMR-258](#)  
 license pool remove command [SMR-260](#)  
 license restore command [SMR-262](#)  
 line command [SMR-848](#)  
 line-protocol track command [SMR-587](#)

load command [SMR-142](#)  
 load commit changes command [SMR-144](#)  
 load configuration failed command [SMR-146](#)  
 load configuration removed command [SMR-148](#)  
 load rollback changes command [SMR-149](#)  
 locale country command [SMR-91](#)  
 locale language command [SMR-93](#)  
 location (drp) command [SMR-238](#)  
 location (sdr) command [SMR-694](#)

---

**M**

man command [SMR-151](#)  
 master command [SMR-549](#)  
 max-associations command [SMR-551](#)  
 mirror command [SMR-16](#)  
 mirror pause command [SMR-18](#)  
 mirror resume command [SMR-19](#)  
 mirror verify command [SMR-20](#)  
 mkdir command [SMR-311](#)  
 monitor processes command [SMR-636](#)  
 monitor threads command [SMR-640](#)  
 more command [SMR-154](#)

---

**N**

notifications linkupdown disable command [SMR-709](#)  
 ntp clear command [SMR-555](#)  
 ntp command [SMR-553](#)

---

**O**

object command [SMR-589](#)

---

**P**

package  
     addition, introduction [SMR-446](#)

pair (SDR) command [SMR-697](#)  
 pairing (drp) command [SMR-240](#)  
 parity command [SMR-850](#)  
 peer (NTP) command [SMR-556](#)  
 placement memory command [SMR-644](#)  
 placement program command [SMR-646](#)  
 placement reoptimize command [SMR-648](#)  
 process command [SMR-650](#)  
 process core command [SMR-653](#)  
 process mandatory command [SMR-655](#)  
 pwd (config) command [SMR-158](#)  
 pwd command [SMR-313](#)

---

## R

redundancy switchover command [SMR-362](#)  
 reload (administration EXEC) command [SMR-23](#)  
 reload command [SMR-21](#)  
 resume command [SMR-852](#)  
 rmdir command [SMR-315](#)  
 rollback configuration command [SMR-159](#)  
 root command [SMR-162](#)  
 route ipv4 command [SMR-591](#)

---

## S

save configuration changes command [SMR-166](#)  
 save configuration command [SMR-164](#)  
 save configuration commit changes command [SMR-168](#)  
 save configuration failed command [SMR-170](#)  
 save configuration merge command [SMR-172](#)  
 save configuration removed command [SMR-174](#)  
 save rollback changes command [SMR-176](#)  
 sdr command [SMR-699](#)  
 send command [SMR-854](#)  
 server (NTP) command [SMR-558](#)  
 session-limit command [SMR-856](#)  
 session-timeout command [SMR-857](#)  
 set default-afi command [SMR-178](#)  
 set default-safi command [SMR-180](#)  
 set default-vrf command [SMR-182](#)  
 show aliases command [SMR-187](#)  
 show bcdl command [SMR-2](#)  
 show bcdl consumers command [SMR-4](#)  
 show bcdl queu command [SMR-6](#)  
 show bcdl tables command [SMR-8](#)  
 show bcdl trace command [SMR-10](#)  
 show calendar command [SMR-560](#)  
 show cdp command [SMR-64](#)  
 show cdp entry command [SMR-66](#)  
 show cdp interface command [SMR-69](#)  
 show cdp neighbors command [SMR-72](#)  
 show cdp traffic command [SMR-76](#)  
 show clock command [SMR-95](#)  
 show clock sync command [SMR-97](#)  
 show command [SMR-184](#)  
 show configuration (config) command [SMR-189](#)  
 show configuration changes command [SMR-192](#)  
 show configuration commit changes command [SMR-194](#)  
 show configuration commit list command [SMR-197](#)  
 show configuration failed (config) command [SMR-200](#)  
 show configuration failed incompatible command [SMR-202](#)  
 show configuration failed remove command [SMR-203](#)  
 show configuration failed rollback command [SMR-205](#)  
 show configuration failed startup command [SMR-207](#)  
 show configuration history command [SMR-209](#)  
 show configuration inconsistency replica command [SMR-213](#)  
 show configuration removed command [SMR-215](#)  
 show configuration rollback changes command [SMR-217](#)  
 show configuration running command [SMR-219](#)  
 show configuration running-config command [SMR-221](#)  
 show configuration sessions command [SMR-224](#)  
 show context command [SMR-657](#)  
 show default-afi-safi-vrf command [SMR-226](#)  
 show dll command [SMR-660](#)

- show dsc command [SMR-364](#)
- show environment command [SMR-366](#)
- show epm trace boot [SMR-25](#)
- show exception command [SMR-663](#)
- show facility-alarm contacts command [SMR-369](#)
- show filesystem command [SMR-317](#)
- show fpd package command [SMR-371](#)
- show history command [SMR-228](#)
- show hw-module fpd command [SMR-375](#)
- show hw-module linecard throughput command [SMR-264](#)
- show hw-module subslot brief command [SMR-378](#)
- show hw-module subslot config command [SMR-380](#)
- show hw-module subslot counters command [SMR-383](#)
- show hw-module subslot errors command [SMR-386](#)
- show hw-module subslot plim-subblock command [SMR-389](#)
- show hw-module subslot registers command [SMR-391](#)
- show hw-module subslot status command [SMR-394](#)
- show install active command [SMR-481](#)
- show install audit command [SMR-486](#)
- show install auto-abort-timer command [SMR-489](#)
- show install command [SMR-478](#)
- show install committed command [SMR-490](#)
- show install inactive command [SMR-494](#)
- show install log command [SMR-498](#)
- show install package command [SMR-504](#)
- show install pie-info command [SMR-508](#)
- show install requests command [SMR-515](#)
- show install rollback command [SMR-517](#)
- show install which command [SMR-522](#)
- show inventory command [SMR-396](#)
- show led command [SMR-399](#)
- show license active command [SMR-269](#)
- show license allocated command [SMR-271](#)
- show license available command [SMR-273](#)
- show license backup command [SMR-275](#)
- show license command [SMR-266](#)
- show license evaluation command [SMR-277](#)
- show license expired command [SMR-279](#)
- show license log command [SMR-281](#)
- show license pools command [SMR-283](#)
- show license udi command [SMR-285](#)
- show line command [SMR-859](#)
- show mbus command [SMR-401](#)
- show media command [SMR-319](#)
- show memory command [SMR-665](#)
- show memory compare command [SMR-668](#)
- show memory heap command [SMR-671](#)
- show mirror command [SMR-27](#)
- show ntp associations command [SMR-561](#)
- show ntp status command [SMR-564](#)
- show operational command [SMR-404](#)
- show placement location command [SMR-675](#)
- show placement policy command [SMR-677](#)
- show placement program command [SMR-681](#)
- show placement reoptimize command [SMR-683](#)
- show platform command [SMR-406](#)
- show processes command [SMR-685](#)
- show reboot command [SMR-30](#)
- show redundancy command [SMR-408](#)
- show running-config command [SMR-230](#)
- show screddrv command [SMR-412](#)
- show sdr command [SMR-701](#)
- show sessions command [SMR-862](#)
- show snmp command [SMR-711](#)
- show snmp engineID command [SMR-714](#)
- show snmp group command [SMR-716](#)
- show snmp host command [SMR-718](#)
- show snmp interface command [SMR-720](#)
- show snmp mib command [SMR-722](#)
- show snmp users command [SMR-725](#)
- show snmp view command [SMR-727](#)
- show system backup command [SMR-34](#)
- show terminal command [SMR-864](#)
- show track command [SMR-593](#)
- show users command [SMR-866](#)
- show variables boot command [SMR-38](#)
- show variables system command [SMR-40](#)

show version command [SMR-414](#)  
 show xml schema command [SMR-233](#)  
 slow-migration-interval command [SMR-690](#)  
 snmp-server chassis-id command [SMR-729](#)  
 snmp-server community command [SMR-731](#)  
 snmp-server community-map command [SMR-734](#)  
 snmp-server contact command [SMR-736](#)  
 snmp-server context command [SMR-738](#)  
 snmp-server engineID command [SMR-740](#)  
 snmp-server group command [SMR-742](#)  
 snmp-server host command [SMR-745](#)  
 snmp-server ifindex persist command [SMR-749](#)  
 snmp-server ifmib ifalias long command [SMR-751](#)  
 snmp-server ifmib stats cache command [SMR-753](#)  
 snmp-server interface command [SMR-754](#)  
 snmp-server ipv4 dscp command [SMR-756](#)  
 snmp-server ipv4 precedence command [SMR-757](#)  
 snmp-server location command [SMR-759](#)  
 snmp-server packetsize command [SMR-763](#)  
 snmp-server queue-length command [SMR-764](#)  
 snmp-server target list command [SMR-765](#)  
 snmp-server trap link ietf command [SMR-768](#)  
 snmp-server traps bgp command [SMR-773](#)  
 snmp-server traps command [SMR-770](#)  
 snmp-server traps mpls l3vpn command [SMR-775](#)  
 snmp-server traps ospf errors command [SMR-777](#)  
 snmp-server traps ospf lsa command [SMR-779](#)  
 snmp-server traps ospf retransmit command [SMR-781](#)  
 snmp-server traps ospf state-change neighbor-state-change command [SMR-783](#)  
 snmp-server trap-source command [SMR-797](#)  
 snmp-server traps pim interface-state-change command [SMR-785](#)  
 snmp-server traps pim invalid-message-received command [SMR-787](#)  
 snmp-server traps pim neighbor-change command [SMR-789](#)  
 snmp-server traps pim rp-mapping-change command [SMR-791](#)  
 snmp-server traps snmp command [SMR-793](#)

snmp-server traps syslog command [SMR-795](#)  
 snmp-server trap-timeout command [SMR-799](#)  
 snmp-server user command [SMR-801](#)  
 snmp-server view command [SMR-804](#)  
 snmp-server vrf command [SMR-806](#)  
 source (NTP) command [SMR-566](#)  
 squeeze command [SMR-322](#)  
 stopbits command [SMR-868](#)  
 system backup command [SMR-42](#)  
 system boot-sequence command [SMR-45](#)

---

## T

template command [SMR-235](#)  
 terminal exec command [SMR-870](#)  
 terminal length command [SMR-872](#)  
 terminal monitor command [SMR-874](#)  
 terminal width command [SMR-875](#)  
 track command [SMR-595](#)  
 transport input command [SMR-877](#)  
 transport output command [SMR-879](#)  
 transport preferred command [SMR-881](#)  
 trusted-key command [SMR-568](#)  
 type line-protocol state command [SMR-597](#)  
 type list boolean command [SMR-599](#)  
 type route reachability command [SMR-601](#)

---

## U

undelete command [SMR-324](#)  
 unmount command [SMR-326](#)  
 update-calendar command [SMR-570](#)  
 upgrade all command [SMR-417](#)  
 upgrade cpuctrlbits command [SMR-419](#)  
 upgrade fabric-downloader command [SMR-421](#)  
 upgrade hw-module fpd command [SMR-423](#)  
 upgrade mbus command [SMR-426](#)  
 utility bc command [SMR-888](#)

utility cut command [SMR-891](#)  
utility date command [SMR-895](#)  
utility date set command [SMR-897](#)  
utility df command [SMR-899](#)  
utility du command [SMR-903](#)  
utility egrep command [SMR-906](#)  
utility fgrep command [SMR-909](#)  
utility find command [SMR-911](#)  
utility head command [SMR-913](#)  
utility less command [SMR-915](#)  
utility mv command [SMR-917](#)  
utility sort command [SMR-919](#)  
utility tail command [SMR-922](#)  
utility uniq command [SMR-925](#)  
utility wc command [SMR-927](#)  
utility which command [SMR-929](#)  
utility xargs command [SMR-931](#)

---

## V

vrf (track) command [SMR-603](#)  
vty-pool command [SMR-883](#)

---

## W

width (terminal) command [SMR-885](#)

---

## X

xml agent corba command [SMR-530](#)  
xml agent corba hostname command [SMR-532](#)  
xml agent tty command [SMR-534](#)

