



## MASTER INDEX

# Cisco IOS XR Commands Master List, Release 3.5

This page contains a list of all the commands documented for Cisco IOS XR Release 3.5, ordered alphabetically. Use the **Alphabet Key** or your web browser's Find function to search for a command. To access the documentation for a particular command, click on the command name.

xml agent corba [SMR-474](#)  
xml agent corba hostname [SMR-476](#)  
xml agent tty [SMR-478](#)

---

## Y

yellow [HR-202](#)

## Page Number Designators

<b>AR</b>	Cisco IOS XR Advanced System Command Reference
<b>HR</b>	Cisco IOS XR Interface and Hardware Component Command Reference
<b>IR</b>	Cisco IOS XR Addresses and Services Command Reference
<b>MCR</b>	Cisco IOS XR Multicast Command Reference
<b>MNR</b>	Cisco IOS XR System Monitoring Command Reference
<b>QR</b>	Cisco IOS XR Modular Quality of Service Command Reference
<b>RR</b>	Cisco IOS XR Routing Command Reference
<b>SBR</b>	Cisco IOS XR Session Border Controller Command Reference
<b>SMR</b>	Cisco IOS XR System Management Command Reference
<b>SR</b>	Cisco IOS XR System Security Command Reference

---

## W

watchdog threshold memory [AR-141](#)  
wavelength [HR-250](#)  
weight [RR-355](#)  
width [HR-114, SMR-788](#)  
window-size (RSVP) [MPR-182](#)  
wins [SR-269](#)

---

## X

xconnect group [MPR-541](#)

