



CHAPTER 1

Introduction to the Broadband Access Center CLI

This chapter describes how you can start the command line interface (CLI) to access the Broadband Access Center (BAC) Device Provisioning Engine (DPE).

Accessing the DPE CLI from a Local Host

To access the DPE CLI, open a Telnet session to port 2323 from a local or remote host.

To access the CLI from a local host, you can use:

```
# telnet localhost 2323
```

or

```
# telnet 0 2323
```

Accessing the DPE CLI from a Remote Host

To access the CLI from a remote host, enter:

```
# telnet remote-hostname 2323
```



Note

If you cannot establish a Telnet connection to the CLI, it is likely that the CLI server is not running. You may need to start the server. To start the server, enter:

```
# /etc/init.d/bprAgent start cli
```

After you access the CLI, you must enter the DPE password to continue. The default login and enable passwords are **changeme**.

For information on how to change the login password and the enable password, see the [password](#), [page 2-5](#), and the [enable password](#), [page 2-3](#), commands, respectively.

Examples

```
bac_host# telnet 0 2323
```

```
Trying 0.0.0.0...
Connected to 0.
Escape character is '^]'.
```

```
bac_host BAC Device Provisioning Engine
```

```
User Access Verification
```

```
Password:
```

```
bac_host> enable
```

```
Password:
```

```
bac_host#
```