



## INDEX

---

### A

- AC power [2-17](#)
  - connecting to [3-13](#)
- ACS Appliance
  - context diagram [1-2](#)
  - hardware description [1-2](#)
  - system description [1-1](#)
- ACS Solution Engine
  - administering [4-1](#)
- administering the ACS Appliance [4-1](#)

---

### B

- back panel [1-5](#)
- backup command [C-3](#)

---

### C

- cabling [2-17](#)
  - connecting a console [3-14](#)
  - connecting during installation [3-13](#)
- command reference [C-1](#)
  - CLI conventions [C-1](#)
  - command privileges [C-1](#)
  - syntax, checking [C-1](#)
  - system help [C-2](#)
- configuration
  - initial [3-15](#)
  - initial procedure [3-16](#)
  - verifying [3-20](#)
- console [1-2](#)
- context diagram [1-2](#)

conventions

- command line interface [C-1](#)
- creating a safe environment [2-17](#)
- CSagent [4-35](#)

---

### D

- dbcompact command [C-3](#)
- description
  - ACS Appliance [1-1](#)
- download command [C-4](#)

---

### E

- electrostatic discharge, protecting against [2-15](#)
- Ethernet connectors [1-6](#)
- exit command [C-4](#)
- exportgroups command [C-5, C-6](#)

---

### F

- front panel [1-3](#)

---

### H

- hard drive [1-2](#)
- hardware description [1-2](#)
- help
  - system, displaying [C-2](#)
- help command [C-7](#)
- hostname, setting [4-29](#)
- humidity, operating [A-1](#)

**I**

- initial configuration [3-15](#)
- installation
  - cables, connecting [3-13](#)
  - creating a safe environment [2-17](#)
  - installing in a rack [3-3](#)
  - network, setting up [2-18](#)
  - next steps [3-21](#)
  - power source, connecting to [3-13](#)
  - precautions for rack-mounting [2-17](#)
  - preparation [2-11](#)
  - preparing for
    - LAN options, precautions for [2-18](#)
    - modems, precautions for [2-18](#)
    - telecommunications, precautions for [2-18](#)
  - safety [2-11](#)
  - site preparation [2-16](#)
  - tools and equipment required [2-18](#)
- IP address
  - reconfiguring [4-23](#)

**L**

- LAN options, precautions for [2-18](#)
- logging off [4-4](#)
- logging on [4-2](#)
- login credentials, characteristics [4-35](#)
- logs, obtaining support [4-12](#)

**M**

- migrating from Windows [4-38](#)
- modems, precautions for [2-18](#)

**N**

- ntpsync command [C-8](#)

**P**

- password
  - recovering from loss of [4-35](#)
  - resetting [4-21, 4-23](#)
  - set password command [C-13](#)
- processor [1-2](#)

**R**

- rack-mounting
  - procedure for [3-3](#)
- rack-mounting, precautions for [2-17](#)
- rebooting [4-4](#)
- recovery
  - CD ROM [4-35](#)
  - password [4-35](#)
- recovery management [4-35](#)
- re-imaging hard drive [4-37](#)
- restart command [C-10](#)

**S**

- safety
  - electrostatic discharge [2-15](#)
  - general precautions [2-14](#)
  - installation [2-11](#)
  - preventing EMI [2-15](#)
  - warnings and cautions [2-11](#)
  - with electricity [2-14](#)
- serial console connection [3-15](#)
- services, stopping system [4-6](#)
- set admin command [C-11](#)
- set domain command [C-12](#)
- set hostname command [C-12](#)
- set ip command [C-12](#)
- set passwd command [C-13](#)
- set timeout command [C-14](#)
- show command [C-14](#)

- shutdown command [C-15](#)
- shutting down [4-3](#)
- site preparation [2-16](#)
- specifications, technical [A-1](#)
- start command [C-15](#)
- starting, system services [4-8](#)
- status, determining system [4-5](#)
- stop command [C-15](#)
- support command [C-16](#)
- support tool [4-12](#)
- syntax of commands, checking [C-1](#)
- system administration [4-1](#)
- system domain, setting [4-28](#)
- ground conductor, defeating [2-12, 2-17](#)
- installation area [2-16](#)
- instructions, reading [2-13](#)
- jewelry [2-13](#)
- lightning activity [2-12, 3-14](#)
- On/Off switch [2-13](#)
- power cords, more than one [2-12](#)
- rack-mounting equipment [2-17](#)
- safety cover [2-12](#)
- short circuits [2-12, 2-17](#)
- translations of [2-11](#)
- Windows, migrating from [4-38](#)
- Windows services [B-1](#)

---

## T

- technical specifications [A-1](#)
- telecommunications, precautions for [2-18](#)
- temperature, operating [A-1](#)
- time and date, setting [4-25](#)
- time and date, setting with NTP [4-26](#)
- timeout, setting manually [4-28](#)

---

## U

- upgrade command [C-17](#)

---

## W

- warnings
  - regarding
    - batteries and explosion danger [2-13](#)
    - chassis, opening [2-12](#)
    - chassis, working on [2-12](#)
    - disposal of unit [2-13](#)
    - explosion [2-13](#)
    - faceplates and cover panels, removing [2-12](#)
    - failure to ground equipment [2-12](#)

