



---

## A

- AC power [2-7](#)
  - connecting to [3-13](#)
- ACS Appliance
  - context diagram [1-2](#)
  - hardware description [1-2](#)
  - system description [1-1](#)
- ACS Solution Engine
  - administering [4-1, 5-1](#)
- administering the ACS Appliance [4-1](#)
- audience for this document [ix](#)

---

## B

- back panel
  - for Quanta (1112) version [1-4](#)
  - for Quanta (1113) version [1-9](#)
- backup command [D-4](#)

---

## C

- cabling [2-8](#)
  - connecting a console [3-22](#)
  - connecting during installation [3-22](#)
- cautions
  - significance of [x](#)
- command reference [D-1](#)
  - CLI conventions [D-1](#)
  - command privileges [D-1](#)
  - syntax, checking [D-2](#)
  - system help [D-2](#)
- configuration

- initial [3-22](#)
- initial procedure [3-23](#)
- verifying [3-27](#)
- console
  - for Quanta (1112) version [1-2](#)
- context diagram [1-2](#)
- conventions
  - command line interface [D-1](#)
- creating a safe environment [2-6](#)
- CSagent [4-23](#)

---

## D

- dbpassword
  - set database password command [D-12](#)
- description
  - ACS Appliance [1-1](#)
- documentation
  - audience for this [ix](#)
  - organization of this [ix](#)
  - typographical conventions in [x](#)
- download command [D-5](#)

---

## E

- electrostatic discharge, protecting against [2-5](#)
- Ethernet connectors [1-6, 1-11](#)
- exit command [D-5](#)
- exportgroups command [D-5, D-6](#)

---

## F

- front panel

- for Quanta (1112) version [1-3](#)
- for Quanta (1113) version [1-7](#)

---

## H

- hard drive
  - for Quanta (1112) version [1-2](#)
  - for Quanta (1113) version [1-7, B-1](#)
- hardware description
  - for Quanta (1112) version [1-2](#)
- help
  - system, displaying [D-2](#)
- help command [D-7](#)
- hostname, setting [4-22](#)
- humidity, operating [A-1, B-1](#)

---

## I

- initial configuration [3-22](#)
- installation
  - cables, connecting [3-22](#)
  - creating a safe environment [2-6](#)
  - installing in a rack [3-2, 3-13](#)
  - network, setting up [2-9](#)
  - next steps [3-27](#)
  - powering on WLSE [3-22](#)
  - power source, connecting to [3-22](#)
  - precautions for rack-mounting [2-8](#)
  - preparation [2-1](#)
  - preparing for
    - LAN options, precautions for [2-9](#)
    - modems, precautions for [2-9](#)
    - telecommunications, precautions for [2-9](#)
  - safety [2-1](#)
  - site preparation [2-5](#)
  - tools and equipment required [2-9](#)
- IP address
  - reconfiguring [4-18](#)

---

## L

- LAN options, precautions for [2-9](#)
- logging off [4-3](#)
- logging on [4-2](#)
- login credentials, characteristics [4-23](#)
- logs, obtaining support [4-9](#)

---

## M

- migrating from Windows [5-11](#)
- modems, precautions for [2-9](#)

---

## N

- NIC, connecting cables [3-22](#)
- ntpsync command [D-7](#)

---

## O

- organization of this document [ix](#)

---

## P

- password
  - recovering from loss of [4-23](#)
  - resetting [4-15, 4-16](#)
  - set password command [D-13](#)
- personnel qualifications warning [ix](#)
- personnel training warning [ix](#)
- powering on the WLSE [3-22](#)
- processor
  - for Quanta (1112) version [1-2](#)

---

## R

- rack-mounting
  - procedure for [3-2, 3-13](#)

rack-mounting, precautions for [2-8](#)  
 rebooting [4-3](#)  
 recovery  
   CD ROM [4-23](#)  
   password [4-23](#)  
 recovery management [4-23](#)  
 re-imaging hard drive [4-25](#)  
 restart command [D-9](#)

---

## S

safety  
   electrostatic discharge [2-5](#)  
   general precautions [2-4](#)  
   installation [2-1](#)  
   preventing EMI [2-5](#)  
   warnings and cautions [2-1](#)  
   with electricity [2-4](#)  
 serial console connection [3-22](#)  
 services, stopping system [4-4](#)  
 set admin command [D-11](#)  
 set dbpasswd command [D-12](#)  
 set domain command [D-12](#)  
 set hostname command [D-12](#)  
 set ip command [D-13](#)  
 set passwd command [D-13](#)  
 set timeout command [D-14](#)  
 show command [D-14](#)  
 shutdown command [D-15](#)  
 shutting down [4-2](#)  
 site preparation [2-5](#)  
 specifications, technical [A-1, B-1](#)  
 start command [D-15](#)  
 starting, system services [4-5](#)  
 status, determining system [4-3](#)  
 stop command [D-15](#)  
 support command [D-16](#)  
 support tool [4-9](#)  
 syntax of commands, checking [D-2](#)

system administration [4-1](#)  
 system domain, setting [4-21](#)

---

## T

technical specifications [A-1, B-1](#)  
 telecommunications, precautions for [2-9](#)  
 temperature, operating [A-1, B-1](#)  
 time and date, setting [4-19](#)  
 time and date, setting with NTP [4-20](#)  
 timeout, setting manually [4-21](#)  
 turning on the WLSE [3-22](#)  
 typographical conventions in this document [x](#)

---

## U

upgrade command [D-17](#)  
 upgrading the ACS Appliance [5-1](#)

---

## W

warnings  
   AC power disconnection [2-2](#)  
   battery handling [2-2](#)  
   circuit breaker [2-2](#)  
   comply with electrical codes [2-3](#)  
   definition [2-1](#)  
   equipment installations [2-3](#)  
   faceplates and cover panels [2-3](#)  
   ground conductor [2-3](#)  
   installation [2-2](#)  
   lightning activity [2-2](#)  
   main disconnecting device [2-3](#)  
   more than one power supply [2-3](#)  
   product disposal [2-3](#)  
   regarding  
     ground conductor, defeating [2-6](#)  
     installation area [2-6](#)

- lightning activity [3-22](#)
- short circuits [2-7](#)
- training and qualifications of personnel working on  
unit [ix](#)
- restricted area [2-3](#)
- SELV circuit [2-3](#)
- TN power [2-2](#)
- translations of [2-1](#)
- Windows, migrating from [5-11](#)
- Windows services [C-1](#)