



## INDEX

---

### A

- AC power [2-7](#)
  - connecting to [3-2](#)
- ACS Appliance
  - context diagram [1-2](#)
  - hardware description [1-2](#)
  - system description [1-1](#)
- ACS Solution Engine
  - administering [4-1, 5-1](#)
- add-guiadmin command [C-3](#)
- administering the ACS Appliance [4-1](#)

---

### B

- back panel
  - for Quanta (1113) version [1-5](#)
- backup command [C-3](#)

---

### C

- cabling [2-7](#)
  - connecting a console [3-10](#)
  - connecting during installation [3-10](#)
- command reference [C-1](#)
  - CLI conventions [C-1](#)
  - command privileges [C-1](#)
  - syntax, checking [C-2](#)
  - system help [C-2](#)
- configuration
  - initial [3-10](#)
  - initial procedure [3-11](#)
  - verifying [3-15](#)

- context diagram [1-2](#)
- conventions
  - command line interface [C-1](#)
- creating a safe environment [2-7](#)
- CSagent [4-23](#)

---

### D

- dbpassword
  - set database password command [C-11](#)
- description
  - ACS Appliance [1-1](#)
- download command [C-4](#)

---

### E

- electrostatic discharge, protecting against [2-5](#)
- Ethernet connectors [1-7](#)
- exit command [C-4](#)
- exportgroups command [C-5](#)

---

### G

- GUI Administrator
  - adding [4-17](#)

---

### H

- hard drive
  - for Quanta (1113) version [1-3, A-2](#)
- hardware description
  - for Quanta (1113) version [1-2](#)
- help

system, displaying [C-2](#)  
 help command [C-6](#)  
 hostname, setting [4-22](#)  
 humidity, operating [A-1](#)

---

## I

initial configuration [3-10](#)  
 installation  
   cables, connecting [3-10](#)  
   creating a safe environment [2-7](#)  
   installing in a rack [3-2](#)  
   network, setting up [2-9](#)  
   next steps [3-17](#)  
   powering on WLSE [3-10](#)  
   power source, connecting to [3-10](#)  
   precautions for rack-mounting [2-8](#)  
   preparation [2-1](#)  
   preparing for  
     LAN options, precautions for [2-8](#)  
     modems, precautions for [2-8](#)  
     telecommunications, precautions for [2-8](#)  
   safety [2-1](#)  
   site preparation [2-6](#)  
   tools and equipment required [2-9](#)  
 IP address  
   reconfiguring [4-18](#)

---

## L

LAN options, precautions for [2-8](#)  
 logging off [4-3](#)  
 logging on [4-2](#)  
 login credentials, characteristics [4-24](#)  
 logs, obtaining support [4-9](#)

---

## M

migrating from Windows [5-13](#)  
 modems, precautions for [2-8](#)

---

## N

NIC, connecting cables [3-10](#)  
 ntpsync command [C-7](#)

---

## P

password  
   recovering from loss of [4-24](#)  
   resetting [4-16, 4-17](#)  
   set password command [C-13](#)  
 powering on the WLSE [3-10](#)

---

## R

rack-mounting  
   procedure for [3-2](#)  
 rack-mounting, precautions for [2-8](#)  
 rebooting [4-3](#)  
 recovery  
   CD ROM [4-24](#)  
   password [4-24](#)  
 recovery management [4-24](#)  
 re-imaging hard drive [4-25](#)  
 restart command [C-9](#)

---

## S

safety  
   electrostatic discharge [2-5](#)  
   general precautions [2-4](#)  
   installation [2-1](#)  
   preventing EMI [2-5](#)

- warnings and cautions [2-1](#)
  - with electricity [2-4](#)
- serial console connection [3-10](#)
- services, stopping system [4-4](#)
- set admin command [C-11](#)
- set dbpasswd command [C-12](#)
- set domain command [C-12](#)
- set hostname command [C-12](#)
- set ip command [C-12](#)
- set passwd command [C-13](#)
- set timeout command [C-14](#)
- show command [C-14](#)
- shutdown command [C-14](#)
- shutting down [4-2](#)
- site preparation [2-6](#)
- specifications, technical [A-1](#)
- start command [C-15](#)
- starting, system services [4-5](#)
- status, determining system [4-3](#)
- stop command [C-15](#)
- support command [C-16](#)
- support tool [4-9](#)
- syntax of commands, checking [C-2](#)
- system administration [4-1](#)
- system domain, setting [4-22](#)

---

## T

- technical specifications [A-1](#)
- telecommunications, precautions for [2-8](#)
- temperature, operating [A-1](#)
- time and date, setting [4-20](#)
- time and date, setting with NTP [4-20](#)
- timeout, setting manually [4-21](#)
- turning on the WLSE [3-10](#)

---

## U

- upgrade command [C-18](#)
- upgrading the ACS Appliance [5-1](#)

---

## W

- warnings
  - AC power disconnection [2-2](#)
  - battery handling [2-2](#)
  - circuit breaker [2-2](#)
  - comply with electrical codes [2-3](#)
  - definition [2-1](#)
  - equipment installations [2-3](#)
  - faceplates and cover panels [2-3](#)
  - ground conductor [2-3](#)
  - installation [2-2](#)
  - lightning activity [2-2](#)
  - main disconnecting device [2-3](#)
  - more than one power supply [2-3](#)
  - product disposal [2-3](#)
  - regarding
    - ground conductor, defeating [2-6](#)
    - installation area [2-6](#)
    - lightning activity [3-10](#)
    - short circuits [2-7](#)
  - restricted area [2-2](#)
  - SELV circuit [2-3](#)
  - TN power [2-2](#)
  - translations of [2-1](#)
- Windows, migrating from [5-13](#)
- Windows services [B-1](#)

