



A

accessing

CiscoView [2-4](#)

Device Configuration dialog box [4-2](#)

Device Manager [2-20](#)

Integration Utility [2-14](#)

online documentation [ix](#)

StackMaker [3-2](#)

adding IP addresses for other management workstations [4-2](#)

AIX patches required for Java Plug-in [2-3](#)

audience for this document [vii](#)

C

Catalyst switch device package, upgrading [5-3](#)

cautions

regarding updating stack members [3-5](#)

significance of [viii](#)

CD-ROM, obtaining documentation on a [x](#)

Cisco.com

accessing documentation from [ix](#)

features and services [xi](#)

ordering documentation from [x](#)

community strings, setting [A-3](#)

configuring

devices (scenario) [4-1](#)

prerequisites [4-1](#)

procedures [4-1](#)

verification [4-3](#)

stacks [3-6](#)

connectivity, testing [A-8](#)

D

device

access, limiting [4-3](#)

configuration, scenario [4-1](#)

prerequisites [4-1](#)

procedures [4-1](#)

verification [4-3](#)

display problems, scenario (see device display problems) [5-1](#)

list management [2-20](#)

package, verifying that the latest is downloaded [5-2](#)

problems, identifying [A-2](#)

Device Configuration dialog box, accessing [4-2](#)

device display problems, resolving
 (scenario) [5-1](#)

prerequisites [5-1](#)

procedures [5-2](#)

 Catalyst switch device package,
 upgrading [5-3](#)

 device package, verifying that the latest is
 downloaded [5-2](#)

 SNMP timeout/retry values, verifying
 correctness [5-4](#)

verification [5-4](#)

Device Manager, starting [2-20](#)

devices, configuring (scenario) [4-1](#)

prerequisites [4-1](#)

procedures [4-1](#)

 device access, limiting [4-3](#)

 Device Configuration dialog box,
 accessing [4-2](#)

 IP addresses for other management
 workstations, adding [4-2](#)

verification [4-3](#)

documentation

 feedback (reader comment) form, submitting
 electronically [xi](#)

 obtaining the latest [ix](#)

 from Cisco.com [x](#)

 from Networking Products Marketplace [x](#)

 from the online Subscription Store [x](#)

 on CD-ROM [x](#)

 on the web [ix](#)

related [ix](#), [xiv](#)

F

FAQS

on identifying device problems [A-2](#)

on resolving Java Plug-in problems [A-6](#)

on resolving package upgrade problems [A-4](#)

on setting community strings [A-3](#)

on SNMP error messages [A-3](#)

H

help

(see also troubleshooting) [A-1](#)

obtaining

 in StackMaker [3-6](#)

 reporting problems to Cisco Systems [A-13](#)

 technical assistance [xi](#)

online

 documentation [ix](#)

 using [vii](#)

HP-UX patches required for Java Plug-in [2-3](#)

I

identifying device problems [A-2](#)

Integration Utility [2-13](#)

 features [2-13](#)

 starting [2-14](#)

 using [2-14](#)

IP addresses for other management
 workstations, adding [4-2](#)

J

Java Plug-in

 installing [2-2](#)

 patches required for installation [2-3](#)

 resolving problems, with CiscoView 5.3,
 FAQ on [A-6](#)

L

limiting device access [4-3](#)

M

managing device lists [2-20](#)

N

navigating in CiscoView [2-4](#)

Networking Products MarketPlace, ordering
 documentation from [x](#)

O

online

 documentation, accessing [ix](#)

 help, using [vii](#)

overview [2-1](#)

 accessing CiscoView [2-4](#)

 Device Manager [2-20](#)

 displaying menus and making selections [2-7](#)

 Bitmap Property dialog box [2-9](#)

 tabbed panel format options [2-8](#)

 installing [2-2](#)

 Java Plug-in, and patches required for [2-2](#)

 Integration Utility [2-13](#)

 features [2-13](#)

 using [2-14](#)

 navigating in CiscoView [2-4](#)

 Package Support Updater [2-16](#)

 using CiscoView [2-9](#)

overview of CiscoView [1-1](#)

 CiscoWorks Server [1-3](#)

 features [1-2](#)

 device packages [1-2](#)

 supported devices [1-3](#)

P

Package Support Updater [2-16](#)
package upgrade problems, resolving [A-4](#)
patches required for install of Java Plug-in
 AIX [2-3](#)
 HP-UX [2-3](#)

R

reader comment form, submitting
 electronically [xi](#)
reporting problems to Cisco Systems [A-13](#)
resolving
 device display problems (see device display
 problems, resolving) [5-1](#)
 Java Plug-in problems [A-6](#)
 package upgrade problems [A-4](#)

S

scenarios
 configuring devices [4-1](#)
 device display problems [5-1](#)
setting community strings [A-3](#)
setup, testing [A-8](#)
SNMP
 error messages, understanding [A-3](#)
 timeout/retry values, verifying
 correctness [5-4](#)

StackMaker [3-1](#)
 error messages, troubleshooting [A-12](#)
 main window, understanding [3-3](#)
 stacks
 building [3-5](#)
 configuring [3-6](#)
 starting [3-2](#)
 understanding [3-1](#)
stacks
 building [3-5](#)
 caution regarding updating stack
 members [3-5](#)
 configuring [3-6](#)
starting
 CiscoView [2-4](#)
 Device Manager [2-20](#)
 Integration Utility [2-14](#)
 StackMaker [3-2](#)
Subscription Store, ordering documentation
 from [x](#)

T

TAC (Technical Assistance Center) [xii](#)
 escalation center [xiii](#)
 web site [xiii](#)
tasks in CiscoView [2-9](#)

technical support, obtaining [xi](#)
(see also troubleshooting) [A-1](#)
customers and partners (Cisco.com) [xi](#)
services and features [xi](#)
online help [vii](#)
warranty or maintenance contract customers
(TAC) [xii](#)

testing basic connectivity and setup [A-8](#)

third-party vendors, integrating with [2-13](#)
Integration Utility, features [2-13](#)
Integration Utility, using [2-14](#)

troubleshooting CiscoView [A-1](#)
basic connectivity and setup, testing [A-8](#)
community strings, setting [A-3](#)
device problems, identifying [A-2](#)
package upgrade problems, resolving [A-4](#)
SNMP error messages, understanding [A-3](#)
StackMaker error messages [A-12](#)

typographical conventions used in this
document [viii](#)

U

upgrade problems, resolving package [A-4](#)

V

vendors, integrating with [2-13](#)
Integration Utility
features [2-13](#)
using [2-14](#)
verifying device configuration [4-3](#)

W

working in CiscoView [2-9](#)

