



A

accessing

CiscoView [1-6](#)

CiscoView release versions [1-11](#)

Device Configuration dialog box [3-2](#)

help [1-11](#)

activity bar [1-9](#)

adding IP addresses for other management workstations [3-2](#)

audience for this document [vii](#)

C

Catalyst switch device packages, updating [4-3](#)

categories

changing [2-3](#)

definition [2-2](#)

editing [2-2](#)

cautions

significance of [viii](#)

changing

MIB labels [1-10](#)

chassis view [1-9](#)

displaying front or rear [1-14](#)

resizing [1-14](#)

setting refresh rate [1-10](#)

Cisco.com, accessing [xii](#)

CiscoView

release versions, understanding [1-19](#)

CiscoView Mini-RMON Manager

desktop description [A-3](#)

navigating in [A-3](#)

overview [A-1](#)

setting up [A-4](#)

alarm thresholds [A-5](#)

enabling statistics collection [A-6](#)

historical statistics collection [A-6](#)

system configuration [A-5](#)

starting [A-2](#)

CiscoView security - overview [1-4](#)

color legend [1-13](#)

component selection [1-15](#)

- configuring
 - categories [2-3](#)
 - devices [2-3](#)
 - devices (scenario) [3-1](#)
 - prerequisites [3-1](#)
 - procedures [3-1](#)
 - verification [3-3](#)
 - connectivity, testing [5-7](#)
 - context menu [1-14](#)
-
- ## D
- debug
 - options, and display lob [1-16](#)
 - device
 - access, limiting [3-3](#)
 - configuration [1-14, 2-3](#)
 - configuration, scenario [3-1](#)
 - prerequisites [3-1](#)
 - procedures [3-1](#)
 - verification [3-3](#)
 - display problems, scenario (see device display problems) [4-1](#)
 - monitoring [1-14, 2-4](#)
 - package, verifying that the latest is downloaded [4-2](#)
 - problems, identifying [5-2](#)
 - selection [1-15](#)
 - Device Configuration dialog box, accessing [3-2](#)
 - device display problems, resolving (scenario) [4-1](#)
 - prerequisites [4-1](#)
 - procedures [4-2](#)
 - Catalyst switch device packages, updating [4-3](#)
 - device package, verifying that the latest is downloaded [4-2](#)
 - SNMP timeout/retry values, verifying correctness [4-5](#)
 - verification [4-6](#)
 - device package
 - definition [1-4](#)
 - updates [1-20](#)
 - devices, configuring (scenario) [3-1](#)
 - prerequisites [3-1](#)
 - procedures [3-1](#)
 - device access, limiting [3-3](#)
 - Device Configuration dialog box, accessing [3-2](#)
 - IP addresses for other management workstations, adding [3-2](#)
 - verification [3-3](#)
 - devices, no credentials in DCR [1-16](#)

documentation [ix](#)
 audience for this [vii](#)
 feedback, submitting electronically [xiii](#)
 obtaining [xii](#)
 Cisco.com [xii](#)
 ordering [xii](#)
 other Cisco publications and information [xvi](#)
 related to this product [x](#)
 typographical conventions in [viii](#)

F

FAQS

 on identifying device problems [5-2](#)
 on resolving package update problems [5-6](#)
 on SNMP error messages [5-4](#)

G

Getting Help [1-19](#)

H

help [xiii](#)
 TAC
 website [xiii, xiv](#)
help, obtaining
 Getting Help [1-19](#)

I

identifying device problems [5-2](#)
installing CiscoView [1-6](#)
interface
 chassis view [1-9](#)
 object selector [1-9](#)
 options bar [1-9](#)
 status bar [1-9](#)
 tools bar [1-9](#)
IP addresses for other management
 workstations, adding [3-2](#)

L

limiting device access [3-3](#)

M

MIB labels [1-10](#)
monitoring devices [2-4](#)

N

navigating in CiscoView [1-7](#)

O

- object selector [1-9, 1-11](#)
- options bar [1-9](#)
 - setting preferences [1-10](#)
- options bar, using [1-10](#)
- overview of CiscoView [1-1](#)
 - CiscoWorks Server [1-4](#)
 - features [1-2](#)
 - device packages [1-4](#)
 - device package updates [1-20](#)

P

- package upgrade problems, resolving [5-6](#)
- polling
 - chassis view [1-14](#)
 - performance charts [2-4](#)
- preferences, setting [1-17](#)

R

- refresh rate
 - chassis view [1-10](#)
 - monitoring chart [2-4](#)
- resolving
 - device display problems (see device display problems, resolving) [4-1](#)
 - package update problems [5-6](#)

S

- scenarios
 - configuring devices [3-1](#)
 - device display problems [4-1](#)
- selecting
 - components [1-15](#)
 - device [1-15](#)
- setting
 - debugging options [1-16](#)
 - preferences [1-17](#)
 - Setting Debug Options [1-16](#)
 - Setting Preferences [1-17](#)
 - SNMP credentials [5-3](#)
- setup, testing [5-7](#)
- SNMP
 - error messages, understanding [5-4](#)
 - timeout/retry values, verifying correctness [4-5](#)
- SNMP credentials, setting [5-3](#)
- starting CiscoView
 - from Campus Manager [1-7](#)
 - from CiscoWorks homepage [1-6](#)
 - from Device Center [1-7](#)
 - from WhatsUp Gold [1-6](#)
- system information, viewing [2-5](#)

T

tables, using [2-6](#)

TAC (Technical Assistance Center)

case priority definitions [xv](#)

opening a case [xiv](#)

website [xiii](#)

technical support [xiii](#)

TAC

website [xiii](#)

testing basic connectivity and setup [5-7](#)

tools bar [1-9](#)

tools bar, using [1-11](#)

troubleshooting CiscoView

basic connectivity and setup, testing [5-7](#)

device problems, identifying [5-2](#)

package update problems, resolving [5-6](#)

SNMP credentials, setting [5-3](#)

SNMP error messages, understanding [5-4](#)

typographical conventions in this

document [viii](#)

U

understanding

CiscoView release versions [1-19](#)

Understanding CiscoView Release
Versions [1-19](#)

upgrade problems, resolving package [5-6](#)

User roles [1-4](#)

using

options bar [1-10](#)

tables [2-6](#)

tools bar [1-11](#)

Using tables [2-6](#)

Using the Options Bar [1-10](#)

Using the tools bar [1-11](#)

V

verifying device configuration [3-3](#)

viewing

CiscoView release version [1-11](#)

device performance [2-4](#)

devices with no credentials [1-16](#)

installed device package versions [1-11](#)

interface statistics [2-4](#)

system information [1-14](#)

viewing system information [2-5](#)

