



A

accessing

Cisco.com [xi](#)

CiscoWorks2000 Server [2-6](#)

troubleshooting access to [A-6 to A-8](#)

TAC

by telephone [xii](#)

website [xii](#)

adding

data to Inventory

adding device information
manually [2-10 to 2-12](#)

importing data [2-13](#)

device passwords to Inventory [2-21](#)

additional server software required for
installation [1-4](#)

at and cron, allowing user bin to use [2-27](#)

audience for this document [vii](#)

Availability, verifying that it is
working [2-15 to 2-16](#)

available drive space

checking [1-4](#)

server requirements [1-4](#)

B

backing up

caution regarding backup and restore
between different versions of
Essentials [1-14](#)

the converted database [1-17](#)

your previous database
during upgrades [1-14](#)

browser

problems after installation,
troubleshooting [A-9](#)

requirements for client [1-6](#)

C

Campus Manager, version supported

for local device import [1-7](#)

for remote device import [1-7](#)

cancelling an installation, caution
regarding [1-3](#)

Catalyst devices, configuring for Syslog
Analysis [2-18 to 2-19](#)

cautions

regarding

cancelling an installation [1-3](#)

- database backup and restore options, and different versions of Essentials [1-14](#)
- failure to regenerate the NetSys Integration baseline before upgrading [1-8](#)
- failure to upgrade IDS when upgrading Essentials [1-13](#)
- removing Essentials without using the uninstall program [1-21](#)
- significance of [viii](#)
- CD-ROM
 - mounting and unmounting [B-1 to B-6](#)
 - mounting a local drive [B-2 to B-3](#)
 - mounting a remote drive [B-4](#)
 - unmounting the drive [B-5 to B-6](#)
- CD-ROM, obtaining documentation on a [ix](#)
- Cisco.com
 - accessing [xi](#)
 - features and services [xi](#)
 - ordering documentation from [x](#)
- Cisco IOS devices, configuring for Syslog Analysis [2-17 to 2-18](#)
- Cisco WAN Manager, version supported for remote device import [1-7](#)
- CiscoWorks2000 Server
 - accessing [2-6](#)
 - configuring [2-7 to 2-9](#)
 - performance, improving [A-9](#)
 - troubleshooting access to [A-6 to A-8](#)
 - Daemon Manager not running [A-8](#)
 - proxy server problems [A-7](#)
 - verifying that the server is running [A-7](#)
- client requirements
 - browser [1-6](#)
 - memory (RAM) [1-6](#)
 - system software and hardware [1-6](#)
- Configuration Management, setting up [2-28 to 2-38](#)
 - device configurations, modifying [2-28 to 2-29](#)
 - confirming that devices are rcp-enabled [2-29](#)
 - Syslog Analysis, configuring devices for [2-29](#)
 - device credentials, entering [2-28](#)
 - device security, modifying [2-29 to 2-30](#)
- NetConfig, setting up [2-36 to 2-38](#)
 - device configurations, verifying [2-36](#)
 - device credentials, verifying [2-37](#)
 - device prompts, verifying [2-38](#)
 - device security, modifying [2-37](#)
- Netsys integration, setting up [2-30 to 2-35](#)
 - caution regarding failure to regenerate the baseline when upgrading [1-8](#)
 - on a remote Windows NT system [2-32 to 2-34](#)
 - supported Netsys versions [2-30](#)
 - troubleshooting [2-34 to 2-35](#)
 - upgrading [2-30 to 2-31](#)
- configuring
 - Catalyst devices [2-18 to 2-19](#)
 - Cisco IOS devices [2-17 to 2-18](#)
 - CiscoWorks2000 Server [2-7 to 2-9](#)
 - Essentials (see setting up Essentials)

conventions, typographical, used in this document [vii to viii](#)

country codes, specifying, in setting up Syslog Analysis [2-16 to 2-17](#)

cron and at, allowing user bin to use [2-27](#)

CWSI, version supported for remote device import [1-7](#)

D

Daemon Manager not running, troubleshooting [A-8](#)

daemons, enabling

- rcp [2-25 to 2-26](#)
- TFTP [2-22 to 2-23](#)

database backup and restore options, caution regarding different versions of Essentials [1-14](#)

device

- configuration
 - confirming that devices are rcp-enabled [2-29](#)
 - modifying for Configuration Management [2-28 to 2-29](#)
 - verifying in setting up NetConfig [2-36](#)
- configuring for Syslog Analysis [2-17 to 2-19](#)
 - Catalyst [2-18 to 2-19](#)
 - Cisco IOS [2-17 to 2-18](#)
- credentials
 - changing [2-14 to 2-15](#)
 - entering [2-28](#)
 - verifying [2-36 to 2-37](#)
- import, NMS environments supported for [1-7](#)
- information, adding to Inventory
 - adding information manually [2-10 to 2-12](#)
 - importing data [2-13](#)
- passwords, adding to Inventory [2-21](#)
- prompts, verifying [2-38](#)
- security, modifying
 - in Configuration Management [2-29 to 2-30](#)
 - in NetConfig [2-37](#)
- serial numbers, changing [2-14 to 2-15](#)
- view, creating [2-14](#)

documentation

- audience for this document [vii](#)
- feedback (reader comment) form, submitting electronically [x](#)
- obtaining [ix](#)
- obtaining the latest [x](#)
 - from Cisco.com [x](#)
 - from Networking Products MarketPlace [x](#)
 - from the online Subscription Store [x](#)
 - on CD-ROM [ix](#)
 - on the web [ix](#)
- related [viii to ix](#)
- typographical conventions used in [vii to viii](#)

drive space on server, installation requirement [1-4](#)

- checking for [1-4](#)

-
- H
- hardware
- client requirements [1-6](#)
 - server requirements [1-4](#)
- help
- online, how to use [viii](#)
 - technical support (see technical support)
- HP OpenView Network Node Manager, version supported
- for local device import [1-7](#)
 - for remote device import [1-7](#)
-
- IDS, upgrade required when upgrading Essentials, caution regarding [1-13](#)
- importing
- data manually after installation [1-20](#)
 - device information into Inventory [2-13](#)
- installing Essentials [1-1 to 1-22, A-6](#)
- caution regarding cancelling an installation [1-3](#)
 - importing data manually after installation [1-20](#)
 - new installations [1-9 to 1-13](#)
 - running the installation program [1-9 to 1-11](#)
 - time required [1-9](#)
 - upgrading Essentials data from a remote machine [1-11 to 1-13](#)
 - preparation for [1-3 to 1-8](#)
 - client requirements [1-6](#)
 - server requirements and recommendations [1-3 to 1-5](#)
 - supported devices [1-8](#)
 - supported NetSys versions [1-8](#)
 - supported NMS environments for device import [1-7](#)
 - upgrade paths [1-3](#)
 - product overview [1-1 to 1-2](#)
 - reinstalling [1-17 to 1-19](#)
 - running the installation program [1-18 to 1-19](#)
 - removing Essentials [1-21 to 1-22, A-6](#)
 - caution regarding failure to use the correct method [1-21](#)
 - task overview [1-2 to 1-3](#)
 - upgrading from previous versions [1-13 to 1-17](#)
 - backing up the converted database [1-17](#)
 - backing up your previous database [1-14](#)
 - caution regarding database backup and restore [1-14](#)
 - caution regarding failure to upgrade IDS when upgrading Essentials [1-13](#)
 - changing your database password [1-14 to 1-15](#)
 - running the installation program [1-15 to 1-16](#)
 - upgrading from the evaluation version [1-17 to 1-19](#)
 - running the installation program [1-18 to 1-19](#)
- Inventory, setting up [2-10 to 2-15](#)

data, adding or importing [2-10 to 2-13](#)

adding device information
manually [2-10 to 2-12](#)

importing devices [2-13](#)

device passwords, adding to [2-21](#)

device view, creating [2-14](#)

L

logging in

after upgrades [A-1 to A-2](#)

as the system administrator [2-6 to 2-7](#)

logging out [2-38](#)

M

memory (RAM) requirements

client [1-6](#)

server [1-4](#)

mounting and unmounting the CD-ROM (see
CD-ROM, mounting and unmounting)

N

NetConfig, setting up [2-36 to 2-38](#)

device configurations, verifying [2-36](#)

device credentials, verifying [2-37](#)

device prompts, verifying [2-38](#)

device security, modifying [2-37](#)

Netsys integration, setting up

on a remote Windows NT system [2-32 to 2-34](#)

supported Netsys versions [2-30](#)

troubleshooting [2-34 to 2-35](#)

upgrading [2-30 to 2-31](#)

caution regarding failure to first regenerate
the baseline [1-8](#)

NetView, version supported for remote device
import [1-7](#)

network

administrators, prerequisite skills [vii](#)

operators, prerequisite skills [vii](#)

Networking Products MarketPlace, ordering
documentation from [x](#)

NMS environments supported for device
import [1-7](#)

notes, significance of [viii](#)

P

preferences in Software Management,
setting [2-21 to 2-22](#)

prerequisite skills for

network administrators [vii](#)

network operators [vii](#)

process status, viewing [A-8](#)

product overview [1-1 to 1-2](#)

proxy server problems, troubleshooting [A-7](#)

R

- rcp, setting up [2-24 to 2-27](#)
 - making rcp the active file transfer method [2-26 to 2-27](#)
 - rcp daemon, enabling [2-25 to 2-26](#)
 - rcp remote user account, creating [2-24 to 2-25](#)
- reader comment form, submitting electronically [x](#)
- reinstalling or upgrading from the evaluation version (see installing Essentials)
- removing Essentials (see installing Essentials)

S

- server requirements and recommendations
 - minimum [1-4](#)
 - additional software [1-4](#)
 - available drive space [1-4](#)
 - memory (RAM) [1-4](#)
 - system hardware [1-4](#)
 - recommended [1-5](#)
- setting up Essentials [2-1 to 2-38](#)
 - Availability, verifying that it is working [2-15 to 2-16](#)
 - CiscoWorks2000 Server
 - accessing [2-6](#)
 - configuring [2-7 to 2-9](#)
 - Configuration Management, setting up [2-28 to 2-38](#)
 - device configurations, modifying [2-28 to 2-29](#)
 - device credentials, entering [2-28](#)
 - device security, modifying [2-29 to 2-30](#)
 - NetConfig, setting up [2-36 to 2-38](#)
 - Netsys integration, setting up [2-30 to 2-35](#)
 - Inventory, setting up [2-10 to 2-15](#)
 - data, adding or importing [2-10 to 2-13](#)
 - device attributes, changing [2-14 to 2-15](#)
 - device credentials, changing [2-14 to 2-15](#)
 - device serial numbers, changing [2-14 to 2-15](#)
 - device view, creating [2-14](#)
 - logging in [2-6 to 2-7](#)
 - logging out [2-38](#)
 - Software Management, setting up [2-21 to 2-27](#)
 - adding device passwords to inventory [2-21](#)
 - preferences, setting [2-21 to 2-22](#)
 - rcp, setting up [2-24 to 2-27](#)
 - space required for downloaded files [2-21](#)
 - TFTP, setting up [2-22 to 2-24](#)
 - Syslog Analysis, setting up [2-16 to 2-20](#)
 - country codes, specifying [2-16 to 2-17](#)
 - devices, configuring [2-17 to 2-19](#)
 - Syslog Analyzer, verifying that it is processing messages [2-20](#)
 - syslog configuration file, verifying settings in [2-19](#)
- task overview [2-2 to 2-5](#)

- Software Management, setting up [2-21 to 2-27](#)
 - adding device passwords to Inventory [2-21](#)
 - preferences, setting [2-21 to 2-22](#)
 - rcp, setting up [2-24 to 2-27](#)
 - making rcp the active file transfer method [2-26 to 2-27](#)
 - rcp daemon, enabling [2-25 to 2-26](#)
 - rcp remote user account, creating [2-24 to 2-25](#)
 - space required for downloaded files [2-21](#)
 - TFTP, setting up [2-22 to 2-24](#)
 - /tftpboot directory, creating [2-23 to 2-24](#)
 - TFTP daemon, enabling [2-22 to 2-23](#)
 - Software Management, setup
 - at and cron, allowing user bin to use [2-27](#)
 - software requirements
 - client [1-6](#)
 - server [1-4](#)
 - space required for downloaded files, in setting up Software Management [2-21](#)
 - Subscription Store, ordering documentation from [x](#)
 - supported
 - devices [1-8](#)
 - Netsys versions [2-30](#)
 - NMS environments for device import [1-7](#)
 - Syslog Analysis [2-16 to 2-20](#)
 - installation, troubleshooting [A-5](#)
 - setting up
 - configuring Catalyst devices [2-18 to 2-19](#)
 - configuring Cisco IOS devices [2-17 to 2-18](#)
 - configuring devices for [2-17 to 2-19](#)
 - country codes, specifying [2-16 to 2-17](#)
 - Syslog Analyzer, verifying that it is processing messages [2-20](#)
 - syslog configuration file, verifying settings in [2-19](#)
 - Syslog Analyzer, verifying that it is processing messages [2-20](#)
 - syslog configuration file, verifying settings in [2-19](#)
-
- T
- TAC (Technical Assistance Center) [xi to xii](#)
 - accessing
 - by telephone [xii](#)
 - website [xii](#)
 - features and services [xi](#)
 - Technical Assistance Center (see TAC)
 - technical support, obtaining [xi, xii](#)
 - customers and partners (Cisco.com) [xi](#)
 - accessing [xi](#)
 - services and features [xi](#)
 - warranty or maintenance contract customers (TAC) [xi to xii](#)
 - accessing [xi](#)
 - features and services [xi](#)
 - telephone numbers for TAC [xii](#)
 - TFTP, setting up [2-22 to 2-24](#)
 - /tftpboot directory, creating [2-23 to 2-24](#)
 - TFTP daemon, enabling [2-22 to 2-23](#)

troubleshooting

installation [A-1 to A-9](#)

browser problems [A-9](#)

CiscoWorks2000 Server,
accessing [A-6 to A-8](#)

CiscoWorks2000 Server performance,
improving [A-9](#)

failure to delete a package during
uninstallation [A-5](#)

installation messages,
understanding [A-2 to A-4](#)

logging in after upgrading [A-1 to A-2](#)

process status, viewing [A-8](#)

Syslog Analysis, problems during
installation [A-5](#)

Netsys integration setup [2-34 to 2-35](#)

typographical conventions used in this
document [vii to viii](#)

credentials [2-37](#)

prompts [2-38](#)

settings in the syslog configuration file [2-19](#)

that Availability is working [2-15 to 2-16](#)

that Syslog Analyzer is processing
messages [2-20](#)

that the CiscoWorks2000 Server is
running [A-7](#)

viewing process status [A-8](#)

W

Windows NT system, setting up Netsys
integration on a remote [2-32 to 2-34](#)

World Wide Web

accessing Cisco.com via [xi](#)

accessing TAC via [xii](#)

ordering documentation over [ix](#)

U

uninstalling Essentials (see installing
Essentials)

unmounting the CD-ROM (see mounting and
unmounting the CD-ROM)

upgrading Essentials (see installing Essentials)

V

verifying

device

configurations [2-36](#)