



A

accessing

CCO [xii](#)

via e-mail [xii](#)

via modem [xii](#)

via Telnet [xii](#)

via the world-wide web [xii](#)

CD-ROM from a remote machine [B-8 to B-9](#)

CiscoWorks2000 Server [2-6](#)

troubleshooting access to [A-7 to A-8](#)

TAC

via e-mail [xiii](#)

via telephone [xiii](#)

via the world-wide web [xiii](#)

adding

data to Inventory

adding device information
manually [2-10 to 2-12](#)

importing data [2-13](#)

device passwords to Inventory [2-21](#)

additional server software required for
installation [1-4](#)

at and cron, allowing user bin to use [2-27](#)

audience for this document [ix](#)

Availability, verifying that it is
working [2-15 to 2-16](#)

available drive space

checking [1-4](#)

server requirements [1-4](#)

B

backing up

caution regarding backup and restore
between different versions of
Essentials [1-13](#)

the converted database [1-16](#)

your previous database [1-17](#)

during reinstalls [1-17](#)

during upgrades [1-14](#)

during upgrades from the evaluation
version [1-17](#)

browser

problems after installation,
troubleshooting [A-9](#)

requirements for client [1-6](#)

- C
- Campus Manager, version supported
- for local device import [1-7](#)
 - for remote device import [1-7](#)
- cancelling an installation, caution
- regarding [1-3](#)
- Catalyst devices, configuring for Syslog Analysis [2-18 to 2-19](#)
- cautions
- regarding
 - cancelling an installation [1-3](#)
 - database backup and restore options, and different versions of Essentials [1-13](#)
 - failure to regenerate the NetSys Integration baseline before upgrading [1-8](#)
 - failure to upgrade IDS when upgrading Essentials [1-13](#)
 - removing Essentials without using the uninstall program [1-21](#)
 - significance of [x](#)
- cautions regarding
- using the correct CD-ROM mounting procedure [B-1](#)
- CCO (Cisco Connection Online)
- accessing [xii](#)
 - via e-mail [xii](#)
 - via modem [xii](#)
 - via Telnet [xii](#)
 - via the world-wide web [xii](#)
 - features and services [xii](#)
- CD-ROM
- drives
 - accessing from a remote machine [B-8 to B-9](#)
 - mounting local [B-6 to B-7](#)
 - unmounting [B-7](#)
 - filesystem, unexporting [B-9](#)
 - obtaining documentation on [xi](#)
- Cisco Connection Online (see CCO)
- Cisco IOS devices, configuring for Syslog Analysis [2-17 to 2-18](#)
- Cisco WAN Manager, version supported
- for remote device import [1-7](#)
- CiscoWorks2000 Server
- accessing [2-6](#)
 - configuring [2-7 to 2-9](#)
 - performance, improving [A-9](#)
 - troubleshooting access to [A-7 to A-8](#)
 - Daemon Manager not running [A-8](#)
 - proxy server problems [A-7 to A-8](#)
 - verifying that the server is running [A-7](#)
- client requirements
- browser [1-6](#)
 - memory (RAM) [1-6](#)
 - system software and hardware [1-6](#)
- Configuration Management, setting up [2-28 to 2-38](#)
- device configurations, modifying [2-28 to 2-29](#)
 - confirming that devices are rcp-enabled [2-29](#)

- Syslog Analysis, configuring devices for [2-29](#)
- device credentials, entering [2-28](#)
- device security, modifying [2-29 to 2-30](#)
- NetConfig, setting up [2-35 to 2-38](#)
 - device configurations, verifying [2-36](#)
 - device credentials, verifying [2-36 to 2-37](#)
 - device prompts, verifying [2-38](#)
 - device security, modifying [2-37](#)
- Netsys integration, setting up [2-30 to 2-35](#)
 - caution regarding failure to regenerate the baseline when upgrading [1-8](#)
 - on a remote Windows NT system [2-32 to 2-34](#)
 - supported Netsys versions [2-30](#)
 - troubleshooting [2-34 to 2-35](#)
 - upgrading [2-30 to 2-31](#)
- configuring
 - Catalyst devices [2-18 to 2-19](#)
 - Cisco IOS devices [2-17 to 2-18](#)
 - CiscoWorks2000 Server [2-7 to 2-9](#)
 - Essentials (see setting up Essentials)
- conventions, typographical, used in this document [ix to x](#)
- country code, specifying [2-16 to 2-17](#)
- cron and at, allowing user bin to use [2-27](#)
- CWSI, version supported for remote device import [1-7](#)

D

- Daemon Manager not running, troubleshooting [A-8](#)
- daemons, enabling
 - rcp [2-25 to 2-26](#)
 - TFTP [2-22 to 2-23](#)
- database backup and restore options, caution regarding different versions of Essentials [1-13](#)
- device
 - configuration
 - confirming that devices are rcp-enabled [2-29](#)
 - modifying for Configuration Management [2-28 to 2-29](#)
 - verifying in setting up NetConfig [2-36](#)
 - configuring for Syslog Analysis [2-17 to 2-19](#)
 - Catalyst [2-18 to 2-19](#)
 - Cisco IOS [2-17 to 2-18](#)
- credentials
 - changing [2-14 to 2-15](#)
 - entering [2-28](#)
 - verifying [2-36 to 2-37](#)
- import, NMS environments supported for [1-7](#)
- information, adding to Inventory
 - adding information manually [2-10 to 2-12](#)
 - importing data [2-13](#)
- passwords, adding to Inventory [2-21](#)
- prompts, verifying [2-38](#)

security, modifying
 in Configuration Management [2-29 to 2-30](#)
 in NetConfig [2-37](#)

serial numbers, changing [2-14 to 2-15](#)

view, creating [2-14](#)

documentation
 audience for this document [ix](#)
 feedback, providing online [xiv](#)
 obtaining [xi](#)
 on CD-ROM [xi](#)
 on the world-wide web [xi](#)
 ordering [xi](#)
 related [x to xi](#)
 typographical conventions used in [ix to x](#)

drives, CD-ROM
 accessing from a remote machine [B-8 to B-9](#)
 mounting local CD-ROM drives [B-6 to B-7](#)
 unmounting drives [B-7](#)

drive space on server, installation
 requirement [1-4](#)

checking for [1-4](#)

E

e-mail, using
 to access CCO [xii](#)
 to access TAC [xiii](#)
 languages available [xiii](#)
 to provide documentation feedback [xiv](#)

H

hardware
 client requirements [1-6](#)
 server requirements [1-4](#)

help [xii to xiii](#)

CCO
 accessing [xii](#)
 features and services [xii](#)

online, how to use [x to xi](#)

TAC
 features and services [xiii](#)
 languages, for e-mail contact [xiii](#)
 telephone numbers [xiii](#)
 URL [xiii](#)

HP OpenView Network Node Manager, version supported
 for local device import [1-7](#)
 for remote device import [1-7](#)

I

IDS, upgrade required when upgrading
 Essentials, caution regarding [1-13](#)

importing
 data manually after installation [1-19 to 1-20](#)
 device information into Inventory [2-13](#)

- installing Essentials [1-1 to 1-22](#)
 - caution regarding cancelling an installation [1-3](#)
 - importing data manually after installation [1-19 to 1-20](#)
 - new installations [1-9 to 1-11](#)
 - running the installation program [1-10 to 1-11](#)
 - time required [1-10](#)
 - upgrading Essentials data from a remote machine [1-11 to 1-13](#)
 - preparation for [1-3 to 1-8](#)
 - client requirements [1-6](#)
 - server requirements and recommendations [1-3 to 1-5](#)
 - supported devices [1-8](#)
 - supported NetSys versions [1-8](#)
 - supported NMS environments for device import [1-7](#)
 - upgrade paths [1-3](#)
 - product overview [1-1 to 1-2](#)
 - reinstalling [1-17 to 1-19](#)
 - backing up your previous database [1-17](#)
 - running the installation program [1-18 to 1-19](#)
 - removing Essentials [1-21 to 1-22](#)
 - caution regarding failure to use the correct method [1-21](#)
 - task overview [1-2 to 1-3](#)
 - upgrades from previous versions [1-13 to 1-16](#)
 - upgrading from previous versions
 - backing up the converted database [1-16](#)
 - backing up your previous database [1-14](#)
 - caution regarding database backup and restore [1-13](#)
 - caution regarding failure to upgrade IDS when upgrading Essentials [1-13](#)
 - running the installation program [1-14 to 1-16](#)
 - upgrading from the evaluation version [1-17 to 1-19](#)
 - backing up your previous database [1-17](#)
 - running the installation program [1-18 to 1-19](#)
 - Inventory, setting up [2-10 to 2-15](#)
 - data, adding or importing [2-10 to 2-13](#)
 - adding device information manually [2-10 to 2-12](#)
 - importing devices [2-13](#)
 - device passwords, adding to [2-21](#)
 - device view, creating [2-14](#)
-
- L
 - languages available through TAC e-mail contact [xiii](#)
 - logging in
 - after upgrades [A-1 to A-2](#)
 - as the system administrator [2-6 to 2-7](#)
 - logging out [2-38](#)

M

memory (RAM) requirements

client [1-6](#)server [1-4](#)modem, using to access CCO [xii](#)

mounting and unmounting the

CD-ROM [B-1 to B-9](#)accessing the CD-ROM from a remote machine [B-8 to B-9](#)caution regarding [B-1](#)mounting a local drive [B-6 to B-7](#)prerequisites [B-2 to B-5](#)verifying network loopback is enabled [B-5](#)verifying NFS client and server are running [B-3 to B-4](#)verifying or installing patch [B-2 to B-3](#)verifying resolution of system hostname and IP address [B-4 to B-5](#)troubleshooting [B-5](#)undoing mistakes [B-5](#)unexporting the CD-ROM filesystem [B-9](#)unmounting the drive [B-7](#)

N
NetConfig, setting up [2-35 to 2-38](#)device configurations, verifying [2-36](#)device credentials, verifying [2-36 to 2-37](#)device prompts, verifying [2-38](#)device security, modifying [2-37](#)

Netsys integration, setting up

on a remote Windows NT system [2-32 to 2-34](#)supported Netsys versions [2-30](#)troubleshooting [2-34 to 2-35](#)upgrading [2-30 to 2-31](#)caution regarding failure to first regenerate the baseline [1-8](#)NetView, version supported for remote device import [1-7](#)

network

administrators, prerequisite skills [ix](#)operators, prerequisite skills [ix](#)NMS environments supported for device import [1-7](#)notes, significance of [x](#)

O
ordering documentation [xi](#)

P
preferences in Software Management, setting [2-21 to 2-22](#)prerequisites for mounting the CD-ROM [B-2 to B-5](#)verifying network loopback is enabled [B-5, B-5](#)verifying NFS client and server are running [B-3 to B-4](#)verifying or install patch [B-2 to B-3](#)

verifying resolution of system hostname and IP address [B-4 to B-5](#)

prerequisite skills for

- network administrators [ix](#)
- network operators [ix](#)

process status, viewing [A-8](#)

product overview [1-1 to 1-2](#)

proxy server problems, troubleshooting [A-7 to A-8](#)

R

rcp, setting up [2-24 to 2-27](#)

- making rcp the active file transfer method [2-26 to 2-27](#)
- rcp daemon, enabling [2-25 to 2-26](#)
- rcp remote user account, creating [2-24 to 2-25](#)

reinstalling or upgrading from the evaluation version (see installing Essentials)

removing Essentials (see installing Essentials)

S

server requirements and recommendations

- minimum [1-4](#)
- additional software [1-4](#)
- available drive space [1-4](#)
- memory (RAM) [1-4](#)
- system hardware [1-4](#)
- recommended [1-5](#)

setting up Essentials [2-1 to 2-38](#)

- Availability, verifying that it is working [2-15 to 2-16](#)
- CiscoWorks2000 Server
 - accessing [2-6](#)
 - configuring [2-7 to 2-9](#)
- Configuration Management, setting up [2-28 to 2-38](#)
 - device configurations, modifying [2-28 to 2-29](#)
 - device credentials, entering [2-28](#)
 - device security, modifying [2-29 to 2-30](#)
 - NetConfig, setting up [2-35 to 2-38](#)
 - Netsys integration, setting up [2-30 to 2-35](#)
- Inventory, setting up [2-10 to 2-15](#)
 - data, adding or importing [2-10 to 2-13](#)
 - device attributes, changing [2-14 to 2-15](#)
 - device credentials, changing [2-14 to 2-15](#)
 - device serial numbers, changing [2-14 to 2-15](#)
 - device view, creating [2-14](#)
- logging in [2-6 to 2-7](#)
- logging out [2-38](#)
- Software Management, setting up [2-20 to 2-27](#)
 - adding device passwords to inventory [2-21](#)
 - preferences, setting [2-21 to 2-22](#)
 - rcp, setting up [2-24 to 2-27](#)
 - space required for downloaded files [2-21](#)
 - TFTP, setting up [2-22 to 2-24](#)

- Syslog Analysis, setting up [2-16 to 2-20](#)
 - devices, configuring [2-17 to 2-19](#)
 - Syslog Analyzer, verifying that it is processing messages [2-20](#)
 - syslog configuration file, verifying settings in [2-19](#)
 - task overview [2-2 to 2-5](#)
 - Software Management, setting up [2-20 to 2-27](#)
 - adding device passwords to Inventory [2-21](#)
 - preferences, setting [2-21 to 2-22](#)
 - rcp, setting up [2-24 to 2-27](#)
 - making rcp the active file transfer method [2-26 to 2-27](#)
 - rcp daemon, enabling [2-25 to 2-26](#)
 - rcp remote user account, creating [2-24 to 2-25](#)
 - space required for downloaded files [2-21](#)
 - TFTP, setting up [2-22 to 2-24](#)
 - /tftpboot directory, creating [2-23 to 2-24](#)
 - TFTP daemon, enabling [2-22 to 2-23](#)
 - Software Management, setup
 - at and cron, allowing user bin to use [2-27](#)
 - software requirements
 - client [1-6](#)
 - server [1-4](#)
 - space required for downloaded files, in setting up Software Management [2-21](#)
 - supported
 - devices [1-8](#)
 - Netsys versions [2-30](#)
 - NMS environments for device import [1-7](#)
 - Syslog Analysis [2-16 to 2-20](#)
 - installation, troubleshooting [A-5](#)
 - setting up
 - configuring Catalyst devices [2-18 to 2-19](#)
 - configuring Cisco IOS devices [2-17 to 2-18](#)
 - configuring devices for [2-17 to 2-19](#)
 - Syslog Analyzer, verifying that it is processing messages [2-20](#)
 - syslog configuration file, verifying settings in [2-19](#)
 - Syslog Analyzer, verifying that it is processing messages [2-20](#)
 - syslog configuration file, verifying settings in [2-19](#)
-
- T
- TAC (Technical Assistance Center)
 - features and services [xiii](#)
 - languages, for e-mail contact [xiii](#)
 - telephone numbers [xiii](#)
 - URL [xiii](#)
 - Technical Assistance Center (see TAC)
 - technical support [xii to xiii](#)
 - CCO
 - accessing [xii](#)
 - features and services [xii](#)

TAC

- accessing [xiii](#)
- features and services [xiii](#)
- telephone numbers [xiii](#)
- telephone numbers for TAC [xiii](#)
- Telnet, using to access CCO [xii](#)
- TFTP, setting up [2-22 to 2-24](#)
 - /tftpboot directory, creating [2-23 to 2-24](#)
 - TFTP daemon, enabling [2-22 to 2-23](#)
- troubleshooting
 - installation [A-1 to A-9](#)
 - browser problems [A-9](#)
 - CiscoWorks2000 Server,
 - accessing [A-7 to A-8](#)
 - CiscoWorks2000 Server performance,
 - improving [A-9](#)
 - failure to delete a package during
 - uninstallation [A-5](#)
 - installation messages,
 - understanding [A-2 to A-5](#)
 - logging in after upgrading [A-1 to A-2](#)
 - process status, viewing [A-8](#)
 - Syslog Analysis, problems during
 - installation [A-5](#)
 - Netsys integration setup [2-34 to 2-35](#)
 - typographical conventions used in this
 - document [ix to x](#)

U

- uninstalling Essentials (see installing Essentials)
- unmounting the CD-ROM drive [B-7](#)
- upgrading Essentials (see installing Essentials)
- URLs
 - for accessing CCO [xii](#)
 - for accessing Cisco documentation [xi](#)
 - for accessing TAC [xiii](#)
 - for ordering the documentation CD-ROM [xi](#)

V

- verifying
 - device
 - configurations [2-36](#)
 - credentials [2-36 to 2-37](#)
 - prompts [2-38](#)
 - settings in the syslog configuration file [2-19](#)
 - that Availability is working [2-15 to 2-16](#)
 - that Syslog Analyzer is processing
 - messages [2-20](#)
 - that the CiscoWorks2000 Server is
 - running [A-7](#)
 - viewing process status [A-8](#)

W

Windows NT system, setting up Netsys
integration on a remote [2-32 to 2-34](#)

world-wide web

accessing CCO on [xii](#)

documentation, obtaining via [xi](#)

using to access TAC [xiii](#)