



---

## A

- AAA Accounting parameters [4-65](#)
- AAA Authorization parameters [4-65](#)
- AAA Login Authentication parameters [4-64](#)
- AAA password statement, NISF [A-26](#)
- AAA username statement, NISF [A-26](#)
- AAA Voice Class parameters [4-51](#)
- About menu option, Network Information File window [A-6](#)
- Access Control List parameters [4-75](#)
- Actions menu options, Topology Manager [3-5](#)
- add a AAA user and password, how to [A-20](#)
- add a Cisco IE2100, how to [A-8](#)
- add a Cisco MGC Node Manager, how to [A-18](#)
- add a device, how to [3-22, 3-23, 3-24](#)
- add a device to a Cisco IE2100, how to [A-10](#)
- add a managed resource, how to [4-80](#)
- add a Region, how to [3-25](#)
- add a region, how to [A-7](#)
- Add button, Provisioning Manager window [4-11](#)
- Add Device, Cisco IE2100, Topology Manager [3-8](#)
- Add Device, CMNM, Topology Manager [3-8](#)
- Add Device, Directory Gatekeeper, Topology Manager [3-8](#)
- Add Device, Gatekeeper, Topology Manager [3-7](#)
- Add Device, Gateway, Topology Manager [3-7](#)
- Add Device, Topology Manager [3-7](#)
- adding a user to a group, CNS Security Services Administration [6-9](#)
- Add Region, Topology Manager [3-6](#)

---

## B

- Background option, Topology Manager [3-5](#)
- Basic Server Objects [4-2, 4-3](#)
- Browse Tree menu, Provisioning Manager [4-6](#)
- bulk add devices to a Cisco IE2100, how to [A-7, A-13](#)

---

## C

- Call Accounting Template parameters [4-52, 4-53](#)
- Carrier configuration parameters [4-26](#)
- Carrier Sensitive Route Server [3-14](#)
- CAS-E&M Voice Port parameters [4-39](#)
- CCNSC VS functionality [1-2](#)
- change password, CNS Security Services Administration [6-8](#)
- changing a user password, CNS Security Services Administration [6-10](#)
- changing own password, CNS Security Services Administration [6-11](#)
- CIC application [3-14](#)
- Cisco IE2100 [1-9](#)
- Cisco IE2100, description [1-4](#)
- Cisco IE2100, how to create [1-12](#)
- Cisco IE2100, how to delete [1-13](#)
- Cisco IE 2100 appliance [1-2](#)
- Cisco IE2100 statement, NISF [A-25](#)
- Cisco IE2100 subview, Topology Manager [3-4, 4-10](#)
- Cisco Info Center [3-14](#)
- Cisco Media Gateway Controller Node Manager [3-13](#)
- Cisco MGC Node Manager (CMNM) [1-2](#)
- CiscoView [3-14](#)
- CiscoView application [3-14](#)
- Cisco Voice Routing Center, accessing [5-1](#)

Cisco Voice Routing Center, description [5-1](#)  
 Client GUI, description [2-1](#)  
 Client GUI, launching info [2-1](#)  
 clone user configuration, CNS Security Services  
     Administration [6-6](#)  
 CMNM, description [1-4](#)  
 CMNM, how to create [1-12](#)  
 CMNM, how to delete [1-13](#)  
 CMNM application, accessing [3-13](#)  
 CMNMs, populating the object model [1-6](#)  
 CMNM statement, NISF [A-26](#)  
 CMNM subview, Topology Manager [3-4, 4-10](#)  
 CNS Security Services Administration, adding a user to a  
     group [6-9](#)  
 CNS Security Services Administration, change  
     password [6-8](#)  
 CNS Security Services Administration, changing a user  
     password [6-10](#)  
 CNS Security Services Administration, changing own  
     password [6-11](#)  
 CNS Security Services Administration, clone a user [6-6](#)  
 CNS Security Services Administration, creating a  
     user [6-8](#)  
 CNS Security Services Administration, delete a user [6-6](#)  
 CNS Security Services Administration, deleting a  
     user [6-9](#)  
 CNS Security Services Administration, features [6-3](#)  
 CNS Security Services Administration, modify a user  
     profile [6-6](#)  
 CNS Security Services Administration, modifying user  
     attributes [6-10](#)  
 CNS Security Services Administration, personal  
     profile [6-8](#)  
 CNS Security Services Administration, Preferences menu  
     options [6-8](#)  
 CNS Security Services Administration server [6-1](#)  
 CNS Security Services Administration server, expert  
     mode [6-5](#)  
 CNS Security Services Administration server, how to log  
     in [6-4](#)  
 Cold Start, invoking [A-5, A-21](#)  
 Common Voice Port parameters [4-33](#)  
 configuration files [1-9](#)

Configuration pane, Provisioning Manager window [4-10](#)  
 CSR application [3-14](#)

---

## D

delete a AAA user, how to [A-21](#)  
 delete a Cisco IE2100, how to [A-10](#)  
 delete a Cisco MGC Node Manager, how to [A-19](#)  
 delete a device from a Cisco IE2100, how to [A-15](#)  
 delete a region, how to [A-8](#)  
 Delete button, Provisioning Manager window [4-12](#)  
 Delete Device, Topology Manager [3-8](#)  
 Delete Region, Topology Manager [3-6](#)  
 delete user, CNS Security Services Administration [6-6](#)  
 deleting a user, CNS Security Services  
     Administration [6-9](#)  
 Device statement, NISF [A-25](#)  
 DGK statement, NISF [A-11, A-13, A-25](#)  
 Directory Gatekeeper, description [1-6](#)  
 Directory Gatekeeper, how to create [1-12](#)  
 Directory Gatekeeper Group, description [1-6, 1-10](#)  
 Directory Gatekeeper Group, validation [1-11](#)  
 discovered managed resources [1-4](#)  
 DM\_BEGIN statement, NISF [A-24](#)  
 DM\_END statement, NISF [A-24](#)  
 DNIS Map External Mode parameters [4-46](#)  
 DNIS Map Internal Mode parameters [4-46](#)  
 DNIS Map parameters [4-46](#)  
 domain statement, NISF [A-24](#)  
 Dynamic Access Control List parameters [4-78](#)

---

## E

E1 R2 Voice Port parameters [4-37](#)  
 edit\_seedfile.sh [A-3](#)  
 Element Management System (EMS) [1-4](#)  
 EMSs, how to create [1-12](#)  
 EMSs, how to delete [1-13](#)  
 error reporting, Provisioning Manager window [4-13](#)

Ethernet Interface parameters [4-67](#)  
 Exit menu option, Network Information File window [A-6](#)  
 Exit option, Topology Manager [3-5](#)  
 Extended Access Control List parameters [4-77](#)

---

## F

Fast Ethernet Interface parameters [4-68](#)  
 Fax Off Ramp parameters [4-49](#)  
 Fax On Ramp parameters [4-48](#)  
 Fax parameters [4-47](#)  
 File menu, Provisioning Manager [4-6](#)  
 File menu options, Network Information File window [A-5](#)  
 File menu options, Topology Manager [3-5](#)  
 Find option, Provisioning Manager [4-6](#)

---

## G

Gatekeeper, description [1-5](#)  
 Gatekeeper, how to create [1-12](#)  
 Gatekeeper Group, description [1-6, 1-10](#)  
 Gatekeeper Group, validation [1-11](#)  
 Gateway, description [1-5](#)  
 Gateway, how to create [1-12](#)  
 Gigabit Ethernet Interface parameters [4-69](#)  
 GK statement, NISF [A-11, A-13, A-25](#)  
 GTD parameters [4-25](#)  
 GW statement, NISF [A-11, A-13, A-25](#)

---

## H

H.323 parameters [4-43](#)  
 Help menu option, Network Information File window [A-6](#)  
 Help menu options, Network Information File window [A-6](#)  
 HSRP (Hot Standby Redundancy Protocol) [4-73](#)  
 HSRP parameters [4-73](#)

---

## I

indirectly managed components [1-7](#)  
 indirectly managed components, RADIUS Server [1-8](#)  
 indirectly managed components, Signal Link Termination [1-7](#)  
 Interface parameters [4-66](#)  
 inter-region configurations [1-11](#)  
 intra-region configurations [1-11](#)  
 introduced managed resources [1-4](#)  
 IOS configuration files, parsing [1-9](#)  
 IOS configuration files, uploading [1-9](#)  
 ISDN Voice Port parameters [4-41](#)  
 IVR (Interactive Voice Response) [4-44](#)  
 IVR parameters [4-44](#)

---

## J

Job Status pane, Provisioning Manager window [4-12](#)  
 Job Status pane, Topology Manager [3-15](#)

---

## L

Launch Applications, Topology Manager [3-12](#)  
 Launch Pad window [2-2](#)  
 Listing button, Provisioning Manager window [4-11](#)  
 load template option, Provisioning Manager [4-6](#)  
 Loopback Interface parameters [4-70](#)

---

## M

managed resource, how to delete [1-13](#)  
 managed resources [1-4](#)  
 managed resources, discovered [1-4](#)  
 managed resources, introduced [1-4](#)  
 managed resources, introduced to system [A-1, A-2](#)  
 Management Information Tree (MIT) [1-8](#)  
 Management System View, sample [3-18](#)  
 Management System View, Topology Manager [3-4](#)

media gateway, description [1-7](#)  
 media gateway controller, description [1-7](#)  
 modify a managed resource, Provisioning Manager [4-82](#)  
 modify an existing Cisco IE2100, how to [A-15](#)  
 modify a user profile, CNS Security Services Administration [6-6](#)  
 Modify button, Provisioning Manager window [4-11](#)  
 modify device attributes, how to [A-16](#)  
 Modify Device Login Information, Topology Manager [3-10](#)  
 modifying user attributes, CNS Security Services Administration [6-10](#)  
 mouse terminology [xii](#)

---

## N

NCSF managed resource, Cisco IE2100 [1-4](#)  
 NCSF managed resource, CMNM [1-4](#)  
 NCSF managed resource, Directory Gatekeeper [1-5, 1-6](#)  
 NCSF managed resource, Gatekeeper [1-5](#)  
 NCSF managed resource, Gateway [1-5](#)  
 NCSF managed resource, Region [1-4](#)  
 NCSF managed resources [1-4](#)  
 Network Access Server (NAS) [1-5](#)  
 network discovery [1-8](#)  
 Network Information File window [A-3](#)  
 Network Information File window components [A-5](#)  
 Network Information Seed File (NISF) [1-4, A-1, A-2](#)  
 network resource management privileges [6-2](#)  
 network statement, NISF [A-24](#)  
 network synchronization [1-13](#)  
 Network Time Protocol (NTP) [4-54](#)  
 Network View, inconsistency flagging [3-4](#)  
 Network View, sample [3-16](#)  
 Network View, Topology Manager [3-4](#)  
 New menu option, Network Information File window [A-5](#)  
 NISF [1-9](#)  
 NISF, CMNM statement [A-26](#)  
 NISF, DM\_BEGIN statement [A-24](#)

NISF, DM\_END statement [A-24](#)  
 NISF, RG\_BEGIN statement [A-24](#)  
 NISF, RG\_END statement [A-24](#)  
 NISF, RM\_END statement [A-25](#)  
 NISF, sample file [A-28](#)  
 NISF managed resources [A-22](#)  
 NISF structure [A-23](#)  
 Northbound interface [1-9](#)  
 NTP Client Broadcast parameters [4-57](#)  
 NTP Client Poll or Peer Poll parameters [4-56](#)  
 NTP parameters [4-55](#)  
 NTP Server Broadcast parameters [4-57](#)  
 NTP Server parameters [4-58](#)

---

## O

Object Configuration Tabs, Provisioning Manager [4-7](#)

---

## P

parameter template, how to save [4-85](#)  
 personal profile, CNS Security Services Administration [6-8](#)  
 print the topology image, how to [3-33](#)  
 product description [1-1](#)  
 provisioning job object [4-3](#)  
 Provisioning Management window, components [4-5](#)  
 Provisioning Management window, how to access [4-4](#)  
 Provisioning Manager [1-3](#)  
 Provisioning Manager, add a managed resource [4-80](#)  
 Provisioning Manager, description [4-1](#)  
 Provisioning Manager, File menu [4-6](#)  
 Provisioning Manager, modify a managed resource [4-82](#)  
 Provisioning Manager, RLM Signaling Paths [4-15](#)  
 Provisioning Manager, Voice Port [4-32](#)  
 Provisioning Manager window, Add button [4-11](#)  
 Provisioning Manager window, Configuration pane [4-10](#)  
 Provisioning Manager window, Delete button [4-12](#)  
 Provisioning Manager window, Listing button [4-11](#)

Provisioning Manager window, Modify button [4-11](#)  
 Provisioning Manager window, Provisioning Job Status pane [4-12](#)  
 Provisioning Manager window, Refresh button [4-11](#)  
 Provisioning Manager window, Table of Contents pane [4-7](#)  
 Provisioning Manager window, Tree View pane [4-9](#)  
 Provisioning Manager window, View button [4-11](#)  
 provisioning operations, list of [4-3](#)  
 provisioning virtual entities [1-2](#)

---

## R

RADIUS Server, functionality [1-8](#)  
 rearrange network element icons in topology, how to [3-4, 3-30](#)  
 Redundant Link Manager (RLM) [1-7](#)  
 Refresh button, Provisioning Manager window [4-11](#)  
 Refresh option, Provisioning Manager [4-6](#)  
 Refresh View, Topology Manager [3-11, 3-12](#)  
 Region, description [1-4](#)  
 Region, how to create [1-12](#)  
 Region, misconfiguration [1-11](#)  
 Region, validation [1-11](#)  
 region statement, NISF [A-24](#)  
 remove a device, how to [3-26](#)  
 remove a managed resource, how to [4-83, 4-85](#)  
 remove a managed resource, Provisioning Manager [4-83](#)  
 remove a Region, how to [3-27](#)  
 Reregister with Cisco IE2100, Topology Manager [3-11](#)  
 Reset option, Provisioning Manager [4-6](#)  
 resync a Region, how to [3-28](#)  
 resynchronization operation, how to [3-27](#)  
 Resync Region, Topology Manager [3-9](#)  
 Resync Topology, Topology Manager [3-11](#)  
 RG\_BEGIN statement, NISF [A-24](#)  
 RG\_END statement, NISF [A-24](#)  
 RLM Signaling Path parameters [4-16](#)  
 RLM Signaling Paths, Provisioning Manager [4-14](#)  
 RM\_BEGIN statement, NISF [A-25](#)  
 RM\_END statement, NISF [A-25](#)

---

## S

sample NISF [A-28](#)  
 sample seed file [A-28](#)  
 save a parameter template, Provisioning Manager [4-85](#)  
 Save As menu option, Network Information File window [A-6](#)  
 Save menu option, Network Information File window [A-5](#)  
 save template option, Provisioning Manager [4-7](#)  
 SC2200, description [1-7](#)  
 search for a device, how to [3-29, 3-30](#)  
 Search Node, Topology Manager [3-12](#)  
 security management [6-2](#)  
 Security Server Group parameters [4-59, 4-61](#)  
 seedfile.txt file [A-22](#)  
 Seed File Editor, how to start [A-3](#)  
 Seed File format [A-27](#)  
 Seed File structure [A-23](#)  
 service objects, description [4-2](#)  
 Show Children, Topology Manager [3-9](#)  
 Show Difference Between Running and Uploaded Configuration File, Topology Manager [3-10](#)  
 Show Inconsistency Report, Topology Manager [3-10](#)  
 Show Properties, Topology Manager [3-9](#)  
 Show Running Config File, Topology Manager [3-9](#)  
 Show Soaking Devices, Topology Manager [3-10](#)  
 Show Unreachable Devices, Topology Manager [3-10](#)  
 Show Unsupported Commands, Topology Manager [3-10](#)  
 Show Uploaded Config File, Topology Manager [3-10](#)  
 Show User Information, Topology Manager [3-12](#)  
 Signaling Controller [1-6](#)  
 Signaling Controller, how to create [1-12](#)  
 Signaling Controllers, discovery [1-6](#)  
 Signaling Link Termination (SLT) [1-7](#)  
 Signaling Link Terminations (SLTs) [1-6](#)  
 SLT, functionality [1-8](#)

SNMP (Simple Network Management Protocol) [4-71](#)  
 SNMP parameters [4-72](#)  
 SS7 Voice Port parameters [4-42](#)  
 Standard Access Control List parameters [4-75](#)  
 starting Pluto Client [2-1](#)  
 starting the Client GUI [2-1](#)  
 Status and Messages pane, Provisioning Manager window [4-13](#)  
 synchronization, forced [1-13](#)  
 synchronization, interval based [1-13](#)  
 synchronization, notification based [1-13](#)  
 system administrator, privileges [6-2](#)  
 system management privileges [6-2](#)

---

## T

Table of Contents pane, Provisioning Manager window [4-7](#)  
 Telecommunication Management Network (TMN) [1-2](#)  
 Telnet [3-14](#)  
 Template menu, Provisioning Manager [4-6](#)  
 time-division multiplexing (TDM) [1-7](#)  
 Tools menu, Topology Manager [3-11](#)  
 Topology Management window [3-1](#)  
 Topology Management window, components [3-3](#)  
 Topology Management window, features [3-2](#)  
 Topology Manager [1-2](#)  
 Topology Manager, Action menu options [3-5](#)  
 Topology Manager, Add Device [3-7](#)  
 Topology Manager, Add Device, Cisco IE2100 [3-8](#)  
 Topology Manager, Add Device, CMNM [3-8, 3-13](#)  
 Topology Manager, Add Device, Directory Gatekeeper [3-8](#)  
 Topology Manager, Add Device, Gatekeeper [3-7](#)  
 Topology Manager, Add Device, Gateway [3-7](#)  
 Topology Manager, Add Region option [3-6](#)  
 Topology Manager, Auto Refresh View [3-12](#)  
 Topology Manager, Background option [3-5](#)  
 Topology Manager, Change Device Password [3-10](#)

Topology Manager, Cisco IE2100 subview [3-4, 4-10](#)  
 Topology Manager, CMNM subview [3-4, 4-10](#)  
 Topology Manager, Delete Device [3-8](#)  
 Topology Manager, Delete Region [3-6](#)  
 Topology Manager, Exit option [3-5](#)  
 Topology Manager, File menu options [3-5](#)  
 Topology Manager, how to access [3-2](#)  
 Topology Manager, Job Status pane [3-15](#)  
 Topology Manager, Launch Applications [3-12](#)  
 Topology Manager, Management System View [3-4](#)  
 Topology Manager, Network View [3-4](#)  
 Topology Manager, rearrange network element icons [3-4, 3-30](#)  
 Topology Manager, Refresh View [3-11](#)  
 Topology Manager, Resync Region [3-9](#)  
 Topology Manager, Resync Topology [3-11](#)  
 Topology Manager, Search Node [3-12](#)  
 Topology Manager, Show Children [3-9](#)  
 Topology Manager, Show Difference Between Running and Uploaded Configuration File [3-10](#)  
 Topology Manager, Show Inconsistency Report [3-10](#)  
 Topology Manager, Show Properties [3-9](#)  
 Topology Manager, Show Running Config File [3-9](#)  
 Topology Manager, Show Soaking Devices [3-10](#)  
 Topology Manager, Show Unreachable Devices [3-10](#)  
 Topology Manager, Show Unsupported Commands [3-10](#)  
 Topology Manager, Show Uploaded Config File [3-10](#)  
 Topology Manager, Show User Information [3-12](#)  
 Topology Manager, Tools menu options [3-11](#)  
 Topology Manager, Unsoak Device [3-10](#)  
 Topology Manager, View menu options [3-5](#)  
 Topology Manager, zoom in and out [3-33](#)  
 Tree View pane, Provisioning Manager window [4-9](#)  
 Trunk Group parameters [4-27](#)  
 typographical conventions [xiii](#)

---

## U

Unsoak Device, Topology Manager [3-10](#)

- uploading IOS configuration files [1-9](#)
- uploading Signaling Controller (SC) configurations [1-9](#)
- user authentication [6-2](#)
- user authorization [6-2](#)
- User Configuration menu option [6-6](#)
- user groups, types [6-2](#)
- user management privileges [6-2](#)
- User Manager, description [6-1](#)
- User Manager, how to access [6-3](#)
- user privileges, types [6-2](#)

---

## V

- View button, Provisioning Manager window [4-11](#)
- View menu option, Topology Manager [3-5](#)
- virtual entities, configuring [1-3](#)
- virtual entities, list of [1-9](#)
- virtual entity, Directory Gatekeeper Group [1-10](#)
- virtual entity, Gatekeeper Group [1-10](#)
- virtual entity, Region [1-9](#)
- virtual entity, Virtual Gateway [1-10](#)
- virtual entity, Virtual Zone [1-10](#)
- Virtual Gateway, description [1-10](#)
- Virtual Gateway, validation [1-11](#)
- Virtual Switch [1-2](#)
- Virtual Switch Provisioning Tool (VSPT) [1-2](#)
- Virtual Zone, description [1-10](#)
- Virtual Zone, validation [1-12](#)
- Voice Port, Provisioning Manager [4-32](#)
- Voice Port parameters [4-29](#)
- Voice Service Objects [4-2](#)
- Voice Services Provisioning Tool [3-13](#)
- VRC application, accessing [5-1](#)
- VSPT application [3-13](#)

---

## Z

- zoom in and out in topology, how to [3-33](#)

