



# RMV Commands

This chapter provides RMV (remove) commands for the Cisco ONS 15454, ONS 15327, ONS 15600 and ONS 15310-CL.

## 19.1 RMV-<MOD2>

Remove (10GFC, 10GIGE, 1GFC, 1GFICON, 2GFC, 2GFICON, CLNT, D1VIDEO, DS1, DV6000, E1, E3, E4, EC1, ESCON, ETRCLO, FSTE, G1000, GFPOS, GIGE, HDTV, ISC1, OC12, OC192, OC3, OC48, OCH, OMS, OTS, POS, STS1, STS12C, STS18C, STS192C, STS24C, STS36C, STS3C, STS48C, STS6C, STS9C, T1, T3, VC12, VC3, VT1, VT2)

**Usage Guidelines** Cisco ONS 15454, ONS 15327, ONS 15600, ONS 15310-CL  
This command removes a facility from service.  
See [Table 27-1 on page 27-1](#) for supported modifiers by platform.

**Category** Facility

**Security** Maintenance

| Related Commands |                               |                                |
|------------------|-------------------------------|--------------------------------|
|                  | DLT-<MOD1PAYLOAD>             | RLS-PROTNSW-<OCN_TYPE>         |
|                  | DLT-FFP-<MOD2DWDMPAYLOAD>     | RST-<MOD2>                     |
|                  | DLT-FFP-<OCN_TYPE>            | RTRV-<MOD1FCPAYLOAD>           |
|                  | ED-<GIGE_TYPE>                | RTRV-<MOD1FICONPAYLOAD>        |
|                  | ED-<MOD1FCPAYLOAD>            | RTRV-<MOD2DWDMPAYLOAD>         |
|                  | ED-<MOD1FICONPAYLOAD>         | RTRV-<OCN_TYPE>                |
|                  | ED-<MOD2DWDMPAYLOAD>          | RTRV-10GIGE                    |
|                  | ED-<OCN_TYPE>                 | RTRV-ALMTH-<MOD2>              |
|                  | ED-ALS                        | RTRV-ALS                       |
|                  | ED-DS1                        | RTRV-DS1                       |
|                  | ED-EC1                        | RTRV-EC1RTRV-FAC               |
|                  | ED-FFP-<MOD2DWDMPAYLOAD>      | RTRV-FFP-<MOD2DWDMPAYLOAD>     |
|                  | ED-FFP-<OCN_TYPE>             | RTRV-FFP-<OCN_TYPE>            |
|                  | ED-FSTE                       | RTRV-FSTE                      |
|                  | ED-G1000                      | RTRV-G1000                     |
|                  | ED-GFP                        | RTRV-GFP                       |
|                  | ED-HDLC                       | RTRV-GIGE                      |
|                  | ED-POS                        | RTRV-HDLC                      |
|                  | ED-T1                         | RTRV-PM-<MOD2>                 |
|                  | ED-T3                         | RTRV-PMSCHED-<MOD2>            |
|                  | ED-TRC-<MOD2DWDMPAYLOAD>      | RTRV-POS                       |
|                  | ED-TRC-<OCN_TYPE>             | RTRV-PROTNSW-<MOD2DWDMPAYLOAD> |
|                  | ENT-<MOD1PAYLOAD>             | RTRV-PROTNSW-<OCN_TYPE>        |
|                  | ENT-FFP-<MOD2DWDMPAYLOAD>     | RTRV-T1                        |
|                  | ENT-FFP-<OCN_TYPE>            | RTRV-T3                        |
|                  | INIT-REG-<MOD2>               | RTRV-TH-<MOD2>                 |
|                  | OPR-ALS                       | RTRV-TRC-<MOD2DWDMPAYLOAD>     |
|                  | OPR-LPBK-<MOD2>               | RTRV-TRC-<OCN_TYPE>            |
|                  | OPR-PROTNSW-<MOD2DWDMPAYLOAD> | SCHED-PMREPT-<MOD2>            |
|                  | OPR-PROTNSW-<OCN_TYPE>        | SET-ALMTH-<MOD2>               |
|                  | REPT PM <MOD2>                | SET-TH-<MOD2>                  |
|                  | RLS-PROTNSW-<MOD2DWDMPAYLOAD> |                                |

**Input Format** RMV-<MOD2>[:<TID>]:<AID>:<CTAG>[::];

**Input Example** RMV-EC1:CISCO:FAC-1-1:1;

**Input Parameters****Table 19-1** *RMV-<MOD2> Input Parameters*

| Parameter and Values | Description                                                                  |
|----------------------|------------------------------------------------------------------------------|
| AID                  | Access identifier from the <a href="#">“25.1.1 ALL” section on page 25-1</a> |

## 19.2 RMV-EQPT

Remove Equipment

**Usage Guidelines**

Cisco ONS 15454, ONS 15327, ONS 15600, ONS 15310-CL

This command removes equipment from the IS state and places it into the MT state.

**Note**

Only applicable to equipment that is in transition from the IS state to the MT state.

**Category**

Equipment

**Security**

Maintenance

**Related Commands**

|                    |                 |
|--------------------|-----------------|
| ALW-SWDX-EQPT      | REPT RMV EQPT   |
| ALW-SWTOPROTN-EQPT | REPT RST EQPT   |
| ALW-SWTOWKG-EQPT   | RST-EQPT        |
| CHG-EQPT           | RTRV-ALM-EQPT   |
| DLT-EQPT           | RTRV-ALMTH-EQPT |
| ED-EQPT            | RTRV-COND-EQPT  |
| ENT-EQPT           | RTRV-EQPT       |
| INH-SWDX-EQPT      | SET-ALMTH-EQPT  |
| INH-SWTOPROTN-EQPT | SW-DX-EQPT      |
| INH-SWTOWKG-EQPT   | SW-TOPROTN-EQPT |
| REPT ALM EQPT      | SW-TOWKG-EQPT   |
| REPT EVT EQPT      |                 |

**Input Format**

RMV-EQPT:[&lt;TID&gt;]:&lt;AID&gt;:&lt;CTAG&gt;[::];

**Input Example**

RMV-EQPT:CISCO:SLOT-1:1;

---

**Input Parameters****Table 19-2** *RMV-EQPT Input Parameters*

| Parameter and Values | Description                                                                     |
|----------------------|---------------------------------------------------------------------------------|
| AID                  | Access identifier from the <a href="#">“25.1.13 EQPT”</a> section on page 25-27 |