



CONN Commands

This chapter provides CONN (connect) commands for the Cisco ONS 15454 SDH.

7.1 CONN-TACC-<MOD_TACC>

Connect Test Access (DS3I, E1, E3, VC3, VC44C, VC38C, VC464C, VC48C, VC36C, VC4, VC416C, VC42C, VC43C, VC11, VC12)

Usage Guidelines

See [Table 27-1 on page 27-1](#) for supported modifiers by platform.

This command connects the VC or VT defined by AID to the VC specified by the TAP number. For more information on TACC, refer to the [Cisco ONS SONET TL1 Reference Guide](#).

For this command to be applicable, you must first create the TAP using the ED-<VC_PATH> or ED-VC12 command. Intrusive test access modes are traffic-affecting. If a facility/path is connected to a TAP in an intrusive test access mode, it is forced to go into the Locked-Maintenance state. The forced transition could be traffic-affecting. The present state of the facility/path is stored by the NE and is restored when the TAP connection is brought down. Test access connections are dropped automatically if the TL1 session is terminated or is timed out.

The following actions will return error messages:

- If all TAPs are busy a RABY error message is returned.
- If a requested TAP is busy a RTBY error message is returned.
- If a requested TAP does not exist a RTEN error message is returned.
- If a circuit is already connected to another TAP a SCAT error message is returned.
- If a requested condition already exists a SRCN error message is returned.
- And invalid AID will return an IIAC (Input, Invalid Access Identifier) error message.
- If an access is not supported an EANS error message is returned.
- If a requested access configuration is invalid a SRAC error message is returned.
- You cannot connect a TACC to a cross-connect that is in roll pending.



Note

- A connection can be made to a cross-connection, in which case all modes of access are supported. A connection to an Unmapped AID (AID without a cross-connect on it) will allow only MONE, SPLTE, and LOOPE modes.

- A connection to the protect path of a 1+1, 1:1, or 1:N is not allowed; however, connecting to the PCA path of a two-fiber or four-fiber MS-SPRing is supported. This will be preempted when a MS-SPRing switch occurs.
- When you connect a TACC to a protect SNCP trunk, you will always be connected to the working trunk instead.

Category

Troubleshooting and Test Access

Security

Maintenance

Input Format

CONN-TACC-<MOD_TACC>[:<TID>]:<SRC>:<CTAG>::<TAP>:MD=<MD>;

Input Example

CONN-TACC-VC4:CISCO:VC4-2-1-4:123::8:MD=MONE;

Input Parameters**Table 7-1** CONN-TACC-<MOD_TACC> Input Parameters

Parameter and Values	Description
SRC	Source AID from the “25.1 ALL” section on page 25-1. SRC must not be null
TAP	The Test Access Path number. The TAP number is used to identify all messages between TSC and NE until the access point is released. TAP number must be an integer with a range of 1 to 999. TAP must not be null
MD	The test access mode. (SPLTE, SPLTF, LOOPE and LOOPF require an external QRS input signal.) Single FAD Test Access does not support MONEF, SPLTEF & SPLTAB modes. MD must not be null Parameter type is TACC_MODE—test access mode
<ul style="list-style-type: none"> • LOOPE 	Indicates to split both the A and B paths. Connect the line incoming from E direction to the line outgoing in the E direction, and connect this looped configuration to the FAD. The line outgoing in the F direction shall have a QRS connected, and the line incoming from the F direction shall be terminated by the nominal characteristic impedance of the line. Intrusive test access mode
<ul style="list-style-type: none"> • LOOPF 	Indicates to split both the A and B paths. Connect the line incoming from F direction to the line outgoing in the F direction, and connect this looped configuration to the FAD. The line outgoing in the E direction shall have a QRS connected, and the line incoming from the E direction shall be terminated by the nominal characteristic impedance of the line. Intrusive test access mode
<ul style="list-style-type: none"> • MONE 	Indicates that a monitor connection is to be provided from the FAD to the A transmission path of the accessed circuit

Table 7-1 CONN-TACC-<MOD_TACC> Input Parameters (continued)

Parameter and Values	Description
<ul style="list-style-type: none"> • MONEF 	Indicates that a monitor connection is to be provided from the FAD1 to a DFAD, or the odd pair of a FAP, to the A transmission path and from FAD2 of the same DFAD, or the even pair of a FAP, to the B transmission path of the accessed circuit.
<ul style="list-style-type: none"> • MONF 	Indicates that a monitor connection is to be provided from the FAD to the B transmission path of the accessed circuit.
<ul style="list-style-type: none"> • SPLTA 	Indicates that a connection is to be provided from both the E and F sides of the A transmission path of the circuit under test to the FAD and split the A transmission path. Intrusive test access mode
<ul style="list-style-type: none"> • SPLTB 	Indicates that a connection is to be provided from both the E and F sides of the B transmission path of the circuit under test to the FAD and split the B transmission path. Intrusive test access mode
<ul style="list-style-type: none"> • SPLTE 	Indicates to split both the A and B paths and connect the E side of the accessed circuit to the FAD. The line outgoing in the F direction shall have a QRS connected, and the line incoming from the F direction shall have a QRS connected, and the line incoming from the E direction shall be terminated by the nominal characteristic impedance of the line. Intrusive test access mode
<ul style="list-style-type: none"> • SPLTEF 	Indicates to split both the A and B paths, and connect the E side of the accessed circuit to FAD1 and the F side to FAD2. Intrusive test access mode
<ul style="list-style-type: none"> • SPLTF 	Indicates to split both the A and B paths, and connect the F side of the accessed circuit to the FAD. The line outgoing in the E direction shall have a QRS connected, and the line incoming in the E direction shall have a QRS connected, and the line incoming from the E direction shall be terminated by the nominal characteristic impedance of the line. Intrusive test access mode

Output Format

```
SID DATE TIME
M CTAG COMPLD
"<TAP>"
;
```

Output Example

```
TID-000 1998-06-20 14:30:00
M 001 COMPLD
"8"
;
```

Output Parameters**Table 7-2** CONN-TACC-<MOD_TACC> Output Parameters

Parameter and Values	Description
TAP	The Test Access Path number. The TAP number is used to identify all messages between TSC and NE until the access point is released. TAP number must be an integer with a range of 1 to 999

