



## RMV Commands

---

This chapter provides RMV (remove) commands for the Cisco ONS 15454 SDH.

### 19.1 RMV-<MOD2>

Remove (10GFC, 10GIGE, 1GFC, 1GFICON, 2GFC, 2GFICON, CLNT, D1VIDEO, DS3I, DV6000, E1, E3, E4, ESCON, ETRCLO, FSTE, G1000, GFPOS, GIGE, HDTV, ISC1, STM4, STM64, STM1, STM16, OCH, OMS, OTS, POS, STM1E, VC3, VC44C, VC38C, VC464C, VC48C, STS36C, VC4, VC416C, VC42C, VC43C, VC12)

---

**Usage Guidelines**

This command removes a facility from service.

See [Table 27-1 on page 27-1](#) for supported modifiers by platform.

---

**Category**

Ports

---

**Security**

Maintenance

---

**Input Format**

RMV-<MOD2>:[<TID>]:<AID>:<CTAG>[::];

---

**Input Example**

RMV-E1:CISCO:FAC-1-1:1;

---

**Input Parameters**

**Table 19-1** RMV-<MOD2> Input Parameters

Parameter and Values	Description
AID	Access identifier from the <a href="#">“25.1 ALL” section on page 25-1</a>

## 19.2 RMV-EQPT

Remove Equipment

### Usage Guidelines

This command removes equipment from the In Service state and places it into the Maintenance state.



### Note

Only applicable to equipment that is in transition from the In-Service state to the Maintenance state.

### Category

Equipment

### Security

Maintenance

### Input Format

RMV-EQPT:[<TID>]:<AID>:<CTAG>[:.];

### Input Example

RMV-EQPT:CISCO:SLOT-1:1;

### Input Parameters

**Table 19-2** *RMV-EQPT Input Parameters*

Parameter and Values	Description
AID	Access identifier from the <a href="#">“25.1.11 EQPT” section on page 25-16</a>