



# CHAPTER 9

## DISC Commands

---

This chapter provides disconnect (DISC) commands for the Cisco ONS 15310-MA, Cisco ONS 15454, Cisco ONS 15454 M2, and Cisco ONS 15454 M6.

**Note**

All commands supported on the Cisco ONS 15454 platform are also supported on Cisco ONS 15454 M2 and Cisco ONS 15454 M6 platforms.

---

### 9.1 DISC-TACC

(Cisco ONS 15310-MA and Cisco ONS 15454) The Disconnect Test Access (DISC-TACC) command disconnects the test access point (TAP) and puts the connection back to its original state (no splits). For more information on test access (TACC), refer to the *Cisco ONS SDH and Cisco ONS 15600 SDH TL1 Reference Guide*.

---

**Usage Guidelines**

For this command to be applicable, you must first create the TAP using the ED-<MOD\_PATH> command.

**Note**

If you send this command to an already disconnected TAP connection, an SADC error message is returned.

---

**Note**

If the system cannot release TAP, an SRTN error message is returned.

---

---

**Category**

Troubleshooting and Test Access

---

**Security**

Maintenance

---

**Input Format**

DISC-TACC:[<TID>]:<TAP>:<CTAG>;

---

**Input Example**      DISC-TACC:CISCO:8:123;

---

**Input Parameters**      <TAP>      The test access point number. The TAP number must be an integer with a range of 1 to 999. String

**Note**      This command only supports disconnecting one TAP at a time.

---