



CHAPTER 19

RMV Commands

This chapter provides remove (RMV) commands for the Cisco ONS 15310-MA, Cisco ONS 15454, Cisco ONS 15454 M2, and Cisco ONS 15454 M6.



Note

All commands supported on the Cisco ONS 15454 platform are also supported on Cisco ONS 15454 M2 and Cisco ONS 15454 M6 platforms.

19.1 RMV-<MOD2>

(Cisco ONS 15310-MA and Cisco ONS 15454) The Remove 10GFC, 10GIGE, 40GIGE, 1GFC, 1GFICON, 2GFC, 2GFICON, 5GIB, 8GFC, CLNT, D1VIDEO, DS1, DV6000, DVBASI, E1, E3, E4, EC1, ESCON, ETRCLO, ETH, FSTE, G1000, GFPOS, GIGE, HDTV, ISC1, ILK, ISCCOMPAT, ISC3PEER2R, ISC3PEER1G, ISC3PEER2G, OC12, OC192, OC3, OC48, OC768, OCH, OMS, OTS, OTU3, POS, STS1, STS12C, STS18C, STS192C, STS24C, STS36C, STS3C, STS48C, STS96C, STS6C, STS9C, T1, T3, VC12, VC3, VT1, or VT2 (RMV-<MOD2>) command removes a facility from service.

Usage Guidelines

See [Table 28-1 on page 28-1](#) for supported modifiers by platform.

Category

Ports

Security

Maintenance

Input Format

RMV-<MOD2>:[<TID>]:<AID>:<CTAG>[:];

Input Example

RMV-EC1:CISCO:FAC-1-1:1;

Input Parameters

<AID>

Access identifier from the [“26.1 ALL” section on page 26-1](#)

19.2 RMV-EQPT

(Cisco ONS 15310-MA and Cisco ONS 15454) The Remove Equipment (RMV-EQPT) command removes equipment from the In Service (IS) state and places it into the Maintenance (MT) state.

Usage Guidelines	This command is only applicable to equipment that is in transition from the IS state to the MT state.	
 Note	This command can be executed only if the equipment is in IS-NR, OOS-AU,MEA or OOS-AU,UEQ state.	
Category	Equipment	
Security	Maintenance	
Input Format	RMV-EQPT:[<TID>]:<AID>:<CTAG>[:.];	
Input Example	RMV-EQPT:CISCO:SLOT-1:1;	
Input Parameters	<AID>	Access identifier from the “26.15 EQPT” section on page 26-37.