



CHAPTER 21

Change DWDM Card Settings

This chapter explains how to change line, performance monitoring (PM), and threshold settings on Cisco ONS 15454 DWDM cards. To install cards, see the [“NTP-G30 Install the DWDM Cards” procedure on page 14-64](#).



Note

The procedures and tasks described in this chapter for the Cisco ONS 15454 platform is applicable to the Cisco ONS 15454 M2 and Cisco ONS 15454 M6 platforms, unless noted otherwise.



Note

Unless otherwise specified, the term “ONS 15454” refers to both ANSI and ETSI shelf assemblies and card parameters apply to cards installed in both ANSI and ETSI shelf assemblies.

Before You Begin

Before performing any of the following procedures, investigate all alarms and clear any trouble conditions. Refer to the *Cisco ONS 15454 DWDM Troubleshooting Guide* as necessary.



Caution

Changing card settings can be service affecting. You should make all changes during a scheduled maintenance window.

This section lists the chapter procedures (NTPs). Turn to a procedure for applicable tasks (DLPs).

1. [NTP-G90 Modify OSCM and OSC-CSM Card Line Settings and PM Thresholds, page 21-2](#)—Complete as needed.
2. [NTP-G91 Modify OPT-PRE and OPT-BST Card Line Settings and PM Thresholds, page 21-13](#)—Complete as needed.
3. [NTP-G160 Modify OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-RAMP-C, OPT-RAMP-CE, 15454-M-RAMAN-CTP, 15454-M-RAMAN-COP, OPT-EDFA-17, and OPT-EDFA-24 Card Line Settings and PM Thresholds, page 21-27](#)—Complete as needed.
4. [NTP-G202 Modify PSM Card Line Settings and PM Thresholds, page 21-47](#)—Complete as needed.
5. [NTP-G175 Modify 32MUX-O, 32DMX-O, 32DMX, 32DMX-L, 40-MUX-C, 40-DMX-C, 40-DMX-CE, and 4MD-xx.x Line Card Settings and PM Thresholds, page 21-54](#)—Complete as needed.

6. [NTP-G93 Modify the 32WSS, 32WSS-L, 40-WSS-C, or 40-WSS-CE Line Settings and PM Thresholds, page 21-65](#)—Complete as needed.
7. [NTP-G174 Modify the 40-WXC-C or 80-WXC-C Line Settings and PM Thresholds, page 21-79](#)—Complete as needed.
8. [NTP-G241 Modify the 40-SMR1-C and 40-SMR2-C Line Settings and PM Thresholds, page 21-96](#)—Complete as needed.
9. [NTP-G149 Modify the MMU Line Settings and PM Thresholds, page 21-116](#)—Complete as needed.
10. [NTP-G101 Modify Alarm Interface Controller–International Settings, page 21-119](#)—As needed, complete this procedure to change settings for external alarms, controls, and orderwire for the AIC-I card.
11. [NTP-G102 Change Card Service State, page 21-122](#)—Complete as needed.
12. [NTP-G240 Modify TDC-CC and TDC-FC Line Settings and PM Thresholds, page 21-76](#)
13. [NTP-G280 Modify Threshold Settings for the TNC and TNCE Cards, page 21-123](#)

NTP-G90 Modify OSCM and OSC-CSM Card Line Settings and PM Thresholds

Purpose	This procedure changes the optical service channel (OSC) and PM parameters and thresholds for the OSCM and OSC-CSM cards.
Tools/Equipment	None
Prerequisite Procedures	NTP-G30 Install the DWDM Cards, page 14-64
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** Complete the [DLP-G46 Log into CTC](#) procedure at the node where you want to change the OSCM or OSC-CSM card settings. If you are already logged in, proceed to [Step 2](#).
- Step 2** Complete the “[NTP-G103 Back Up the Database](#)” procedure on [page 24-2](#).
- Step 3** Perform any of the following tasks as needed:
- [DLP-G199 Change the OSCM and OSC-CSM OC-3/STM-1 Line Settings, page 21-3](#)
 - [DLP-G200 Change the OSCM and OSC-CSM OC-3/STM-1 Line SONET/SDH Thresholds, page 21-5](#)
 - [DLP-G201 Change Optical Line Parameters for OSCM and OSC-CSM Cards, page 21-7](#)
 - [DLP-G202 Change the OSCM and OSC-CSM Optical Line Threshold Settings, page 21-8](#)
 - [DLP-G203 Change the OSCM and OSC-CSM ALS Maintenance Settings, page 21-12](#)
- Step 4** Complete the “[NTP-G103 Back Up the Database](#)” procedure on [page 24-2](#).
- Stop. You have completed this procedure.**
-

DLP-G199 Change the OSCM and OSC-CSM OC-3/STM-1 Line Settings

Purpose	This task changes the OC-3/STM-1 line settings for the OSC signal transmitted by OSCM and OSC-CSM cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view (single-shelf mode) or shelf view (multishelf view), double-click the OSCM or OSC-CSM card where you want to change the OC-3/STM-1 line settings.
- Step 2** Click the **Provisioning > OC3 Line > OC3 Line (ANSI)** or **Provisioning > STM-1 > STM-1 Line (ETSI)** tabs.
- Step 3** Modify any of the settings described in [Table 21-1](#).

Table 21-1 OSCM and OSC-CSM Card OC-3/STM-1 Line Settings

Parameter	Description	Options
Port	(Display only) Displays the port number.	1
Port Name	Provides the ability to assign the specified port a name.	User-defined. Name can be up to 32 alphanumeric/special characters. Blank by default. See the “ DLP-G104 Assign a Name to a Port ” task on page 17-16 .
Admin State	(Display only) Displays the port administrative state. For more information about administrative states, see the Administrative and Service States document.	- IS (ANSI) or Unlocked (ETSI)—Puts the port in service. The port service state changes to IS-NR (ANSI) or Unlocked-enabled (ETSI). - IS,AINS (ANSI) or Unlocked,automaticInService (ETSI)—Puts the port in automatic in-service. The port service state changes to OOS-AU,AINS (ANSI) or Unlocked-disabled,automaticInService (ETSI).

Table 21-1 OSCM and OSC-CSM Card OC-3/STM-1 Line Settings (Continued)

Parameter	Description	Options
Service State	(Display only) Identifies the autonomously generated state that gives the overall condition of the port. Service states appear in the format: Primary State-Primary State Qualifier, Secondary State. For more information about service states, see the Administrative and Service States document.	- IS-NR (In-Service and Normal [ANSI]) or Unlocked-enabled (ETSI)—The port is fully operational and is performing as provisioned. - OOS-AU,AINS (Out-Of-Service and Autonomous, Automatic In-Service [ANSI]) or Unlocked-disabled,automaticInService (ETSI)—The port is out of service, but traffic is carried. Alarm reporting is suppressed. The ONS node monitors the ports for an error-free signal. After an error-free signal is detected, the port stays in the OOS-AU,AINS/Unlocked-disabled,automaticInService state for the duration of the soak period. After the soak period ends, the port service state changes to IS-NR/Unlocked-enabled. - OOS-MA,DSBLD (Out-of-Service and Management, Disabled [ANSI]) or Locked-enabled,disabled (ETSI)—The port is out of service and unable to carry traffic. - OOS-MA,MT (Out-of-Service and Management, Maintenance [ANSI]) or Locked-enabled,maintenance (ETSI)—The port is out of service for maintenance. Alarm reporting is suppressed, but traffic is carried and loopbacks are allowed.
SF BER	Sets the signal fail bit error rate.	From the drop-down list, choose one of the following: 1E-3 1E-4 1E-5
SD BER	Sets the signal degrade bit error rate.	From the drop-down list, choose one of the following: 1E-5 1E-6 1E-7 1E-8 1E-9
Provides Synch	(Display only) If checked, the card is provisioned as a network element (NE) timing reference.	- Checked - Unchecked
SyncMsgIn	Enables synchronization status messages (SSM) on the S1 byte, which allow the node to choose the best timing source.	- Checked - Unchecked
Send Do Not Use	When checked, sends a Do Not Use for Synchronization (DUS) message on the S1 byte.	- Checked - Unchecked

Table 21-1 *OSCM and OSC-CSM Card OC-3/STM-1 Line Settings (Continued)*

Parameter	Description	Options
PJSTSMon #	(Display only) Sets the STS that will be used for pointer justification.	This parameter is set to Off. It cannot be changed.
AINS Soak	(Display only) The automatic in-service soak period. It is always 00.00.	—
Type	Defines the port as SONET or SDH. The Enable Sync Msg field and the Send Do Not Use field must be disabled before the port can be set to SDH.	From the drop-down list, choose one of the following: • SONET • SDH

- Step 4** Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.
- Step 5** Return to your originating procedure (NTP).

DLP-G200 Change the OSCM and OSC-CSM OC-3/STM-1 Line SONET/SDH Thresholds

Purpose	This task changes the OC-3/STM-1 line SONET/SDH thresholds settings for the OSC signal transmitted by the OSCM and OSC-CSM cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view (single-shelf mode) or shelf view (multishelf view), double-click the OSCM or OSC-CSM card where you want to change the SONET/SDH threshold settings.
- Step 2** Click the **Provisioning > OC3 Line > SONET Thresholds (ANSI)** or **Provisioning > OC3 Line > SDH Thresholds (ETSI)** tabs.
- Step 3** Thresholds can be set for Near End or Far End directions for either the 15-minute or 1-day intervals. You can set thresholds for either the Line or Section types. Path thresholds do not apply. Modify any of the settings described in [Table 21-2 \(ANSI\)](#) or [Table 21-3 \(ETSI\)](#).

Table 21-2 *OSCM and OSC-CSM Cards OC3 Line SONET Threshold Settings*

Parameter	Description	Options
Port	(Display only) Displays the port number.	1
CV	Coding violations	Numeric. Can be set for 15-minute or one-day intervals for Line or Section (Near and Far End). Select the bullet and click Refresh .

Table 21-2 OSCM and OSC-CSM Cards OC3 Line SONET Threshold Settings (Continued)

Parameter	Description	Options
ES	Errored seconds	Numeric. Can be set for 15-minute or one-day intervals for Line or Section (Near and Far End). Select the bullet and click Refresh .
SES	Severely errored seconds	Numeric. Can be set for 15-minute or one-day intervals for Line or Section (Near and Far End). Select the bullet and click Refresh .
SEFS	Severely errored framing seconds (Section only)	Numeric. Can be set for Far End, for 15-minute or one-day intervals for Section only. Select the bullet and click Refresh .
FC	Failure count (Line only)	Numeric. Can be set for 15-minute or one-day intervals for Line (Near and Far End). Select the bullet and click Refresh .
UAS	Unavailable seconds (Line only)	Numeric. Can be set for 15-minute or one-day intervals for Line (Near and Far End). Select the bullet and click Refresh .

Table 21-3 OSCM and OSC-CSM Cards OC3 Line SDH Threshold Settings

Parameter	Description	Options
Port	(Display only) Displays the port number.	1
EB	Errored block	Numeric. Can be set for 15-minute or one-day intervals for MS (Multiplex Section) or RS (Regeneration Section) (Near and Far End). Select the bullet and click Refresh .
ES	Errored seconds	Numeric. Can be set for 15-minute or one-day intervals for MS or RS (Near and Far End). Select the bullet and click Refresh .
SES	Severely errored seconds	Numeric. Can be set for 15-minute or one-day intervals for MS or RS (Near and Far End). Select the bullet and click Refresh .
BBE	Background block error	Numeric. Can be set for 15-minute or one-day intervals for MS or RS (Near and Far End). Select the bullet and click Refresh .
OFS	Out of frame seconds	Numeric. Can be set for 15-minute or one-day intervals for RS, Near End. Select the bullet and click Refresh .
UAS	Unavailable seconds	Numeric. Can be set for 15-minute or one-day intervals for MS or RS (Near and Far End). Select the bullet and click Refresh .

Step 4 Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Step 5 Return to your originating procedure (NTP).

DLP-G201 Change Optical Line Parameters for OSCM and OSC-CSM Cards

Purpose	This task changes the optical line parameters for OSCM and OSC-CSM cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the OSCM or OSC-CSM card where you want to change the optical line parameters.
- Step 2** Click the **Provisioning > Optical Line > Parameters** tabs.
- Step 3** Modify any of the settings described in [Table 21-4](#). The provisionable parameters are listed in the Options column in the table. In the Options column, the SONET (ANSI) option is followed by the SDH (ETSI) option.

Table 21-4 *OSCM and OSC-CSM Card Optical Line Parameter Settings*

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction (TX or RX).	OSCM • 2 (OSC-RX) • 3 (OSC-TX) OSC-CSM • 2 (COM-RX) • 3 (COM-TX) • 4 (LINE-RX) • 5 (LINE-TX) • 6 (OSC-RX) • 7 (OSC-TX)
Port Name	Provides the ability to assign the specified port a name.	User-defined. Name can be up to 32 alphanumeric/special characters. Blank by default. See the “DLP-G104 Assign a Name to a Port” task on page 17-16 .
Admin State	Sets the port administrative state unless network conditions prevent the change. For more information about administrative states, see the Administrative and Service States document.	From the drop-down list, choose one of the following: • IS,AINS/Unlocked,automaticInService • OOS,DSBLD/Locked,disabled • OOS,MT/Locked,maintenance

Table 21-4 OSCM and OSC-CSM Card Optical Line Parameter Settings (Continued)

Parameter	Description	Options
Service State	(Display only) Identifies the autonomously generated state that gives the overall condition of the port. Service states appear in the format: Primary State-Primary State Qualifier, Secondary State. For more information about service states, see the Administrative and Service States document.	- IS-NR/Unlocked-enabled - OOS-AU,AINS/Unlocked-disabled, automaticInService - OOS-MA,DSBLD/Locked-enabled,disabled - OOS-MA,MT/Locked-enabled,maintenance
Power	(Display only) Shows the current power level per port.	—
VOA Mode	(Display only) Shows the functional mode of the variable optical attenuator (VOA), when present.	- Constant Attenuation - Constant Power
VOA Power Ref	(Display only) Shows the optical power setpoint that must be reached when a VOA is present and VOA Mode is set to Constant Power. This parameter can only be modified by ANS.	—
VOA Power Calib	Modifies the optical power value of the VOA when VOA Mode is set to Constant Power.	Numeric. Double-click the parameter, enter a value, and press Enter .
VOA Attenuation Ref	(Display only) Shows the VOA attenuation value when VOA Mode is set to Constant Attenuation. This parameter can only be modified by ANS.	—
VOA Attenuation Calib	Modifies the attenuation value of the VOA when the VOA Mode is set to Constant Attenuation.	Numeric. Double-click the parameter, enter a value, and press Enter .
Active Channels	(Display only) Indicates how many channels the amplifier is carrying. Generally reflects the number of provisioned channels.	—
OSC Power	(Display only) Shows the OSC power level per port.	—

Step 4 Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Step 5 Return to your originating procedure (NTP).

DLP-G202 Change the OSCM and OSC-CSM Optical Line Threshold Settings

Purpose	This task changes the optical line threshold settings for OSCM and OSC-CSM cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the OSCM or OSC-CSM card where you want to change the optical line threshold settings.
- Step 2** Click the **Provisioning > Optical Line > Optics Thresholds** tabs.
- Step 3** Under Types, choose the type of threshold that you want to change, either **Warning** or **Alarm**.



Caution Warning thresholds are not monitored by CTC. They must be user-provisioned and monitored through custom alarm profiles.

- Step 4** Click **Refresh**.
- Step 5** Modify any of the warning or alarm threshold settings. [Table 21-5](#) shows the thresholds for warnings. [Table 21-6](#) shows the thresholds for alarms.

Table 21-5 OSCM and OSC-CSM Cards Optical Line Warning Thresholds Settings

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction (TX or RX).	OSCM • 2 (OSC-RX) • 3 (OSC-TX) OSC-CSM • 2 (COM-RX) • 3 (COM-TX) • 4 (LINE-RX) • 5 (LINE-TX) • 6 (OSC-RX) • 7 (OSC-TX)
opwrMin (dBm) (OSCM only)	Sets the low power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is -50 dBm. Double-click the parameter, enter a value, and press Enter .
opwrMax (dBm) (OSCM only)	Sets the high power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is 30 dBm. Double-click the parameter, enter a value, and press Enter .
opwrMin OSC (dBm)	Sets the OSC low power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is -50 dBm. Double-click the parameter, enter a value, and press Enter .
opwrMax OSC (dBm)	Sets the OSC high power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is 30 dBm. Double-click the parameter, enter a value, and press Enter .

Table 21-6 OSCM and OSC-CSM Cards Optical Line Alarm Thresholds Settings

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction (TX or RX).	OSCM • 2 (OSC-RX) • 3 (OSC-TX) OSC-CSM • 2 (COM-RX) • 3 (COM-TX) • 4 (LINE-RX) • 5 (LINE-TX) • 6 (OSC-RX) • 7 (OSC-TX)
Power Failure Low (dBm)	Shows the optical power failure low threshold for the port. If the VOA Mode is Constant Attenuation, you can manually change the threshold. The value must be within the optical power range that is specified for the card. For more information, see the Hardware Specifications document. If VOA Mode is Constant Power, you cannot change the threshold manually because it is based on the Power setpoint (VOA Power Ref + VOA Power Calib). To change the threshold, you must change the VOA Power Calib value. This adjusts the Power setpoint. The threshold is automatically set to a value that is 5 dB lower than the Power setpoint. You can set the threshold manually at the COM-RX and LINE-RX ports.	Numeric (dB). Double-click the table cell, enter a value, then press Enter .
Pwr OSC Degrad Low (dBm)	Shows the power degrade low threshold. This power value applies to the corresponding port and is automatically calculated when ANS is run. This threshold applies to a port associated to a VOA (OSC-VOA) always active in Constant Power mode. In this case, the threshold is automatically linked to the Power setpoint (VOA Power Ref + VOA Power Calib) that is provisioned. Changing the setpoint will result in changing the threshold (always 2 dB lower).	Numeric.

Table 21-6 OSCM and OSC-CSM Cards Optical Line Alarm Thresholds Settings (Continued)

Parameter	Description	Options
Pwr OSC Degrade High (dBm)	Shows the power degrade high threshold. This power value applies to the corresponding port and is automatically calculated when ANS is run. This threshold applies to a port that is associated to a VOA (OSC-VOA). In Constant Power mode, the port is always active and the threshold is automatically linked to the Power setpoint (VOA Power Ref + VOA Power Calib). To change the threshold, change the Power setpoint. The threshold will always be 2 dB higher than the Power setpoint.	Numeric.
Pwr OSC Failure (dBm)	Shows the optical power failure low threshold for the port. The threshold is calculated automatically when you run ANS. If the VOA Mode is Constant Attenuation, you can manually change the threshold. The value must be within the optical power range that is specified for the card. For more information, see the Hardware Specifications document. If VOA Mode is Constant Power, you cannot change the threshold manually because it is based on the Power setpoint (VOA Power Ref + VOA Power Calib). To change the threshold, you must change the VOA Power Calib value. This adjusts the Power setpoint. The threshold is automatically set to a value that is 5 dB lower than the Power setpoint.	Numeric.
VOA Degrade High (dBm)	Does not apply to OSCM and OSC-CSM cards.	—
VOA Degrade Low (dBm)	Does not apply to OSCM and OSC-CSM cards.	—

Step 6 Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Step 7 Return to your originating procedure (NTP).

DLP-G203 Change the OSCM and OSC-CSM ALS Maintenance Settings

Purpose	This task changes the automatic laser shutdown (ALS) maintenance settings for the OSC-CSM and OSCM cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Note

The ALS function should only be disabled temporarily for installation or maintenance reasons. Activate ALS immediately after maintenance or installation.



Warning

Invisible laser radiation could be emitted from the end of the unterminated fiber cable or connector. Do not stare into the beam directly with optical instruments. Viewing the laser output with certain optical instruments (for example, eye loupes, magnifiers, and microscopes) within a distance of 100 mm could pose an eye hazard. Statement 1056

- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the OSC-CSM or OSCM card where you want to change the ALS maintenance settings.
- Step 2** Click the **Maintenance > ALS** tabs.
- Step 3** Modify any of the settings described in [Table 21-7](#). The provisionable parameters are listed in the Options column in the table.

Table 21-7 OSC-CSM and OSCM ALS Maintenance Settings

Parameter	Description	Options
OSRI	Optical safety remote interlock. When set to On, the OSC TX output power is shut down.	From the drop-down list, choose one of the following: - On - Off
ALS Mode	Automatic laser shutdown mode. For OSCM cards, ALS provides the ability to shut down the OSC TX laser when the OSC RX detects a loss of signal (LOS). For OSC-CSM cards, ALS provides the same functions as the OSCM card and also enables an optical safety mechanism at the DWDM network layer. For more details, see G.2 Automatic Laser Shutdown , page G-6	From the drop-down list, choose one of the following: - Disable—Deactivates ALS. - Auto Restart—(Default) ALS is active. The power is automatically shut down when needed and automatically tries to restart using a probe pulse until the cause of the failure is repaired. - Manual Restart - Manual Restart for Test

Table 21-7 OSC-CSM and OSCM ALS Maintenance Settings (Continued)

Parameter	Description	Options
Recovery Pulse Duration	(Display only) Displays the duration of the optical power pulse that begins when an amplifier restarts.	—
Recovery Pulse Interval	(Display only) Displays the interval between optical power pulses.	—
Currently Shutdown	(Display only) Displays whether or not the laser is currently shut down, either YES or NO.	—
Request Laser Restart	If checked, allows you to restart the laser.	Checked or unchecked

Step 4 Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Step 5 Return to your originating procedure (NTP).

NTP-G91 Modify OPT-PRE and OPT-BST Card Line Settings and PM Thresholds

Purpose	This procedure changes the line and threshold settings for an OPT-PRE, OPT-BST, OPT-BST-E, or OPT-BST-L amplifier card.
Tools/Equipment	None
Prerequisite Procedures	NTP-G30 Install the DWDM Cards, page 14-64
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 Complete the [DLP-G46 Log into CTC](#) at the node where you want to change the OPT-PRE, OPT-BST, OPT-BST-E, or OPT-BST-L amplifier card settings. If you are already logged in, proceed to [Step 2](#).

Step 2 Complete the “[NTP-G103 Back Up the Database](#)” procedure on page 24-2.

Step 3 Perform any of the following tasks as needed:

- [DLP-G204 Change Optical Line Settings for OPT-PRE and OPT-BST Amplifiers, page 21-14](#)
- [DLP-G205 Change Optical Line Threshold Settings for OPT-PRE and OPT-BST Amplifiers, page 21-15](#)
- [DLP-G206 Change Optical Amplifier Line Settings for OPT-PRE and OPT-BST Amplifiers, page 21-19](#)
- [DLP-G207 Change Optical Amplifier Threshold Settings for OPT-PRE and OPT-BST Amplifiers, page 21-21](#)
- [DLP-G322 Change the OPT-BST ALS Maintenance Settings, page 21-25](#)

- Step 4** Complete the “[NTP-G103 Back Up the Database](#)” procedure on page 24-2.
Stop. You have completed this procedure.

DLP-G204 Change Optical Line Settings for OPT-PRE and OPT-BST Amplifiers

Purpose	This task changes the optical line settings for an OPT-PRE, OPT-BST, OPT-BST-E, or OPT-BST-L amplifier card.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the OPT-PRE, OPT-BST, OPT-BST-E, or OPT-BST-L amplifier where you want to change the optical line settings.
- Step 2** Click the **Provisioning > Optical Line > Parameters** tabs.
- Step 3** Modify any of the settings described in [Table 21-8](#). The provisionable parameters are listed in the Options column in the table. In the Options column, the SONET (ANSI) option is followed by the SDH (ETSI) option.

Table 21-8 *OPT-PRE, OPT-BST, OPT-BST-E, and OPT-BST-L Amplifier Optical Line Settings*

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction (TX or RX).	OPT-BST, OPT-BST-E, and OPT-BST-L 1 (COM-RX) 2 (COM-TX) 3 (OSC-RX) 4 (OSC-TX) 5 (LINE-RX) OPT-PRE 1 (COM-RX) 3 (DC-RX) 4 (DC-TX)
Port Name	Provides the ability to assign the specified port a name.	User-defined. Name can be up to 32 alphanumeric/special characters. Blank by default. Double-click the Port Name table cell, enter the name, and press Enter . See the “ DLP-G104 Assign a Name to a Port ” task on page 17-16.

Table 21-8 *OPT-PRE, OPT-BST, OPT-BST-E, and OPT-BST-L Amplifier Optical Line Settings (Continued)*

Parameter	Description	Options
Admin State	Sets the port administrative state unless network conditions prevent the change. For more information about administrative states, see the Administrative and Service States document.	From the drop-down list, choose one of the following: - IS,AINS/Unlocked,automaticInService - OOS,DSBLD/Locked,disabled (OPT-PRE only) - OOS,MT/Locked,maintenance
Service State	(Display only) Identifies the autonomously generated state that gives the overall condition of the port. Service states appear in the format: Primary State-Primary State Qualifier, Secondary State. For more information about service states, see the Administrative and Service States document.	- IS-NR/Unlocked-enabled - OOS-AU,AINS/Unlocked-disabled, automaticInService - OOS-MA,DSBLD/Locked-enabled,disabled - OOS-MA,MT/Locked-enabled,maintenance
Power	(Display only) Shows the current power level per port.	—
Active Channels	(Display only) Indicates how many channels the port is carrying. Generally reflects the number of provisioned channels.	—
OSC Power	(Display only) Shows the OSC power level per port. Does not apply to OPT-PRE.	—

Step 4 Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Step 5 Return to your originating procedure (NTP).

DLP-G205 Change Optical Line Threshold Settings for OPT-PRE and OPT-BST Amplifiers

Purpose	This task changes the optical line threshold settings for an OPT-PRE, OPT-BST, OPT-BST-E, or OPT-BST-L amplifier card.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Caution

Warning thresholds are not monitored by CTC. They must be user-provisioned and monitored through custom alarm profiles.

Step 1 In node view (single-shelf mode) or shelf view (multishelf mode), double-click the OPT-PRE, OPT-BST, OPT-BST-E, or OPT-BST-L amplifier where you want to change the optical line threshold settings.

- Step 2** Click the **Provisioning > Optical Line > Optics Thresholds** tabs.
- Step 3** If you want to change the warning thresholds, complete the following steps. If not, continue with [Step 4](#).
- Under Types, choose **Warning**.
 - Choose the warning interval that you want to provision, either **15 minutes** or **1 Day**.
 - Click **Refresh**.
 - Modify any of the warning thresholds shown under the Options column in [Table 21-9](#).
 - Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Table 21-9 *OPT-PRE, OPT-BST, OPT-BST-E, and OPT-BST-L Card Optical Line Warning Threshold Settings*

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction (TX or RX).	OPT-BST, OPT-BST-E, and OPT-BST-L 1 (COM-RX) 2 (COM-TX) 3 (OSC-RX) 4 (OSC-TX) 5 (LINE-RX) OPT-PRE 1 (COM-RX) 3 (DC-RX) 4 (DC-TX)
opwrMin (dBm)	Sets the low power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is -50 dBm. Double-click the table cell, enter the name, and press Enter .
opwrMax (dBm)	Sets the high power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is 30 dBm. Double-click the table cell, enter the name, and press Enter .
opwrMin OSC (dBm)	Sets the OSC low power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is -50 dBm. Double-click the table cell, enter the name, and press Enter .
opwrMax OSC (dBm)	Sets the OSC high power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is 30 dBm. Double-click the table cell, enter the name, and press Enter .

- Step 4** If you want to change the alarm thresholds, complete the following steps. If not, continue with [Step 5](#).
- Under Types, choose **Alarm**.
 - Click **Refresh**.

- c. Modify any of the alarm thresholds shown under the Options column in [Table 21-10](#).
- d. Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Table 21-10 *OPT-PRE, OPT-BST, OPT-BST-E, and OPT-BST-L Card Optical Line Alarm Thresholds Settings*

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction (RX or TX).	OPT-BST, OPT-BST-E, and OPT-BST-L • 1 (COM-RX) • 2 (COM-TX) • 3 (OSC-RX) • 4 (OSC-TX) • 5 (LINE-RX) OPT-PRE • 1 (COM-RX) • 3 (DC-RX) • 4 (DC-TX)
Power Failure Low (dBm)	Shows the optical power failure low threshold for the port. The threshold is calculated automatically when you run ANS. You can manually change the threshold. The value must be within the optical power range that is specified for the card. For more information, see the Hardware Specifications document. For OPT-BST, OPT-BST-E, OPT-BST-L cards, this parameter applies to the COM-RX and LINE-RX ports.	Numeric. Double-click the table cell, enter a value and press Enter .
Power Degradate High (dBm)	Does not apply to OPT-BST, OPT-BST-E, OPT-BST-L, and OPT-PRE line parameters.	—
Power Degradate Low (dBm)	Does not apply to OPT-BST, OPT-BST-E, OPT-BST-L, and OPT-PRE line parameters.	—

Table 21-10 *OPT-PRE, OPT-BST, OPT-BST-E, and OPT-BST-L Card Optical Line Alarm Thresholds Settings (Continued)*

Parameter	Description	Options
Pwr OSC Degrade Low (dBm)	Shows the power degrade low threshold. This power value applies to the corresponding port and is automatically calculated when ANS is run. This threshold applies to a port associated to a VOA (OSC-VOA) always active in Constant Power mode. In this case, the threshold is automatically linked to the Power setpoint (VOA Power Ref + VOA Power Calib) that is provisioned. Changing the setpoint will result in changing the threshold (always 2 dB lower). Does not apply to OPT-PRE.	Numeric.
Pwr OSC Degrade High (dBm)	Shows the power degrade high threshold. This power value applies to the corresponding port and is automatically calculated when ANS is run. This threshold applies to a port that is associated to a VOA (OSC-VOA). In Constant Power mode, the port is always active and the threshold is automatically linked to the Power setpoint (VOA Power Ref + VOA Power Calib). To change the threshold, change the Power setpoint. The threshold will always be 2 dB higher than the Power setpoint. Does not apply to OPT-PRE.	Numeric.
Pwr OSC Failure (dBm)	Shows the optical power low threshold for the OSC channel of the port. You can set the threshold manually at the LINE-RX port.	—
Gain Degrade Low (dB)	Does not apply to OPT-BST, OPT-BST-E, OPT-BST-L, and OPT-PRE line parameters.	—
Gain Degrade High (dB)	Does not apply to OPT-BST, OPT-BST-E, OPT-BST-L, and OPT-PRE line parameters.	—

Step 5 Return to your originating procedure (NTP).

DLP-G206 Change Optical Amplifier Line Settings for OPT-PRE and OPT-BST Amplifiers

Purpose	This task changes the optical amplifier line settings for an OPT-PRE, OPT-BST, OPT-BST-E, or OPT-BST-L amplifier card.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the OPT-PRE, OPT-BST, OPT-BST-E, or OPT-BST-L amplifier where you want to change the optical amplifier line settings.
- Step 2** Click the **Provisioning > Opt. Ampli. Line > Parameters** tabs.
- Step 3** Modify any of the settings described in [Table 21-11](#). The provisionable parameters are listed in the Options column in the table. In the Options column, the SONET (ANSI) option is followed by the SDH (ETSI) option.

Table 21-11 *OPT-PRE, OPT-BST, OPT-BST-E, and OPT-BST-L Optical Amplifier Line Settings*

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction (TX or RX).	OPT-PRE 2 (COM-TX) OPT-BST, OPT-BST-E, OPT-BST-L 6 (LINE-TX)
Port Name	Provides the ability to assign the specified port a name.	User-defined. Name can be up to 32 alphanumeric/special characters. Blank by default. See the “DLP-G104 Assign a Name to a Port” task on page 17-16 .
Admin State	Sets the port service state unless network conditions prevent the change. For more information about administrative states, see the Administrative and Service States document.	From the drop-down list, choose one of the following: - IS,AINS/Unlocked,automaticInService - OOS,DSBLD/Locked,disabled - OOS,MT/Locked,maintenance
Service State	(Display only) Identifies the autonomously generated state that gives the overall condition of the port. Service states appear in the format: Primary State-Primary State Qualifier, Secondary State. For more information about service states, see the Administrative and Service States document.	- IS-NR/Unlocked-enabled - OOS-AU,AINS/Unlocked-disabled, automaticInService - OOS-MA,DSBLD/Locked-enabled,disabled - OOS-MA,MT/Locked-enabled,maintenance
Total Output Power	(Display only) Shows the current power level per port.	—

Table 21-11 *OPT-PRE, OPT-BST, OPT-BST-E, and OPT-BST-L Optical Amplifier Line Settings (Continued)*

Parameter	Description	Options
Channel Power Ref.	(Display only) Shows the optical per-channel signal power setpoint that must be reached at the amplifier output when gain control is active.	—
Offset	Adjusts the Total Output Power unless network conditions prevent the adjustment, for example, the port is in IS state.	Numeric. Double-click the table cell, enter a value, then press Enter .
Active Channels	(Display only) Indicates how many channels the amplifier is carrying. Generally reflects the number of provisioned channels.	
OSC Power	Shows the OSC power level per port. Does not apply to OPT-PRE.	
Signal Output Power	(Display only) Shows the current output power leaving the amplifier, including the amplified spontaneous emissions (ASE) contribution.	—
Output Power Set-Point	(Display only) Shows the output power setpoint.	—
Working Mode	(Display only) Shows the working mode, either GAIN or POWER.	—
Gain	(Display only) The current gain of the amplifiers.	—
Gain Set Point	The value of the gain that the amplifier must achieve. APC can modify this value based on the number of optical channel network connection (OCHNC) circuits that are managed by the amplifier or to compensate for fiber aging insertion loss. For more information, see Chapter 13, “Network Reference.”	Display only or numeric depending on mode setting. When the system is configured as metro core, this field is display only. When the system is configured as metro access, this field can be changed by the user.
Tilt Reference	(Display only) Shows the default value for the amplifier tilt. This field can only be modified by ANS.	—
Tilt Calibration	Allows you to manually change the amplifier tilt.	Numeric. Double-click the parameter, enter a value, and press Enter .
DCU Insertion Loss	(Display only; OPT-PRE cards only) Shows the dispersion compensation unit (DCU) insertion loss.	—

Step 4 Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Step 5 Return to your originating procedure (NTP).

DLP-G207 Change Optical Amplifier Threshold Settings for OPT-PRE and OPT-BST Amplifiers

Purpose	This task changes the optical amplifier threshold settings for an OPT-PRE, OPT-BST, OPT-BST-E, or OPT-BST-L amplifier card.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Caution

Warning thresholds are not monitored by CTC. They must be user-provisioned and monitored through custom alarm profiles.

- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the OPT-PRE, OPT-BST, OPT-BST-E, or OPT-BST-L amplifier where you want to change the optical amplifier threshold settings.
- Step 2** Click the **Provisioning > Opt Apli Line > Optics Thresholds** tabs.
- Step 3** If you want to change the warning thresholds, complete the following steps. If not, continue with [Step 4](#).
- Under Types, choose **Warning**.
 - Choose the warning interval that you want to provision, either **15 minutes** or **1 Day**.
 - Click **Refresh**.
 - Modify any of the warning thresholds shown under the Options column in [Table 21-12](#).
 - Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Table 21-12 *OPT-PRE, OPT-BST, OPT-BST-E, and OPT-BST-L Card Amplifier Line Warning Threshold Settings*

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction (TX or RX).	OPT-PRE 2 (COM-TX) OPT-BST, OPT-BST-E, OPT-BST-L 6 (LINE-TX)
opwrMin (dBm)	Sets the low power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is -50 dBm. Double-click the parameter, enter a value, and press Enter .
opwrMax (dBm)	Sets the high power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is 30 dBm. Double-click the parameter, enter a value, and press Enter .

Table 21-12 *OPT-PRE, OPT-BST, OPT-BST-E, and OPT-BST-L Card Amplifier Line Warning Threshold Settings*

Parameter	Description	Options
opwrMin OSC (dBm)	Sets the OSC low power warning level. Does not apply to OPT-PRE.	Numeric. Can be set for 15-minute or one-day intervals. The default is –50 dBm. Double-click the parameter, enter a value, and press Enter .
opwrMax OSC (dBm)	Sets the OSC high power warning level. Does not apply to OPT-PRE.	Numeric. Can be set for 15-minute or one-day intervals. The default is 30 dBm. Double-click the parameter, enter a value, and press Enter .

- Step 4** If you want to change the alarm thresholds, complete the following steps. If not, continue with [Step 5](#).
- Choose the alarm interval that you want to provision, either **15 minutes** or **1 Day**.
 - Under Types, choose **Alarm**.
 - Click **Refresh**.
 - Modify any of the alarm thresholds shown under the Options column in [Table 21-13](#).
 - Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Table 21-13 *OPT-PRE, OPT-BST, OPT-BST-E, and OPT-BST-L Card Amplifier Line Alarm Thresholds Setting*

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction (TX or RX).	OPT-PRE 2 (COM-TX) OPT-BST, OPT-BST-E, OPT-BST-L 6 (LINE-TX)
Power Failure Low (dBm)	Shows the optical power failure low threshold for the port. The threshold is calculated automatically when you run ANS. You can manually change the threshold. The value must be within the optical power range that is specified for the card. For more information, see the Hardware Specifications document.	Numeric. Double-click the parameter, enter a value, and press Enter .

Table 21-13 *OPT-PRE, OPT-BST, OPT-BST-E, and OPT-BST-L Card Amplifier Line Alarm Thresholds Setting (Continued)*

Parameter	Description	Options
Power Degrade High (dBm)	(Display only) Shows the current value of the optical power degrade high threshold. This threshold applies only when the amplifier is active and in constant power mode. Power Degrade High refers to the port's Signal Output Power value and is automatically calculated by the TCC2/TCC2P/TCC3/TNC/TNCE/TSC/TSC when the amplifier is turned up. The Power Degrade High threshold is linked to the Output Power Setpoint on the Parameters tab. Changing the setpoint changes the Power Degrade High threshold. The threshold value is always 2 dB higher than the Output Power Setpoint value. APC can modify this value based on the number of OCHNC circuits that the amplifier is managing. For more information, see Chapter 13, "Network Reference."	—
Power Degrade Low (dBm)	(Display only) Shows the current value of the optical power degrade high threshold configured in the card. This threshold applies only when the amplifier is active and in constant power mode. Power Degrade Low refers to the port's Signal Output Power value and is automatically calculated by the TCC2/TCC2P/TCC3/TNC/TNCE/TSC/TSC when the amplifier is turned up. The Power Degrade Low threshold is automatically linked to the Output Power Setpoint on the Parameters tab. Changing the setpoint changes the Power Degrade Low threshold. The threshold value is always 2 dB lower than the Output Power Setpoint. APC can modify this value based on the number of OCHNC circuits that the amplifier is managing.	—

Table 21-13 *OPT-PRE, OPT-BST, OPT-BST-E, and OPT-BST-L Card Amplifier Line Alarm Thresholds Setting (Continued)*

Parameter	Description	Options
Gain Degrad High (dBm)	(Display only) Shows the current value of the gain degrade high threshold configured in the card. This threshold applies only when the amplifier is active and in constant gain mode. Gain Degrad High refers to the port's Gain value and is automatically calculated by the TCC2/TCC2P/TCC3/TNC/TNCE/TSC/TSC when the amplifier is turned up. The Gain Degrad High threshold is linked to the Gain setpoint. Changing the setpoint changes the Gain Degrad High threshold. The threshold value is always 2 dB higher than the Gain Setpoint value. APC can modify this value based on the number of OCHNC circuits that the amplifier is managing and to compensate for insertion loss due to fiber aging.	—
Gain Degrad Low (dBm)	(Display only) Shows the current value of the gain degrade low threshold configured in the card. This threshold applies only when the amplifier is active and in constant gain mode. Gain Degrad Low refers to the port's Gain value and is automatically calculated by the TCC2/TCC2P/TCC3/TNC/TNCE/TSC/TSC when the amplifier is turned up. The Gain Degrad Low threshold is automatically linked to the Gain Setpoint that is provisioned. Changing the setpoint changes the Gain Degrad Low threshold. The threshold value is always 2 dB lower than the Gain Setpoint value. APC can also modify this value based on the number of OCHNC circuits that the amplifier is managing.	—

Step 5 Return to your originating procedure (NTP).

DLP-G322 Change the OPT-BST ALS Maintenance Settings

Purpose	This task changes the ALS maintenance settings for the OPT-BST, OPT-BST-E, and OPT-BST-L cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Note

The ALS function should only be disabled temporarily for installation or maintenance reasons. Activate ALS immediately after maintenance or installation.



Warning

Invisible laser radiation could be emitted from the end of the unterminated fiber cable or connector. Do not stare into the beam directly with optical instruments. Viewing the laser output with certain optical instruments (for example, eye loupes, magnifiers, and microscopes) within a distance of 100 mm could pose an eye hazard. Statement 1056

-
- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the OPT-BST, OPT-BST-E, or OPT-BST-L where you want to change the ALS maintenance settings.
- Step 2** Click the **Maintenance > ALS Mode** tabs.
- Step 3** Modify any of the settings described in [Table 21-14](#). The provisionable parameters are listed in the Options column in the table.

Table 21-14 *OPT-BST ALS Maintenance Settings*

Parameter	Description	Options
OSRI	Optical safety remote interlock. When set to On, the OPT-BST TX output power is shut down.	From the drop-down list, choose one of the following: • On • Off
ALS Mode	Automatic laser shutdown. For OPT-BST cards, ALS provides the ability to shut down the OPT-BST TX laser when the OPT-BST RX detects an LOS. ALS also enables an optical safety mechanism at the DWDM network layer. For more information, see Appendix G, “Automatic Laser Shutdown.”	From the drop-down list, choose one of the following: • Disable—Deactivates ALS. If the OPT-BST faces a span without an OSC connection, choose this option. • Auto Restart—(Default) ALS is active. The power is automatically shut down when needed and automatically tries to restart using a probe pulse until the cause of the failure is repaired. • Manual Restart • Manual Restart for Test
Recovery Pulse Duration	(Display only) Displays the duration of the optical power pulse that begins when an amplifier restarts.	—
Recovery Pulse Interval	(Display only) Displays the interval between optical power pulses.	—
Currently Shutdown	(Display only) Displays whether or not the laser is currently shut down, either YES or NO.	—
Request Laser Restart	If checked, allows you to restart the laser.	Checked or unchecked

Step 4 Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Step 5 Return to your originating procedure (NTP).

NTP-G160 Modify OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-RAMP-C, OPT-RAMP-CE, 15454-M-RAMAN-CTP, 15454-M-RAMAN-COP, OPT-EDFA-17, and OPT-EDFA-24 Card Line Settings and PM Thresholds

Purpose	This procedure changes the line and threshold settings for the OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-AMP-C, OPT-RAMP-C, OPT-RAMP-CE, 15454-M-RAMAN-CTP, 15454-M-RAMAN-COP, OPT-EDFA-17, and OPT-EDFA-24 amplifier cards.
Tools/Equipment	None
Prerequisite Procedures	NTP-G30 Install the DWDM Cards, page 14-64
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** Complete the [DLP-G46 Log into CTC](#) at the node where you want to change the OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-RAMP-C, OPT-RAMP-CE, 15454-M-RAMAN-CTP, 15454-M-RAMAN-COP, OPT-EDFA-17, or OPT-EDFA-24 amplifier card settings. If you are already logged in, proceed to [Step 2](#).
- Step 2** Complete the “[NTP-G103 Back Up the Database](#)” procedure on [page 24-2](#).
- Step 3** Set the card working mode:



Caution

Do not change the OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-EDFA-17, or OPT-EDFA-24 working mode if it is in service and circuits are provisioned.

- a. Display the OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-EDFA-17, or OPT-EDFA-24 card view.
 - b. Click the **Provisioning > Card** tabs.
 - c. In the Card Working Mode field, choose one of the following:
 - **OPT-PRE**—Sets the card working mode to optical preamplifier.
 - **OPT-LINE**—Sets the card working mode to optical booster amplifier.
 - d. Click **Apply**.
- Step 4** Perform any of the following tasks as needed:
- [DLP-G323 Change Optical Line Settings for OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-RAMP-C, OPT-RAMP-CE, 15454-M-RAMAN-CTP, 15454-M-RAMAN-COP, OPT-EDFA-17, and OPT-EDFA-24 Amplifiers, page 21-28](#)
 - [DLP-G324 Change Optical Line Threshold Settings for OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-RAMP-C, OPT-RAMP-CE, 15454-M-RAMAN-CTP, 15454-M-RAMAN-COP, OPT-EDFA-17, and OPT-EDFA-24 Amplifiers, page 21-30](#)

- [DLP-G325 Change Optical Amplifier Line Settings for OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-RAMP-C, OPT-RAMP-CE, OPT-EDFA-17, and OPT-EDFA-24 Amplifiers, page 21-34](#)
- [DLP-G326 Change Optical Amplifier Threshold Settings for OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-RAMP-C, OPT-RAMP-CE, OPT-EDFA-17, and OPT-EDFA-24 Amplifiers, page 21-36](#)
- [DLP-G327 Change the ALS Maintenance Settings of OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-RAMP-C, OPT-RAMP-CE, 15454-M-RAMAN-CTP, 15454-M-RAMAN-COP, OPT-EDFA-17, and OPT-EDFA-24 Cards, page 21-44](#)

Step 5 Complete the “[NTP-G103 Back Up the Database](#)” procedure on [page 24-2](#).

Stop. You have completed this procedure.

DLP-G323 Change Optical Line Settings for OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-RAMP-C, OPT-RAMP-CE, 15454-M-RAMAN-CTP, 15454-M-RAMAN-COP, OPT-EDFA-17, and OPT-EDFA-24 Amplifiers

Purpose	This task changes the optical line settings for the OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-RAMP-C, OPT-RAMP-CE, 15454-M-RAMAN-CTP, 15454-M-RAMAN-COP, OPT-EDFA-17, and OPT-EDFA-24 amplifier cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-RAMP-C, OPT-RAMP-CE, 15454-M-RAMAN-CTP, 15454-M-RAMAN-COP, OPT-EDFA-17, or OPT-EDFA-24 amplifier where you want to change the optical line settings.
- Step 2** Click the **Provisioning > Optical Line > Parameters** tabs.
- Step 3** Modify any of the settings described in [Table 21-15](#). The provisionable parameters are listed in the Options column in the table. In the Options column, the SONET (ANSI) option is followed by the SDH (ETSI) option.

Table 21-15 *OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-RAMP-C, OPT-RAMP-CE, 15454-M-RAMAN-CTP, 15454-M-RAMAN-COP, OPT-EDFA-17, and OPT-EDFA-24 Amplifier Optical Line Settings*

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction (TX or RX).	• 1 (COM-RX) • 2 (COM-TX) • 3 (OSC-RX) • 4 (OSC-TX) • 5 (LINE-RX) • 6 (LINE-TX), OPT-RAMP-C and OPT-RAMP-CE only • 7 (DC-RX), OPT-AMP-L, OPT-AMP-C, OPT-RAMP-C, and OPT-RAMP-CE only. 7 (DFB-RX) for 15454-M-RAMAN-CTP only. • 8 (DC-TX), OPT-AMP-L and OPT-AMP-C only. 8 (DFB-TX) for 15454-M-RAMAN-CTP only. • 9 (RAMAN-RX), OPT-RAMP-C and OPT-RAMP-CE only. 9 (ASE-RX) for 15454-M-RAMAN-CTP only.
Port Name	Provides the ability to assign the specified port a name.	User-defined. Name can be up to 32 alphanumeric/special characters. Blank by default. Double-click, enter the name, and press Enter. See the “DLP-G104 Assign a Name to a Port” task on page 17-16.
Admin State	Sets the port administrative state unless network conditions prevent the change. For more information about administrative states, see the Administrative and Service States document.	From the drop-down list, choose one of the following: • IS,AINS/Unlocked,automaticInService • OOS,DSBLD/Locked,disabled (OPT-RAMP-C, OPT-RAMP-CE, 15454-M-RAMAN-CTP, and 15454-M-RAMAN-COP only) • OOS,MT/Locked,maintenance
Service State	(Display only) Identifies the autonomously generated state that gives the overall condition of the port. Service states appear in the format: Primary State-Primary State Qualifier, Secondary State. For more information about service states, see the Administrative and Service States document.	• IS-NR/Unlocked-enabled • OOS-AU,AINS/Unlocked-disabled, automaticInService • OOS-MA,DSBLD/Locked-enabled,disabled • OOS-MA,MT/Locked-enabled,maintenance
Power	(Display only) Shows the current power level per port.	—

Table 21-15 *OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-RAMP-C, OPT-RAMP-CE, 15454-M-RAMAN-CTP, 15454-M-RAMAN-COP, OPT-EDFA-17, and OPT-EDFA-24 Amplifier Optical Line Settings (Continued)*

Parameter	Description	Options
Active Channel	(Display only) Indicates how many channels the amplifier is carrying. Generally reflects the number of provisioned channels.	—
OSC Power	Shows the OSC power level per port. Does not apply to OPT-RAMP-C, OPT-RAMP-CE, 15454-M-RAMAN-CTP, and 15454-M-RAMAN-COP.	—

- Step 4** Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.
- Step 5** Return to your originating procedure (NTP).

DLP-G324 Change Optical Line Threshold Settings for OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-RAMP-C, OPT-RAMP-CE, 15454-M-RAMAN-CTP, 15454-M-RAMAN-COP, OPT-EDFA-17, and OPT-EDFA-24 Amplifiers

Purpose	This task changes the optical line threshold settings for OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-RAMP-C, OPT-RAMP-CE, 15454-M-RAMAN-CTP, 15454-M-RAMAN-COP, OPT-EDFA-17, and OPT-EDFA-24 amplifier cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Caution

Warning thresholds are not monitored by CTC. They must be user-provisioned and monitored through custom alarm profiles.

- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-RAMP-C, OPT-RAMP-CE, 15454-M-RAMAN-CTP, 15454-M-RAMAN-COP, OPT-EDFA-17, or OPT-EDFA-24 amplifier where you want to change the optical line threshold settings.
- Step 2** Click the **Provisioning > Optical Line > Optics Thresholds** tabs.
- Step 3** If you want to change the warning thresholds, complete the following steps. If not, continue with [Step 4](#).
- Under Types, choose **Warning**.
 - Choose the warning interval that you want to provision, either **15 minutes** or **1 Day**.

- c. Click **Refresh**.
- d. Modify any of the warning thresholds shown under the Options column in [Table 21-16](#).
- e. Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Table 21-16 *OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-RAMP-C, OPT-RAMP-CE, 15454-M-RAMAN-CTP, 15454-M-RAMAN-COP, OPT-EDFA-17, and OPT-EDFA-24 Card Optical Line Warning Threshold Settings*

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction (TX or RX):	• 1 (COM-RX) • 2 (COM-TX) • 3 (OSC-RX) • 4 (OSC-TX) 4 (LINE-RX)—15454-M-RAMAN-C TP card only • 5 (LINE-RX) 5 (LINE-TX)—15454-M-RAMAN-C TP card only • 6 (LINE-TX), OPT-RAMP-C and OPT-RAMP-CE only • 7 (DC-RX), OPT-AMP-L, OPT-AMP-C, OPT-RAMP-C, and OPT-RAMP-CE only 7 (DFB-RX)—15454-M-RAMAN-CT P card only • 8 (DC-TX), OPT-AMP-L and OPT-AMP-C only 7 (DFB-RX)—15454-M-RAMAN-CT P card only • 9 (RAMAN-RX), OPT-RAMP-C and OPT-RAMP-CE only 9(ASE-RX)—15454-M-RAMAN-C TP card only
opwrMin (dBm)	Sets the low power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is -50 dBm. Double-click the table cell, enter the name, and press Enter .
opwrMax (dBm)	Sets the high power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is 30 dBm. Double-click the table cell, enter the name, and press Enter .

Table 21-16 *OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-RAMP-C, OPT-RAMP-CE, 15454-M-RAMAN-CTP, 15454-M-RAMAN-COP, OPT-EDFA-17, and OPT-EDFA-24 Card Optical Line Warning Threshold Settings*

Parameter	Description	Options
opwrMin OSC (dBm)	Sets the OSC low power warning level. Does not apply to OPT-RAMP-C, OPT-RAMP-CE, 15454-M-RAMAN-CTP, and 15454-M-RAMAN-COP.	Numeric. Can be set for 15-minute or one-day intervals. The default is –50 dBm. Double-click the table cell, enter the name, and press Enter .
opwrMax OSC (dBm)	Sets the OSC high power warning level. Does not apply to OPT-RAMP-C, OPT-RAMP-CE, 15454-M-RAMAN-CTP, and 15454-M-RAMAN-COP.	Numeric. Can be set for 15-minute or one-day intervals. The default is 30 dBm. Double-click the table cell, enter the name, and press Enter .

- Step 4** If you want to change the alarm thresholds, complete the following steps. If not, continue with [Step 5](#).
- Under Types, choose **Alarm**.
 - Click **Refresh**.
 - Modify any of the alarm thresholds shown under the Options column in [Table 21-17](#).
 - Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Table 21-17 *OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-RAMP-C, OPT-RAMP-CE, 15454-M-RAMAN-CTP, 15454-M-RAMAN-COP, OPT-EDFA-17, and OPT-EDFA-24 Card Optical Line Alarm Thresholds Setting*

Parameter	Description	Options
Port	(Display only) Displays the port number.	• 1 (COM-RX) • 2 (COM-TX) • 3 (OSC-RX) • 4 (OSC-TX) 4 (LINE-RX)—15454-M-RAMAN-C TP card only • 5 (LINE-RX) 5 (LINE-TX)—15454-M-RAMAN-C TP card only • 6 (LINE-TX), OPT-RAMP-C and OPT-RAMP-CE only • 7 (DC-RX), OPT-AMP-L, OPT-AMP-C, OPT-RAMP-C, and OPT-RAMP-CE only 7 (DFB-RX)—15454-M-RAMAN-CT P card only • 8 (DC-TX), OPT-AMP-L and OPT-AMP-C only 8 (DFB-TX)—15454-M-RAMAN-CT P card only • 9 (RAMAN-RX), OPT-RAMP-C and OPT-RAMP-CE only 9(ASE-RX)—15454-M-RAMAN-C TP card only
Power Failure Low (dBm)	Shows the optical power failure low threshold for the port. The threshold is calculated automatically when you run ANS. You can manually change the threshold. The value must be within the optical power range that is specified for the card. For more information, see the Hardware Specifications document. You can manually set the threshold at the COM-RX and LINE-RX ports.	Numeric.
Pwr OSC Failure (dBm)	Shows the optical power failure low threshold for the OSC channel of the port. You can manually set the threshold at the LINE-RX port.	Numeric.

Step 5 Return to your originating procedure (NTP).

DLP-G325 Change Optical Amplifier Line Settings for OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-RAMP-C, OPT-RAMP-CE, OPT-EDFA-17, and OPT-EDFA-24 Amplifiers

Purpose	This task changes the optical amplifier line settings for OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-RAMP-C, OPT-RAMP-CE, OPT-EDFA-17, and OPT-EDFA-24 amplifier cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-RAMP-C, OPT-RAMP-CE, OPT-EDFA-17, or OPT-EDFA-24 amplifier where you want to change the optical amplifier line settings.
- Step 2** Click the **Provisioning > Opt. Ampli. Line > Parameters** tabs.
- Step 3** Modify any of the settings described in [Table 21-18](#). The provisionable parameters are listed in the Options column in the table. In the Options column, the SONET (ANSI) option is followed by the SDH (ETSI) option.

Table 21-18 *OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-EDFA-17, and OPT-EDFA-24 Optical Amplifier Line Settings*

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction.	6 (LINE-TX) 8 (DC-TX), OPT-RAMP-C and OPT-RAMP-CE only
Port Name	Assigns a name to the specified port.	User-defined. Name can be up to 32 alphanumeric/special characters. Blank by default. See the “DLP-G104 Assign a Name to a Port” task on page 17-16.
Admin State	Sets the port administrative state unless network conditions prevent the change. For more information about administrative states, see the Administrative and Service States document.	From the drop-down list, choose one of the following: - IS,AINS/Unlocked,automaticInService - OOS,DSBLD/Locked,disabled - OOS,MT/Locked,maintenance

Table 21-18 *OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-EDFA-17, and OPT-EDFA-24 Optical Amplifier Line Settings*

Parameter	Description	Options
Service State	(Display only) Identifies the autonomously generated state that gives the overall condition of the port. Service states appear in the format: Primary State-Primary State Qualifier, Secondary State. For more information about service states, see the Administrative and Service States document.	- IS-NR/Unlocked-enabled - OOS-AU,AINS/Unlocked-disabled, automaticInService - OOS-MA,DSBLD/Locked-enabled,disabled - OOS-MA,MT/Locked-enabled,maintenance
Total Output Power	(Display only) Shows the current power level per port.	—
Channel Power Ref.	(Display only) Shows the optical per-channel signal power setpoint that must be reached at the amplifier output when gain control is active.	—
Offset	Adjusts the Total Output Power unless network conditions prevent the adjustment, for example, the port is in IS state.	Numeric. Double-click to change.
Signal Output Power	(Display only) Shows the current output power leaving the amplifier, including the ASE contribution.	—
Output Power Set-Point	(Display only) Shows the output power setpoint. Does not apply to OPT-AMP-L, OPT-AMP-C, or OPT-AMP-17-C.	—
Working Mode	(Display only) Shows the working mode, either Output Power or Control Gain for the OPT-AMP-L or OPT-AMP-C; Control Power for the OPT-AMP-17-C; or Control Gain for the OPT-RAMP-C or OPT-RAMP-CE.	—
Gain	(Display only) The current gain of the amplifiers.	—
Gain Set Point	The value of the gain that the amplifier must achieve. APC can modify this value based on the number of OCHNC circuits that are managed by the amplifier or to compensate for fiber aging insertion loss. For more information, see Chapter 13, “Network Reference.”	Display only or numeric depending on mode setting. When the system is configured as metro core, this field is display only.
Tilt (OPT-AMP-L and OPT-AMP-C)	(Display only) Shows the default value for the amplifier tilt. This field cannot be modified.	—
Tilt Reference (OPT-AMP-L, OPT-AMP-C, OPT-EDFA-17 and OPT-EDFA-24)	(Display only) Shows the default value for the amplifier tilt. This field can only be modified by ANS.	—

Table 21-18 *OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-EDFA-17, and OPT-EDFA-24 Optical Amplifier Line Settings*

Parameter	Description	Options
Tilt Calibration (OPT-AMP-L, OPT-AMP-C, OPT-EDFA-17 and OPT-EDFA-24)	Allows you to manually change the amplifier tilt.	Numeric. Double-click the parameter, enter a value, and press Enter .
DCU Insertion Loss (OPT-AMP-L and OPT-AMP-C)	(Display only) When provisioned as an OPT-PRE only) Shows the DCU insertion loss.	—
Active Channels	(Display only) Indicates how many channels the amplifier is carrying. Generally reflects the number of provisioned channels.	—
VOA Attenuation Ref	(Display only) Indicates the value for the VOA attenuation setpoint. This field can only be modified by ANS.	—
VOA Attenuation Calib	Allows you to manually change the VOA setpoint.	Numeric. Double-click the parameter, enter a value, and press Enter .

Step 4 Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Step 5 Return to your originating procedure (NTP).

DLP-G326 Change Optical Amplifier Threshold Settings for OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-RAMP-C, OPT-RAMP-CE, OPT-EDFA-17, and OPT-EDFA-24 Amplifiers

Purpose	This task changes the optical channel threshold settings for the OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-RAMP-C, OPT-RAMP-CE, OPT-EDFA-17, and OPT-EDFA-24 amplifier cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Caution

Warning thresholds are not monitored by CTC. They must be user-provisioned and monitored through custom alarm profiles.

- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-RAMP-C, OPT-RAMP-CE, OPT-EDFA-17, or OPT-EDFA-24 amplifier where you want to change the optical amplifier threshold settings.
- Step 2** Click the **Provisioning > Opt Ampli Line > Optics Thresholds** tabs.
- Step 3** If you want to change the warning thresholds, complete the following steps. If not, continue with [Step 4](#).
- Under Types, choose **Warning**.
 - Choose the warning interval that you want to provision, either **15 minutes** or **1 Day**.
 - Click **Refresh**.
 - Modify any of the warning thresholds shown under the Options column in [Table 21-19](#).
 - Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Table 21-19 *OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-RAMP-C, OPT-RAMP-CE, OPT-EDFA-17, and OPT-EDFA-24 Card Amplifier Line Warning Threshold Settings*

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction.	6 (LINE-TX) 8 (DC-TX), OPT-RAMP-C and OPT-RAMP-CE only
opwrMin (dBm)	Sets the low power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is -50 dBm. Double-click the parameter, enter a value, and press Enter .
opwrMax (dBm)	Sets the high power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is 30 dBm. Double-click the parameter, enter a value, and press Enter .
opwrMin OSC (dBm)	Sets the OSC low power warning level. Does not apply to OPT-RAMP-C and OPT-RAMP-CE.	Numeric. Can be set for 15-minute or one-day intervals. The default is -50 dBm. Double-click the table cell, enter the name, and press Enter .
opwrMax OSC (dBm)	Sets the OSC high power warning level. Does not apply to OPT-RAMP-C and OPT-RAMP-CE.	Numeric. Can be set for 15-minute or one-day intervals. The default is 30 dBm. Double-click the table cell, enter the name, and press Enter .

- Step 4** If you want to change the alarm thresholds, complete the following steps. If not, continue with [Step 5](#).
- Under Types, choose **Alarm**.
 - Click **Refresh**.
 - Modify any of the alarm thresholds shown under the Options column in [Table 21-20](#).
 - Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Table 21-20 *OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-RAMP-C, OPT-RAMP-CE, OPT-EDFA-17, and OPT-EDFA-24 Card Amplifier Line Alarm Thresholds Settings*

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction.	6 (LINE-TX) 8 (DC-TX), OPT-RAMP-C and OPT-RAMP-CE only
Power Failure Low (dBm)	Shows the optical power failure low threshold for the port. The threshold is calculated automatically when you run ANS. You can manually change the threshold. The value must be within the optical power range that is specified for the card. For more information, see the Hardware Specifications document.	Numeric. Double-click to change.
Power Degrade High (dBm)	(Display only) Shows the current value of the optical power degrade high threshold. This threshold applies only when the amplifier is active and in constant power mode. Power Degrade High refers to the port's Signal Output Power value and is automatically calculated by the TCC2/TCC2P/TCC3/TNC/TNCE/TSC/TSC when the amplifier is turned up. The Power Degrade High threshold is linked to the Output Power Setpoint on the Parameters tab. Changing the setpoint changes the Power Degrade High threshold. The threshold value is always 2 dB higher than the Output Power Setpoint value. APC can modify this value based on the number of OCHNC circuits that the amplifier is managing. For more information, see Chapter 13, "Network Reference."	—

Table 21-20 *OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-RAMP-C, OPT-RAMP-CE, OPT-EDFA-17, and OPT-EDFA-24 Card Amplifier Line Alarm Thresholds Settings (Continued)*

Parameter	Description	Options
Power Degrade Low (dBm)	(Display only) Shows the current value of the optical power degrade high threshold configured in the card. This threshold applies only when the amplifier is active and in constant power mode. Power Degrade Low refers to the port's Signal Output Power value and is automatically calculated by the TCC2/TCC2P/TCC3/TNC/TNCE/TSC/TSCSCE when the amplifier is turned up. The Power Degrade Low threshold is automatically linked to the Output Power Setpoint on the Parameters tab. Changing the setpoint changes the Power Degrade Low threshold. The threshold value is always 2 dB lower than the Output Power Setpoint. APC can modify this value based on the number of OCHNC circuits that the amplifier is managing.	—

Table 21-20 *OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-RAMP-C, OPT-RAMP-CE, OPT-EDFA-17, and OPT-EDFA-24 Card Amplifier Line Alarm Thresholds Settings (Continued)*

Parameter	Description	Options
Gain Degradate High (dBm)	(Display only) Shows the current value of the gain degrade high threshold configured in the card. This threshold applies only when the amplifier is active and in constant gain mode. Gain Degradate High refers to the port's Gain value and is automatically calculated by the TCC2/TCC2P/TCC3/TNC/TNCE/TSC/TSC when the amplifier is turned up. The Gain Degradate High threshold is linked to the Gain setpoint. Changing the setpoint changes the Gain Degradate High threshold. The threshold value is always 2 dB higher than the Gain Setpoint value. APC can modify this value based on the number of OCHNC circuits that the amplifier is managing and to compensate for insertion loss due to fiber aging.	—
Gain Degradate Low (dBm)	(Display only) Shows the current value of the gain degrade low threshold configured in the card. This threshold applies only when the amplifier is active and in constant gain mode. Gain Degradate Low refers to the port's Gain value and is automatically calculated by the TCC2/TCC2P/TCC3/TNC/TNCE/TSC/TSC when the amplifier is turned up. The Gain Degradate Low threshold is automatically linked to the Gain Setpoint that is provisioned. Changing the setpoint changes the Gain Degradate Low threshold. The threshold value is always 2 dB lower than the Gain Setpoint value. APC can also modify this value based on the number of OCHNC circuits that the amplifier is managing.	—

Step 5 Return to your originating procedure (NTP).

DLP-G538 Change Optical Raman Line Settings for OPT-RAMP-C, OPT-RAMP-CE, 15454-M-RAMAN-CTP, and 15454-M-RAMAN-COP Amplifiers

Purpose	This task changes the optical Raman line settings for OPT-RAMP-C, OPT-RAMP-CE, 15454-M-RAMAN-CTP, and 15454-M-RAMAN-COP amplifier cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the OPT-RAMP-C, OPT-RAMP-CE, 15454-M-RAMAN-CTP, or 15454-M-RAMAN-COP amplifier where you want to change the optical Raman line settings.
- Step 2** Click the **Provisioning > Opt. Raman. Line > Parameters** tab.
- Step 3** Modify any of the settings described in [Table 21-21](#). The provisionable parameters are listed in the Options column in the table. In the Options column, the SONET (ANSI) option is followed by the SDH (ETSI) option.

Table 21-21 *OPT-RAMP-C, OPT-RAMP-CE, 15454-M-RAMAN-CTP, and 15454-M-RAMAN-COP Optical Raman Line Settings*

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction.	3 (RAMAN-RX) for 15454-M-RAMAN-CTP and 15454-M-RAMAN-COP cards only 6 (RAMAN-TX) for for 15454-M-RAMAN-CTP and 15454-M-RAMAN-COP cards only 10 RAMAN-TX
Port Name	Assigns a name to the specified port.	User-defined. Name can be up to 32 alphanumeric/special characters. This field is blank by default. See the “ DLP-G104 Assign a Name to a Port ” task on page 17-16 .
Admin State	Sets the port administrative state unless network conditions prevent the change. For more information about administrative states, see the Administrative and Service States document.	From the drop-down list, choose one of the following: - IS,AINS/Unlocked,automaticInService - OOS,DSBLD/Locked,disabled - OOS,MT/Locked,maintenance
Service State	(Display only) Identifies the autonomously generated state that gives the overall condition of the port. Service states appear in the format: Primary State-Primary State Qualifier, Secondary State. For more information about service states, see the Administrative and Service States document.	- IS-NR/Unlocked-enabled - OOS-AU,AINS/Unlocked-disabled, automaticInService - OOS-MA,DSBLD/Locked-enabled,disabled - OOS-MA,MT/Locked-enabled,maintenance

Table 21-21 *OPT-RAMP-C, OPT-RAMP-CE, 15454-M-RAMAN-CTP, and 15454-M-RAMAN-COP Optical Raman Line Settings (Continued)*

Parameter	Description	Options
Power	(Display only) Indicates the current Raman power.	—
Active Channels	(Display only) Indicates how many channels the amplifier is carrying. Generally reflects the number of provisioned channels. This field can be modified by ANS or the Raman wizard.	—
Ratio	(Display only) Indicates the ratio of the Raman power setpoint distributed between the two Raman pumps.	—
Power Setpoint	(Display only) Indicates the Raman power setpoint as the sum of Pump1 and Pump 2 set points. This field is modified by ANS or the Raman wizard.	—

Step 4 Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Step 5 Return to your originating procedure (NTP).

DLP-G539 Change Optical Raman Line Threshold Settings for OPT-RAMP-C, OPT-RAMP-CE, 15454-M-RAMAN-CTP, and 15454-M-RAMAN-COP Amplifiers

Purpose	This task changes the optical channel threshold settings for the OPT-RAMP-C, OPT-RAMP-CE, 15454-M-RAMAN-CTP, and 15454-M-RAMAN-COP amplifier cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Caution

Warning thresholds are not monitored by CTC. They must be user-provisioned and monitored through custom alarm profiles.

- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the OPT-RAMP-C, OPT-RAMP-CE, 15454-M-RAMAN-CTP, or 15454-M-RAMAN-COP amplifier where you want to change the optical Raman threshold settings.
- Step 2** Click the **Provisioning > Opt. Raman. Line > Optics Thresholds** tabs.
- Step 3** If you want to change the warning thresholds, complete the following steps. If not, continue with [Step 4](#).
- Under Types, choose **Warning**.

- b. Choose the warning interval that you want to provision, either **15 minutes** or **1 Day**.
- c. Click **Refresh**.
- d. Modify any of the warning thresholds shown under the Options column in [Table 21-22](#).
- e. Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Table 21-22 *OPT-RAMP-C, OPT-RAMP-CE, 15454-M-RAMAN-CTP, and 15454-M-RAMAN-COP Card Raman Line Warning Threshold Settings*

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction.	3 (RAMAN-RX) for 15454-M-RAMAN-CTP and 15454-M-RAMAN-COP cards only 6 (RAMAN-TX) for for 15454-M-RAMAN-CTP and 15454-M-RAMAN-COP cards only 10 RAMAN-TX
opwrMin (dBm)	Sets the low power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is –50 dBm. Double-click the parameter, enter a value, and press Enter .
opwrMax (dBm)	Sets the high power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is 30 dBm. Double-click the parameter, enter a value, and press Enter .

Step 4 If you want to change the alarm thresholds, complete the following steps. If not, continue with [Step 5](#).

- a. Under Types, choose **Alarm**.
- b. Click **Refresh**.
- c. Modify any of the alarm thresholds shown under the Options column in [Table 21-20](#).
- d. Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Table 21-23 *OPT-RAMP-C, OPT-RAMP-CE, 15454-M-RAMAN-CTP, and 15454-M-RAMAN-COP Card Raman Line Alarm Thresholds Settings*

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction.	3 (RAMAN-RX) for 15454-M-RAMAN-CTP and 15454-M-RAMAN-COP cards only 6 (RAMAN-TX) for 15454-M-RAMAN-CTP and 15454-M-RAMAN-COP cards only 10 RAMAN-TX
Power Failure Low (dBm)	Shows the optical power failure low threshold for the port. The threshold is calculated automatically when you run ANS. You can manually change the threshold. The value must be within the optical power range that is specified for the card. For more information, see the Hardware Specifications document.	Numeric. Double-click to change.

Step 5 Return to your originating procedure (NTP).

DLP-G327 Change the ALS Maintenance Settings of OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-RAMP-C, OPT-RAMP-CE, 15454-M-RAMAN-CTP, 15454-M-RAMAN-COP, OPT-EDFA-17, and OPT-EDFA-24 Cards

Purpose	This task changes the ALS maintenance settings for the OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-RAMP-C, OPT-RAMP-CE, 15454-M-RAMAN-CTP, 15454-M-RAMAN-COP, OPT-EDFA-17, and OPT-EDFA-24 amplifier cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Note

To perform this task, the OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-EDFA-17, or OPT-EDFA-24 card must be in OPT-LINE mode.

**Note**

The ALS function should only be disabled temporarily for installation or maintenance reasons. Activate ALS immediately after maintenance or installation.

**Warning**

Invisible laser radiation could be emitted from the end of the unterminated fiber cable or connector. Do not stare into the beam directly with optical instruments. Viewing the laser output with certain optical instruments (for example, eye loupes, magnifiers, and microscopes) within a distance of 100 mm could pose an eye hazard. Statement 1056

- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the OPT-AMP-L, OPT-AMP-17C, OPT-AMP-C, OPT-RAMP-C, OPT-RAMP-CE, 15454-M-RAMAN-CTP, 15454-M-RAMAN-COP, OPT-EDFA-17, or OPT-EDFA-24 card where you want to change the ALS maintenance settings.
- Step 2** Click the **Maintenance > ALS** tabs.
- Step 3** Modify any of the settings described in [Table 21-24](#). The provisionable parameters are listed in the Options column in the table.

Table 21-24 *OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-RAMP-C, OPT-RAMP-CE, 15454-M-RAMAN-CTP, 15454-M-RAMAN-COP, OPT-EDFA-17, and OPT-EDFA-24 ALS Maintenance Settings*

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction.	10 (RAMAN-RX), OPT-RAMP-C and OPT-RAMP-CE only 8 (DC-TX), OPT-RAMP-C and OPT-RAMP-CE only 6 (RAMAN-TX), 15454-M-RAMAN-CTP and 15454-M-RAMAN-COP only 8 (DFB-TX), 15454-M-RAMAN-CTP only
OSRI	Optical safety remote interlock. When set to On , the OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-RAMP-C, OPT-RAMP-CE, 15454-M-RAMAN-CTP, or 15454-M-RAMAN-COP TX output power is shut down.	From the drop-down list, choose one of the following: - On - Off

Table 21-24 *OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-RAMP-C, OPT-RAMP-CE, 15454-M-RAMAN-CTP, 15454-M-RAMAN-COP, OPT-EDFA-17, and OPT-EDFA-24 ALS Maintenance Settings (Continued)*

Parameter	Description	Options
ALS Mode	Sets the Automatic laser shutdown mode. For OPT-AMP-L, OPT-AMP-17-C, OPT-AMP-C, OPT-RAMP-C, OPT-RAMP-CE, 15454-M-RAMAN-CTP, and 15454-M-RAMAN-COP cards, ALS provides the ability to shut down the TX laser when the card RX detects an LOS. ALS also enables an optical safety mechanism at the DWDM network layer. For more information, see Chapter 13, “Network Reference.”	From the drop-down list, choose one of the following: • Disable—Deactivates ALS. If the OPT-AMP-L, OPT-AMP-17-C, or OPT-AMP-C, faces a span without an OSC connection, choose this option. • Auto Restart—(Default) Activates ALS. The power is automatically shut down when needed and automatically tries to restart using a probe pulse until the cause of the failure is repaired. • Manual Restart • Manual Restart for Test
Recovery Pulse Duration	(Display only) Displays the duration of the optical power pulse that begins when an amplifier restarts.	—
Recovery Pulse Interval	(Display only) Displays the interval between optical power pulses.	—
Currently Shutdown	(Display only) Displays the current status of the laser.	—
Request Laser Restart	If checked, allows you to restart the laser for maintenance.	Checked or unchecked
OSC Based Startup	If checked, allows the Raman pump to be turned on even though OSC is the only detected power and there is no Raman signal.	Checked or unchecked.

Step 4 Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Step 5 Return to your originating procedure (NTP).

NTP-G202 Modify PSM Card Line Settings and PM Thresholds

Purpose	This procedure changes the line and threshold settings for the PSM card.
Tools/Equipment	None
Prerequisite Procedures	NTP-G30 Install the DWDM Cards, page 14-64
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** Complete the [DLP-G46 Log into CTC](#) at the node where you want to change the card settings. If you are already logged in, proceed to [Step 2](#).
- Step 2** Complete the “[NTP-G103 Back Up the Database](#)” procedure on page 24-2.
- Step 3** Perform any of the following tasks as needed:
- [DLP-G514 Change the PSM Card Mode, page 21-47](#)
 - [DLP-G476 Change Optical Line Settings for the PSM Card, page 21-48](#)
 - [DLP-G477 Change Optical Line Threshold Settings for the PSM Card, page 21-49](#)
 - [DLP-G478 Change the PSM ALS Maintenance Settings, page 21-52](#)
- Step 4** Complete the “[NTP-G103 Back Up the Database](#)” procedure on page 24-2.
- Stop. You have completed this procedure.**
-

DLP-G514 Change the PSM Card Mode

Purpose	This task changes the PSM card mode.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Note You cannot change the PSM card mode if any of the PSM ports is in use in the normal configuration, that is, at least one patchcord is provisioned on the PSM ports.

-
- Step 1** In the node view (single-shelf mode) or shelf view (multishelf mode), double-click the PSM card where you want to change the card mode.
- Step 2** Click the **Provisioning > Card** tab.
- Step 3** From the Mode drop-down list, choose one of the following:
- Normal—Sets the PSM card in normal configuration. In this configuration, the PSM card supports channel protection, line protection, and multiplex section protection configurations.

- Standalone—Sets the PSM card in standalone configuration. In this configuration, the PSM card can be equipped in any slot and supports all node configurations. When you select this option, CTC will:
 - Not support creation of patchcords
 - Set all VOA set points to 0dB attenuation
 - Move the administrative state of all ports to IS (ANSI) or Unlocked (ETSI)

**Note**

In the standalone configuration, you cannot change the administrative state of the PSM ports. However, you can enable optical safety in standalone configuration.

Step 4 Return to your originating procedure (NTP).

DLP-G476 Change Optical Line Settings for the PSM Card

Purpose	This task changes the optical line settings for the PSM card.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the PSM card where you want to change the optical line settings.
- Step 2** Click the **Provisioning > Optical Line > Parameters** tabs.
- Step 3** Modify any of the settings described in [Table 21-25 on page 21-48](#). The provisionable parameters are listed in the Options column.

Table 21-25 PSM Card Optical Line Settings

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction (TX or RX).	• 1 (W-RX) • 2 (W-TX) • 3 (P-RX) • 4 (P-TX) • 5 (COM-RX) • 6 (COM-TX)
Port Name	Provides the ability to assign the specified port a name.	User-defined. Name can be up to 32 alphanumeric/special characters. Blank by default. Double-click, enter the name, and press Enter . See the “ DLP-G104 Assign a Name to a Port ” task on page 17-16.

Table 21-25 PSM Card Optical Line Settings (Continued)

Parameter	Description	Options
Admin State	Sets the port administrative state unless network conditions prevent the change. For more information about administrative states, see the Administrative and Service States document.	From the drop-down list, choose one of the following: - IS,AINS/Unlocked,automaticInService - OOS,DSBLD/Locked,disabled - OOS,MT/Locked,maintenance
Service State	(Display only) Identifies the autonomously generated state that gives the overall condition of the port. Service states appear in the format: Primary State-Primary State Qualifier, Secondary State. For more information about service states, see the Administrative and Service States document.	- IS-NR/Unlocked-enabled - OOS-AU,AINS/Unlocked-disabled, automaticInService - OOS-MA,DSBLD/Locked-enabled,disabled - OOS-MA,MT/Locked-enabled,maintenance
Power	(Display only) Shows the current power level per port.	—
VOA Mode	(Display only) Shows the functional mode of the VOA, when present. Note For W-RX and P-RX ports, the VOA Mode is always set to Constant Attenuation.	- Constant Attenuation - Constant Power
VOA Attenuation Ref	(Display only) Shows the VOA attenuation value when VOA Mode is set to Constant Attenuation. This parameter can only be modified by ANS.	—
VOA Attenuation Calib	Modifies the attenuation value of the VOA when the VOA Mode is set to Constant Attenuation.	Numeric. Double-click the parameter, enter a value, and press Enter .
Active Channels	(Display only) Indicates how many channels the PSM card is carrying. Generally reflects the number of provisioned channels.	—

Step 4 Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Step 5 Return to your originating procedure (NTP).

DLP-G477 Change Optical Line Threshold Settings for the PSM Card

Purpose	This task changes the optical line threshold settings for the PSM card.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

**Caution**

It is recommended that you use the optical line threshold values imported from the Cisco Transport Planner XML configuration file. If you want to modify the threshold values, consult your network operations center (NOC) or other appropriate personnel who can understand and set the correct threshold values.

**Caution**

Warning thresholds are not monitored by CTC. They must be user-provisioned and monitored through custom alarm profiles.

- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the PSM card where you want to change the optical line threshold settings.
- Step 2** Click the **Provisioning > Optical Line > Optics Thresholds** tabs.
- Step 3** If you want to change the warning thresholds, complete the following steps. If not, continue with [Step 4](#).
- Under Types, choose **Warning**.
 - Choose the warning interval that you want to provision, either **15 minutes** or **1 Day**.
 - Click **Refresh**.
 - Modify any of the warning thresholds shown under the Options column in [Table 21-26](#).
 - Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Table 21-26 PSM Card Optical Line Warning Threshold Settings

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction (TX or RX)	1 (W-RX) 2 (W-TX) 3 (P-RX) 4 (P-TX) 5 (COM-RX) 6 (COM-TX)
opwrMin (dBm)	Sets the low power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is -50 dBm. Double-click the table cell, enter the value, and press Enter .
opwrMax (dBm)	Sets the high power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is 30 dBm. Double-click the table cell, enter the value, and press Enter .

- Step 4** If you want to change the alarm thresholds, complete the following steps. If not, continue with [Step 5](#).
- Under Types, choose **Alarm**.
 - Click **Refresh**.
 - Modify any of the alarm thresholds shown under the Options column in [Table 21-27](#).

- d. Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Table 21-27 PSM Card Optical Line Alarm Thresholds Setting

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction (TX or RX)	• 1 (W-RX) • 2 (W-TX) • 3 (P-RX) • 4 (P-TX) • 5 (COM-RX) • 6 (COM-TX)
Power Failure Low (dBm)	Shows the optical power failure low threshold for the port. You can manually change the threshold. The value must be within the optical power range that is specified for the card. For more information, see the Hardware Specifications document.	Numeric. Double-click the table cell, enter a value, then press Enter .
VOA Degrade High (dB)	(Display only) Shows the VOA degrade high threshold. This VOA value applies to the corresponding port and is automatically calculated when ANS is run. This threshold applies to a port associated to a VOA that is always active in Constant Attenuation mode. The threshold is automatically linked to the VOA setpoint that is provisioned (VOA Attenuation Ref + VOA Attenuation Calib). Changing the setpoint will result in changing the threshold (always 2 dB higher).	Numeric.
VOA Degrade Low (dB)	(Display only) Shows the VOA degrade low threshold. This VOA value applies to the corresponding port and is automatically calculated when ANS is run. This threshold applies to a port associated to a VOA that is always active in Constant Attenuation mode. The threshold is automatically linked to the VOA setpoint that is provisioned (VOA Attenuation Ref + VOA Attenuation Calib). Changing the setpoint will result in changing the threshold (always 2 dB lower).	Numeric.

Step 5 Return to your originating procedure (NTP).

DLP-G478 Change the PSM ALS Maintenance Settings

Purpose	This task changes the ALS maintenance settings for the PSM card.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Note

The ALS function is applicable for a PSM card in line (or path) protection configuration only. It is not applicable for all other PSM protection configurations.



Note

The ALS function should only be disabled temporarily for installation or maintenance reasons. Activate ALS immediately after maintenance or installation.



Warning

Invisible laser radiation could be emitted from the end of the unterminated fiber cable or connector. Do not stare into the beam directly with optical instruments. Viewing the laser output with certain optical instruments (for example, eye loupes, magnifiers, and microscopes) within a distance of 100 mm could pose an eye hazard. Statement 1056

-
- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the PSM card where you want to change the ALS maintenance settings.
- Step 2** Click the **Maintenance > ALS** tabs.
- Step 3** Modify any of the settings described in [Table 21-28](#). The provisionable parameters are listed in the Options column in the table.

Table 21-28 PSM ALS Maintenance Settings

Parameter	Description	Options
OSRI	Optical safety remote interlock. When set to On, only the PSM TX output power of the protect path is shut down.	From the drop-down list, choose one of the following: - On - Off
ALS Mode	Automatic laser shutdown. ALS provides the ability to shut down the PSM TX VOA when the PSM RX detects an LOS. ALS also enables an optical safety mechanism at the DWDM network layer. For more information, see Chapter G, “Automatic Laser Shutdown.”	From the drop-down list, choose one of the following: - Disable—Deactivates ALS. - Auto Restart—(Default) ALS is active. The power is automatically shut down when needed and automatically tries to restart using a probe pulse until the cause of the failure is repaired. - Manual Restart - Manual Restart for Test
Recovery Pulse Duration	(Display only) Displays the duration of the optical power pulse that begins when the VOA restarts.	—
Recovery Pulse Interval	(Display only) Displays the interval between optical power pulses.	—
Currently Shutdown	(Display only) Displays whether or not the VOA is currently shut down.	- YES - NO - APR—This is a temporary option that is displayed when the Currently Shutdown status is changing from YES to NO.
Request Laser Restart	If checked, allows you to restart the VOA.	Checked or unchecked

Step 4 Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Step 5 Return to your originating procedure (NTP).

NTP-G175 Modify 32MUX-O, 32DMX-O, 32DMX, 32DMX-L, 40-MUX-C, 40-DMX-C, 40-DMX-CE, and 4MD-xx.x Line Card Settings and PM Thresholds

Purpose	This procedure changes the line and PM parameter threshold settings for the multiplexer and demultiplexer cards. The cards included in this category are the 32MUX-O, 32DMX-O, 32DMX, 32DMX-L, 40-MUX-C, 40-DMX-C, 40-DMX-CE, and 4MD-xx.x cards.
Tools/Equipment	None
Prerequisite Procedures	NTP-G30 Install the DWDM Cards, page 14-64
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Note

Complete the [DLP-G141 View Optical Power Statistics for 32MUX-O, 32WSS, 32WSS-L, 32DMX-O, 32DMX, 32DMX-L, 40-WSS-C, 40-WSS-CE, 40-WXC-C, 80-WXC-C, 40-MUX-C, 40-DMX-C, and 40-DMX-CE Cards](#) to view the optical power statistics.

-
- Step 1** Complete the [DLP-G46 Log into CTC](#) at the node where you want to change the card settings. If you are already logged in, continue with [Step 2](#).
- Step 2** Complete the “[NTP-G103 Back Up the Database](#)” procedure on [page 24-2](#) as needed.
- Step 3** Perform any of the following tasks as needed:
- [DLP-G414 Change Optical Line Settings for 32MUX-O, 32DMX-O, 32DMX, 32DMX-L, 40-MUX-C, 40-DMX-C, 40-DMX-CE, or 4MD-xx.x Cards, page 21-55](#)
 - [DLP-G415 Change Optical Line Threshold Settings for 32MUX-O, 32DMX-O, 32DMX, 32DMX-L, 40-MUX-C, 40-DMX-C, 40-DMX-CE, or 4MD-xx.x Cards, page 21-57](#)
 - [DLP-G416 Change Optical Channel Settings for 32MUX-O, 32DMX-O, 32DMX, 32DMX-L, 40-MUX-C, 40-DMX-C, 40-DMX-CE, or 4MD-xx.x Cards, page 21-59](#)
 - [DLP-G417 Change Optical Channel Threshold Settings for 32MUX-O, 32DMX-O, 32DMX, 32DMX-L, 40-MUX-C, 40-DMX-C, 40-DMX-CE, or 4MD-xx.x Cards, page 21-62](#)
- Step 4** Complete the “[NTP-G103 Back Up the Database](#)” procedure on [page 24-2](#).
- Stop. You have completed this procedure.**
-

DLP-G414 Change Optical Line Settings for 32MUX-O, 32DMX-O, 32DMX, 32DMX-L, 40-MUX-C, 40-DMX-C, 40-DMX-CE, or 4MD-xx.x Cards

Purpose	This task changes the optical line settings for a 32MUX-O, 32DMX-O, 32DMX, 32DMX-L, 40-MUX-C, 40-DMX-C, 40-DMX-CE, or 4MD-xx.x card.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the multiplexer or demultiplexer card where you want to change the optical line settings.
- Step 2** Perform one of the following:
- For 32MUX-O, 32DMX-O, 32DMX, 32DMX-L, 40-MUX-C, 40-DMX-C, and 40-DMX-CE cards, click the **Provisioning > Optical Line > Parameters** tabs.
 - For 4MD-xx.x cards, click the **Provisioning > Optical Band > Parameters** tabs.
- Step 3** Modify any of the settings described in [Table 21-29](#). The provisionable parameters are listed in the Options column in the table. In the Options column, the SONET (ANSI) option is followed by the SDH (ETSI) option.

Table 21-29 *Multiplexer and Demultiplexer Card Optical Line Settings*

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction (TX or RX).	32DMX, 32DMX-O, 32DMX-L 33 (COM-RX) 32MUX-O 33 (COM-TX) 40-DMX-C, 40-DMX-CE 41 (COM-RX) 40-MUX-C 41 (COM-TX) 4MD-xx.x 9 (COM-RX) and 10 (COM-TX)
Port Name	Provides the ability to assign the specified port a name.	User-defined. Name can be up to 32 alphanumeric/special characters. Blank by default. Double-click the table cell, enter the name, and press Enter . See the “DLP-G104 Assign a Name to a Port” task on page 17-16 .

Table 21-29 *Multiplexer and Demultiplexer Card Optical Line Settings (Continued)*

Parameter	Description	Options
Admin State	Sets the port administrative state unless network conditions prevent the change. For more information about administrative states, see the Administrative and Service States document.	From the drop-down list, choose one of the following: - IS,AINS/Unlocked,automaticInService - OOS,DSBLD/Locked,disabled - OOS,MT/Locked,maintenance
Service State	(Display only) Identifies the autonomously generated state that gives the overall condition of the port. Service states appear in the format: Primary State-Primary State Qualifier, Secondary State. For more information about service states, see the Administrative and Service States document.	- IS-NR/Unlocked-enabled - OOS-AU,AINS/Unlocked-disabled,automaticInService - OOS-MA,DSBLD/Locked-enabled,disabled - OOS-MA,MT/Locked-enabled,maintenance
Power	(Display only) Shows the current power level per port.	—
AINS Soak	(Display only) The automatic in-service soak period. It is always 00.00.	—
VOA Mode	(Display only; 32DMX and 32DMX-L cards only) Shows the functional mode of the VOA, when present.	- Constant Attenuation - Constant Power
VOA Power Ref	(Display only; 32DMX and 32DMX-L cards only) Shows the optical power setpoint that must be reached when a VOA is present and VOA Mode is set to Constant Power. This parameter can only be modified by ANS.	—
VOA Power Calib	(32DMX and 32DMX-L cards only) Modifies the optical power value of the VOA when VOA Mode is set to Constant Power.	Numeric. Double-click the parameter, enter a value, and press Enter .
VOA ATTenuation Ref	(Display only; 32DMX and 32DMX-L cards only) Shows the VOA attenuation value when VOA Mode is set to Constant Attenuation. This parameter can only be modified by ANS.	—
VOA Attenuation Calib	(32DMX and 32DMX-L cards only) Modifies the attenuation value of the VOA when the VOA Mode is set to Constant Attenuation.	Numeric. Double-click the parameter, enter a value, and press Enter .
Active Channels	(Display only) Indicates how many channels the amplifier is carrying. Generally reflects the number of provisioned channels.	—

Step 4 Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Step 5 Return to your originating procedure (NTP).

DLP-G415 Change Optical Line Threshold Settings for 32MUX-O, 32DMX-O, 32DMX, 32DMX-L, 40-MUX-C, 40-DMX-C, 40-DMX-CE, or 4MD-xx.x Cards

Purpose	This task changes the optical line threshold settings for a 32MUX-O, 32DMX-O, 32DMX, 32DMX-L, 40-DMX-C, 40-DMX-CE, 40-MUX-C, or 4MD-xx.x card.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the multiplexer or demultiplexer card where you want to change the optical line threshold settings.
- Step 2** Perform one of the following:
- For 32MUX-O, 32DMX-O, 32DMX, 32DMX-L, 40-DMX-C, 40-DMX-CE, or 40-MUX-C cards, click the **Provisioning > Optical Line > Optics Thresholds** tabs.
 - For 4MD-xx.x cards, click the **Provisioning > Optical Band > Optics Thresholds** tabs.
- Step 3** If you want to change the warning thresholds, complete the following steps. If not, continue with [Step 4](#).
- Under Types, choose **Warning**.
 - Choose the warning interval that you want to provision, either **15 minutes** or **1 Day**.
 - Click **Refresh**.
 - Modify any of the warning thresholds shown under the Options column in [Table 21-30](#).
 - Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Table 21-30 Multiplexer and Demultiplexer Card Optical Line Warning Threshold Settings

Parameter	Description	Options
Port	(Display only) Displays the port number and description.	33 (COM-RX) for 32DMX, 32DMX-O, 32DMX-L 33 (COM-TX) for 32MUX-O 41 (COM-RX) for 40-DMX-C/40-DMX-CE 41 (COM-TX) for 40-MUX-C 9 (COM-RX) and 10 (COM-TX) for 4MD-xx.x

Table 21-30 *Multiplexer and Demultiplexer Card Optical Line Warning Threshold Settings (Continued)*

Parameter	Description	Options
opwrMin (dBm)	Sets the low power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is –50 dBm. Double-click the parameter, enter a value, and press Enter .
opwrMax (dBm)	Sets the high power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is 30 dBm. Double-click the parameter, enter a value, and press Enter .



Caution

Warning thresholds are not monitored by CTC. They must be user-provisioned and monitored through custom alarm profiles.

- Step 4** If you want to change the alarm thresholds, complete the following steps. If not, continue with [Step 5](#).
- Under Types, choose **Alarm**.
 - Click **Refresh**.
 - Modify any of the alarm thresholds shown under the Options column in [Table 21-31](#).
 - Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Table 21-31 *Multiplexer and Demultiplexer Optical Line Alarm Threshold Settings*

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction (TX or RX).	32DMX, 32DMX-O, 32DMX-L • 33 (COM-RX) 32MUX-O • 33 (COM-TX) 40-DMX-C, 40-DMX-CE • 41 (COM-RX) 40-MUX-C • 41 (COM-TX) 4MD-xx.x • 9 (COM-RX) and 10 (COM-TX)
Power Failure Low (dBm)	Shows the optical power failure low threshold for the port. The threshold is calculated automatically when you run ANS. You can manually change the threshold. The value must be within the optical power range that is specified for the card. For more information, see the Hardware Specifications document.	Numeric. Double-click the parameter, enter a value, and press Enter .

Table 21-31 Multiplexer and Demultiplexer Optical Line Alarm Threshold Settings (Continued)

Parameter	Description	Options
Power Degrade High (dBm)	Not applicable to 32MUX-O, 32DMX-O, 32DMX, 32DMX-L, 40-DMX-C, 40-DMX-CE, 40-MUX-C, and 4MD-xx.x cards.	—
Power Degrade Low (dBm)	Not applicable to 32MUX-O, 32DMX-O, 32DMX, 32DMX-L, 40-DMX-C, 40-DMX-CE, 40-MUX-C, and 4MD-xx.x cards.	—

Step 5 Return to your originating procedure (NTP).

DLP-G416 Change Optical Channel Settings for 32MUX-O, 32DMX-O, 32DMX, 32DMX-L, 40-MUX-C, 40-DMX-C, 40-DMX-CE, or 4MD-xx.x Cards

Purpose	This task changes the optical channel settings for a 32MUX-O, 32DMX-O, 32DMX, 32DMX-L, 40-DMX-C, 40-DMX-CE, 40-MUX-C, or 4MD-xx.x card.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the multiplexer or demultiplexer card where you want to change the optical channel settings.
- Step 2** Click the **Provisioning > Optical Chn > Parameters** tabs.
- Step 3** Modify any of the settings described in [Table 21-32](#). The provisionable parameters are listed in the Options column in the table. In the Options column, the SONET (ANSI) option is followed by the SDH (ETSI) option.

Table 21-32 Multiplexer and Demultiplexer Card Optical Channel Settings

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction (TX or RX).	32MUX-O, 32DMX-O, 32DMX, 32DMX-L 1 through 32 (CHAN-RX or CHAN-TX) 40-MUX-C, 40-DMX-C, 40-DMX-CE 1 through 40 (CHAN-RX or CHAN-TX) 4MD-xx.x 1 through 8 (CHAN-RX or CHAN-TX)
Port Name	Provides the ability to assign the specified port a name.	User-defined. Name can be up to 32 alphanumeric/special characters. Blank by default. Double-click, enter the name, and press Enter . See the “DLP-G104 Assign a Name to a Port” task on page 17-16 .
Admin State	Sets the port administrative state unless network conditions prevent the change. For more information about administrative states, see the Administrative and Service States document.	From the drop-down list, choose one of the following: - IS,AINS/Unlocked,automaticInService - OOS,DSBLD/Locked,disabled - OOS,MT/Locked,maintenance
Service State	(Display only) Identifies the autonomously generated state that gives the overall condition of the port. Service states appear in the format: Primary State-Primary State Qualifier, Secondary State. For more information about service states, see the Administrative and Service States document.	- IS-NR/Unlocked-enabled - OOS-AU,AINS/Unlocked-disabled,automaticInService - OOS-MA,DSBLD/Locked-enabled,disabled - OOS-MA,MT/Locked-enabled,maintenance
Power	(Display only) Shows the current power level per port.	—
Actual Wavelength	(Display only) Shows the wavelength specified by the manufacturing data. This field cannot be set manually.	—
Expected Wavelength	Shows the preprovisioned wavelength.	Numeric. This field cannot be changed.
AINS Soak	(Display only) The automatic in-service soak period. It is always 00.00.	—
VOA Mode	Not applicable to the 32MUX-O, 32DMX-O, 4MD-xx.x cards. Shows the current functional mode of the VOA.	- Constant Power - Constant Attenuation

Table 21-32 **Multiplexer and Demultiplexer Card Optical Channel Settings (Continued)**

Parameter	Description	Options
VOA Power Ref.	Not applicable to the 32MUX-O, 32DMX-0, 4MD-xx.x cards. Shows the power setpoint that must be reached on the path when a VOA is present and the VOA Mode is Constant Power. Demultiplexers show the reference value of the desired optical power going to the client. Multiplexers show the reference value of the desired per-channel optical power. This parameter can only be modified by ANS.	—
VOA Power Calib.	Not applicable to the 32MUX-O, 32DMX-0, 4MD-xx.x cards. The user can modify the optical output power to the VOA if necessary. The VOA power calibration offsets the VOA power reference. For demultiplexers, you can modify the optical output power to the client if necessary. For multiplexers, you can modify the output power per channel. This feature is normally used when the Network Type is configured as Access in the Provisioning > WDM-ANS tab.	Numeric. Double-click the parameter, enter a value and press Enter .
VOA Attenuation Ref.	Not applicable to the 32MUX-O, 32DMX-0, 4MD-xx.x cards. Shows the attenuation value of the VOA when the VOA is set in attenuation mode. This parameter can only be modified by ANS and APC.	—
VOA Attenuation Calib.	Not applicable to the 32MUX-O, 32DMX-0, and 4MD-xx.x cards. Allows the user to modify the attenuation value of the VOA if necessary when the VOA mode is set for constant attenuation.	Numeric. Double-click the parameter, enter a value, and press Enter .

Step 4 Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Step 5 Return to your originating procedure (NTP).

DLP-G417 Change Optical Channel Threshold Settings for 32MUX-O, 32DMX-O, 32DMX, 32DMX-L, 40-MUX-C, 40-DMX-C, 40-DMX-CE, or 4MD-xx.x Cards

Purpose	This task changes the optical channel threshold settings for a 32MUX-O, 32DMX-O, 32DMX, 32DMX-L, 40-DMX-C, 40-DMX-CE, 40-MUX-C, or 4MD-xx.x card.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Caution

Warning thresholds are not monitored by CTC. They must be user-provisioned and monitored through custom alarm profiles.

-
- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the multiplexer or demultiplexer card where you want to change the optical channel threshold settings.
- Step 2** Click the **Provisioning > Optical Chn > Optics Thresholds** tabs.
- Step 3** If you want to change the warning thresholds, complete the following steps. If not, continue with [Step 4](#).
- Under Types, choose **Warning**.
 - Choose the warning interval that you want to provision, either **15 minutes** or **1 Day**.
 - Click **Refresh**.
 - Modify any of the warning thresholds shown under the Options column in [Table 21-33](#).
 - Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Table 21-33 Multiplexer and Demultiplexer Card Optical Channel Warning Threshold Settings

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction (TX or RX).	32MUX-O, 32DMX-O, 32DMX, 32DMX-L 1 through 32 (CHAN-RX or CHAN-TX) 40-MUX-C, 40-DMX-C, 40-DMX-CE 1 through 40 (CHAN-RX or CHAN-TX) 4MD-xx.x 1 through 8 (CHAN-RX or CHAN-TX)
opwrMin (dBm)	Set the low power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is –50 dBm. Double-click the parameter, enter a value, and press Enter .
opwrMax (dBm)	Set the high power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is 30 dBm. Double-click the parameter, enter a value, and press Enter .

- Step 4** If you want to change the alarm thresholds, complete the following steps. If not, continue with [Step 5](#).
- Under Types, choose **Alarm**.
 - Click **Refresh**.
 - Modify any of the alarm thresholds shown under the Options column in [Table 21-34](#).
 - Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Table 21-34 **Multiplexer and Demultiplexer Card Optical Channel Alarm Threshold Settings**

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction (TX or RX).	32MUX-O, 32DMX-O, 32DMX, 32DMX-L 1 through 32 (CHAN-RX or CHAN-TX) 40-MUX-C, 40-DMX-C, 40-DMX-CE 1 through 40 (CHAN-RX or CHAN-TX) 4MD-xx.x 1 through 8 (CHAN-RX or CHAN-TX)
Power Failure Low (dBm)	Shows the power failure low threshold. This power value applies to the corresponding port and is automatically calculated when ANS is run. This threshold applies to a port associated to a VOA (OSC-VOA) that is always active in Constant Power mode. The threshold is automatically linked to the Power Setpoint (VOA Power Ref + VOA Power Calib) that is provisioned. Changing the setpoint results in changing the threshold (always 5 dB lower). The 32DMX and 40-DMX-C/40-DMX/CE are exceptions. 32DMX and 40-DMX-C/40-DMX-CE Power Failure Low thresholds apply to ports that are not associated to a VOA. The threshold is calculated automatically when you run ANS. You can manually change the threshold. The value must be within the optical power range that is specified for the card. For more information, see the Hardware Specifications document.	Numeric. Double-click the parameter, enter a value, and press Enter .

Table 21-34 *Multiplexer and Demultiplexer Card Optical Channel Alarm Threshold Settings (Continued)*

Parameter	Description	Options
Power Degradate High (dBm)	(32MUX-O, 32DMX-0, and 4MD-xx.x cards only) Shows the power degrade high threshold. This power value applies to the corresponding port and is automatically calculated when ANS is run. This threshold applies to a port associated to a VOA (OSC-VOA) that is always active in Constant Power mode. The threshold is automatically linked to the Power Setpoint (VOA Power Ref + VOA Power Calib) that is provisioned. Changing the setpoint will result in changing the threshold (always 3 dB higher).	—
Power Degradate Low (dBm)	(32MUX-O, 32DMX-0, and 4MD-xx.x cards only) Shows the power degrade low threshold. This power value applies to the corresponding port and is automatically calculated when ANS is run. This threshold applies to a port associated to a VOA (OSC-VOA) that is always active in Constant Power mode. The threshold is automatically linked to the Power Setpoint (VOA Power Ref + VOA Power Calib) that is provisioned. Changing the setpoint will result in changing the threshold (always 2 dB lower).	—

Step 5 Return to your originating procedure (NTP).

NTP-G93 Modify the 32WSS, 32WSS-L, 40-WSS-C, or 40-WSS-CE Line Settings and PM Thresholds

Purpose	This procedure changes the 32WSS, 32WSS-L, 40-WSS-C, or 40-WSS-CE card thresholds and settings.
Tools/Equipment	None
Prerequisite Procedures	NTP-G30 Install the DWDM Cards, page 14-64.
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** Complete the [DLP-G46 Log into CTC](#) procedure at the node where you want to change the 32WSS, 32WSS-L, 40-WSS-C, or 40-WSS-CE card settings. If you are already logged in, continue with Step 2.
- Step 2** Complete the “NTP-G103 Back Up the Database” procedure on page 24-2.
- Step 3** Perform any of the following tasks as needed:
- [DLP-G212 Change 32WSS, 32WSS-L, 40-WSS-C, or 40-WSS-CE Card Optical Channel Parameters](#), page 21-66
 - [DLP-G213 Change the 32WSS, 32WSS-L, 40-WSS-C, or 40-WSS-CE Card Optical Channel Thresholds](#), page 21-69
-  **Note** To use the alarm profile tab, including creating alarm profiles and suppressing alarms, see [Alarm and TCA Monitoring and Management](#)
- [DLP-G214 Change 32WSS, 32WSS-L, 40-WSS-C, or 40-WSS-CE Card Optical Line Parameters](#), page 21-73
 - [DLP-G215 Change the 32WSS, 32-WSS-L, 40-WSS-C, or 40-WSS-CE Card Optical Line Thresholds](#), page 21-74
- Step 4** Complete the “NTP-G103 Back Up the Database” procedure on page 24-2.
- Stop. You have completed this procedure.**

DLP-G212 Change 32WSS, 32WSS-L, 40-WSS-C, or 40-WSS-CE Card Optical Channel Parameters

Purpose	This task changes the optical channel parameter settings for the 32WSS, 32WSS-L, 40-WSS-C, or 40-WSS-CE cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the 32WSS, 32WSS-L, 40-WSS-C, or 40-WSS-CE card where you want to change the optical channel parameter settings.
- Step 2** Click the **Provisioning > Optical Chn: Optical Connector n > Parameters** tabs, where n = one of the four available groups of eight optical channels.
- Step 3** Modify any of the settings described in [Table 21-35](#). The provisionable parameters are listed in the Options column in the table. In the Options column, the SONET (ANSI) option is followed by the SDH (ETSI) option.

Table 21-35 32WSS, 32WSS-L, 40-WSS-C, or 40-WSS-CE Optical Channel Parameter Settings

Parameter	Description	Options
Port	(Display only) Shows the port number. Each optical channel (wavelength) has two logical ports. However, only one is active at a time depending on the operating mode provisioned for the port on the card view Maintenance tab: either CHAN-RX or PASS-THROUGH. For the 32WSS or 32WSS-L, ports 1 through 32 (CHAN-RX) are assigned to optical channels configured as add channels. For the 40-WSS-C or 40-WSS-CE, CHAN-RX ports are 1 through 40. 32WSS or 32WSS-L ports 33 through 64 (PASS-THROUGH) are assigned to optical channels configured as pass-through channels. 40-WSS-C or 40-WSS-CE ports 41 through 80 are PASS-THROUGH channels.	—
Port Name	Allows a logical name to be assigned for each of the port.	User-defined. Name can be up to 32 alphanumeric/special characters. Blank by default. Double-click, enter the name, and press Enter. See the “DLP-G104 Assign a Name to a Port” task on page 17-16.
Admin State	Sets the port administrative state unless network conditions prevent the change. For more information about administrative states, see the Administrative and Service States document.	From the drop-down list, choose one of the following: - IS,AINS/Unlocked,automaticInService - OOS,DSBLD/Locked,disabled - OOS,MT/Locked,maintenance
Service State	(Display only) Identifies the autonomously generated state that gives the overall condition of the port. Service states appear in the format: Primary State-Primary State Qualifier, Secondary State. For more information about service states, see the Administrative and Service States document.	- IS-NR/Unlocked-enabled - OOS-AU,AINS/Unlocked-disabled,automaticInService - OOS-MA,DSBLD/Locked-enabled,disabled - OOS-MA,MT/Locked-enabled,maintenance

Table 21-35 32WSS, 32WSS-L, 40-WSS-C, or 40-WSS-CE Optical Channel Parameter Settings

Parameter	Description	Options
Power	(Display only) Power value read by the photodiode located after the VOA associated to the port, and calibrated to the COM_TX port. For more information, see the Hardware Specifications document.	Numeric value (dB)
Actual Wavelength	(Display only) Displays the actual wavelength utilized by the channel.	—
Expected Wavelength	(Display only) Displays the expected wavelength assigned for the channel.	—
AINS Soak	(Display only) The automatic in-service soak period. It is always 00.00.	—
VOA Mode	(Display only) Displays the active VOA working mode.	• Constant Power • Constant Attenuation
VOA Power Reference	(Display only) Shows the value of the optical power setpoint that must be reached on the path where a VOA is present, when VOA Mode is set to Constant Power. This value is the desired per-channel optical power. This parameter can only be modified by ANS.	Numeric value (dB)
VOA Power Calibration	Allows you to modify the VOA power value when VOA Mode is Constant Power.	Double-click the parameter, enter a value, and press Enter . • Numeric value (dB) • -37 dB to -2 dB
VOA Attenuation Reference	(Display only) Shows the attenuation value of the VOA when the VOA Mode is Constant Attenuation. This parameter can only be modified by ANS.	Numeric value (dB)
VOA Attenuation Calibration	Allows you to modify the VOA attenuation value when VOA Mode is Constant Attenuation.	Double-click the parameter, enter a value, and press Enter . • Numeric value (dB) • -30 dB to +30 dB

Table 21-35 32WSS, 32WSS-L, 40-WSS-C, or 40-WSS-CE Optical Channel Parameter Settings

Parameter	Description	Options
Power ADD	(Display only) Displays a measurement of the optical power coming in on the ADD RX port, reported in the CHAN-RX port column. This is the power transmitted by the TX laser of the TXP or MXP card that is connected to the 32WSS, 32WSS-L, 40-WSS-C, or 40-WSS-CE.	Numeric value (dB)
Path Value	(Display only) Displays the path value for the CHAN-RX port column parameter.	Standby

- Step 4** Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.
- Step 5** Return to your originating procedure (NTP).

DLP-G213 Change the 32WSS, 32WSS-L, 40-WSS-C, or 40-WSS-CE Card Optical Channel Thresholds

Purpose	This task changes the optical channel threshold settings for the 32WSS, 32WSS-L, 40-WSS-C, or 40-WSS-CE cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Caution

Warning thresholds are not monitored by CTC. They must be user-provisioned and monitored through custom alarm profiles.

- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the 32WSS, 32WSS-L, 40-WSS-C, or 40-WSS-CE card where you want to change the optical channel threshold settings.
- Step 2** Click the **Provisioning > Optical Chn: Optical Connector_n > Optics Thresholds** tabs, where *n* = one of the four available groups of eight optical channels.
- Step 3** If you want to change the warning thresholds, complete the following steps. If not, continue with [Step 4](#).
- Under Types, choose **Warning**.
 - Choose the warning interval that you want to provision, either **15 minutes** or **1 Day**.
 - Click **Refresh**.
 - Modify any of the warning thresholds shown under the Options column in [Table 21-36](#).

Table 21-36 32WSS, 32WSS-L, 40-WSS-C, and 40-WSS-CE Optical Channel Warning Threshold Settings

Parameter	Description	Options
Port	(Display only) Shows the port number, port type, and direction (RX or TX). Each optical channel (wavelength) has two logical ports. However, only one is active at a time depending on the operating mode provisioned for the port on the card view Maintenance tab: either CHAN-RX or PASS-THROUGH.	—
opwrMin (dBm)	Set the low power warning level.	Numeric. Can be set for 15-minute or one-day intervals. Double-click the parameter, enter a value, and press Enter .
opwrMax (dBm)	Set the high power warning level.	Numeric. Can be set for 15-minute or one-day intervals. Double-click the parameter, enter a value, and press Enter .

- e. Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Step 4 If you want to change the alarm thresholds, complete the following steps. If not, continue with [Step 5](#).

- a. Under Types, choose **Alarm**.
- b. Click **Refresh**.
- c. Modify any of the alarm thresholds shown under the Options column in [Table 21-37](#).

Table 21-37 32WSS, 32WSS-L, 40-WSS-C, and 40-WSS-CE Optical Channel Alarm Threshold Settings

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction (RX or TX). For each optical channel (wavelength), two logical ports are associated. Only one port can be active at a time, depending on the port's operating mode. The operating mode, provisioned on the card view Maintenance tab, is either CHAN RX or PASS-THROUGH. 32WSS and 32WSS-L ports 1 through 32 (CHAN-RX) are associated to optical channels configured as add/drop channels. 40-WSS-C or 40-WSS-CE ports 1 through 40 are the CHAN-RX channels. 32WSS or 32WSS-L ports 33 through 64 (PASS-THROUGH) are associated to optical channels configured as pass-through channels. For the 40-WSS-C or 40-WSS-CE, ports 41 through 80 are the PASS-THROUGH channels.	—
Power Failure Low (dBm)	(Display only) Shows the power failure low threshold. This power value applies to the corresponding port and is automatically calculated when ANS is run. This threshold applies to a port associated to a VOA (OSC-VOA) that is always active in Constant Power mode. The threshold is automatically linked to the Power Setpoint (VOA Power Ref + VOA Power Calib) that is provisioned. Changing the setpoint results in changing the threshold (always 5 dB lower). The threshold is calculated automatically when you run ANS. For more information, see the Hardware Specifications document.	—

Table 21-37 *32WSS, 32WSS-L, 40-WSS-C, and 40-WSS-CE Optical Channel Alarm Threshold Settings (Continued)*

Parameter	Description	Options
Power Degrade High (dBm)	(Display only) Shows the power degrade high threshold. This power value applies to the corresponding port and is automatically calculated when ANS is run. This threshold applies to a port associated to a VOA (OSC-VOA) that is always active in Constant Power mode. The threshold is automatically linked to the Power Setpoint (VOA Power Ref + VOA Power Calib) that is provisioned. Changing the setpoint results in changing the threshold (always 3 dB higher).	—
Power Degrade Low (dBm)	(Display only) Shows the power degrade low threshold. This power value applies to the corresponding port and is automatically calculated when ANS is run. This threshold applies to a port associated to a VOA (OSC-VOA) that is always active in Constant Power mode. The threshold is automatically linked to the Power Setpoint (VOA Power Ref + VOA Power Calib) that is provisioned. Changing the setpoint results in changing the threshold (always 2 dB lower).	Numeric
Power ADD Failure Low (dBm)	Shows the power add failure low threshold. This power value applies to the corresponding port and is automatically calculated when ANS is run. This threshold applies to the actual measurement of the optical power on the ADD RX port. It is reported as CHAN RX, that is, the power transmitted by the Trunk-TX laser of the TXP/MXP card connected to the 32WSS, 32WSS-L, 40-WSS-C, or 40-WSS-CE card.	Numeric. CTC does not allow it to be changed.

- d. Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Step 5 Return to your originating procedure (NTP).

DLP-G214 Change 32WSS, 32WSS-L, 40-WSS-C, or 40-WSS-CE Card Optical Line Parameters

Purpose	This task changes the optical line parameter settings for the 32WSS, 32WSS-L, 40-WSS-C or 40-WSS-CE cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the 32WSS, 32WSS-L, 40-WSS-C, or 40-WSS-CE card where you want to change the optical line parameter settings.
- Step 2** Click the **Provisioning > Optical Line > Parameters** tabs.
- Step 3** Modify any of the settings described in [Table 21-38](#). The provisionable parameters are listed in the Options column. The SONET (ANSI) option is followed by the SDH (ETSI) option.

Table 21-38 32WSS, 32WSS-L, 40-WSS-C, and 40-WSS-CE Optical Line Parameter Settings

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction (RX or TX),	32WSS or 32WSS-L: • 65 (EXP-TX) • 66 (EXP-RX) • 67 (COM-TX) • 68 (COM-RX) • 69 (DROP-TX) 40-WSS-C or 40-WSS-CE: • 81 (EXP-TX) • 82 (EXP-RX) • 83 (COM-TX) • 84 (COM-RX) • 85 (DROP-TX)
Port Name	Allows you to assign a logical name for each of the ports shown.	User-defined. Name can be up to 32 alphanumeric/ special characters. Blank by default. Double-click, enter the name, and press Enter . See the “DLP-G104 Assign a Name to a Port” task on page 17-16 .

Table 21-38 32WSS, 32WSS-L, 40-WSS-C, and 40-WSS-CE Optical Line Parameter Settings

Parameter	Description	Options
Admin State	Sets the port administrative state unless network conditions prevent the change. For more information about administrative states, see the Administrative and Service States document.	From the drop-down list, choose one of the following: - IS,AINS/Unlocked,automaticInService - OOS,DSBLD/Locked,disabled - OOS,MT/Locked,maintenance
Service State	(Display only) Identifies the autonomously generated state that gives the overall condition of the port. Service states appear in the format: Primary State-Primary State Qualifier, Secondary State. For more information about service states, see the Administrative and Service States document.	- IS-NR/Unlocked-enabled - OOS-AU,AINS/Unlocked-disabled, automaticInService - OOS-MA,DSBLD/Locked-enabled,disabled - OOS-MA,MT/Locked-enabled,maintenance
Power	(Display only) Power value read by the photodiode associated with the port.	Numeric value (dB)
AINS Soak	(Display only) The automatic in-service soak period. It is always 00.00.	—
Actual Channels	Number of active channels carried by the port (the difference between provisioned and failed)	—

Step 4 Return to your originating procedure (NTP).

DLP-G215 Change the 32WSS, 32-WSS-L, 40-WSS-C, or 40-WSS-CE Card Optical Line Thresholds

Purpose	This task changes the 32WSS, 32WSS-L, 40-WSS-C, or 40-WSS-CE card optical line threshold settings.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Caution

Warning thresholds are not monitored by CTC. They must be user-provisioned and monitored through custom alarm profiles.

- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the 32WSS, 32WSS-L, 40-WSS-C, or 40-WSS-CE card where you want to change the optical line threshold settings.
- Step 2** Click the **Provisioning > Optical Line > Optics Thresholds** tabs for one of the groups of optical channels that are available.
- Step 3** If you want to change the warning thresholds, complete the following steps. If not, continue with [Step 4](#).
- Under Types, choose **Warning**.
 - Choose the warning interval that you want to provision, either **15 minutes** or **1 Day**.
 - Click **Refresh**.
 - Modify any of the warning thresholds shown under the Options column in [Table 21-39](#).

Table 21-39 32WSS, 32WSS-L, 40-WSS-C, and 40-WSS-CE Optical Line Warning Threshold Settings

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction (RX or TX),	32WSS or 32WSS-L: 65 (EXP-TX) 66 (EXP-RX) 67 (COM-TX) 68 (COM-RX) 69 (DROP-TX) 40-WSS-C or 40-WSS-CE: 81 (EXP-TX) 82 (EXP-RX) 83 (COM-TX) 84 (COM-RX) 85 (DROP-TX)
opwrMin (dBm)	Set the low power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is -50 dBm.
opwrMax (dBm)	Set the high power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is 30 dBm.

- Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.
- Step 4** If you want to change the alarm thresholds, complete the following steps. If not, continue with [Step 5](#).
- Under Types, choose **Alarm**.
 - Click **Refresh**.
 - Modify any of the alarm thresholds shown under the Options column in [Table 21-40](#).

Table 21-40 32WSS, 32WSS-L, 40-WSS-C, and 40-WSS-CE Optical Line Alarm Threshold Settings

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction (RX or TX),	32WSS or 32WSS-L: • 65 (EXP-TX) • 66 (EXP-RX) • 67 (COM-TX) • 68 (COM-RX) • 69 (DROP-TX) 40-WSS-C or 40-WSS-CE: • 81 (EXP-TX) • 82 (EXP-RX) • 83 (COM-TX) • 84 (COM-RX) • 85 (DROP-TX)
Power Failure Low (dBm)	Shows the power failure low threshold. This power value applies to the corresponding port and is automatically calculated when ANS is run. You can manually change the threshold. The value must be within the optical power range that is specified for the card. For more information, see the Hardware Specifications document.	Numeric. Double-click the parameter, enter a value, and press Enter .

- d. Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Step 5 Return to your originating procedure (NTP).

NTP-G240 Modify TDC-CC and TDC-FC Line Settings and PM Thresholds

Purpose	This procedure changes the TDC-CC or TDC-FC card line settings and PM thresholds.
Tools/Equipment	None
Prerequisite Procedures	NTP-G30 Install the DWDM Cards, page 14-64
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** Complete the [DLP-G46 Log into CTC](#) task at the node where you want to change the TDC-CC or TDC-FC card settings. If you are already logged in, continue with [Step 2](#).
- Step 2** Complete the “[NTP-G103 Back Up the Database](#)” procedure on page 24-2.
- Step 3** Perform any of the following tasks as needed:
- [DLP-G545 Modify the Chromatic Dispersion Value for the TDC-CC and TDC-FC Cards](#), page 21-77.
 - [DLP-G528 Change Optical Line Threshold Settings for TDC-CC or TDC-FC Card](#), page 21-78.
- Step 4** Complete the “[NTP-G103 Back Up the Database](#)” procedure on page 24-2.
- Stop. You have completed this procedure.**
-

DLP-G545 Modify the Chromatic Dispersion Value for the TDC-CC and TDC-FC Cards

Purpose	This procedure modifies the chromatic dispersion (CD) value for the TDC-CC and TDC-FC cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** In the node view (single-shelf mode) or shelf view (multishelf view), double-click the TDC-CC or TDC-FC card.
- Step 2** Click **Provisioning > Card** tab **and then** select the CD value from the Compensating Value drop-down list.
- Step 3** Click **Apply**. A warning message appears stating that the change in compensation value could affect traffic.
- Step 4** Click **Yes**. The compensation value is set.
- Step 5** Return to your originating procedure (NTP).
-

DLP-G528 Change Optical Line Threshold Settings for TDC-CC or TDC-FC Card

Purpose	This task changes the optical line threshold settings for the TDC-CC or TDC-FC card.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Caution

Warning thresholds are not monitored by CTC. The warning thresholds must be user-provisioned and monitored through custom alarm profiles.

- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the TDC-CC or TDC-FC card where you want to change the optical channel threshold settings.
- Step 2** Click the **Provisioning > Optical Line > Optics Thresholds** tabs.
- Step 3** If you want to change the warning thresholds, complete the following steps. If not continue with Step 4.
 - a. Under Types, choose **Warning**.
 - b. Choose the warning interval that you want to provision, either **15 minutes** or **1 Day**.
 - c. Click **Refresh**.
 - d. Modify any of the warning thresholds shown under the Options column in [Table 21-41](#).

Table 21-41 TDC-CC and TDC-FC Cards Optical Line Warning Threshold Settings

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction (DC-RX or DC-TX).	1 (DC-RX) 2 (DC-TX)
opwrMin (dBm)	Sets the low power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is -50 dBm. Double-click the table cell, enter a value, and press Enter .
opwrMax (dBm)	Sets the high power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is 30 dBm. Double-click the table cell, enter a value, and press Enter .

- e. Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.
- Step 4** If you want to change the alarm thresholds, complete the following steps. If not, continue with Step 5.
 - a. Under Types, choose **Alarm**.
 - b. Click **Refresh**.
 - c. Modify any of the alarm thresholds shown under the Options column in [Table 21-42](#).

Table 21-42 TDC-CC and TDC-FC Cards Optical Line Alarm Thresholds Setting

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction (DC-RX or DC-TX).	1 (DC-RX) 2 (DC-TX)
Power Failure Low (dBm)	Shows the optical power failure low threshold for the port. You can manually change the threshold. The value must be within the optical power range that is specified for the card. For more information, see the Hardware Specifications document.	Numeric. Double-click the table cell, enter a value, and press Enter .

- d. Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Step 5 Return to your originating procedure (NTP).

NTP-G174 Modify the 40-WXC-C or 80-WXC-C Line Settings and PM Thresholds

Purpose	This procedure changes the 40-WXC-C or 80-WXC-C card thresholds and settings.
Tools/Equipment	None
Prerequisite Procedures	NTP-G30 Install the DWDM Cards, page 14-64 .
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** Complete the [DLP-G46 Log into CTC](#) task at the node where you want to change the 40-WXC-C or 80-WXC-C card settings. If you are already logged in, continue with [Step 2](#).
- Step 2** Complete the “[NTP-G103 Back Up the Database](#)” procedure on [page 24-2](#). For 40-WXC-C cards, continue with [Step 4](#). For 80-WXC-C cards, continue with [Step 3](#).
- Step 3** Verify the card mode for 80-WXC-C cards. Complete the following steps:
- Display the 80-WXC-C card in card view.
 - Click the **Provisioning > Card** tabs.
 - Verify that the card mode is set to the mode designated by your site plan:
 - BIDIRECTIONAL
 - MULTIPLEXER
 - DE-MULTIPLEXER

Step 4 If the card mode is set correctly, continue with [Step 4](#). If not, complete the “[DLP-G603 Change the 80-WXC-C Card Mode](#)” task on page 21-80.

Step 5 Perform any of the following tasks as needed:

- [DLP-G406 Change 40-WXC-C or 80-WXC-C Card Optical Channel Parameters](#), page 21-81
- [DLP-G407 Change the 40-WXC-C or 80-WXC-C Optical Channel Thresholds](#), page 21-84



Note To use the alarm profile tab, including creating alarm profiles and suppressing alarms, see [Alarm and TCA Monitoring and Management](#)

- [DLP-G408 Change 40-WXC-C or 80-WXC-C Optical Line Parameters](#), page 21-87
- [DLP-G409 Change the 40-WXC-C or 80-WXC-C Optical Line Thresholds](#), page 21-89
- [DLP-G413 Change 40-WXC-C or 80-WXC-C Card WXC Line Parameters](#), page 21-91
- [DLP-G771 Changing the WXC Line Thresholds for the 80-WXC-C Card](#), page 21-93

Step 6 Complete the “[NTP-G103 Back Up the Database](#)” procedure on page 24-2.

Stop. You have completed this procedure.

DLP-G603 Change the 80-WXC-C Card Mode

Purpose	This task changes the card mode of the 80-WXC-C cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 In node view (single-shelf mode) or shelf view (multishelf mode), double-click the 80-WXC-C card where you want to change the card mode.

Step 2 Click the **Provisioning > WXC Line > Parameters** tabs.

Step 3 Verify that any provisioned client or trunk ports have an **OOS-MA,DSBLD (ANSI)** or **Locked-enabled,disabled (ETSI)** service state in the Service State column. If so, continue with [Step 4](#). If not, complete the following substeps.

- For the first port that is in service, in the Admin State column, choose **OOS,DSBLD (ANSI)** or **Locked,disabled (ETSI)**.
- Repeat [Step a.](#) for each port that is in service.
- Click **Apply**.

Step 4 Click the **Provisioning > Card** tabs. Choose one of the card modes shown in [Table 21-43](#).

Table 21-43 80-WXC-C Card Modes

Mode	Description
Bidirectional	Provisions the 80-WXC-C card in the bidirectional mode. Traffic received from any of the nine input ports (EAD i , $i=1$ to 8, AD ports) are multiplexed and sent to the common output port (COM ports). The pre-amplifier output signal from the preamplifier is split in a 40%-to-60% ratio, 40% is sent on the drop path (DROP-TX port) and 60% is sent pass-through path (EXP-TX port).
Multiplexer	Provisions the 80-WXC-C card in the multiplexer mode. Traffic received from any of the nine input ports (EAD i , $i=1$ to 8, AD ports) are multiplexed and sent to the common output port (COM port).
Demultiplexer	Provisions the 80-WXC-C card in the demultiplexer mode. Traffic received from common input port (COM port) is demultiplexed and sent to the nine output ports (EAD i , $i=1$ to 8, AD ports).

Step 5 Click **Apply**, then click **Yes** in the confirmation dialog box.

Step 6 Return to your originating procedure (NTP)

DLP-G406 Change 40-WXC-C or 80-WXC-C Card Optical Channel Parameters

Purpose	This task changes the optical channel parameter settings for the 40-WXC-C or 80-WXC-C cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 In node view (single-shelf mode) or shelf view (multishelf mode), double-click the 40-WXC-C or 80-WXC-C card where you want to change the optical channel parameter settings.

Step 2 Click the **Provisioning > OCH > Parameters** tabs. For 40-WXC-C cards, continue with [Step 4](#). For 80-WXC-C cards, continue with [Step 3](#).

Step 3 Choose a wavelength from the Wavelength drop-down list and click **Retrieve** to retrieve the OCH parameters.

- Step 4** Modify any of the settings described in [Table 21-44](#). The provisionable parameters are listed in the Options column in the table. In the Options column, the SONET (ANSI) option is followed by the SDH (ETSI) option.

Table 21-44 40-WXC-C and 80-WXC-C Optical Channel Parameter Settings

Parameter	Description	Options
Circuit Name	(Display only) Shows the circuit name. This is provisioned in the Circuits tab.	—
Admin State	Sets the port administrative state unless network conditions prevent the change. For more information about administrative states, see the Administrative and Service States document.	• IS,AINS/Unlocked,automaticInService • OOS,DSBLD/Locked,disabled • OOS,MT/Locked,maintenance (40-WXC-C only)
Service State	(Display only) Identifies the autonomously generated state that gives the overall condition of the port. Service states appear in the format: Primary State-Primary State Qualifier, Secondary State. For more information about service states, see the Administrative and Service States document.	• IS-NR/Unlocked-enabled • OOS-AU,AINS/Unlocked-disabled,automaticInService (40-WXC-C only) • OOS-MA,DSBLD/Locked-enabled,disabled (40-WXC-C only) • OOS-MA,MT/Locked-enabled,maintenance (40-WXC-C only)
From	(Display only) The port where the circuit originated.	—
Power (40-WXC-C only)	(Display only) Power value read by the photodiode located after the VOA associated to the port, and calibrated to the COM_TX port. For more information, see the Hardware Specifications document.	Numeric value (dB)
Power From (80-WXC-C only)	Power on the port where the circuit originated.	—
To (80-WXC-C only)	(Display only) The port where the circuit terminated.	—
Power To (80-WXC-C only)	Power on the port where the circuit terminated.	—
Force Channel (80-WXC-C only)	Starts the channel by moving the VOA from Open to Closed loop. You can force a channel only when the Force Channel Status is in the Unlocked state.	• OFF • ON

Table 21-44 40-WXC-C and 80-WXC-C Optical Channel Parameter Settings (Continued)

Parameter	Description	Options
Force Channel Status (80-WXC-C only)	(Display only) Displays the channel status.	• Unlocked—Can force channel startup • Locked—Cannot force channel startup as the device is under control of other functions like optical safety • Forced—Channel startup has already been forced
Actual Wavelength (40-WXC-C only)	(Display only) Displays the actual wavelength utilized by the channel.	—
VOA Mode	(Display only) Displays the active VOA working mode.	• Constant Power • Constant Attenuation
VOA Power Ref.	(Display only) Shows the value of the optical power setpoint that must be reached on the path where a VOA is present, when VOA Mode is set to Constant Power. This value is the desired per-channel optical power. This parameter can only be modified by ANS.	Numeric value (dB)
VOA Power Calib.	Allows you to modify the VOA power value when VOA Mode is Constant Power.	Double-click the parameter, enter a value, and press Enter . • Numeric value (dB) • -37 dB to -2 dB
VOA Attenuation Ref. (40-WXC-C only)	(Display only) Shows the attenuation value of the VOA when the VOA Mode is Constant Attenuation. This parameter can only be modified by ANS.	Numeric value (dB)
VOA Attenuation Calib. (40-WXC-C only)	Allows you to modify the VOA attenuation value when VOA Mode is Constant Attenuation.	Double-click the parameter, enter a value, and press Enter . • Numeric value (dB) • -30 dB to +30 dB

Step 5 Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Step 6 Return to your originating procedure (NTP).

DLP-G407 Change the 40-WXC-C or 80-WXC-C Optical Channel Thresholds

Purpose	This task changes the optical channel threshold settings for the 40-WXC-C or 80-WXC-C cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Caution

Warning thresholds are not monitored by CTC. They must be user-provisioned and monitored through custom alarm profiles.

- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the 40-WXC-C or 80-WXC-C card where you want to change the optical channel threshold settings.
- Step 2** Click the **Provisioning > OCH > OCH Thresholds** tabs, where n = one of the four available groups of eight optical channels.
- Step 3** If you want to change the warning thresholds, complete the following steps. If not, continue with [Step 4](#).
 - a. Under Types, choose **Warning**.
 - b. Choose the warning interval that you want to provision, either **15 minutes** or **1 Day**. For 40-WXC-C card, continue with [Step 3c](#). For 80-WXC-C card, continue with [Step 3d](#).
 - c. Click **Refresh**. Continue with [Step 3g](#).
 - d. Choose a wavelength from the Wavelength drop-down list.
 - e. In the Port drop-down list, choose an OCH port where you want to change the optical channel threshold settings.
 - f. Click **Retrieve**.
 - g. Modify any of the warning thresholds shown under the Options column in [Table 21-45](#).

Table 21-45 40-WXC-C and 80-WXC-C Optical Channel Warning Threshold Settings

Parameter	Description	Options
Circuit Name	(Display only) Shows the circuit name. This is provisioned in the Circuits tab.	—
Port Name	(Display only) Shows the port name.	—
Actual Wavelength	(Display only) Displays the actual wavelength utilized by the channel.	—
opwrMin (dBm)	Set the low power warning level.	Numeric. Can be set for 15-minute or one-day intervals. Double-click the parameter, enter a value, and press Enter .
opwrMax (dBm)	Set the high power warning level.	Numeric. Can be set for 15-minute or one-day intervals. Double-click the parameter, enter a value, and press Enter .

- h. Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Step 4 If you want to change the alarm thresholds, complete the following steps. If not, continue with [Step 5](#).

- a. Under Types, choose **Alarm**. For 40-WXC-C card, continue with [Step 4b](#). For 80-WXC-C card, continue with [Step 4c](#).
- b. Click **Refresh**. Continue with [Step 4f](#).
- c. Choose a wavelength from the Wavelength drop-down list.
- d. In the Port drop-down list, choose an OCH port where you want to change the optical channel threshold settings:

For the 80-WXC-C card, the following ports are available to view:

- 1 (EAD)
- 2 (EAD)
- 3 (EAD)
- 4 (EAD)
- 5 (EAD)
- 6 (EAD)
- 7 (EAD)
- 8 (EAD)
- 9 (AD)
- 10 (COM)
- (DROP-TX) (in BIDI mode)

- e. Click **Retrieve**.
- f. Modify any of the alarm thresholds shown under the Options column in [Table 21-46](#).

Table 21-46 40-WXC-C and 80-WXC-C Optical Channel Alarm Threshold Settings

Parameter	Description	Options
Circuit Name	(Display only) Shows the circuit name. This is provisioned in the Circuits tab.	—
Port Name	(Display only) Shows the port name.	—
Actual Wavelength	(Display only) Displays the actual wavelength utilized by the channel.	—

Table 21-46 40-WXC-C and 80-WXC-C Optical Channel Alarm Threshold Settings (Continued)

Parameter	Description	Options
Power Failure Low (dBm)	(Display only) Shows the power failure low threshold. This power value applies to the corresponding port and is automatically calculated when ANS is run. This threshold applies to a port associated to a VOA (OSC-VOA) that is always active in Constant Power mode. The threshold is automatically linked to the Power Setpoint (VOA Power Ref + VOA Power Calib) that is provisioned. Changing the setpoint results in changing the threshold (always 5 dB lower). The threshold is calculated automatically when you run ANS. For more information, see the Hardware Specifications document.	—
Power Degrade High (dBm)	(Display only) Shows the power degrade high threshold. This power value applies to the corresponding port and is automatically calculated when ANS is run. This threshold applies to a port associated to a VOA (OSC-VOA) that is always active in Constant Power mode. The threshold is automatically linked to the Power Setpoint (VOA Power Ref + VOA Power Calib) that is provisioned. Changing the setpoint results in changing the threshold (always 3 dB higher).	—
Power Degrade Low (dBm)	(Display only) Shows the power degrade low threshold. This power value applies to the corresponding port and is automatically calculated when ANS is run. This threshold applies to a port associated to a VOA (OSC-VOA) that is always active in Constant Power mode. The threshold is automatically linked to the Power Setpoint (VOA Power Ref + VOA Power Calib) that is provisioned. Changing the setpoint results in changing the threshold (always 2 dB lower).	Numeric

- g.** Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Step 5 Return to your originating procedure (NTP).

DLP-G408 Change 40-WXC-C or 80-WXC-C Optical Line Parameters

Purpose	This task changes the optical line parameter settings for 40-WXC-C or 80-WXC-C cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the 40-WXC-C or 80-WXC-C card where you want to change the optical line parameter settings.
- Step 2** Click the **Provisioning > Optical Line > Parameters** tabs.
- Step 3** Modify any of the settings described in [Table 21-47](#). The provisionable parameters are listed in the Options column. The SONET (ANSI) option is followed by the SDH (ETSI) option.

Table 21-47 40-WXC-C or 80-WXC-C Optical Line Parameter Settings

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction (RX or TX),	40-WXC-C card options: • 10 (DROP-TX) • 11 (EXP-TX) • 12 (COM-RX) • 13 (COM-TX) 80-WXC-C card options: • 11 (DROP-TX) • 12 (EXP-TX) • 13 (COM-RX)
Port Name	Allows you to assign a logical name for each of the ports shown.	User-defined. Name can be up to 32 alphanumeric/ special characters. Blank by default. Double-click, enter the name, and press Enter . See the “DLP-G104 Assign a Name to a Port” task on page 17-16 .
Admin State	Sets the port administrative state unless network conditions prevent the change. For more information about administrative states, see the Administrative and Service States document.	From the drop-down list, choose one of the following: • IS,AINS/Unlocked,automaticInService • OOS,DSBLD/Locked,disabled • OOS,MT/Locked,maintenance

Table 21-47 40-WXC-C or 80-WXC-C Optical Line Parameter Settings (Continued)

Parameter	Description	Options
Service State	(Display only) Identifies the autonomously generated state that gives the overall condition of the port. Service states appear in the format: Primary State-Primary State Qualifier, Secondary State. For more information about service states, see the Administrative and Service States document.	- IS-NR/Unlocked-enabled - OOS-AU,AINS/Unlocked-disabled, automaticInService - OOS-MA,DSBLD/Locked-enabled,disabled - OOS-MA,MT/Locked-enabled,maintenance
Power (40-WXC-C only)	(Display only) Power value read by the photodiode associated with the port.	Numeric value (dB)
Active Channels (40-WXC-C only)	Number of active channels carried by the port (the difference between provisioned and failed)	—
VOA Mode (80-WXC-C in BIDI mode only)	(Display only) Displays the active VOA working mode.	- Constant Power - Constant Attenuation
VOA Attenuation Ref. (80-WXC-C in BIDI mode only)	(Display only) Shows the attenuation value of the VOA when the VOA Mode is Constant Attenuation. This parameter can only be modified by ANS.	Numeric value (dB)
VOA Attenuation Calib. (80-WXC-C in BIDI mode only)	Allows you to modify the VOA attenuation value when VOA Mode is Constant Attenuation.	Double-click the parameter, enter a value, and press Enter. - Numeric value (dB) –30 dB to +30 dB

Step 4 Return to your originating procedure (NTP).

DLP-G409 Change the 40-WXC-C or 80-WXC-C Optical Line Thresholds

Purpose	This task changes the 40-WXC-C or 80-WXC-C card optical line threshold settings.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Caution

Warning thresholds are not monitored by CTC. They must be user-provisioned and monitored through custom alarm profiles.

- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the 40-WXC-C or 80-WXC-C card where you want to change the optical line threshold settings.
- Step 2** Click the **Provisioning > Optical Line > Optics Thresholds** tabs for one of the groups of optical channels that are available.
- Step 3** If you want to change the warning thresholds, complete the following steps. If not, continue with [Step 4](#).
 - a. Under Types, choose **Warning**.
 - b. Choose the warning interval that you want to provision, either **15 minutes** or **1 Day**.
 - c. Click **Refresh**.
 - d. Modify any of the warning thresholds shown under the Options column in [Table 21-48](#).

Table 21-48 40-WXC-C or 80-WXC-C Optical Line Warning Threshold Settings

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction (RX or TX),	40-WXC-C card options: • 10 (DROP-TX) • 11 (EXP-TX) • 12 (COM-RX) • 13 (COM-TX) 80-WXC-C card options: • 11 (DROP-TX) • 12 (EXP-TX) • 13 (COM-RX)
opwrMin (dBm)	Set the low power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is -50 dBm.
opwrMax (dBm)	Set the high power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is 30 dBm.

- e. Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Step 4 If you want to change the alarm thresholds, complete the following steps. If not, continue with [Step 5](#).

- a. Under Types, choose **Alarm**.
- b. Click **Refresh**.
- c. Modify any of the alarm thresholds shown under the Options column in [Table 21-49](#).

Table 21-49 40-WXC-C or 80-WXC-C Optical Line Alarm Threshold Settings

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction (RX or TX),	40-WXC-C card options: • 10 (DROP-TX) • 11 (EXP-TX) • 12 (COM-RX) • 13 (COM-TX) 80-WXC-C card options: • 11 (DROP-TX) • 12 (EXP-TX) • 13 (COM-RX)
Power Failure Low (dBm)	Shows the power failure low threshold. This power value applies to the corresponding port and is automatically calculated when ANS is run. You can manually change the threshold. The value must be within the optical power range that is specified for the card. For more information, see the Hardware Specifications document.	Numeric. Double-click the parameter, enter a value, and press Enter .

- d. Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Step 5 Return to your originating procedure (NTP).

DLP-G413 Change 40-WXC-C or 80-WXC-C Card WXC Line Parameters

Purpose	This task changes the WXC line parameter settings for 40-WXC-C or 80-WXC-C cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the 40-WXC-C or 80-WXC-C card where you want to change the optical line parameter settings.
- Step 2** Click the **Provisioning > WXC Line > Parameters** tabs.
- Step 3** Modify any of the settings described in [Table 21-50](#). The provisionable parameters are listed in the Options column. The SONET (ANSI) option is followed by the SDH (ETSI) option.

Table 21-50 40-WXC-C or 80-WXC-C WXC Line Parameter Settings

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction (RX or TX),	40-WXC-C card options: • 1 (EXP-RX) • 2 (EXP-RX) • 3 (EXP-RX) • 4 (EXP-RX) • 5 (EXP-RX) • 6 (EXP-RX) • 7 (EXP-RX) • 8 (EXP-RX) • 9 (ADD-RX) 80-WXC-C card options: • 1 (EAD) • 2 (EAD) • 3 (EAD) • 4 (EAD) • 5 (EAD) • 6 (EAD) • 7 (EAD) • 8 (EAD) • 9 (AD) • 10 (COM)
Port Name	Allows you to assign a logical name for each of the ports shown.	User-defined. Name can be up to 32 alphanumeric/ special characters. Blank by default. Double-click, enter the name, and press Enter. See the “DLP-G104 Assign a Name to a Port” task on page 17-16.
Admin State	Sets the port administrative state unless network conditions prevent the change. For more information about administrative states, see the Administrative and Service States document.	From the drop-down list, choose one of the following: • IS,AINS/Unlocked,automaticInService • OOS,DSBLD/Locked,disabled • OOS,MT/Locked,maintenance

Table 21-50 40-WXC-C or 80-WXC-C WXC Line Parameter Settings (Continued)

Parameter	Description	Options
Service State	(Display only) Identifies the autonomously generated state that gives the overall condition of the port. Service states appear in the format: Primary State-Primary State Qualifier, Secondary State. For more information about service states, see the Administrative and Service States document.	- IS-NR/Unlocked-enabled - OOS-AU,AINS/Unlocked-disabled, automaticInService - OOS-MA,DSBLD/Locked-enabled,disabled - OOS-MA,MT/Locked-enabled,maintenance
Active Channels	(Display only) Indicates how many channels the port is carrying. Generally reflects the number of provisioned channels.	—
Power (80-WXC-C only)	(Display only) Shows the current power level per port.	—

Step 4 Return to your originating procedure (NTP).

DLP-G771 Changing the WXC Line Thresholds for the 80-WXC-C Card

Purpose	This task changes the WXC line thresholds for the 80-WXC-C card.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Caution

Warning thresholds are monitored by CTC as part of performance monitoring. They must be user-provisioned.

- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the 80-WXC-C card where you want to change the WXC line thresholds.
- Step 2** Click the **Provisioning > WXC Line > WXC Line Thresholds** tabs for one of the groups of optical channels that are available.
- Step 3** If you want to change the warning thresholds, complete the following steps. If not, continue with [Step 4](#).
- Under Types, choose **Warning**.
 - Choose the warning interval that you want to provision, either **15 minutes** or **1 Day**.
 - Click **Refresh**.

- d. Modify any of the warning thresholds shown under the Options column in the following table.

Table 21-51 80-WXC-C WXC Line Warning Thresholds

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction (RX or TX),	80-WXC-C card options: • 1 (EAD) • 2 (EAD) • 3 (EAD) • 4 (EAD) • 5 (EAD) • 6 (EAD) • 7 (EAD) • 8 (EAD) • 9 (AD) • 10 (COM)
opwrMin (dBm)	Set the low power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is -50 dBm.
opwrMax (dBm)	Set the high power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is 30 dBm.

- e. Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Step 4 If you want to change the alarm thresholds, complete the following steps. If not, continue with [Step 5](#).

- Under Types, choose **Alarm**.
- Click **Refresh**.
- Modify any of the alarm thresholds shown under the Options column in this table.

Table 21-52 80-WXC-C WXC Line Alarm Thresholds

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction (RX or TX),	80-WXC-C card options: • 1 (EAD) • 2 (EAD) • 3 (EAD) • 4 (EAD) • 5 (EAD) • 6 (EAD) • 7 (EAD) • 8 (EAD) • 9 (AD) • 10 (COM)
Power Failure Low (dBm)	Shows the power failure low threshold. This power value applies to the corresponding port and is automatically calculated when ANS is run. You can manually change the threshold. The value must be within the optical power range that is specified for the card.	Numeric. Double-click the parameter, enter a value, and press Enter.

- d. Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Step 5 Return to your originating procedure (NTP).

DLP-G429 Multiplex a Single Wavelength on 40-WXC-C Card

Purpose	This task multiplexes a single wavelength onto the COM-TX port of a 40-WXC-C card. Perform this task for testing and troubleshooting a 40-WXC-C card.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 In node view (single-shelf mode) or shelf view (multishelf mode), double-click the 40-WXC-C card where you want to multiplex a wavelength.

Step 2 Click the **Maintenance > OCHNC** tabs.

Step 3 Enter the following values:

Target Power (dBm)—Enter the target power. The default is –14.0 dBm.

- Input Port—Choose the EXP-RX or ADD-RX port where you want to multiplex the wavelength from.
- VOA Attenuation (dB)—Enter the VOA attenuation. The default values are:
 - 20 dB for four-way mesh and an EXP-RX input port
 - 16 dB for 8-way mesh and an EXP-RX input port
 - 22 dB for an ADD-RX input port
- Wavelength—Choose the wavelength that you want to multiplex. The supported wavelengths are the 40 channels of the C-band from 1530.33 nm to 1561.32 nm. A “Maintenance” wavelength is also provided that corresponds to a “Lambda zero” wavelength of 1529.55 nm.



Note You cannot multiplex a wavelength that is already allocated on the COM-TX port.

Step 4 Click **Apply**. This creates a cross-connection (add or pass-through) for the specified wavelength. This cross-connection remains active until you click **Clear**.

Step 5 If you want to multiplex additional channels, click **Clear** to delete the existing cross-connection, and repeat Steps 3 and 4. If not, continue with Step 6.

Step 6 To view the actual power on the COM-TX port, click **Refresh**. Wait 10-15 seconds for the actual power to appear.

Step 7 Return to your originating procedure (NTP).

NTP-G241 Modify the 40-SMR1-C and 40-SMR2-C Line Settings and PM Thresholds

Purpose	This procedure changes the 40-SMR1-C and 40-SMR2-C card thresholds and settings.
Tools/Equipment	None
Prerequisite Procedures	NTP-G30 Install the DWDM Cards, page 14-64
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 Complete the [DLP-G46 Log into CTC](#) task at the node where you want to change the 40-SMR1-C or 40-SMR2-C card settings. If you are already logged in, continue with Step 2.

Step 2 Complete the “[NTP-G103 Back Up the Database](#)” procedure on page 24-2.

Step 3 Perform any of the following tasks as needed:

- [DLP-G532 Change Optical Line Settings for 40-SMR1-C and 40-SMR2-C Cards, page 21-97](#)

- [DLP-G533 Change Optical Line Threshold Settings for 40-SMR1-C and 40-SMR2-C Cards, page 21-99](#)
- [DLP-G534 Change Optical Amplifier Line Settings for 40-SMR1-C and 40-SMR2-C Cards, page 21-103](#)
- [DLP-G535 Change Optical Amplifier Threshold Settings for 40-SMR1-C and 40-SMR2-C Cards, page 21-105](#)
- [DLP-G536 Change 40-SMR1-C and 40-SMR2-C Card Optical Channel Parameters, page 21-110](#)
- [DLP-G537 Change the 40-SMR1-C and 40-SMR2-C Optical Channel Thresholds, page 21-112](#)

**Note**

To use the alarm profile tab, including creating alarm profiles and suppressing alarms, see [Alarm and TCA Monitoring and Management](#)

Step 4 Complete the “[NTP-G103 Back Up the Database](#)” procedure on page 24-2.

Stop. You have completed this procedure.

DLP-G532 Change Optical Line Settings for 40-SMR1-C and 40-SMR2-C Cards

Purpose	This task changes the optical line settings for the 40-SMR1-C and 40-SMR2-C cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the 40-SMR1-C or 40-SMR2-C card where you want to change the optical line settings.
- Step 2** Click the **Provisioning > Optical Line > Parameters** tabs.
- Step 3** Modify any of the settings described in [Table 21-53](#). The provisionable parameters are listed in the Options column in the table. In the Options column, the SONET (ANSI) option is followed by the SDH (ETSI) option.

Table 21-53 40-SMR1-C and 40-SMR2-C Optical Line Settings

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction (TX or RX).	40-SMR1-C card options: • 1 (EXP-RX) • 3 (DC-RX) • 4 (DC-TX) • 5 (OSC-RX) • 6 (OSC-TX) • 7 (ADD-RX) • 8 (DROP-TX) • 9 (LINE-RX) • 10 (LINE-TX) 40-SMR2-C card options: • 1 (DC-RX) • 2 (DC-TX) • 3 (OSC-RX) • 4 (OSC-TX) • 5 (ADD-RX) • 6 (DROP-TX) • 7 (LINE-RX) • 10 (EXP-RX 1-2) • 11 (EXP-RX 1-3) • 12 (EXP-RX 1-4)
Port Name	Provides the ability to assign the specified port, a name.	User-defined. Name can be up to 32 alphanumeric/special characters. Blank by default. Double-click, enter the name, and press Enter. See the “DLP-G104 Assign a Name to a Port” task on page 17-16.
Admin State	Sets the port administrative state unless network conditions prevent the change. For more information about administrative states, see the Administrative and Service States document.	From the drop-down list, choose one of the following: • IS,AINS/Unlocked,automaticInService • OOS,DSBLD/Locked,disabled • OOS,MT/Locked,maintenance Note You cannot set the OOS,DSBLD/Locked,disabled administrative state for LINE and OSC ports, and hence the OOS-MA,DSBLD/Locked-enabled,disabled service state is not applicable for these ports.

Table 21-53 40-SMR1-C and 40-SMR2-C Optical Line Settings (Continued)

Parameter	Description	Options
Service State	(Display only) Identifies the autonomously generated state that gives the overall condition of the port. Service states appear in the format: Primary State-Primary State Qualifier, Secondary State. For more information about service states, see the Administrative and Service States document.	- IS-NR/Unlocked-enabled - OOS-AU,AINS/Unlocked-disabled, automaticInService - OOS-MA,DSBLD/Locked-enabled,disabled - OOS-MA,MT/Locked-enabled,maintenance Note You cannot set the OOS,DSBLD/Locked,disabled administrative state for LINE and OSC ports, and hence the OOS-MA,DSBLD/Locked-enabled,disabled service state is not applicable for these ports.
Power	(Display only) Shows the current power level per port.	—
VOA Mode	(Display only) Shows the functional mode of the variable optical attenuator (VOA), when present.	- Constant Attenuation - Constant Power
VOA Attenuation Ref	(Display only) Shows the VOA attenuation value when VOA Mode is set to Constant Attenuation. This parameter can only be modified by ANS.	—
VOA Attenuation Calib	Modifies the attenuation value of the VOA when the VOA Mode is set to Constant Attenuation.	Numeric. Double-click the parameter, enter a value, and press Enter .
Active Channels	(Display only) Indicates how many channels the amplifier is carrying. Generally reflects the number of provisioned channels.	—
OSC Power	(Display only) Shows the OSC power level per port.	—

Step 4 Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Step 5 Return to your originating procedure (NTP).

DLP-G533 Change Optical Line Threshold Settings for 40-SMR1-C and 40-SMR2-C Cards

Purpose	This task changes the optical line threshold settings for the 40-SMR1-C and 40-SMR2-C cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

**Caution**

CTC does not monitor warning thresholds. They must be user-provisioned and monitored through custom alarm profiles.

-
- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the 40-SMR1-C or 40-SMR2-C card where you want to change the optical line threshold settings.
- Step 2** Click the **Provisioning > Optical Line > Optics Thresholds** tabs.
- Step 3** If you want to change the warning thresholds, complete the following steps. If not, continue with [Step 4](#).
- a. Under Types, choose **Warning**.
 - b. Choose the warning interval that you want to provision, either **15 minutes** or **1 Day**.
 - c. Click **Refresh**.
 - d. Modify any of the warning thresholds shown under the Options column in [Table 21-54](#).
 - e. Click **Apply**. If the change affects service, a warning message appears. Click **Yes** to complete the change.

Table 21-54 40-SMR1-C and 40-SMR2-C Card Optical Line Warning Threshold Settings

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction (TX or RX):	40-SMR1-C card options: • 1 (EXP-RX) • 3 (DC-RX) • 4 (DC-TX) • 5 (OSC-RX) • 6 (OSC-TX) • 7 (ADD-RX) • 8 (DROP-TX) • 9 (LINE-RX) • 10 (LINE-TX) 40-SMR2-C card options: • 1 (DC-RX) • 2 (DC-TX) • 3 (OSC-RX) • 4 (OSC-TX) • 5 (ADD-RX) • 6 (DROP-TX) • 7 (LINE-RX) • 10 (EXP-RX 1-2) • 11 (EXP-RX 1-3) • 12 (EXP-RX 1-4)
opwrMin (dBm)	Sets the low power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is –50 dBm. Double-click the table cell, enter the value, and press Enter .
opwrMax (dBm)	Sets the high power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is 30 dBm. Double-click the table cell, enter the value, and press Enter .
opwrMin OSC (dBm)	Sets the OSC low power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is –50 dBm. Double-click the table cell, enter the value, and press Enter .
opwrMax OSC (dBm)	Sets the OSC high power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is 30 dBm. Double-click the table cell, enter the value, and press Enter .

- Step 4** If you want to change the alarm thresholds, complete the following steps. If not, continue with [Step 5](#).
- Under Types, choose **Alarm**.
 - Click **Refresh**.
 - Modify any of the alarm thresholds shown under the Options column in [Table 21-55](#).
 - Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Table 21-55 40-SMR1-C and 40-SMR2-C Card Optical Line Alarm Thresholds Setting

Parameter	Description	Options
Port	(Display only) Displays the port number.	40-SMR1-C card options: • 1 (EXP-RX) • 3 (DC-RX) • 4 (DC-TX) • 5 (OSC-RX) • 6 (OSC-TX) • 7 (ADD-RX) • 8 (DROP-TX) • 9 (LINE-RX) • 10 (LINE-TX) 40-SMR2-C card options: • 1 (DC-RX) • 2 (DC-TX) • 3 (OSC-RX) • 4 (OSC-TX) • 5 (ADD-RX) • 6 (DROP-TX) • 7 (LINE-RX) • 10 (EXP-RX 1-2) • 11 (EXP-RX 1-3) • 12 (EXP-RX 1-4)
Power Failure Low (dBm)	Shows the optical power failure low threshold for the port. The threshold is calculated automatically when you run ANS. You can manually change the threshold. The value must be within the optical power range that is specified for the card. For more information, see the Hardware Specifications document.	Numeric.
Power Degrade High (dBm)	Does not apply to 40-SMR1-C and 40-SMR2-C line parameters.	—

Table 21-55 40-SMR1-C and 40-SMR2-C Card Optical Line Alarm Thresholds Setting (Continued)

Parameter	Description	Options
Power Degrade Low (dBm)	Does not apply to 40-SMR1-C and 40-SMR2-C line parameters.	—
Pwr OSC Degrade High (dBm)	Does not apply to 40-SMR1-C and 40-SMR2-C line parameters.	—
Pwr OSC Degrade Low (dBm)	Does not apply to 40-SMR1-C and 40-SMR2-C line parameters.	—
Pwr OSC Failure (dBm)	Shows the optical power failure threshold for the OSC. The threshold is calculated automatically when you run ANS. You can manually change the threshold. The value must be within the optical power range that is specified for the card. If there is a failure, an LOS-O alarm is raised. For more information, see the Hardware Specifications document.	Numeric.

Step 5 Return to your originating procedure (NTP).

DLP-G534 Change Optical Amplifier Line Settings for 40-SMR1-C and 40-SMR2-C Cards

Purpose	This task changes the optical amplifier line settings for 40-SMR1-C and 40-SMR2-C cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the 40-SMR1-C or 40-SMR2-C card where you want to change the optical amplifier line settings.
- Step 2** Click the **Provisioning > Opt. Ampli. Line > Parameters** tabs.
- Step 3** Modify any of the settings described in [Table 21-56](#). The provisionable parameters are listed in the Options column in the table. In the Options column, the SONET (ANSI) option is followed by the SDH (ETSI) option.

Table 21-56 40-SMR1-C and 40-SMR2-C Card Line Settings

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction.	40-SMR1-C card options: • 2 (EXP-TX) 40-SMR1-C card options: • 8 (LINE-TX) • 9 (EXP-TX 1-1)
Port Name	Provides the ability to assign the specified port, a name.	User-defined. Name can be up to 32 alphanumeric/special characters. Blank by default. See the “DLP-G104 Assign a Name to a Port” task on page 17-16 .
Admin State	Sets the port administrative state unless network conditions prevent the change. For more information about administrative states, see the Administrative and Service States document.	From the drop-down list, choose one of the following: • IS,AINS/Unlocked,automaticInService • OOS,DSBLD/Locked,disabled • OOS,MT/Locked,maintenance Note You cannot set the OOS,DSBLD/Locked,disabled administrative state for LINE-TX and EXP-TX ports, and hence the OOS-MA,DSBLD/Locked-enabled,disabled service state is not applicable for these ports.
Service State	(Display only) Identifies the autonomously generated state that gives the overall condition of the port. Service states appear in the format: Primary State-Primary State Qualifier, Secondary State. For more information about service states, see the Administrative and Service States document.	• IS-NR/Unlocked-enabled • OOS-AU,AINS/Unlocked-disabled, automaticInService • OOS-MA,DSBLD/Locked-enabled,disabled • OOS-MA,MT/Locked-enabled,maintenance Note You cannot set the OOS,DSBLD/Locked,disabled administrative state for LINE-TX and EXP-TX ports, and hence the OOS-MA,DSBLD/Locked-enabled,disabled service state is not applicable for these ports.
Total Output Power	(Display only) Shows the current power level per port.	—
Offset	Adjusts the total output power unless network conditions prevent the adjustment, for example, if the port is in IS state.	Numeric. Double-click to change.
Active Channels	(Display only) Indicates how many channels the card is carrying. Generally reflects the number of provisioned channels.	—
OSC Power	(Display only) Shows the OSC power level per port.	—

Table 21-56 40-SMR1-C and 40-SMR2-C Card Line Settings (Continued)

Parameter	Description	Options
Channel Power Ref.	(Display only) Shows the optical per channel signal power setpoint that must be reached at the amplifier output when gain control is active.	—
Signal Output Power	(Display only) Shows the current output power leaving the amplifier, including the ASE contribution.	—
Output Power Set-Point	(Display only) Shows the output power setpoint.	—
Working Mode	(Display only) Shows the working mode, either Output Power or Control Gain.	—
DCU Insertion Loss	(Display only) Shows the DCU insertion loss.	—
Gain	(Display only) The current gain of the amplifiers.	—
Gain Set Point	(Display only) The value of the gain that the amplifier must achieve. APC can modify this value based on the number of OCHNC circuits that the amplifier manages, or to compensate for fiber aging insertion loss. For more information, see Chapter 13, “Network Reference.”	—
Tilt Reference	(Display only) Shows the default value for the amplifier tilt. Only ANS can modify this field.	—
Tilt Calibration	Allows you to manually change the amplifier tilt.	Numeric. Double-click the parameter, enter a value, and press Enter .

Step 4 Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Step 5 Return to your originating procedure (NTP).

DLP-G535 Change Optical Amplifier Threshold Settings for 40-SMR1-C and 40-SMR2-C Cards

Purpose	This task changes the optical channel threshold settings for the 40-SMR1-C and 40-SMR2-C cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

**Caution**

CTC does not monitor warning thresholds. They must be user-provisioned and monitored through custom alarm profiles.

- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the 40-SMR1-C or 40-SMR2-C card where you want to change the optical amplifier threshold settings.
- Step 2** Click the **Provisioning > Opt Ampli Line > Optics Thresholds** tabs.
- Step 3** If you want to change the warning thresholds, complete the following steps. If not, continue with [Step 4](#).
- Under Types, choose **Warning**.
 - Choose the warning interval that you want to provision, either **15 minutes** or **1 Day**.
 - Click **Refresh**.
 - Modify any of the warning thresholds shown under the Options column in [Table 21-57](#).
 - Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Table 21-57 40-SMR1-C and 40-SMR2-C Card Line Warning Threshold Settings

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction.	40-SMR1-C card options: 2 (EXP-TX) 40-SMR2-C card options: 8 (LINE-TX) 9 (EXP-TX 1-1)
opwrMin (dBm)	Sets the low power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is -50 dBm. Double-click the parameter, enter a value, and press Enter .
opwrMax (dBm)	Sets the high power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is 30 dBm. Double-click the parameter, enter a value, and press Enter .
opwrMin OSC (dBm)	Sets the OSC low power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is -50 dBm. Double-click the parameter, enter a value, and press Enter .
opwrMax OSC (dBm)	Sets the OSC high power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is 30 dBm. Double-click the parameter, enter a value, and press Enter .

- Step 4** If you want to change the alarm thresholds, complete the following steps. If not, continue with [Step 5](#).
- Under Types, choose **Alarm**.
 - Click **Refresh**.

- c. Modify any of the alarm thresholds shown under the Options column in [Table 21-58](#).
- d. Click **Apply**. If the change affects service, a warning message appears. Click **Yes** to complete the change.

Table 21-58 40-SMR1-C and 40-SMR2-C Card Line Alarm Thresholds Settings

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction.	40-SMR1-C card options: • 2 (EXP-TX) 40-SMR1-C card options: • 8 (LINE-TX) • 9 (EXP-TX 1-1)
Gain Degrade Low (dBm)	(Display only) Shows the current value of the gain degrade low threshold configured in the card. This threshold applies only when the amplifier is active and in constant gain mode. Gain Degrade Low refers to the Gain value of the port, which the TCC2/TCC2P/TCC3/TNC/TNCE/TSC/TSCE automatically calculates when the amplifier is turned up. The Gain Degrade Low threshold is automatically linked to the Gain Setpoint that is provisioned. Changing the setpoint changes the Gain Degrade Low threshold. The threshold value is always 2 dB lower than the Gain Setpoint value. APC can also modify this value based on the number of OCHNC circuits that the amplifier is managing.	—
Gain Degrade High (dBm)	(Display only) Shows the current value of the gain degrade high threshold configured in the card. This threshold applies only when the amplifier is active and in constant gain mode. Gain Degrade High refers to the Gain value of the port, which the TCC2/TCC2P/TCC3/TNC/TNCE/TSC/TSCE automatically calculates when the amplifier is turned up. The Gain Degrade High threshold is linked to the Gain setpoint. Changing the setpoint changes the Gain Degrade High threshold. The threshold value is always 2 dB higher than the Gain Setpoint value. APC can modify this value based on the number of OCHNC circuits that the amplifier is managing and to compensate for insertion loss due to fiber aging.	—

Table 21-58 40-SMR1-C and 40-SMR2-C Card Line Alarm Thresholds Settings (Continued)

Parameter	Description	Options
Power Failure Low (dBm)	Shows the optical power failure low threshold for the port. The threshold is calculated automatically when you run ANS. You can manually change the threshold. The value must be within the optical power range that is specified for the card. For more information, see the Hardware Specifications document.	Numeric. Double-click to change.

Table 21-58 40-SMR1-C and 40-SMR2-C Card Line Alarm Thresholds Settings (Continued)

Parameter	Description	Options
Power Degrade High (dBm)	(Display only) Shows the current value of the optical power degrade high threshold. This threshold applies only when the amplifier is active and in constant power mode. Power Degrade High refers to the Signal Output Power value of the port, which the TCC2/TCC2P/TCC3/TNC/TNCE/TSC/TSCE automatically calculates when the amplifier is turned up. The Power Degrade High threshold is linked to the Output Power Setpoint on the Parameters tab. Changing the setpoint changes the Power Degrade High threshold. The threshold value is always 2 dB higher than the output power setpoint value. APC can modify this value based on the number of OCHNC circuits that the amplifier is managing. For more information, see Chapter 13, “Network Reference.” Note In Control Power working mode, this parameter is applicable only on the EXP-TX port for the 40-SMR2-C card.	—
Power Degrade Low (dBm)	(Display only) Shows the current value of the optical power degrade low threshold configured in the card. This threshold applies only when the amplifier is active and in constant power mode. Power Degrade Low refers to the Signal Output Power value of the port, which the TCC2/TCC2P/TCC3/TNC/TNCE/TSC/TSCE automatically calculates when the amplifier is turned up. The Power Degrade Low threshold is automatically linked to the Output Power Setpoint on the Parameters tab. Changing the setpoint changes the Power Degrade Low threshold. The threshold value is always 2 dB lower than the output power setpoint. APC can modify this value based on the number of OCHNC circuits that the amplifier is managing. Note In Control Power working mode, this parameter is applicable only on the EXP-TX port for the 40-SMR2-C card.	—

Step 5 Return to your originating procedure (NTP).

DLP-G536 Change 40-SMR1-C and 40-SMR2-C Card Optical Channel Parameters

Purpose	This task changes the optical channel parameter settings for the 40-SMR1-C and 40-SMR2-C cards.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the 40-SMR1-C or 40-SMR2-C card where you want to change the optical channel parameter settings.
- Step 2** Click the **Provisioning > OCH > Parameters** tab.
- Step 3** From the Wavelength drop-down list, choose a wavelength and click **Retrieve** to retrieve the OCH parameters.
- Step 4** Modify any of the settings described in [Table 21-59](#). The provisionable parameters are listed in the Options column in the table. In the Options column, the SONET (ANSI) option is followed by the SDH (ETSI) option.

Table 21-59 40-SMR1-C or 40-SMR2-C Card Optical Channel Parameter Settings

Parameter	Description	Options
Admin State	Sets the port administrative state unless network conditions prevent the change. For more information about administrative states, see the Administrative and Service States document.	From the drop-down list, choose one of the following: - IS,AINS/Unlocked,automaticInService - OOS,DSBLD/Locked,disabled - OOS,MT/Locked,maintenance Note You cannot set the OOS,MT/Locked,maintenance administrative state, and hence the OOS-MA,MT/Locked-enabled, maintenance service state is not applicable.
Service State	(Display only) Identifies the autonomously generated state that gives the overall condition of the port. Service states appear in the format: Primary State-Primary State Qualifier, Secondary State. For more information about service states, see the Administrative and Service States document.	- IS-NR/Unlocked-enabled - OOS-AU,AINS/Unlocked-disabled, automaticInService - OOS-MA,DSBLD/Locked-enabled, disabled - OOS-MA,MT/Locked-enabled, maintenance Note You cannot set the OOS,MT/Locked,maintenance administrative state, and hence the OOS-MA,MT/Locked-enabled, maintenance service state is not applicable.
Power	(Display only) Power value read by the photodiode located after the VOA associated to the port, and calibrated to the port. For more information, see the Hardware Specifications document.	Numeric value (dB).
Circuit Name	(Display only) Shows the circuit name. This is provisioned in the Circuits tab.	—
From	(Display only) The port where the circuit originated.	—
To	(Display only) The port where the circuit terminated.	—
Power From	Power on the From port where the circuit originated.	—
Power To	Power on the To port where the circuit terminated.	—

Table 21-59 40-SMR1-C or 40-SMR2-C Card Optical Channel Parameter Settings (Continued)

Parameter	Description	Options
Force Channel	Allows you to move the VOA from Open to Closed loop to start the channel. You can force a channel only when the Force Channel Status is in the Unlocked state.	From the drop-down list, choose one of the following: • OFF • ON
VOA Power Ref.	(Display only) Shows the value of the optical power setpoint that must be reached on the path where a VOA is present, when VOA Mode is set to Constant Power. This value is the desired per channel optical power. Only ANS can modify this field.	Numeric value (dB).
VOA Power Calib.	Allows you to modify the VOA power value when VOA Mode is Constant Power.	Double-click the parameter, enter a value, and press Enter . • Numeric value (dB) • -25 dB to +12 dB
Force Channel Status	(Display only) Displays the channel status. The different statuses are: • Unlocked—Can force channel startup • Locked—Cannot force channel startup as the device is under control of other functions like optical safety • Forced—Channel startup has already been forced	—

Step 5 Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Step 6 Return to your originating procedure (NTP).

DLP-G537 Change the 40-SMR1-C and 40-SMR2-C Optical Channel Thresholds

Purpose This task changes the optical channel threshold settings for the 40-SMR1-C and 40-SMR2-C cards.

Tools/Equipment None

Prerequisite Procedures [DLP-G46 Log into CTC](#)

Required/As Needed As needed

Onsite/Remote Onsite or remote

Security Level Provisioning or higher

**Caution**

CTC does not monitor warning thresholds. They must be user-provisioned and monitored through custom alarm profiles.

- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the 40-SMR1-C or 40-SMR2-C card where you want to change the optical channel threshold settings.
- Step 2** Click the **Provisioning > OCH > OCH Thresholds** tab.
- Step 3** If you want to change the warning thresholds, complete the following steps. If not, continue with [c..](#)
- a. Under Types, choose **Warning**.
 - b. Choose the warning interval that you want to provision, either **15 minutes** or **1 Day**.
 - c. Choose a wavelength from the Wavelength drop-down list.
 - d. In the Port drop-down list, choose an OCH port where you want to change the optical channel threshold settings:

For the 40-SMR1-C card, the following ports are available to view:

 - 1 (EXP-RX)
 - 2 (EXP-TX)
 - 7 (ADD-RX)
 - 8 (DROP-TX)
 - 10 (LINE-TX)

For the 40-SMR2-C card, the following ports are available to view:

 - 5 (ADD-RX)
 - 6 (DROP-TX)
 - 8 (LINE-TX)
 - 9 (EXP-TX 1-1)
 - 10 (EXP-RX 1-2)
 - 11 (EXP-RX 1-3)
 - 12 (EXP-RX 1-4)
 - e. Click **Retrieve**. Modify any of the warning thresholds shown under the Options column in [Table 21-60](#).

Table 21-60 40-SMR1-C or 40-SMR2-C Card Optical Channel Warning Threshold Settings

Parameter	Description	Options
Circuit Name	(Display only) Shows the circuit name. This is provisioned in the Circuits tab.	—
Port Name	(Display only) Shows the port name.	—
Actual Wavelength	(Display only) Displays the actual wavelength that the channel utilizes.	—

Table 21-60 40-SMR1-C or 40-SMR2-C Card Optical Channel Warning Threshold Settings

Parameter	Description	Options
opwrMin (dBm)	Set the low power warning level.	Numeric. Can be set for 15-minute or one-day intervals. Double-click the parameter, enter a value, and press Enter .
opwrMax (dBm)	Set the high power warning level.	Numeric. Can be set for 15-minute or one-day intervals. Double-click the parameter, enter a value, and press Enter .

- f. Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Step 4 If you want to change the alarm thresholds, complete the following steps. If not, continue with [Step 5](#).

- a. Under Types, choose **Alarm**.
- b. Choose a wavelength from the Wavelength drop-down list.
- c. In the Port drop-down list, choose an OCH port where you want to change the optical channel threshold settings.
- d. Click **Retrieve**. Modify any of the alarm thresholds shown under the Options column in [Table 21-61](#).

Table 21-61 40-SMR1-C or 40-SMR2-C Card Optical Channel Alarm Threshold Settings

Parameter	Description	Options
Circuit Name	(Display only) Shows the circuit name. This is provisioned in the Circuits tab.	—
Port Name	(Display only) Shows the port name.	—
Actual Wavelength	(Display only) Displays the actual wavelength utilized by the channel.	—
Power Failure Low (dBm)	Shows the power failure low threshold. This power value applies to the corresponding port and is automatically calculated when ANS is run. This threshold applies to a port associated to a VOA (OSC-VOA) that is always active in Constant Power mode. The threshold is automatically linked to the Power Setpoint (VOA Power Ref + VOA Power Calib) that is provisioned. Changing the setpoint results in changing the threshold (always 5 dB lower). For more information, see the Hardware Specifications document.	—

Table 21-61 40-SMR1-C or 40-SMR2-C Card Optical Channel Alarm Threshold Settings (Continued)

Parameter	Description	Options
Power Degrade High (dBm)	(Display only) Shows the power degrade high threshold. This power value applies to the corresponding port and is automatically calculated when ANS is run. This threshold applies to a port associated to a VOA (OSC-VOA) that is always active in Constant Power mode. The threshold is automatically linked to the Power Setpoint (VOA Power Ref + VOA Power Calib) that is provisioned. Changing the setpoint results in changing the threshold (always 3 dB higher). Note This threshold applies only to certain ports depending on the working mode you have set.	—
Power Degrade Low (dBm)	(Display only) Shows the power degrade low threshold. This power value applies to the corresponding port and is automatically calculated when ANS is run. This threshold applies to a port associated to a VOA (OSC-VOA) that is always active in Constant Power mode. The threshold is automatically linked to the Power Setpoint (VOA Power Ref + VOA Power Calib) that is provisioned. Changing the setpoint results in changing the threshold (always 2 dB lower). Note This threshold applies only to certain ports depending on the working mode you have set.	Numeric

- e. Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Step 5 Return to your originating procedure (NTP).

NTP-G149 Modify the MMU Line Settings and PM Thresholds

Purpose	This procedure changes the MMU card thresholds and settings.
Tools/Equipment	None
Prerequisite Procedures	NTP-G30 Install the DWDM Cards, page 14-64
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** Complete the [DLP-G46 Log into CTC](#) task at the node where you want to change the MMU card settings. If you are already logged in, continue with Step 2.
- Step 2** Complete the “[NTP-G103 Back Up the Database](#)” procedure on page 24-2.
- Step 3** Perform any of the following tasks as needed:



Note To use the alarm profile tab, including creating alarm profiles and suppressing alarms, see [Alarm and TCA Monitoring and Management](#)

- [DLP-G342 Change MMU Optical Line Parameters, page 21-116](#)
- [DLP-G343 Change the MMU Optical Line Thresholds, page 21-118](#)

- Step 4** Complete the “[NTP-G103 Back Up the Database](#)” procedure on page 24-2.
- Stop. You have completed this procedure.**
-

DLP-G342 Change MMU Optical Line Parameters

Purpose	This task changes the optical line parameter settings for the MMU card.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

-
- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the MMU card where you want to change the optical line parameter settings.
- Step 2** Click the **Provisioning > Optical Line > Parameters** tabs.
- Step 3** Modify any of the settings described in [Table 21-62](#). The provisionable parameters are listed in the Options column in the table. In the Options column, the SONET (ANSI) option is followed by the SDH (ETSI) option.

Table 21-62 MMU Optical Line Parameter Settings

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction (RX or TX): • 1 (EXP-RX) • 2 (EXP-TX) • 3 (COM-RX) • 4 (COM-TX) • 5 (EXP A-RX) • 6 (EXP A-TX)	—
Port Name	Allows you to assign a logical name for each of the ports shown.	User-defined. Name can be up to 32 alphanumeric/special characters. Blank by default. Double-click, enter the name, and press Enter . See the “ DLP-G104 Assign a Name to a Port ” task on page 17-16.
Admin State	Sets the port administrative state unless network conditions prevent the change. For more information about administrative states, see the Administrative and Service States document.	From the drop-down list, choose one of the following: • IS,AINS/Unlocked,automaticInService • OOS,DSBLD/Locked,disabled • OOS,MT/Locked,maintenance
Service State	(Display only) Identifies the autonomously generated state that gives the overall condition of the port. Service states appear in the format: Primary State-Primary State Qualifier, Secondary State. For more information about service states, see the Administrative and Service States document.	• IS-NR/Unlocked-enabled • OOS-AU,AINS/Unlocked-disabled, automaticInService • OOS-MA,DSBLD/Locked-enabled,disabled • OOS-MA,MT/Locked-enabled,maintenance
Power	(Display only) Power value read by the photodiode associated with the port.	Numeric value (dB)
AINS Soak	(Display only) The automatic in-service soak period. It is always 00.00.	—
Actual Channels	Number of active channels carried by the port (the difference between provisioned and failed)	—

Step 4 Return to your originating procedure (NTP).

DLP-G343 Change the MMU Optical Line Thresholds

Purpose	This task changes the MMU card optical line threshold settings.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher


Caution

Warning thresholds are not monitored by CTC. They must be user-provisioned and monitored through custom alarm profiles.

- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the MMU card where you want to change the optical line threshold settings.
- Step 2** Click the **Provisioning > Optical Line > Optics Thresholds** tabs.
- Step 3** If you want to change the warning thresholds, complete the following steps. If not, continue with [Step 4](#).
- Under Types, choose **Warning**.
 - Choose the warning interval that you want to provision, either **15 minutes** or **1 Day**.
 - Click **Refresh**.
 - Modify any of the warning thresholds shown under the Options column in [Table 21-63](#).
 - Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Table 21-63 MMU Optical Line Warning Threshold Settings

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction (RX or TX):	1 (EXP-RX) 2 (EXP-TX) 3 (COM-RX) 4 (COM-TX) 5 (EXP A-RX) 6 (EXP A-TX)
opwrMin (dBm)	Set the low power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is -50 dBm.
opwrMax (dBm)	Set the high power warning level.	Numeric. Can be set for 15-minute or one-day intervals. The default is 30 dBm.

- Step 4** If you want to change the alarm thresholds, complete the following steps. If not, continue with [Step 5](#).
- Under Types, choose **Alarm**.
 - Click **Refresh**.

- c. Modify any of the alarm thresholds shown under the Options column in [Table 21-64](#).
- d. Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.

Table 21-64 MMU Optical Line Alarm Threshold Settings

Parameter	Description	Options
Port	(Display only) Displays the port number, port type, and direction (RX or TX).	• 1 (EXP-RX) • 2 (EXP-TX) • 3 (COM-RX) • 4 (COM-TX) • 5 (EXP A-RX) • 6 (EXP A-TX)
Power Failure Low (dBm)	Shows the power failure low threshold. This power value applies to the corresponding port and is automatically calculated when ANS is run. You can manually change the threshold. The value must be within the optical power range that is specified for the card. For more information, see the Hardware Specifications document.	Numeric. Double-click the parameters, enter a value, and press Enter .

Step 5 Return to your originating procedure (NTP).

NTP-G101 Modify Alarm Interface Controller–International Settings

Purpose	This procedure provisions the AIC-I card to receive input from or send output to external devices wired to the backplane (called external alarms and controls or environmental alarms), or changes orderwire settings.
Tools/Equipment	None
Prerequisite Procedures	NTP-G72 Provision External Alarms and Controls on the Alarm Interface Controller-International Card DLP-G109 Provision Orderwire, page 17-77
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 Complete the [DLP-G46 Log into CTC](#) task at the node where you want to change the AIC-I card settings. If you are already logged in, proceed to [Step 2](#).

- Step 2** Complete the “[NTP-G103 Back Up the Database](#)” procedure on page 24-2.
- Step 3** Perform any of the following tasks as needed:
- [DLP-G245 Change External Alarms Using the AIC-I Card](#), page 21-120
 - [DLP-G246 Change External Controls Using the AIC-I Card](#), page 21-121
 - [DLP-G247 Change AIC-I Card Orderwire Settings](#), page 21-121
- Step 4** Complete the “[NTP-G103 Back Up the Database](#)” procedure on page 24-2.
- Stop. You have completed this procedure.**
-

DLP-G245 Change External Alarms Using the AIC-I Card

Purpose	This task changes external alarm settings on the AIC-I card.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher



Note The procedure is the same if you are using the alarm expansion panel (AEP). In this case, the number of contacts that are shown on the screen is changed accordingly.

- Step 1** Confirm that external-device relays are wired to the ENVIR ALARMS IN pins. See the “DLP-G20 Install Alarm Wires on the MIC-A/P (ETSI Only)” or the “DLP-G23 Install Alarm Wires on the Backplane (ANSI Only)” in the [Cisco ONS 15454 Hardware Installation Guide](#) for more information.
- Step 2** Double-click the AIC-I card to display it in card view.
- Step 3** Click the **Provisioning > External Alarms** tabs.
- Step 4** Modify any of the following fields for each external device wired to the ONS 15454 backplane. For definitions of these fields, see [NTP-G72 Provision External Alarms and Controls on the Alarm Interface Controller-International Card](#).
- Enabled
 - Alarm Type
 - Severity
 - Virtual Wire
 - Raised When
 - Description
- Step 5** Click **Apply**.
- Step 6** Return to your originating procedure (NTP).
-

DLP-G246 Change External Controls Using the AIC-I Card

Purpose	This task changes external control settings on the AIC-I card.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher


Note

The task is the same if you are using the AEP. In this case, the number of contacts that are shown on the screen is changed accordingly.

-
- Step 1** Verify the external control relays to the ENVIR ALARMS OUT backplane pins. See the “DLP-G20 Install Alarm Wires on the MIC-A/P (ETSI Only)” or the “DLP-G23 Install Alarm Wires on the Backplane (ANSI Only)” in the [Cisco ONS 15454 Hardware Installation Guide](#).
- Step 2** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the AIC-I card to display it in card view.
- Step 3** Click the **Provisioning > External Controls** tabs.
- Step 4** Modify any of the following fields for each external control wired to the ONS 15454 backplane. For definitions of these fields, see the [NTP-G72 Provision External Alarms and Controls on the Alarm Interface Controller-International Card](#).
- Enabled
 - Trigger Type
 - Control Type
 - Description
- Step 5** Click **Apply**.
- Step 6** Return to your originating procedure (NTP).
-

DLP-G247 Change AIC-I Card Orderwire Settings

Purpose	This task changes orderwire settings on the AIC-I card.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

**Caution**

When provisioning orderwire for ONS 15454s residing in a ring, do not provision a complete orderwire loop. For example, a four-node ring typically has Side B and Side A ports provisioned at all four nodes. However, to prevent orderwire loops, provision two orderwire ports (Side B and Side A) at all but one of the ring nodes.

**Tip**

Before you begin, make a list of the ONS 15454 slots and ports that require orderwire communication.

- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the AIC-I card to display it in card view.
- Step 2** Click the **Provisioning > Local Orderwire** tabs or the **Provisioning > Express Orderwire** tabs, depending on the orderwire path that you want to change. Provisioning steps are the same for both types of orderwire.
- Step 3** If needed, adjust the transmit (Tx) and receive (Rx) dBm values by moving the slider to the right or left for the headset type (four-wire or two-wire) that you will use. In general, you should not need to adjust the dBm values.
- Step 4** If you want to turn on the audible alert (buzzer) for the orderwire, check the **Buzzer On** check box.
- Step 5** Click **Apply**.
- Step 6** Return to your originating procedure (NTP).

NTP-G102 Change Card Service State

Purpose	This procedure changes a card service state.
Tools/Equipment	None
Prerequisite Procedures	NTP-G30 Install the DWDM Cards, page 14-64 or NTP-G179 Install the TXP, MXP, GE_XP, 10GE_XP, GE_XPE, 10GE_XPE, ADM-10G, and OTU2_XP Cards, page 14-69
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** Complete the [DLP-G46 Log into CTC](#) task at the node where you want to change the card service state.
- Step 2** In node view (single-shelf mode) or multishelf view (multishelf mode), click the **Inventory** tab.
- Step 3** Click the cell in the Admin State column for the card you want to change, and choose an administrative state from the drop-down list:
- **IS (ANSI)** or **Unlocked (ETSI)**
 - **OOS,MT (ANSI)** or **Locked-enabled (ETSI)**
- Step 4** Click **Apply**.

Step 5 If an error message appears indicating that the card state cannot be changed from its current state, click **OK**.

For information about the card state transitions, see the [Administrative and Service States](#) document.

Stop. You have completed this procedure.

NTP-G280 Modify Threshold Settings for the TNC and TNCE Cards

Purpose	This procedure changes the optical and line threshold settings for the TNC and TNCE cards on the Cisco ONS 15454 M2 and the Cisco ONS 15454 M6 shelves.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC “DLP-G605 Provision PPM and Port for the TNC and TNCE cards” in the Cisco ONS 15454 Hardware Installation Guide .
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

Step 1 Complete the [DLP-G46 Log into CTC](#) task at the node where you want to modify the threshold settings.

Step 2 Perform any of the following tasks as needed:

- “DLP-G609 Modify Optical Threshold Settings for the TNC and TNCE Cards” task on page 21-123
- “DLP-G610 Modify Line Threshold Settings for the TNC and TNCE cards” task on page 21-125

Stop. You have completed this procedure.

DLP-G609 Modify Optical Threshold Settings for the TNC and TNCE Cards

Purpose	This task changes the optical threshold settings for the TNC and TNCE cards on the ONS 15454 M2 and the ONS 15454 M6 shelves.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC “DLP-G605 Provision PPM and Port for the TNC and TNCE Cards” in the Cisco ONS 15454 Hardware Installation Guide .
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the TNC and TNCE cards where you want to change the optical threshold settings.
- Step 2** Click the **Provisioning > Optics Thresholds** tabs.
- Step 3** Under Types, choose the type of threshold that you want to change, either **TCA** or **Alarm**.
- Step 4** Click **Refresh**.
- Step 5** Modify any of the threshold settings as needed by double-clicking the threshold value, deleting it, entering a new value, and hitting Enter. [Table 21-65](#) shows the thresholds for warnings and alarms.

**Note**

You can modify the optics thresholds either for 15 minutes or 1 day. To do so, choose the appropriate radio button and click Refresh. 15 minutes and 1 day interval are not applicable for alarm thresholds.

Table 21-65 *TNC and TNCE cards Optical Warning and Alarms Thresholds Settings*

Parameter	Description	Options
Port	(Display only) Displays the port number and port type.	<i>port number</i> (OC3) <i>port number</i> (FE) <i>port number</i> (ONE-GE)
Laser Bias High (%)	Sets the maximum laser bias.	Numeric. Can be set for 15-minute or one-day intervals. Double-click the parameter, enter a value, and press Enter .
RX Power High (dBm)	Sets the maximum optical power received.	Numeric. Can be set for 15-minute or one-day intervals. Double-click the parameter, enter a value, and press Enter .
RX Power Low (dBm)	Sets the minimum optical power received.	Numeric. Can be set for 15-minute or one-day intervals. Double-click the parameter, enter a value, and press Enter .
TX Power High (dBm)	Sets the maximum optical power transmitted.	Numeric. Can be set for 15-minute or one-day intervals. Double-click the parameter, enter a value, and press Enter .
TX Power Low (dBm)	Sets the minimum optical power transmitted.	Numeric. Can be set for 15-minute or one-day intervals. Double-click the parameter, enter a value, and press Enter .

- Step 6** Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.
- Step 7** Return to your originating procedure (NTP).

DLP-G610 Modify Line Threshold Settings for the TNC and TNCE cards

Purpose	This task changes the line threshold settings for the TNC and TNCE cards on the ONS 15454 M2 and the ONS 15454 M6 shelves.
Tools/Equipment	None
Prerequisite Procedures	DLP-G46 Log into CTC “DLP-G605 Provision PPM and Port for the TNC and TNCE cards” in the Cisco ONS 15454 Hardware Installation Guide .
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

- Step 1** In node view (single-shelf mode) or shelf view (multishelf mode), double-click the TNC and TNCE cards where you want to change the line threshold settings.
- Step 2** Click the **Provisioning > Line** tabs.
- Step 3** Modify any of the threshold settings as described in the following tables. These settings are found in Ports, OC3 Line, and SONET Thresholds subtabs.

Table 21-66 TNC and TNCE cards Line Threshold Settings (Ports tab)

Parameter	Description	Options
Port	(Display only) Displays the port number and port type.	- port number (OC3) - port number (FE) - port number (ONE-GE)
Port Name	Provides the ability to assign the specified port a name.	User-defined. Name can be up to 32 alphanumeric/special characters. Blank by default. See the “ DLP-G104 Assign a Name to a Port ” task on page 17-16.
Admin State	(Display only) Displays the port administrative state. For more information about administrative states, see the Administrative and Service States document.	- IS (ANSI) or Unlocked (ETSI)—Puts the port in service. The port service state changes to IS-NR (ANSI) or Unlocked-enabled (ETSI). - IS,AINS (ANSI) or Unlocked,automaticInService (ETSI)—Puts the port in automatic in-service. The port service state changes to OOS-AU,AINS (ANSI) or Unlocked-disabled,automaticInService (ETSI).

Table 21-66 TNC and TNCE cards Line Threshold Settings (Continued) (Ports tab)

Parameter	Description	Options
Service State	(Display only) Identifies the autonomously generated state that displays the overall condition of the port. Service states appear in these formats: Primary State-Primary State Qualifier, Secondary State. For more information about service states, see the Administrative and Service States document.	- IS-NR (In-Service and Normal [ANSI]) or Unlocked-enabled (ETSI)—The port is fully operational and is performing as provisioned. - OOS-AU,AINS (Out-Of-Service and Autonomous, Automatic In-Service [ANSI]) or Unlocked-disabled,automaticInService (ETSI)—The port is out of service, but traffic is carried. Alarm reporting is suppressed. The ONS node monitors the ports for an error-free signal. After an error-free signal is detected, the port stays in the OOS-AU,AINS/Unlocked-disabled,automaticInService state for the duration of the soak period. After the soak period ends, the port service state changes to IS-NR/Unlocked-enabled.
Reach	Indicates the distance from one node to another node	From the drop-down list, choose one of the following: - Auto Provision - LX - SX - CX - T - DX - HX - ZX - VX - CWDM - DWDM - LR 2 (SONET) - L2 (SDH) - ULH (SDH and SONET)

Table 21-67 TNC and TNCE cards Line Threshold Settings (OC3 Line tab)**Table 21-1**

Parameter	Description	Options
SF BER	Sets the signal fail bit error rate.	From the drop-down list, choose one of the following: • 1E-3 • 1E-4 • 1E-5
SD BER	Sets the signal degrade bit error rate.	From the drop-down list, choose one of the following: • 1E-5 • 1E-6 • 1E-7 • 1E-8 • 1E-9
ProvidesSync	(Display only) If checked, the card is provisioned as a network element (NE) timing reference.	• Checked • Unchecked
SyncMsgIn	Enables synchronization status messages (SSM) on the S1 byte, which allow the node to choose the best timing source.	• Checked • Unchecked
SendDoNotUse	When checked, sends a “Do Not Use for Synchronization (DUS)” message on the S1 byte.	• Checked • Unchecked
PJSTSMon#	(Display only) Sets the STS that will be used for pointer justification.	This parameter is set to 0. It cannot be changed.
AINS Soak	(Display only) The automatic in-service soak period. It is always 00.00.	—
Type	Defines the port as SONET or SDH. The ProvidesSync Msg field and the Send Do Not Use field must be disabled before the port can be set to SDH.	From the drop-down list, choose one of the following: • SONET • SDH

Table 21-68 TNC and TNCE cards Line Threshold Settings (SONET)**Table 21-2**

Parameter	Description	Options
CV	Coding violations	Numeric. Can be set for 15-minute or one-day intervals for Line or Section (Near and Far End).
ES	Errored seconds	Numeric. Can be set for 15-minute or one-day intervals for Line or Section (Near and Far End).

Table 21-2

Parameter	Description	Options
SES	Severely errored seconds	Numeric. Can be set for 15-minute or one-day intervals for Line or Section (Near and Far End).
SEFS	Severely errored framing seconds (Section only)	Numeric. Can be set for 15-minute or one-day intervals for Section (Near and Far End).
FC	Failure count (Line only)	Numeric. Can be set for 15-minute or one-day intervals for Line (Near and Far End).
UAS	Unavailable seconds (Line only)	Numeric. Can be set for 15-minute or one-day intervals for Line (Near and Far End).

Table 21-69 TNC and TNCE cards Line Threshold Settings (SDH)

Table 21-3

Parameter	Description	Options
RS-OFS	Out of frame seconds	Numeric. Can be set for 15-minute or one-day intervals for Section (Near and Far End).
EB	Errored block	Numeric. Can be set for 15-minute or one-day intervals for MS (Multiplex Section) or RS (Regeneration Section) (Near and Far End). Select the bullet and click Refresh .
ES	Errored seconds	Numeric. Can be set for 15-minute or one-day intervals for MS or RS (Near and Far End). Select the bullet and click Refresh .
SES	Severely errored seconds	Numeric. Can be set for 15-minute or one-day intervals for MS or RS (Near and Far End). Select the bullet and click Refresh .
BBE	Background block error	Numeric. Can be set for 15-minute or one-day intervals for MS or RS (Near and Far End). Select the bullet and click Refresh .
OFS	Out of frame seconds	Numeric. Can be set for 15-minute or one-day intervals for RS, Near End. Select the bullet and click Refresh .

**Note**

Far end is not applicable for optics thresholds and Regenerator Section STM1 thresholds (or section thresholds in OC3).

- Step 4** Click **Apply**. If the change affects traffic, a warning message appears. Click **Yes** to complete the change.
- Step 5** Return to your originating procedure (NTP).

