



CHAPTER 9

DISC Commands

This chapter provides disconnect (DISC) commands for the Cisco ONS 15454, Cisco ONS 15454 M2, and Cisco ONS 15454 M6.



Note

All commands supported on the Cisco ONS 15454 platform are also supported on Cisco ONS 15454 M2 and Cisco ONS 15454 M6 platforms.

9.1 DISC-TACC

(Cisco ONS 15454) The Disconnect Test Access (DISC-TACC) command disconnects the test access point (TAP) and puts the connection back to its original state (no splits). For more information on test access (TACC), refer to the *Cisco ONS 15454 SONET TL1 Reference Guide*.

Usage Guidelines

For this command to be applicable, you must first create the TAP using the ED-<MOD_PATH> command.



Note

If you send this command to an already disconnected TAP connection, an SADC error message is returned.



Note

If the system cannot release TAP, an SRTN error message is returned.

Category

Troubleshooting and Test Access

Security

Maintenance

Input Format

DISC-TACC:[<TID>]:<TAP>:<CTAG>;

Input Example DISC-TACC:CISCO:8:123;

Input Parameters	<TAP>	The test access point number. The TAP number must be an integer with a range of 1 to 999. String
	Note	This command only supports disconnecting one TAP at a time.
