



ALW Commands

This chapter provides allow (ALW) commands for the Cisco ONS 15454, Cisco ONS 15454 M2, and Cisco ONS 15454 M6.



Note

All commands supported on the Cisco ONS 15454 platform are also supported on Cisco ONS 15454 M2 and Cisco ONS 15454 M6 platforms.

2.1 ALW-CONSOLE-PORT

(Cisco ONS 15454) The Allow Console Port (ALW-CONSOLE-PORT) command is used to turn on the console port for the ML1000-2, ML100T-12 and ML-100T-8 cards.

Usage Guidelines	None.		
Category	Security		
Security	Superuser		
Input Format	ALW-CONSOLE-PORT:[<TID>]:<AID>:<CTAG>;		
Input Example	ALW-CONSOLE-PORT:CISCONODE:SLOT-2:123;		
Input Parameters	<table><tr><td><AID></td><td>Access identifier. Values are in the “26.15 EQPT” section on page 26-39.</td></tr></table>	<AID>	Access identifier. Values are in the “26.15 EQPT” section on page 26-39 .
<AID>	Access identifier. Values are in the “26.15 EQPT” section on page 26-39 .		

2.2 ALW-MSG-ALL

(Cisco ONS 15454, ONS 15454 M2, and ONS 15454 M6) The Allow Message All (ALW-MSG-ALL) command instructs the NE to enter a mode where all the REPT ALM and REPT EVT autonomous messages are transmitted. Use the INH-MSG-ALL command to inhibit these autonomous messages. When a TL1 session starts, the REPT ALM and REPT EVT messages are allowed by default.

Usage Guidelines	If this command is issued twice in the same session, the SAAL (Status, Already Allowed) error message will be returned. The optional fields in the block are not supported.	
Category	System	
Security	Retrieve	
Input Format	ALW-MSG-ALL:[<TID>]:[<AID>]:<CTAG>[:.,,];	
Input Example	ALW-MSG-ALL:PETALUMA:ALL:549;	
Input Parameters	<AID>	Access identifier. Support is limited to the AID ALL. AID is a string.

2.3 ALW-MSG-DBCHG

(Cisco ONS 15454, ONS 15454 M2, and ONS 15454 M6) The Allow Database Change Message (ALW-MSG-DBCHG) command enables REPT DBCHG. When a TL1 session starts, the REPT DBCHG messages are not allowed by default.



Note This command is not defined in the GR.

Usage Guidelines	None.	
Category	Log	
Security	Retrieve	

Input Format ALW-MSG-DBCHG:[<TID>]::<CTAG>[:,,];

Input Example ALW-MSG-DBCHG:CISCO::123;

Input Parameters None.

2.4 ALW-MSG-SECU

(Cisco ONS 15454, ONS 15454 M2, and ONS 15454 M6) The Allow Message Security (ALW-MSG-SECU) command enables the REPT EVT SECU and REPT ALM SECU autonomous messages.

Usage Guidelines None.

Category Security

Security Superuser

Input Format ALW-MSG-SECU:[<TID>]::<CTAG>[:,,];

Input Example ALW-MSG-SECU:PETALUMA::123;

Input Parameters None.

2.5 ALW-PMREPT-ALL

(Cisco ONS 15454, ONS 15454 M2, and ONS 15454 M6) The Allow Performance Report All (ALW-PMREPT-ALL) command resumes the processing of all the PM reports that are inhibited. The allowance of the PM reporting is session-based, which means the command is only effective to the TL1 session that issues this command.

Usage Guidelines None.

Category Performance

Security	Retrieve
Input Format	ALW-PMREPT-ALL:[<TID>]::<CTAG>;
Input Example	ALW-PMREPT-ALL:CISCONODE::123;
Input Parameters	None

2.6 ALW-SWDX-EQPT

(Cisco ONS 15454) The Allow Switch Duplex Equipment (ALW-SWDX-EQPT) command allows automatic or manual switching on a duplex system containing duplexed or redundant equipment. To inhibit an NE from switching to duplex, use the INH-SWDX-EQPT command.

Usage Guidelines	ALW-SWDX-EQPT is not used for SONET line or electrical card protection switching. For SONET line or path protection switching commands, see the OPR-PROTNSW and RLS-PROTNSW commands. For electrical card protection switching, see the SW-TOWKG-EQPT and SW-TOPROTN-EQPT commands.
------------------	---



Note

This command applies to the XCVT, XC10G, and XC-VXC-10G equipment units only in this release.

Category	Equipment
Security	Maintenance

Input Format	ALW-SWDX-EQPT:[<TID>]:<AID>:<CTAG>[::];
Input Example	ALW-SWDX-EQPT:CISCO:SLOT-8:1234;

Input Parameters	AID	Access identifier for the XCVT, XC10G, or XC-VXC-10G card from the “26.15 EQPT” section on page 26-39.
------------------	-----	--

2.7 ALW-SWTOPROTN-EQPT

(Cisco ONS 15454) The Allow Switch to Protection Equipment (ALW-SWTOPROTN-EQPT) command allows automatic or manual switching of an equipment unit back to a protection status. Use the INH-SWTOPROTN-EQPT command to inhibit an NE from switching to protection.

Usage Guidelines

ALW-SWTOPROTN-EQPT is used for electrical line cards, for example, DS-1, DS-3, DS3XM, and EC-1. DS-1, DS-3, and DS3XM cards have 1:1 and 1:N equipment protection. EC-1 cards have only 1:1 equipment protection. When this command is given to a working unit, the working unit will be allowed to switch to the protection unit. When this command is given to a protection unit, any working unit in the protection group is allowed to switch to the protection unit.

The standing condition of INHSWPR on the unit specified by the AID will be cleared.



Note

- This command only supports only the BTH value of the <DIRN> parameter. A command with any other value is considered an incorrect use of the command. An IDNV (Input, Data Not Valid) error message is returned.
- This command is not used for the common control cards (TCC2/TCC2P/ TCC3, XCVT, XC10G, and XC-VXC-10G). A command on a common control card will receive an IIAC (Input, Invalid Access Identifier) error message. To use the common control card switching commands, use the SW-DX-EQPT and ALW-SWDX-EQPT commands.
- This command is not used for OC-N cards. A command on a SONET card will receive an IIAC (Input, Invalid Access identifier) error message. To use a SONET card switching command, use the OPR-PROTNSW and RLS-PROTNSW commands.
- If this command is used on a card that is not in a protection group, the SNVS (Status, Not in Valid State) error message is returned.
- If this command is used on a card that is not in the inhibit state, the SAAL (Status, Already Allowed) error message is returned.
- As long as none of the previous error conditions apply, you are allowed to send this command to cards that have been uninstalled. This will not generate any error response.

Category

Equipment

Security

Maintenance

Input Format

ALW-SWTOPROTN-EQPT:[<TID>]:<AID>:<CTAG>[:<DIRN>];

Input Example

ALW-SWTOPROTN-EQPT:CISCO:SLOT-2:123::BTH;

Input Parameters

<AID>	Access identifier. This parameter can either be the protection unit for which carrying traffic will be allowed (release of lockout) or the working unit for which switching to protect will be allowed (release of lock-on). Values are in the “26.15 EQPT” section on page 26-39.
<DIRN>	Optional. The switching direction relative to the entity defined in the AID field. This command only supports the BTH value of the DIRN parameter. Defaults to BTH. The parameter type is DIRECTION—transmit and receive directions.
• BTH	Both transmit and receive directions.

2.8 ALW-SWTOWKG-EQPT

(Cisco ONS 15454) The Allow Switch to Working Equipment (ALW-SWTOWKG-EQPT) command allows automatic or manual switching of an equipment unit back to a working status. Use the INH-SWTOWKG-EQPT command to inhibit an NE from switching to working.

Usage Guidelines

ALW-SWTOWKG-EQPT is used for electrical line cards, for example, DS-1, DS-3, DS3XM, and EC-1. DS-1, DS-3 and DS3XM cards have 1:1 and 1:N equipment protection. EC-1 cards have only 1:1 equipment protection.

When this command is given to a working unit, the working unit will be allowed to carry traffic. In the case of revertive protection, the traffic will switch immediately from the protection unit to the working unit regardless of the reversion time setting.

When this command is given to a protection unit, the protection unit will be allowed to switch back to the working unit currently protected as long as the working unit has not raised INHSWWKG. In the case of revertive protection, the traffic will switch immediately from the protection unit to the working unit regardless of the reversion time setting. In the case of nonrevertive protection, the protection unit will continue to carry the traffic.

The standing condition of INHSWWKG on the unit specified by the AID will be cleared.

**Note**

- This command only supports the BTH value of the <DIRN> parameter. A command with any other value is an incorrect use of the command. An IDNV (Input, Data Not Valid) error message is returned.
- This command is not used for the common control cards (TCC2/TCC2P/TCC3, XCVT, XC10G, and XC-VXC-10G). A command on a common control card will receive an IIAC (Input, Invalid Access Identifier) error message. To use the common control card switching commands, use the SW-DX-EQPT and ALW-SWDX-EQPT commands.
- This command is not used for OC-N cards. A command on an optical card will receive an IIAC (Input, Invalid Access Identifier) error message. For OC-N cards, use the OPR-PROTNSW and RLS-PROTNSW commands.
- If this command is used on a card that is not in a protection group, the SNVS (Status, Not in Valid State) error message is returned.
- If this command is used on a card that is not in the inhibit state, the SAAL (Status, Already Allowed) error message is returned.

- As long as none of the previous error conditions apply, you are allowed to send this command to cards that have been uninstalled. This will not generate any error response.

Category	Equipment	
Security	Maintenance	
Input Format	ALW-SWTOWKG-EQPT:[<TID>]:<AID>:<CTAG>[::<DIRN>];	
Input Example	ALW-SWTOWKG-EQPT:CISCO:SLOT-2:123::BTH;	
Input Parameters	<AID>	Access identifier. This parameter can either be the protection unit for which carrying traffic will be allowed (release of lockout) or the working unit for which switching to protect will be allowed (release of lock-on). Values are in the “26.15 EQPT” section on page 26-39 .
	<DIRN>	Optional. The switching direction relative to the entity defined in the AID field. This command only supports the BTH value of the DIRN parameter. Defaults to BTH. The parameter type is DIRECTION—transmit and receive directions.
	• BTH	Both transmit and receive directions.

2.9 ALW-USER-SECU

(Cisco ONS 15454, ONS 15454 M2, and ONS 15454 M6) The Allow User Security (ALW-USER-SECU) command enables a user ID that has been disabled using the INH-USER-SECU command so the user can reestablish a session with the NE.

Usage Guidelines	None.	
Category	Security	
Security	Superuser	
Input Format	ALW-USER-SECU:[<TID>]:<CTAG>::<UID>;	

Input Example ALW-USER-SECU:PETALUMA::123::UID;

Input Parameters	<UID>	The user identifier (user ID) of the person logged in. UID can be a list of user IDs separated by “&”. The keyword ALL cannot be used to specify all users on an NE. UID is a string.
-------------------------	-------	---
