



Installing Cisco ONS 15454 SONET/SDH TCC2 Cards

Product Names: 15454-TCC2

This document provides a card description, specifications, and an installation procedure for the Cisco ONS 15454 SONET/SDH TCC2 card. As appropriate, use this document in conjunction with the *Cisco ONS 15454 Procedure Guide* or the *Cisco ONS 15454 SDH Procedure Guide*, the *Cisco ONS 15454 Reference Manual* or the *Cisco ONS 15454 SDH Reference Manual*, and the *Cisco ONS 15454 Troubleshooting Guide* or the *Cisco ONS 15454 SDH Troubleshooting Guide* when working with TCC2 cards.

This document contains the following sections:

- [TCC2 Card Description, page 1](#)
- [TCC2 Card Specifications, page 5](#)
- [Install the TCC2 Card, page 6](#)
- [Related Documentation, page 10](#)
- [Obtaining Documentation and Submitting a Service Request, page 10](#)

TCC2 Card Description

The Advanced Timing Communications and Control (TCC2) card performs system initialization, provisioning, alarm reporting, maintenance, diagnostics, IP address detection/resolution, SONET section overhead (SOH) data communication channel/generic communication channel (DCC/GCC) termination, and system fault detection for the ONS 15454. The TCC2 also ensures that the system maintains Stratum 3 (Telcordia GR-253-CORE) timing requirements. It monitors the supply voltage of the system.



Note

The TCC2 card requires Software Release 4.0.0 or later.



Corporate Headquarters:

Cisco Systems, Inc., 170 West Tasman Drive, San Jose, CA 95134-1706 USA

Copyright © 2004 Cisco Systems, Inc. All rights reserved.

**Note**

The LAN interface of the TCC2 card meets the standard Ethernet specifications by supporting a cable length of 328 ft. (100 m) at temperatures from 32 to 149 degrees Fahrenheit (0 to 65 degrees Celsius). The interfaces can operate with a cable length of 32.8 ft. (10 m) maximum at temperatures from -40 to 32 degrees Fahrenheit (-40 to 0 degrees Celsius).

Figure 1 shows the TCC2 card faceplate.

Figure 1 TCC2 Faceplate

 
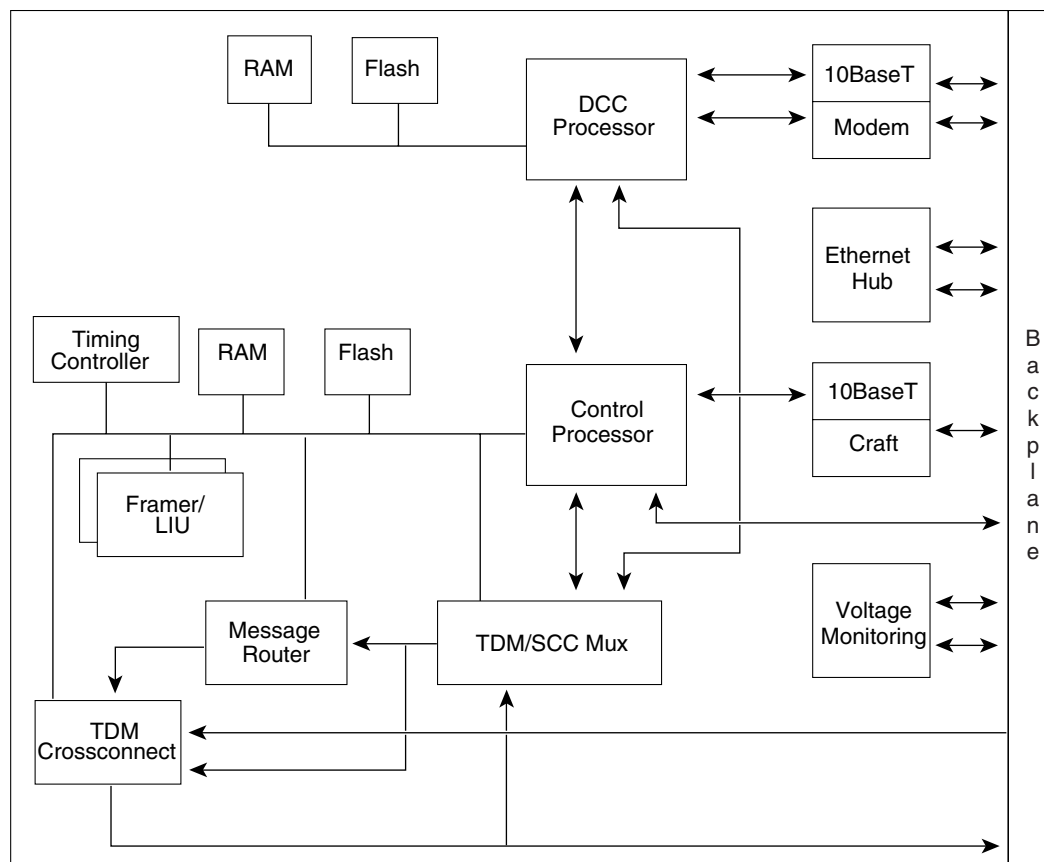


Figure 2 shows the block diagram of the TCC2 card.

Figure 2 TCC2 Block Diagram

The TCC2 card supports multichannel, high-level data link control (HDLC) processing for the DCC. Up to 32 DCCs can be routed over the TCC2 card and up to 32 DCCs can be terminated at the TCC2 card (subject to the available optical digital communication channels). The TCC2 selects and processes 32 DCCs to facilitate remote system management interfaces. The TCC2 hardware is prepared for 84 DCCs, which will be available in a future software release.

The TCC2 also originates and terminates a cell bus carried over the module. The cell bus supports links between any two cards in the node, which is essential for peer-to-peer communication. Peer-to-peer communication accelerates protection switching for redundant cards.

The node database, IP address, and system software are stored in TCC2 nonvolatile memory, which allows quick recovery in the event of a power or card failure.

The TCC2 performs all system-timing functions for each ONS 15454. The TCC2 monitors the recovered clocks from each traffic card and two BITS ports for frequency accuracy. The TCC2 selects a recovered clock, a BITS, or an internal Stratum 3 reference as the system-timing reference. You can provision any of the clock inputs as primary or secondary timing sources. A slow-reference tracking loop allows the TCC2 to synchronize with the recovered clock, which provides holdover if the reference is lost.

The TCC2 monitors both supply voltage inputs on the shelf. An alarm is generated if one of the supply voltage inputs has a voltage out of the specified range.

Install TCC2 cards in Slots 7 and 11 for redundancy. If the active TCC2 fails, traffic switches to the protect TCC2. All TCC2 protection switches conform to protection switching standards when the bit error rate (BER) counts are not in excess of 1×10^{-3} and completion time is less than 50 ms.

The TCC2 card has two built-in interface ports for accessing the system: an RJ-45 10baseT LAN interface and an EIA/TIA-232 ASCII interface for local craft access. It also has a 10baseT LAN port for user interfaces via the backplane.

**Note**

Cisco does not support operation of the ONS 15454 with only one TCC2 card. For full functionality and to safeguard your system, always operate with two TCC2 cards.

**Note**

When a second TCC2 card is inserted into a node, it synchronizes its software, backup software, and database with the active TCC2. If the software version of the new TCC2 does not match the version on the active TCC2, the newly inserted TCC2 copies from the active TCC2, taking about 15 to 20 minutes to complete. If the backup software version on the new TCC2 does not match the version on the active TCC2, the newly inserted TCC2 copies the backup software from the active TCC2 again, taking about 15 to 20 minutes. Copying the database from the active TCC2 takes about 3 minutes. Depending on the software version and backup version the new TCC2 started with, the entire process can take between 3 and 40 minutes.

TCC2 Card-Level Indicators

The TCC2 faceplate has two card-level LED indicators.

Table 1 TCC2 Card-Level Indicators

Card-Level Indicators	Description
Red FAIL LED	This LED is on during reset. The FAIL LED flashes during the boot and write process. Replace the card if the FAIL LED persists.
ACT/STBY LED Green (Active) Yellow (Standby)	Indicates the TCC2 card is active (green) or standby (yellow). The ACT/STBY LED also provides the timing reference and shelf control. When the active TCC2 is writing to its database or to the standby TCC2 database, the card LEDs blink. To avoid memory corruption, do not remove the TCC2 when the active or standby LED is blinking.

TCC2 Network-Level Indicators

The TCC2 faceplate has six network-level LED indicators.

Table 2 TCC2 Network-Level Indicators

System-Level LEDs	Description
Red CRIT LED	Indicates critical alarms in the network at the local terminal.
Red MAJ LED	Indicates major alarms in the network at the local terminal.
Yellow MIN LED	Indicates a minor alarm in the network at the local terminal.
Red REM LED	Provides first-level alarm isolation. The remote (REM) LED turns red when an alarm is present in one or more of the remote terminals.
Green SYNC LED	Indicates that node timing is synchronized to an external reference.
Green ACO LED	After pressing the ACO button, the ACO LED turns green. The ACO button opens the audible alarm closure on the backplane. ACO is stopped if a new alarm occurs. After the originating alarm is cleared, the ACO LED and audible alarm control are reset.

TCC2 Card Specifications

The TCC2 card has the following specifications:

- CTC software
 - Interface: EIA/TIA-232 (local craft access, on TCC2 faceplate)
 - Interface: 10baseT LAN (on TCC2 faceplate)
 - Interface: 10baseT LAN (via backplane)
- Synchronization
 - Stratum 3, per Telcordia GR-253-CORE
 - Free running access: Accuracy +/- 4.6 ppm

- Holdover stability: $3.7 * 10 \exp - 7$ per day including temperature (< 255 slips in first 24 hours)
 - Reference: External BITS, line, internal
- Supply voltage monitoring
 - Both supply voltage inputs are monitored.
 - Normal operation: -40.5 to -56.7 V
 - Undervoltage: Major alarm
 - Overvoltage: Major alarm
- Environmental
 - Operating temperature: -40 to +149 degrees Fahrenheit (-40 to +65 degrees Celsius)
 - Operating humidity: 5 to 95%, noncondensing
 - Power consumption: 26.00 W, 0.54 A at -48 V, 88.8 BTU/hr
- Dimensions
 - Height: 12.650 in. (321.3 mm)
 - Width: 0.716 in. (18.2 mm)
 - Depth: 9.000 in. (228.6 mm)
 - Depth with backplane connector: 235 mm (9.250 in.)
 - Weight not including clam shell: 0.7 kg (1.5 lb)
- Compliance: For compliance information, refer to the *Cisco Optical Transport Products Safety and Compliance Information* document.

Install the TCC2 Card


Use this section if you are installing the TCC2 card for the first time. After you become familiar with ONS 15454 card installation and boot up, use this section as a reference. For information about fiber-optic cable installation, see the *Cisco ONS 15454 Procedure Guide* or the *Cisco ONS 15454 SDH Procedure Guide*.



Caution

Always use the supplied electrostatic discharge (ESD) wristband when working with a powered ONS 15454. Plug the wristband cable into the ESD jack located on the lower right outside edge of the shelf assembly and ensure the shelf assembly is properly grounded.

Figure 3 shows general card installation.

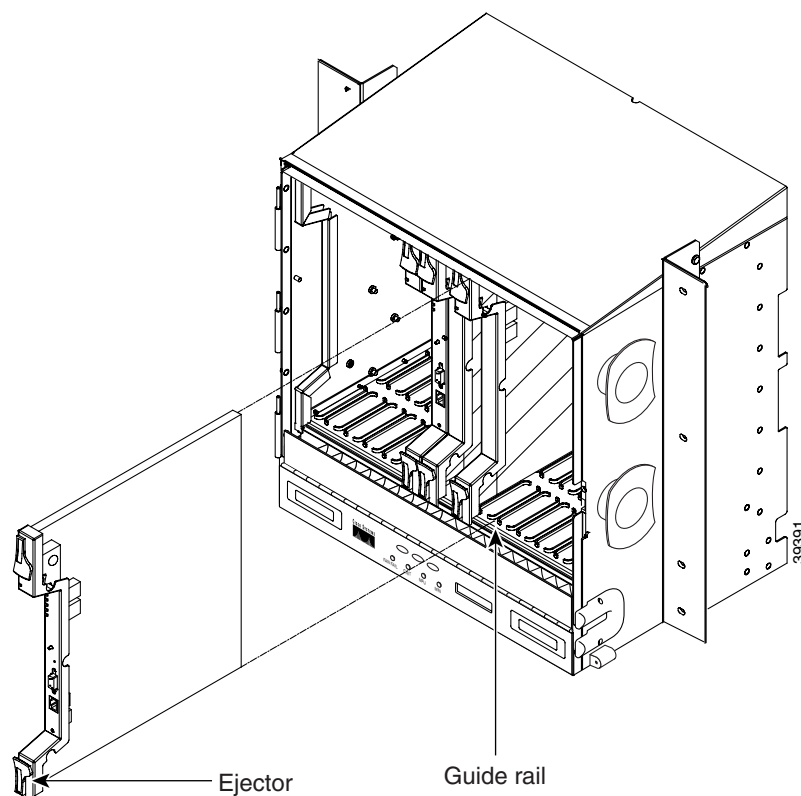Figure 3 Installing an ONS 15454 Card

Install TCC2 cards in Slots 7 and 11 for redundancy.

**Warning**

Invisible laser radiation may be emitted from the end of the unterminated fiber cable or connector. Do not stare into the beam or view directly with optical instruments. Viewing the laser output with certain optical instruments (for example, eye loupes, magnifiers, and microscopes) within a distance of 100 mm may pose an eye hazard. Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.

**Note**

When installing cards, allow each card to boot completely before installing the next card.

- Step 1** Open the latches/ejectors of the first TCC2 card that you will install.
- Step 2** Use the latches/ejectors to firmly slide the card along the guide rails until the card plugs into the receptacle at the back of the slot (Slot 7 or 11).
- Step 3** Verify that the card is inserted correctly and close the latches/ejectors on the card.

**Note**

It is possible to close the latches/ejectors when the card is not completely plugged into the backplane. Ensure that you cannot insert the card any further.

If you insert a card into a slot provisioned for a different card, all LEDS turn off.

- Step 4** Verify the LED activity described in [Table 3](#).

Table 3 LED Activity During TCC2 Card Installation

Card Type	LED Activity
TCC2	1. All LEDs turn on briefly. 2. The red FAIL LED, the yellow ACT/STBY LED, the red REM LED, the green SYNC LED, and the green ACO LED turn on and remain on for about 10 seconds. 3. The red FAIL LED and the green ACT/STBY LED turn on and remain on for about 40 seconds. 4. The red FAIL LED blinks for about 10 seconds. 5. The red FAIL LED turns on for about 5 seconds. 6. Both green PWR LEDs turn on for 5 seconds. The PWR LEDs then turn red for 2 to 3 minutes before going to steady green. 7. All LEDs (including the CRIT, MAJ, MIN, REM, SYNC, and ACO LEDs) blink once and turn off for about 10 seconds. 8. The ACT/STBY LED turns on. (The ACT/STBY LED might take several minutes to turn on while the DCC processor boots.)

**Note**

It may take up to 3 minutes for the A and B power alarms to clear.

**Note**

Alarm LEDs might be on; disregard alarm LEDs until you are logged into CTC and can view the Alarms tab.

**Note**

If the FAIL LED is on continuously, see the tip below about the TCC2 card automatic upload.

**Tip**

If you install a standby TCC2/TCC2P card that has a different software version than the active TCC card, the newly installed standby TCC2/TCC2P card automatically copies the software version from the active TCC2/TCC2P card. You do not need to do anything in this situation. However, the loading TCC2/TCC2P card does not boot up in the normal manner. When the standby card is first inserted, the LEDs follow most of the sequence listed in [Step 11](#). After the red FAIL LED turns on for about 5 seconds, the FAIL LED and the ACT/STBY LED begin to flash alternately for up to 30 minutes while the new software loads onto the active TCC2/TCC2P card. After loading the new software the upgraded TCC2/TCC2P card's LEDs repeat the sequence from [Step 11](#), and the amber ACT/STBY LED turns on.

Step 5 Verify that the ACT/STBY LED is green for active. The IP address, temperature of the node, and time of day appear on the LCD. The default time and date is 12:00 AM, January 1, 1970.

Step 6 The LCD cycles through the IP address, node name, and software version. Verify that the correct software version displays on the LCD.

- Step 7** If the LCD shows the correct software version, continue with [Step 8](#). If the LCD does not show the correct software version, upgrade the software or remove the TCC2 card and install a replacement card containing the correct software version.
- To replace the software, refer to the Cisco ONS 15454 software upgrade document for your software release.
- Step 8** Open the latches/ejectors of the redundant TCC2 card.
- Step 9** Use the latches/ejectors to firmly slide the card along the guide rails until the card plugs into the receptacle at the back of the slot (Slot 7 or 11).
- Step 10** Verify that the card is inserted correctly and close the latches/ejectors on the card.
- Step 11** Verify the LED activity of the TCC2 card.

Table 4 LED Activity During TCC2 Card Installation

Card Type	LED Activity
TCC2	1. All LEDs turn on briefly. 2. The red FAIL LED, the yellow ACT/STBY LED, the red REM LED, the green SYNC LED, and the green ACO LED turn on for about 10 seconds. 3. The red FAIL LED and the green ACT/STBY LED turn on for about 40 seconds. 4. The red FAIL LED blinks for about 10 seconds. 5. The red FAIL LED turns on for about 5 seconds. 6. All LEDs (including the CRIT, MAJ, MIN, REM, SYNC, and ACO LEDs) blink once and turn off for about 10 seconds. 7. The ACT/STBY LED turns on. (The ACT/STBY LED might take several minutes to turn on while the DCC processor boots.)



Note If the FAIL LED is on continuously, see the tip in [Step 4](#) about the TCC2 card automatic upload.



Note If you insert a card into a slot provisioned for a different card, all LEDs turn off.



Note Alarm LEDs might be on; disregard alarm LEDs until you are logged into CTC and can view the Alarms tab.

- Step 12** Verify that the ACT/STBY LED is amber for standby.

Related Documentation

- *Cisco ONS 15454 Procedure Guide*
- *Cisco ONS 15454 Reference Manual*
- *Cisco ONS 15454 Troubleshooting Guide*
- *Cisco ONS 15454 SDH Procedure Guide*
- *Cisco ONS 15454 SDH Reference Manual*
- *Cisco ONS 15454 SDH Troubleshooting Guide*

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as an RSS feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service. Cisco currently supports RSS Version 2.0.

a service mark of Cisco Systems, Inc.; and Access Registrar, Aironet, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Enterprise/Solver, EtherChannel, EtherFast, EtherSwitch, Fast Step, Follow Me Browsing, FormShare, GigaDrive, HomeLink, Internet Quotient, IOS, iPhone, IP/TV, iQ Expertise, the iQ logo, iQ Net Readiness Scorecard, iQuick Study, LightStream, Linksys, MeetingPlace, MGX, Networkers, Networking Academy, Network Registrar, PIX, ProConnect, ScriptShare, SMARTnet, StackWise, The Fastest Way to Increase Your Internet Quotient, and TransPath are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or Website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0711R)