


Power Bus Board Replacement Fuses

Power bus board replacement fuses are shipped inside fuse holders.

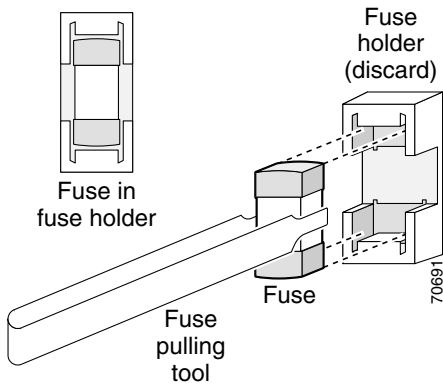

- 1 Use the fuse pulling tool to remove the spare fuse from the holder.
- 2 Discard the holder.
- 3 Refer to the *Cisco 12016, Cisco 12416, and Cisco 12816 Router Installation and Configuration Guide* for instructions on replacing the power bus board fuses.

78-16090-01

Copyright © 2003-2004, Cisco Systems, Inc. All rights reserved. Printed in USA.