



---

## Symbols

? (help) command [B-2](#)

---

## Numerics

- 48 V PS1 LED in Cisco 3745 [A-6](#)
- 48 V PS2 LED in Cisco 3745 [A-6](#)
- 48 V telephony power modules [1-9, 1-10](#)

---

## A

AC power connection [3-11, 3-12](#)

ACT LED

Cisco 3725 [A-5](#)

Cisco 3745 [A-5](#)

AIMs, installing [1-3](#)

asynchronous serial data rates [2-12](#)

auxiliary port

connecting to [3-24, 3-25](#)

description [2-8](#)

---

## B

baud rate

See data rate

boot command [B-4](#)

boot helper image [B-3](#)

booting from CompactFlash memory [C-5](#)

boot system command [C-4](#)

bracket installation

for Cisco 3725 [3-4 to 3-6](#)

for Cisco 3745 [3-6 to 3-7](#)

brackets, rack-mounting [3-4](#)

break (interrupt) command [C-4](#)

---

## C

cables, provided [2-6](#)

Caution symbol, meaning [ix](#)

chassis

desktop installation [3-2](#)

dimensions [1-11](#)

grounding [3-9, 3-10, 3-11](#)

rack-mounting [3-3 to 3-8](#)

views [1-2, 1-3](#)

Cisco IOS software

locating documentation [xv](#)

recovering images [B-8](#)

Cisco Redundant Power System [3-20](#)

CLI for configuration [3-32](#)

CompactFlash memory

booting from [C-5](#)

description [1-4](#)

compliance [1-12](#)

configuration

using CLI [3-32](#)

using SDM [3-29](#)

using setup command facility [3-29](#)

configuration register

bits [C-1](#)

boot field [C-3, C-4](#)

broadcast address [C-4](#)

changing settings [B-6, C-2](#)

console terminal data rate [C-5](#)

enabling booting from CompactFlash memory [C-5](#)

modifying from ROM monitor **B-6**  
 settings **C-1 to C-5**  
 confreg command **B-7**  
 connections  
   AC power **3-11, 3-12**  
   asynchronous/synchronous serial **2-10, 2-12**  
   auxiliary port **3-24**  
   console port **2-8, 3-22**  
   CSU/DSU **2-13**  
   DCE **2-10**  
   DTE **2-10**  
   Ethernet **2-9**  
   ISDN BRI **2-12**  
   LAN **3-21**  
   modem **3-24**  
   network **2-9**  
   serial **2-10, 2-12**  
   Token Ring **2-10**  
   voice **3-21**  
   WAN **3-21**  
 console port  
   connecting to **3-22, 3-23**  
   connections **3-23**  
   description **2-8**  
   speed **B-9**  
 console terminal connections **3-23**  
 context command **B-6**  
 cooling recommendations **2-4**  
 CSU/DSU connections **2-13**

---

## D

data rate  
   asynchronous serial **2-12**  
   modem **3-24**  
   setting for console terminal **C-2, C-4**  
 DCE and DTE devices **2-10**  
 DCE connections **2-10**  
 DC power connections

  Cisco 3725 **3-12 to 3-15**  
   Cisco 3745 **3-17 to 3-20**  
 DC wiring requirements  
   Cisco 3725 **3-13**  
   Cisco 3745 **3-18**  
 DC wiring routing  
   Cisco 3725 **3-15**  
 debugging commands **B-6**  
 desktop installation **3-2**  
 dev command **B-5**  
 dimensions, chassis **1-11**  
 dir command **B-5**  
 distance limitations, serial signals **2-11**  
 documentation  
   Cisco IOS software **xv**  
   conventions **viii**  
   on CD-ROM **xiv**  
   on the Web **xiv**  
   organization **viii**  
   related **xiv**  
 DTE and DCE devices **2-10**  
 DTE connections **2-10**

---

## E

electrical safety guidelines **2-2**  
 electrostatic discharge damage  
   See ESD  
 EPROM-based memory **1-4**  
 error messages **A-8 to A-12**  
 ESD **2-2**  
 Ethernet cable types **2-9**

---

## F

flash memory  
   See CompactFlash memory  
 frame command **B-6**

front panel LEDs [3-26, A-4, A-5](#)

---

## G

ground connection

Cisco 3725 [3-9, 3-10](#)

Cisco 3745 [3-10, 3-11](#)

lug attachment [3-9, 3-11](#)

---

## H

help command [B-5](#)

high temperature, troubleshooting [A-3](#)

humidity, specifications [1-11, 1-12](#)

---

## I

i command [B-6](#)

installation

checklist [2-5](#)

desktop [3-2](#)

rack-mounting [3-3 to 3-8](#)

site requirements [2-3](#)

tools required [2-7](#)

interface numbering

LAN interfaces

Cisco 3725 [1-5](#)

Cisco 3745 [1-7](#)

voice

Cisco 3725 [1-6](#)

Cisco 3745 [1-8](#)

WAN interfaces

Cisco 3725 [1-5](#)

Cisco 3745 [1-7](#)

IOS software

See Cisco IOS software

IP telephony power modules [1-9, 1-10](#)

ISDN BRI [2-12, 2-13](#)

cable specifications [2-13](#)

---

## L

LAN

connections [3-20, 3-21](#)

interface numbering

Cisco 3725 [1-5](#)

Cisco 3745 [1-7](#)

interface types [2-9, 2-10](#)

LEDs

front panel [3-26, A-4, A-5](#)

rear panel [A-6 to A-8](#)

lightning safety [2-2](#)

lost password, recovering [A-12](#)

---

## M

meminfo command [B-5](#)

memory [1-4](#)

modem connection [3-24, 3-25](#)

mounting brackets [3-3, 3-4](#)

---

## N

netboot [B-4](#)

network connections [2-9](#)

network modules, installing [1-3](#)

nonvolatile random-access memory

See NVRAM

NVRAM [1-4](#)

---

## P

packing list [2-6](#)

password recovery [A-12](#)

port numbering [1-5 to 1-8](#)

power

- options [1-9](#)
- requirements [2-3](#)
- specifications [1-11](#)

power supply

- connections [3-11 to 3-20](#)
- LEDs [A-5, A-6](#)

power-up procedure [3-27](#)

processor specifications [1-4](#)

---

## R

- rack-mounting the chassis [3-3 to 3-8](#)
- racks, equipment [2-4](#)
- rear panel LEDs [A-6 to A-8](#)
- recovering
  - Cisco IOS software images [B-8](#)
  - lost password [A-12](#)
- regulatory compliance [1-12](#)
- related documents [xv](#)
- reload command [B-2, C-3](#)
- reset command [B-6](#)
- rollover cable [3-25](#)
- ROM monitor [B-1 to B-9](#)
  - commands [B-2 to B-7](#)

---

## S

- safety
  - guidelines [2-1, 2-2](#)
  - warnings, translations [ix](#)
- SDM for configuration [3-29](#)
- SDRAM [1-4](#)
- serial connections [2-10](#)
  - signals [2-11](#)
  - speeds and distances [2-12](#)
- setup command facility [3-29](#)
- show hardware command [B-5](#)
- show version command [B-5, C-3](#)

- signaling standards, serial [2-11](#)
- site
  - configuration [2-4](#)
  - environment [2-4](#)
  - log [2-6](#)
  - requirements [2-3](#)
- slot numbering [1-5 to 1-8](#)
- software image recovery procedure [B-8](#)
- specifications
  - Cisco 3725 [1-11](#)
  - Cisco 3745 [1-11](#)
  - memory [1-4](#)
  - processor [1-4](#)
  - serial ports [2-11, 2-12](#)
  - system [1-11](#)
- stack command [B-6](#)
- static electricity damage [2-2](#)
- switched-56-kbps connections [2-13](#)
- synchronous dynamic random-access memory
  - See SDRAM
- SYS/RPS LED in Cisco 3725 [A-5](#)
- SYS LED in Cisco 3745 [A-5](#)
- SYS PS1 LED in Cisco 3745 [A-6](#)
- SYS PS2 LED in Cisco 3745 [A-6](#)
- sysret command [B-6](#)

---

## T

- telephone jacks, safety during installation [2-2](#)
- telephony power modules [1-9, 1-10](#)
- temperature, operating [1-11, 1-12](#)
- TFTP server [B-4](#)
- Token Ring connections [2-10](#)
- tools required for installation [2-7](#)
- troubleshooting
  - cables [A-3](#)
  - connections [A-3](#)
  - cooling system [A-2](#)
  - error messages [A-8 to A-12](#)

front panel LEDs [A-4, A-5](#)  
high temperature [A-3](#)  
modules [A-3](#)  
power system [A-2](#)  
rear panel LEDs [A-6 to A-8](#)

---

## V

ventilation [2-4](#)  
voice  
connections [3-21](#)  
interface numbering  
Cisco 3725 [1-6](#)  
Cisco 3745 [1-8](#)

---

## W

WAN  
connections [3-21](#)  
interface numbering  
Cisco 3725 [1-5](#)  
Cisco 3745 [1-7](#)  
Warning symbol, meaning [ix](#)  
wiring  
power supplies [3-11 to 3-20](#)  
telephone [2-2](#)

---

## X

xmodem command [B-8](#)

