



## INDEX

---

### Numerics

- 100BASE-T [1-9](#)
- 10BASE-T [1-9](#)
- 802.11b/g
  - integrated radio module [1-7, 1-8](#)
  - specifications [A-2](#)

---

### A

- AC adapter, connecting to router [4-12](#)
- AC input voltage specifications, router [A-1](#)
- ADSL connector pinouts [A-3](#)
- ADSL-over-ISDN, port
  - connecting [4-10](#)
  - description [1-9](#)
- ADSL-over-POTS port
  - connecting [4-9](#)
  - description [1-9](#)
- altitude specifications, router [A-1](#)
- antennas, connecting to the router [3-1](#)
- asymmetric digital subscriber line over integrated services digital network
  - See* ADSLoISDN
- asymmetric digital subscriber line over plain old telephone service
  - See* ADSLoPoTS
- async modem, connecting to console port [4-14](#)
- autosensing feature [1-9](#)

---

### B

- broadband modem, connecting to router [4-8](#)

---

### C

- cables
  - autosensing in router [1-9](#)
  - maximum length [A-4](#)
  - specifications (table) [A-4](#)
- caution, defined [i-viii](#)
- Cisco reseller, contacting [5-1](#)
- Cisco Secure Router 520 ADSL-over-ISDN Router, installing [4-5](#)
- Cisco Secure Router 520 ADSL-over-POTS Router, installing [4-3](#)
- Cisco Secure Router 520 Ethernet-to-Ethernet Router, installing [4-2](#)
- connecting
  - AC adapter [4-12](#)
  - ADSL-over-ISDN port [4-10](#)
  - ADSL-over-POTS port [4-9](#)
  - async modem to the console port [4-14](#)
  - broadband modem [4-8](#)
  - console port to async modem [4-14](#)
  - external Ethernet switch [4-7](#)
  - PC to the console port [4-14](#)
  - server, PC, or workstation [4-6](#)
  - to the Internet [4-8](#)
- console connector pinouts [A-3](#)
- console port
  - connecting
    - to an async modem [4-14](#)
    - to a PC [4-14](#)
  - default parameters [A-3](#)
  - description [1-9](#)
- crossover cable [1-9](#)

**D**

- damage to the router, preventing [2-3](#)
- desktop, placing router on [3-1](#)
- desktop mounting [3-1](#)
- digital subscriber line access multiplexer
  - See* DSLAM
- dying gasp feature [1-8](#)

**E**

- electrostatic damage, preventing [2-3](#)
- Ethernet port
  - connecting to a PC [4-6](#)
  - description [1-9](#)
- Ethernet ports, pinouts [A-2](#)
- external Ethernet switch, connecting to router [4-7](#)

**F**

- Fast Ethernet WAN port
  - connecting to the Internet [4-8](#)
  - description [1-9](#)
- feature summary [1-8](#)
- feature summary (table) [1-5, 1-8](#)
- flash memory [1-8](#)
- frequency specifications, router [A-2](#)

**H**

- hardware features [1-5](#)
- hardware security [1-8](#)

**I**

- installation
  - preparing for [2-5](#)
  - typical [4-1](#)

## installing

- Cisco Secure Router 520 ADSL-over-ISDN Router [4-5](#)
- Cisco Secure Router 520 ADSL-over-POTS Router [4-3](#)
- Cisco Secure Router 520 Ethernet-to-Ethernet Router [4-2](#)
- integrated 802.11b/g radio module [1-7, 1-8](#)
- IPsec hardware accelerator [1-8](#)
- items shipped with the router [2-4](#)

**K**

- Kensington
  - security lock [1-8](#)
  - security slot [1-8](#)

**L**

- LAN port pinouts [A-2](#)
- LEDs
  - router [1-6](#)
  - used in troubleshooting [5-2](#)
  - verifying router operations [4-16](#)

**M**

- memory
  - flash [1-8](#)
  - router [1-8](#)
  - SDRAM [1-8](#)
  - summary [1-8](#)
  - synchronous dynamic RAM
    - See* SDRAM
- modem, connecting to router [4-8](#)
- mounting
  - desktop [3-1](#)
  - mounting-screw holes [3-2](#)
  - rack [3-3](#)

wall [3-2](#)

---

## O

output voltage specifications, router [A-2](#)

---

## P

PC, connecting to router [4-6](#)

pinouts

ADSL connector [A-3](#)

console connector [A-3](#)

LAN port [A-2](#)

port

ADSL-over-ISDN [1-9](#)

ADSL-over-POTS [1-9](#)

console [1-9](#)

Ethernet [1-9](#)

power

problems [5-2](#)

specifications router [A-1](#)

preventing damage to the router [2-3](#)

problems

after router is running (table) [5-3](#)

during first startup (table) [5-2](#)

---

## R

rack mounting [3-3](#)

regulatory compliance and safety information [1-9](#)

Reset button [1-9](#)

router

LEDs [1-6](#)

power [A-1](#)

router models

Cisco Secure Router 520 ADSL-over-ISDN [1-4](#)

Cisco Secure Router 520 ADSL-over-POTS [1-3](#)

Cisco Secure Router 520 Ethernet-to-Ethernet [1-1](#)

router specifications [A-1](#)

router temperature specifications [A-1](#)

---

## S

safety guidelines, wireless routers [2-3](#)

safety warnings

general [2-1](#)

wireless routers [2-2](#)

SDRAM [1-8](#)

security

IPsec hardware accelerator [1-8](#)

software features [1-8](#)

serial number label location [1-6](#)

server, connecting to router [4-6](#)

specifications [A-4](#)

cable [A-4](#)

Ethernet cable [A-4](#)

router [A-1](#)

802.11b/g [A-2](#)

AC input voltage [A-1](#)

altitude [A-1](#)

frequency [A-2](#)

humidity [A-1](#)

output voltage [A-2](#)

temperature [A-1](#)

startup problems [5-2](#)

straight-through cable [1-9](#)

system specifications (table) [A-1](#)

---

## T

temperature specifications, router [A-1](#)

troubleshooting [5-1 to 5-4](#)

typical installations [4-1](#)

---

## U

unpacking the router [2-4](#)

---

## V

verifying router operations [4-16](#)

---

## W

wall mounting [3-1, 3-2](#)

warnings

    general [2-1](#)

    wireless routers [2-2](#)

weight specifications, router [A-1](#)

wireless routers

    description [1-7](#)

    integrated 802.11b/g radio module [1-7](#)

workstation, connecting to router [4-6](#)