



## INDEX

---

### Symbols

- ? command [C-3](#)
- ? command [A-4, C-3](#)

---

### A

- AAL [B-5](#)
- AAL3/4 [B-5](#)
- AAL5 [B-5](#)
- abbreviating commands [A-6](#)
- access groups [11-3](#)
- access lists
  - applying to interfaces [8-4](#)
  - configuration commands [11-2](#)
  - configuring for firewalls [8-3, 9-2](#)
  - description [B-9](#)
- ACK bits [B-9](#)
- Address Resolution Protocol
  - See* ARP
- ADSL
  - configuring [4-6](#)
  - ordering [1-2](#)
  - overview [B-1](#)
  - troubleshooting [12-2](#)
- ARP [B-2](#)
- Asymmetric Digital Line Subscriber Line
  - See* ADSL
- ATM
  - errors, displaying [12-6](#)
  - events, displaying [12-6](#)
  - interface, configuring basic parameters [1-6](#)
  - interface, configuring for PPPoA [4-5](#)

- overview [B-4](#)
- packets, displaying [12-7](#)
- PVC encapsulation types [B-5](#)
- queues [B-8](#)
- troubleshooting commands [12-2 to 12-8](#)

- ATM adaptation layer
  - See* AAL
- ATM interface
  - See* ATM
- authentication protocols
  - See* PPP authentication protocols
- AutoSecure [11-2](#)

---

### B

- b command [C-3](#)
- b flash command [C-3](#)
- boot commands [C-3](#)
- bridging, configuring [1-8, 9-4](#)
- broadcast intervals, RIP [B-2](#)

---

### C

- CAR [B-7](#)
- caution, defined [i-xi](#)
- CBAC firewall, configuring [11-3](#)
- CBWFQ [B-7](#)
- CHAP [B-3](#)
- Cisco IOS Firewall IDS [11-4](#)
- Cisco IOS queues [B-8](#)
- class-based weighted fair queuing
  - See* CBWFQ
- command-line access to router

- configuration example 1-9
- configuring 1-8
- command modes A-2 to A-4
- commands
  - ? C-3
  - ? A-4
  - abbreviating A-6
  - access list 11-2
  - ATM troubleshooting 12-2 to 12-8
  - b C-3
  - b flash C-3
  - boot C-3
  - completing A-4
  - confreg C-6
  - context C-8
  - copy running-config startup-config A-6
  - copy tftp flash C-3
  - debug atm 12-5
  - debug atm errors 12-6
  - debug atm events 12-6
  - debug atm packet 12-7
  - dir device C-3
  - finding available A-4
  - flowcontrol A-2
  - frame C-8
  - help C-3
  - help with A-4
  - i C-3
  - k C-8
  - meminfo C-9
  - permit B-9
  - ping atm interface 12-2
  - privileged EXEC, accessing A-5
  - redisplaying A-4
  - reset C-3
  - ROM monitor C-2 to C-3
  - ROM monitor debugging C-8, C-9
  - show atm interface 12-5
  - show dsl interface atm 4-7
  - show interface 12-3
  - stack C-8
  - sysret C-8
  - tftpdnld C-3, C-5
  - undoing A-6
  - xmodem C-7
- command variables
  - listing A-4
  - TFTP download C-4
- committed access rate
  - See* CAR
- configuration changes
  - making A-5
  - saving 12-11, A-6
- configuration examples
  - command-line access 1-9
  - DHCP server 5-4
  - dynamic routes 1-12
  - PPPoA with NAT 4-9
  - PPPoE with NAT 3-8
  - simple firewall 8-5
  - static route 1-10
  - VPN with IPsec and GRE 7-9
  - VPN with IPsec tunnel 6-10
  - wireless LAN 9-6
- configuration prerequisites 1-2
- configuration register
  - changing 12-9 to 12-10
  - changing from ROM monitor C-5
  - value, resetting 12-11
- configuring
  - ATM WAN interface 1-5
  - basic router parameters 1-1
  - bridging 1-8
  - command-line access 1-8
  - DHCP server 5-1
  - dialer interface 3-4
  - dynamic routes 1-11, 1-12
  - Easy VPN 6-1

- Fast Ethernet LAN interfaces [1-4](#)
  - Fast Ethernet WAN interface [1-5](#)
  - firewall [8-1 to 8-6](#)
  - global parameters [1-4](#)
  - GRE tunnel [7-8](#)
  - group policy [6-4, 7-4](#)
  - IKE policy [6-3, 7-3](#)
  - inspection rules for firewalls [8-4](#)
  - IPsec tunnel [6-1](#)
  - loopback interface [1-6 to 1-8](#)
  - NAT [4-7](#)
  - PPPoE with NAT [3-1, 3-2](#)
  - RIP [1-11](#)
  - router from PC [A-1](#)
  - static routes [1-10](#)
  - VLANs [5-1](#)
  - VPDN group number [3-2](#)
  - VPNs [6-1, 7-2](#)
  - WAN interface [1-4](#)
  - your network, preparing for [1-2](#)
  - confreg command [C-6](#)
  - connections, setting up [1-2](#)
  - console download [C-7 to C-8](#)
  - context command [C-8](#)
  - copy running-config startup-config command [A-6](#)
  - copy tftp flash command [C-3](#)
  - corporate network, connecting to [1-2](#)
  - crypto map, applying to interface [6-8, 7-7](#)
- 
- D**
- debug atm commands [12-5](#)
  - debug atm errors command [12-6](#)
  - debug atm events command [12-6, 12-7](#)
  - debug atm packet command [12-7](#)
  - debug commands, ROM monitor [C-8, C-9](#)
  - default configuration, viewing [1-2](#)
  - DHCP
    - configuring DHCP server [5-2](#)
    - IP address assignment [5-1](#)
    - DHCP and Easy IP (Phase 2) [B-6](#)
    - DHCP server
      - configuration example [5-4](#)
      - configuring router as [5-1](#)
      - verify configuration [5-4](#)
    - dialer interface
      - configuring [3-4, 4-2](#)
      - description [B-5](#)
    - dir device command [C-3](#)
    - disaster recovery [C-3 to C-5](#)
    - DSL signaling protocol [4-6](#)
    - Dynamic Host Configuration Protocol
      - See* DHCP
    - dynamic routes
      - configuration example [1-12](#)
      - configuring [1-11, 1-12](#)
- 
- E**
- Easy IP
    - Phase 1 overview [B-6](#)
    - Phase 2 overview [B-6](#)
  - Easy VPN
    - configuration tasks [6-2](#)
    - remote configuration [6-9](#)
    - verify configuration [6-10](#)
  - enable password
    - recovering [12-12](#)
    - setting [A-4](#)
  - enable secret password
    - recovering [12-12](#)
    - setting [A-4](#)
  - encapsulation [B-5](#)
  - error messages, configuration [A-6](#)
  - error reporting, ROM monitor [C-7](#)
  - errors, ATM, displaying [12-6](#)
  - Ethernet [B-4](#)
  - events, ATM, displaying [12-6](#)

extended access list, overview [B-9](#)

---

## F

Fast Ethernet LAN interfaces, configuring [1-4](#)  
 Fast Ethernet WAN interface, configuring [1-5, 3-3](#)  
 filtering  
     *See* access lists  
 firewalls  
     access list configuration [8-3, 9-2](#)  
     applying access lists to interfaces [8-4](#)  
     applying inspection rules to interfaces [8-4](#)  
     configuration example [8-5](#)  
     configuration tasks [8-2](#)  
     configuring inspection rules [8-4](#)  
 flowcontrol command [A-2](#)  
 fragmentation, PPP [B-7](#)  
 frame command [C-8](#)

---

## G

global configuration mode  
     entering [A-5](#)  
     summary [A-2, A-3](#)  
 global parameters, setting up [1-4](#)  
 GRE tunnel  
     configuration example [7-9](#)  
     configuring [7-8](#)  
 group policy, configuring [6-4, 7-4](#)

---

## H

handshake  
     defined [B-2](#)  
     three-way [B-3](#)  
     two-way [B-3](#)  
 help command [C-3](#)  
 help with commands [A-4](#)

hop count, defined [B-2](#)

---

## I

i command [C-3](#)  
 IKE policy, configuring [6-3, 7-3](#)  
 inspection rules  
     applying to interfaces [8-4](#)  
     configuring [8-4](#)  
 interface configuration mode [A-3](#)  
 interface port labels (table) [1-3](#)  
 interleaving, PPP [B-7](#)  
 Internet connection, setting up [1-2](#)  
 IP, overview [B-2](#)  
 IPCP [B-6](#)  
 IP Precedence  
     with CBWFQ [B-8](#)  
     overview [B-7](#)  
 IP routing, setting up [1-2](#)  
 IPsec tunnel  
     configuration example [6-10, 7-9](#)  
     configuring [6-1, 7-1](#)  
     crypto method [6-7, 7-6](#)  
     transforms and protocols [6-6, 7-5](#)

---

## K

k command [C-8](#)

---

## L

LAN with DHCP and VLANs, configuring [5-1 to 5-8](#)  
 LCP [B-3](#)  
 LFQ [B-8](#)  
 line configuration mode [A-4](#)  
 Link Control Protocol  
     *See* LCP  
 LLC [B-5](#)

loopback interface, configuring [1-6 to 1-8](#)

low latency queuing

*See* LFQ

---

## M

meminfo command [C-9](#)

metrics

RIP [B-2](#)

mode configuration, applying to crypto map [6-5](#)

modes

*See* command modes

---

## N

NAT

configuration example [3-8, 4-9](#)

configuring with PPPoA [4-7](#)

configuring with PPPoE [3-1, 3-5](#)

overview [B-5 to B-6](#)

*See also* Easy IP (Phase 1)

NCP [B-3](#)

network address translation

*See* NAT

network configuration, preparing for [1-2](#)

Network Control Protocols

*See* NCP

network protocols [B-2](#)

network scenarios

*See* configuration examples

nonvolatile RAM

*See* NVRAM

NVRAM, saving changes to [A-6](#)

---

## O

overloading, defined [B-6](#)

---

## P

packets, ATM, displaying [12-7](#)

PAP [B-3](#)

parameters, setting up global [1-4](#)

Password Authentication Protocol

*See* PAP

password protection [A-4](#)

passwords

recovery [12-9 to 12-12](#)

resetting [12-11](#)

setting [A-4](#)

permanent virtual circuit

*See* PVC

permit command [B-9](#)

ping atm interface command [12-2](#)

Point-to-Point Protocol

*See* PPP

policy-based routing [B-7](#)

policy lookup, enabling [6-6, 7-4, 7-5](#)

port assignments, common [D-1 to D-2](#)

port labels for interfaces [1-3](#)

port numbers currently assigned [D-1 to D-2](#)

PPP

authentication protocols [B-3](#)

fragmentation [B-7](#)

interleaving [B-7](#)

overview [B-3](#)

PPP/Internet Protocol Control Protocol

*See* IPCP

PPPoA, configuration example [4-9](#)

PPPoE

client [3-1](#)

configuration example [3-8](#)

configuring [3-1](#)

verifying your configuration [3-8](#)

prerequisites, for configuration [1-2](#)

privileged EXEC commands, accessing [A-5](#)

privileged EXEC mode [A-2, A-3](#)

## protocols

- ATM [B-4](#)
- Ethernet [B-4](#)
- network [B-2](#)
- network interface [B-4 to B-5](#)
- PPP authentication [B-3](#)
- routing overview [B-2 to ??](#)

## PVC

- encapsulation types [B-5](#)
- overview [B-5](#)

---

**Q**

- QoS parameters [B-7 to B-8](#)
- queues, ATM [B-8](#)

---

**R**

- radio station subinterfaces, configuring [9-5](#)
- remote access VPN [6-1](#)
- reset command [C-3](#)
- resetting
  - configuration register value [12-11](#)
  - passwords [12-11](#)
  - router [12-10 to 12-11](#)

## RIP

- configuring [1-11](#)
- overview [B-2](#)

## ROM monitor

- commands [C-2 to C-3](#)
- debug commands [C-8, C-9](#)
- entering [C-1](#)
- exiting [C-9](#)

root radio station, configuring [9-2](#)

router configuration mode [A-4](#)

## Routing Information Protocol

*See* RIP

routing protocol overview [B-2 to ??](#)

RST bits [B-9](#)

RSVP [B-8](#)

---

**S**

- saving configuration changes [12-11, A-6](#)
- scenarios, network
  - See* configuration examples
- security authentication protocols [B-3](#)
- security features, configuring [11-1 to 11-4](#)
- settings
  - router default [A-2](#)
  - standard VT-100 emulation [A-2](#)
- show atm interface command [12-5](#)
- show dsl interface atm command [4-7](#)
- show interface command [12-3](#)
- site-to-site VPN [7-1](#)
- software, upgrading methods [12-8](#)
- stack command [C-8](#)
- static routes
  - configuration [1-10](#)
  - configuration example [1-10](#)
  - configuring [1-10](#)
- sysret command [C-8](#)

---

**T**

- TACACS+ [B-4](#)
- TCP/IP-oriented configuration [5-1](#)
- TCP port numbers [D-1 to D-2](#)
- terminal emulation software [A-1](#)
- tftpdnld command [C-3, C-5](#)
- TFTP download [C-3 to C-5](#)
  - See also* console download
- transform set, configuring [6-6](#)
- translation
  - See* NAT
- triggered extensions to RIP [B-2](#)

troubleshooting commands, ATM [12-2 to 12-8](#)

---

## U

UDP port numbers [D-1 to D-2](#)

undoing commands [A-6](#)

upgrading software, methods for [12-8](#)

User Datagram Protocol

*See* UDP

user EXEC mode [A-2, A-3](#)

---

## V

variables, command listing [A-4](#)

VC [B-5](#)

verify

DHCP server configuration [5-4](#)

Easy VPN configuration [6-10](#)

PPPoE with NAT configuration [3-8](#)

VLAN configuration [5-6](#)

viewing default configuration [1-2](#)

virtual configuration register [C-5](#)

virtual private dialup network group number,  
configuring [3-2](#)

VLANs

configuring [5-1](#)

verify configuration [5-6](#)

VPDN group number, configuring [3-2](#)

VPNs

configuration example [6-10](#)

configuration tasks [6-2, 7-2](#)

configuring [6-1, 7-1, 11-4](#)

---

## W

WAN interface, configuring [1-4, 3-3](#)

wireless LAN configuration example [9-6](#)

---

## X

xmodem command [C-7](#)

