



# Configuring Zone Filters

---

This chapter describes how to configure the Cisco Guard (Guard) filters.

This chapter contains the following sections:

- [Overview](#)
- [Configuring Flex-Content Filters](#)
- [Configuring Bypass Filters](#)
- [Configuring User Filters](#)
- [Configuring Dynamic Filters](#)

# Overview

Zone filters define how the Guard handles a specific traffic flow. You can configure filters to customize the traffic flow and control the anti-DDoS protection operation.

The Guard has the following types of filters:

- **User filters**—Apply the required protection level to the specified traffic flow. They define the first actions the Guard takes when it identifies abnormal or malicious traffic. The zone configuration includes a default set of user filters configured for on-demand protection that can handle a wide range of attack types. You can modify user filters to customize the Guard protection capabilities and to set rules about how the Guard handles traffic flows when an attack is suspected.

See the [“Configuring User Filters” section on page 6-20](#) for more information.

- **Bypass filters**—Prevent the Guard from handling specific traffic flows. You can direct trusted traffic away from the Guard protection features, prevent the Guard from analyzing it, and forward it directly to the zone.

See the [“Configuring Bypass Filters” section on page 6-16](#) for more information.

- **Flex-Content filters**—Count or drop a specific traffic flow that provides extremely flexible filtering capabilities, such as filtering according to fields in the IP and TCP headers, filtering based on payload content, and filtering based on complex Boolean expressions.


See the [“Configuring Flex-Content Filters” section on page 6-4](#) for more information.

- **Dynamic filters**—Apply the required protection level to the specified traffic flow. The Guard creates dynamic filters according to the analysis of traffic flow and continuously modifies this set of filters to zone traffic and the type of DDoS attack. The dynamic filters have a limited life span and are erased when the attack ends.

See the [“Configuring Dynamic Filters” section on page 6-27](#) for more information.

Figure 6-1 displays the Guard filter system.

Figure 6-1 Cisco Guard Filter System

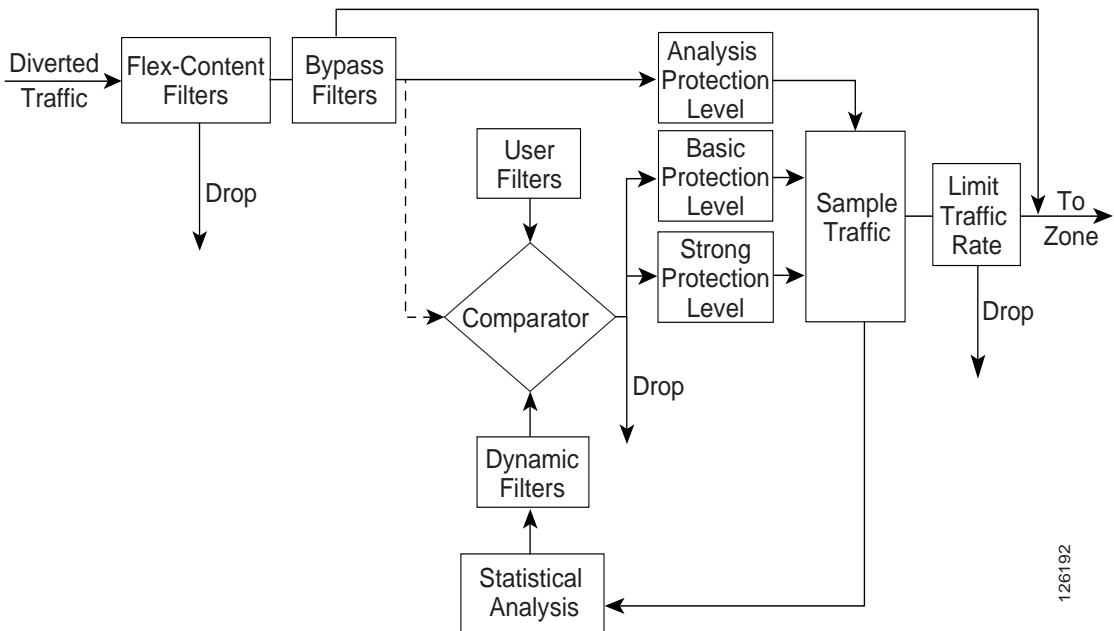

When zone protection is enabled, either by a user action or by a remote network-sensing DDoS element, such as the Cisco Traffic Anomaly Detector, the Cisco Guard analyzes zone traffic.

The Guard monitors the rate of the traffic that flows to the zone. It drops traffic that exceeds the defined rate and forwards the legitimate traffic to the zone. The Guard performs statistical analysis of zone traffic and leads a closed-loop feedback cycle to adjust the protection measures to the dynamically changing zone traffic characteristics and the changing DDoS attack types.

To perform statistical analysis of traffic flow, the Guard has definitions that handle specific types of traffic, which are called zone policies. The zone policies constantly measure traffic flows and take action against a particular traffic flow if they identify that flow as malicious or abnormal, which occurs when the flow exceeds the policy threshold.

When the Guard identifies anomalies traffic, it performs the following:

1. Begins producing dynamic filters that are configured with actions to handle the attack. The Guard, by default, adds an initial dynamic filter that directs all traffic to user filters. Until the Guard has had enough time to analyze the attack, user filters provide the first line of defense against evolving DDoS attacks.
2. Changes the flow of traffic within the Guard. Abnormal traffic flows into the Comparator, as indicated by the broken line. The Comparator receives input from the Dynamic filters and the User filters. It compares the first user filter that matches the flow with the dynamic filters, and chooses the most severe protection measure suggested. It applies the relevant protection level to authenticate the traffic.

Dynamic filters have a limited life span and are erased when the attack ends. By default, the Guard protects the zone until you deactivate zone protection.

## Configuring Flex-Content Filters

Flex-Content filters filter zone traffic based on fields in the packet header or patterns in the packet payload. You can identify attacks that are based on patterns that appear in the incoming traffic. These patterns can identify known worms or flood attacks that have a constant pattern.



### Note

---

The flex-content filter consumes a lot of resources. We recommend that you limit the use of flex-content filters because they might affect the performance of the Guard. If you are using a flex-content filter to protect a specific attack that can be identified by a dynamic filter, such as TCP traffic to a specified port, we recommend that you filter the traffic using a dynamic filter.

---

Use the flex-content filters to drop or count a desired packet flow and to identify a specific malicious source of traffic.

The Flex-Content filter applies the filtering criteria in the following order:

1. Filters packets based on the protocol and the port parameter values.
2. Filters packets based on the tcpdump-expression value.
3. Performs pattern matching with the pattern-expression value on the remaining packets.

This section contains the following topics:

- [Adding a Flex-Content Filter](#)
- [Displaying Flex-Content Filters](#)
- [Deleting Flex-Content Filters](#)
- [Changing the State of a Flex-Content Filter](#)

## Adding a Flex-Content Filter

Flex-Content filters are activated in ascending order of the row numbers. When you add a new flex-content filter be sure that you place it in the correct location in the list.

The Guard stops activating the flex-content filters when traffic matches a flex-content filter with a drop action.

To configure a flex-content filter, perform the following steps:

- 
- Step 1** Display the list of flex-content filters and identify the location in the list in which you want to add the new filter.

See the [“Displaying Flex-Content Filters” section on page 6-14](#) for more information.

- Step 2** If the current row numbers are consecutive, renumber the flex-content filters in increments that allow you to insert the new flex-content filter by entering the following command in zone configuration mode:

```
flex-content-filter renumber [start [step]]
```

Table 6-1 provides the arguments for the **flex-content-filter renumber** command.

**Table 6-1 Arguments for the flex-content-filter renumber Command**

Parameter	Description
<i>start</i>	(Optional) An integer from 1 to 9999 that denotes the new starting number of the Flex-Content filter list. The default is 10.
<i>step</i>	(Optional) An integer from 1 to 999 that defines the increment between the Flex-Content filter row numbers. The default is 10.

**Step 3** (Optional) To filter a pattern expression of an ongoing attack or an attack that you have previously recorded, activate the Guard to generate a signature of the attack by using the **show packet-dump signatures** command.

See the “[Generating Attack Signatures from Packet-Dump Capture Files](#)” section on page 10-27 for more information.

**Step 4** Add a new flex-content filter by entering the following command:

```
flex-content-filter row-num {disabled | enabled} {drop | count}
protocol port [start start-offset [end end-offset]] [ignore-case]
expression tcpdump-expression pattern pattern-expression
```

Table 6-2 provides the arguments and keywords for the **flex-content-filter** command.

**Table 6-2 Arguments and Keywords for the flex-content-filter Command**

Parameter	Description
<i>row-num</i>	A unique number from 1 to 9999. The row number identifies the filter and defines the priority among the flex-content filters. The Guard operates the filters in ascending row-number order.
<b>disabled</b>	Sets the filter state to disabled. The filter does not relate to traffic.
<b>enabled</b>	Sets the filter state to enabled. The filter relates to traffic and performs the action (drop or count) when a match is found. This is the default state.

**Table 6-2**      *Arguments and Keywords for the flex-content-filter Command (continued)*

Parameter	Description
<b>drop</b>	Drops the flow that matches the filter.
<b>count</b>	Counts the flow that matches the filter.
<i>protocol</i>	<p>Processes traffic coming from a specific protocol. Use an asterisk (*) to indicate any protocol. Enter an integer from 0 to 255.</p> <p>Review possible protocol numbers at the Internet Assigned Numbers Authority (IANA) website:  <a href="http://www.iana.org/assignments/protocol-numbers">http://www.iana.org/assignments/protocol-numbers</a></p>
<i>port</i>	<p>Processes traffic destined to a specific destination port. Enter an integer from 0 to 65535. To define a specific port number, you must define a specific protocol number.</p> <p>Use an asterisk (*) to indicate any destination port. You can use an asterisk only if you configure the protocol number to 6 (TCP) or 17 (UDP).</p> <p>Review possible port numbers at the Internet Assigned Numbers Authority (IANA) website:  <a href="http://www.iana.org/assignments/port-numbers">http://www.iana.org/assignments/port-numbers</a></p>
<i>start-offset</i>	<p>The offset, in bytes, from the beginning of the packet payload, where the pattern matching for the <i>pattern-expression</i> argument begins. The default is 0 (the start of the payload). Enter an integer from 0 to 1800.</p> <p>If you copy the pattern from the <b>show packet-dump signatures</b> command output, copy this argument from the Start Offset field in the command output.</p>
<i>end-offset</i>	<p>The offset, in bytes, from the beginning of the packet payload, where the pattern matching for the <i>pattern-expression</i> argument ends. The default is the packet length (the end of the payload). Enter an integer from 0 to 1800.</p> <p>If you copy the pattern from the <b>show packet-dump signatures</b> command output, copy this argument from the End Offset field in the command output.</p>

**Table 6-2 Arguments and Keywords for the flex-content-filter Command (continued)**

Parameter	Description
<b>ignore-case</b>	<p>Defines the <i>pattern-expression</i> argument as case-insensitive.</p> <p>By default the <i>pattern-expression</i> argument is case-sensitive.</p>
<i>tcpdump-expression</i>	<p>Specifies the expression to be matched with the packet. The expression is in Berkley Packet filter format. See the <a href="#">“Understanding the tcpdump-expression Syntax”</a> section on page 6-9 for more information and configuration examples.</p> <p>If spaces are part of the expression, enclose the expression in quotation marks (“”).</p> <p>To enter an empty expression, use double quotation marks (“”).</p> <p>To use a quotation mark in the expression, use the backslash escape character before the quotation mark(\”).</p> <p>Help is not available for the tcpdump-expression syntax.</p>
<i>pattern-expression</i>	<p>Specifies the regular expression data pattern to be matched with the packet payload. See the <a href="#">“Understanding the pattern-expression Syntax”</a> section on page 6-12 for more information.</p> <p>You can activate the Guard to generate the signature by using the <b>show packet-dump signatures</b> command. See the <a href="#">“Generating Attack Signatures from Packet-Dump Capture Files”</a> section on page 10-27.</p> <p>If spaces are part of the expression, enclose the expression in quotation marks (“”).</p> <p>To enter an empty expression, use double quotation marks (“”).</p> <p>To use a quotation mark in the expression, use the backslash escape character before the quotation mark(\”).</p> <p>Help is not available for the pattern-expression syntax.</p>

You can change the filter state at any time. See the [“Changing the State of a Flex-Content Filter”](#) section on page 6-16 for more information.

You can change the filter action at any time. See the [“Deleting Flex-Content Filters” section on page 6-15](#) for more information.

The following example shows how to configure the flex-content filter:

```
user@GUARD-conf-zone-scanner# flex-content-filter enabled count * *  
expression "ip[6:2] & 0x1fff=0" pattern  
"/ HTTP/1\.\.1\ x0D\0AAccept: .*/.*\x0D\x0AAccept-Language:  
en*\x0D\x0AAccept-Encoding: gzip, deflate\x0D\x0AUser-Agent:  
Mozilla/4\.\.0"
```

This section contains the following topics:

- [Understanding the tcpdump-expression Syntax](#)
- [Understanding the pattern-expression Syntax](#)

## Understanding the tcpdump-expression Syntax

The tcpdump-expression is in the Berkley Packet filter format and specifies the expression to be matched with the packet.



### Note

You can use the tcpdump-expression to filter traffic based on the destination port and protocol. However, due to performance considerations, we recommend that you filter traffic based on these criteria using the flex-content filter *protocol* and *port* arguments.

The expression contains one or more elements. Elements usually consist of an ID (name or number) preceded by one or more qualifiers. There are three types of qualifiers:

- Type qualifiers—Define what the ID (name or number) refers to. Possible types are host, net and port. For example, host foo. Host type qualifier is the default.
- Dir qualifiers—Define the transfer direction. Possible directions are src, dst, src or dst, and src and dst. For example, src foo. Src or dst dir qualifier is the default.

- Proto qualifiers—Restrict the match to a particular protocol. Possible protos are: ether, ip, arp, rarp, tcp and udp. For example, ether src foo. If you do not specify a proto qualifier, all protocols that apply to the type are matched. For example, port 53 means (tcp or udp) port 53.

Table 6-3 describes the tcpdump-expression elements.

**Table 6-3** *tcpdump-expression Elements*

Element	Description
<b>dst host</b> <i>host_ip_address</i>	Traffic to a destination host IP address.
<b>src host</b> <i>host_ip_address</i>	Traffic from a source host IP address.
<b>host</b> <i>host_ip_address</i>	Traffic to and from both source and destination host IP addresses.
<b>net net mask</b> <i>mask</i>	Traffic to a specific network.
<b>net</b> <i>net/len</i>	Traffic to a specific subnet.
<b>dst port</b> <i>destination_port_number</i>	TCP or UDP traffic to a destination port number.
<b>src port</b> <i>source_port_number</i>	TCP or UDP traffic from a source port number.
<b>port</b> <i>port_number</i>	TCP or UDP traffic to and from both source and destination port numbers.
<b>less</b> <i>packet_length</i>	Packets with a length equal to or less than the specific length in bytes.
<b>greater</b> <i>packet_length</i>	Packets with a length equal to or greater than the specific length in bytes.
<b>ip proto</b> <i>protocol</i>	Packets with a protocol number of the following protocols: ICMP, UDP, and TCP.
<b>ip broadcast</b>	Broadcast IP packets.
<b>ip multicast</b>	Multicast packets.
<b>ether proto</b> <i>protocol</i>	Ether protocol packets of a specific protocol number or name such as IP, ARP, or RARP.
<i>expr relop expr</i>	Traffic that complies with the specific expression. <a href="#">Table 6-4</a> describes the tcpdump-expression rules.

Table 6-4 describes the tcpdump-expression rules.

**Table 6-4 Flex-Content Filter Expression Rules**

Expression Rule	Description
<i>relop</i>	>, <, >=, <=, =, !=
<i>expr</i>	An arithmetic expression composed of integer constants (expressed in standard C syntax), the normal binary operators [+ , - , * , / , & ,  ], a length operator, and special packet data accesses. To access data inside the packet, use the following syntax: <i>proto [expr: size]</i>
<i>proto</i>	Specifies the protocol layer for the index operation. The possible values are <b>ether</b> , <b>ip</b> , <b>tcp</b> , <b>udp</b> , or <b>icmp</b> . The byte offset, relative to the indicated protocol layer, is given by the <i>expr</i> value. To access data inside the packet, use the following syntax: <i>proto [expr: size]</i> The <i>size</i> argument is optional and indicates the number of bytes in the field of interest; it can be one, two, or four. The default is one.

You can combine expression elements using the following methods:

- A group of elements and operators in parentheses—The operators are the normal binary operators [+ , - , \* , / , & , |] and a length operator.



**Note**

To use a parenthesis in the expression, use the backslash escape character before the parenthesis ( \ ( ).

- Negation—Use **!** or **not**.
- Concatenation—Use **&&** or **and**.
- Alternation—Use **||** or **or**.

Negation has the highest precedence. Alternation and concatenation have equal precedence and are associated from left to right. Explicit and tokens, not juxtaposition, are required for concatenation. If you specify an identifier without a keyword, the most recent keyword is used.

For a detailed explanation of the Berkley Packet filter configuration options go to this location:

<http://www.freesoft.org/CIE/Topics/56.htm>.

The following example shows how to count unfragmented datagrams and fragmented zeros of fragmented datagrams only. This filter is implicitly applied to the TCP and UDP index operations. For instance, tcp[0] always indicates the first byte of the TCP header, and never indicates the first byte of an intervening fragment as shown in this example:

```
user@GUARD-conf-zone-scannet# flex-content-filter enabled count * *
expression ip[6:2]&0x1fff=0 pattern ""
```

The following example shows how to drop all TCP RST packets:

```
user@GUARD-conf-zone-scannet# flex-content-filter enabled drop * *
expression tcp[13]&4!=0 pattern ""
```

The following example shows how to count all ICMP packets that are not echo requests/echo replies (ping):

```
user@GUARD-conf-zone-scannet# flex-content-filter enabled count * *
expression "icmp [0]!=8 and icmp[0] != 0" pattern ""
```

The following example shows how to count all TCP packets that are destined to port 80 and that did not originate from port 1000:

```
user@GUARD-conf-zone-scannet# flex-content-filter enabled count * *
expression "tcp and dst port 80 and not src port 1000" pattern ""
```

## Understanding the pattern-expression Syntax

The pattern-expression is a regular expression that describes a string of characters. The pattern-expression describes a set of strings without actually listing its elements. This expression is made up of normal characters and special characters. Normal characters include all printable ASCII characters that are not considered to be special characters. Special characters are characters that have a special meaning and specify the type of matching that the Guard performs on the pattern-expression. The flex-content filter matches the pattern-expression with

the content of the packet (the packet payload). For example, the three strings version 3.1, version 4.0, and version 5.2 are described by the following pattern: version .\*\\.\*

Table 6-5 describes the special characters you can use.

**Table 6-5** Special Characters Used in the pattern-expression

Special character	Description
.*	Matches a string that may be present and can contain zero or more characters. For example, the pattern goo.*s matches the patterns goos, goods, good for dds, and so on.
\	Removes the special meaning of a special character. To use the special characters in this list as single-character patterns, remove the special meaning by preceding each character with a backslash (\). For example, two backslashes (\\) match one backslash (\), and one backslash and a period (\.) matches one period (.).  You must also precede an asterisk (*) with a backslash.
\xHH	Matches a hexadecimal value, where H is a hexadecimal digit and is not case-sensitive. Hexadecimal values must be exactly two digits long. For example, the pattern \x41 matches the hexadecimal value A.

By default, the pattern-expression is case sensitive. To define the pattern-expression as case-insensitive, use the **flex-content-filter** command with the **ignore-case** keyword. See the “[Adding a Flex-Content Filter](#)” section on [page 6-5](#) for more information.

The following example shows how to drop packets with a specific pattern in the packet payload. The pattern in the example was extracted from the Slammer worm. The *protocol*, *port*, and *tcpdump-expression* parameters are nonspecific.

```
user@GUARD-conf-zone-scannet# flex-content-filter enabled drop * *
expression " " pattern
\x89\xE5Qh\.dllhel32hkernQhounthickChGetTf\xB911
Qh32\.dhws2_f\xB9etQhsockf\xB9toQhsend\xBE\x18\x10\xAEB
```

## Displaying Flex-Content Filters

To display the Flex-Content filters, enter the following command in zone configuration mode:

```
show flex-content-filters
```

[Table 6-6](#) describes the fields in the **show flex-content-filters** command output.

**Table 6-6** *Field Descriptions for the show flex-content-filters Command*

Field	Description
Row	Specifies the Flex-Content filter priority.
State	Specifies the filter state (enabled or disabled).
Action	Specifies the action that the filter performs on the specific traffic type.
Protocol	Specifies the protocol number of the traffic that the filter processes.
Port	Specifies the destination port of the traffic the filter processes.
Start	Specifies the offset, in bytes, from the beginning of the packet payload where the pattern matching begins. This offset applies to the <i>pattern</i> field.
End	Specifies the offset, in bytes, from the beginning of the packet payload where the pattern matching ends. This offset applies to the <i>pattern</i> field.
Match-case	Specifies whether the pattern-expression that the filter matches is case sensitive or not case sensitive. yes=case-sensitive no=case-insensitive
TCPDump-expression	Specifies the tcpdump-expression to be matched with the packet in Berkley Packet filter format. See the <a href="#">“Understanding the tcpdump-expression Syntax” section on page 6-9</a> for the information on the tcpdump-expression syntax.

**Table 6-6** *Field Descriptions for the show flex-content-filters Command (continued)*

Field	Description
Pattern-filter	Specifies the regular expression data pattern to be matched with the packet payload. See the <a href="#">“Understanding the pattern-expression Syntax” section on page 6-12</a> for information on the pattern-expression syntax.
RxRate (pps)	Specifies in pps the current traffic rate that is measured for this filter.

## Deleting Flex-Content Filters

You can delete a flex-content filter, or you can disable a flex-content filter to prevent the Guard from filtering packets based on the filter expression. See the [“Changing the State of a Flex-Content Filter” section on page 6-16](#) for more information.

To delete a flex-content filter, perform the following steps:

- 
- Step 1** Display the list of flex-content filters and identify the row number of the flex-content filter that you want to delete.

See the [“Displaying Flex-Content Filters” section on page 6-14](#) for more information.

- Step 2** Delete the flex-content filter by entering the following command:

```
no flex-content-filter row-num
```

Use the *row-num* argument to specify the flex-content filter row number to be deleted. To delete all flex-content filters, enter an asterisk (\*).

---

This example shows how to delete a flex-content filter:

```
user@GUARD-conf-zone-scanner# no flex-content-filters 5
```

## Changing the State of a Flex-Content Filter

You can disable a flex-content filter to prevent the Guard from filtering packets based on the filter expression and to prevent it from filtering specific types of traffic. (The filter will remain in the flex-content filter list.)

You can then set the Guard to filter the specified traffic again, without the need to reconfigure the filter, or you can delete a flex-content filter. See the [“Deleting Flex-Content Filters”](#) section on page 6-15 for more information.

To change the state of a flex-content filter, perform the following steps:

- 
- Step 1** Display the list of flex-content filters and identify the row number of the flex-content filter for which you want to change the state.

See the [“Displaying Flex-Content Filters”](#) section on page 6-14 for more information.

- Step 2** Change the state of the flex-content filter by entering the following command:

```
flex-content-filter row-num {disabled | enabled}
```

The *row-num* argument specifies the flex-content filter row number.

---

This example shows how to disable a flex-content filter:

```
user@GUARD-conf-zone-scannet# flex-content-filters 5 disabled
```

## Configuring Bypass Filters

The bypass filter supports protection policy decisions that should not involve the Guard protection functions, including the anti-spoofing and anti-zombie functions, and forwards the specified traffic directly to the zone.



### Note

---

The Guard injects traffic that passes through the bypass filters on to the zone without applying a limit on the traffic rate as defined by the **rate-limit** command.

---

This section contains the following topics:

- [Adding a Bypass Filter](#)
- [Displaying Bypass Filters](#)
- [Deleting Bypass Filters](#)

## Adding a Bypass Filter

To add a bypass filter, enter the following command in zone configuration mode:

```
bypass-filter row-num src-ip [ip-mask] protocol dest-port [fragments-type]
```

[Table 6-7](#) provides the arguments for the **bypass-filter** command.

**Table 6-7 Arguments for the bypass-filter Command**

Parameter	Description
<i>row-num</i>	Assign a unique number from 1 to 9999. The row-number identifies the filter and defines priority among the bypass filters. The Guard operates the filters according to ascending row-number order.
<i>src-ip</i>	Processes traffic coming from a specific IP address. Use an asterisk (*) to indicate any IP address.
<i>ip-mask</i>	(Optional) Processes traffic coming from a specific subnet. The subnet mask can contain only Class C values. The default subnet is 255.255.255.255.
<i>protocol</i>	Processes traffic coming from a specific protocol. Use an asterisk (*) to indicate any protocol.  Review possible protocol numbers at the Internet Assigned Numbers Authority (IANA) website: <a href="http://www.iana.org/assignments/protocol-numbers">http://www.iana.org/assignments/protocol-numbers</a>

**Table 6-7 Arguments for the `bypass-filter` Command (continued)**

Parameter	Description
<code>dest-port</code>	Processes traffic destined to a specific destination port. Use an asterisk (*) to indicate any destination port.  Review possible port numbers at the Internet Assigned Numbers Authority (IANA) website:  <a href="http://www.iana.org/assignments/port-numbers">http://www.iana.org/assignments/port-numbers</a>
<code>fragments-type</code>	(Optional) Specifies whether or not the filter processes fragmented traffic. There are three fragmented types: <ul style="list-style-type: none"> <li>• <b>no-fragments</b>—Non-fragmented traffic</li> <li>• <b>fragments</b>—Fragmented traffic</li> <li>• <b>any-fragments</b>—Fragmented and non-fragmented traffic</li> </ul> The default is <b>no-fragments</b> .



**Note** You cannot specify both a fragments type and a destination port. To set the fragments type, enter \* for the destination port.

## Displaying Bypass Filters

To display the bypass filters, enter the following command in zone configuration mode:

```
show bypass-filters
```

Table 6-8 describes the fields in the **show bypass-filters** command output.

**Table 6-8 Field Descriptions for the `show bypass-filters` Command**

Field	Description
Row	Specifies the Bypass filter priority.
Source IP	Specifies the source IP address of the traffic that the filter processes.

**Table 6-8** Field Descriptions for the *show bypass-filters* Command

Field	Description
Source Mask	Specifies the source address mask of the traffic that the filter processes.
Proto	Specifies the protocol number of the traffic that the filter processes.
DPort	Specifies the destination port of the traffic that the filter processes.
Frg	Specifies whether or not the filter processes fragmented traffic: <ul style="list-style-type: none"> <li>• <b>yes</b>—The filter processes fragmented traffic</li> <li>• <b>no</b>—The filter processes non-fragmented traffic</li> <li>• <b>any</b>—The filter processes both fragmented and non-fragmented traffic</li> </ul>
RxRate (pps)	Specifies in pps the current traffic rate that is measured for this filter.

The source IP address, source address mask, protocol number, and destination port may be non-specific. An asterisk (\*) indicates that the filter acts on all field values or that more than one value was matched for the filter.

## Deleting Bypass Filters

To delete a bypass filter, perform the following steps:

- 
- Step 1** Display the list of bypass filters, and identify the row number of the bypass filter that you want to delete.
- See the previous section, “[Displaying Bypass Filters](#)”, for more information.
- Step 2** Delete the bypass filter by entering the following command in zone configuration mode:
- ```
no bypass-filter row-num
```

The *row-num* argument specifies the bypass filter row number to be deleted. To delete all Bypass filters, enter an asterisk (\*).

---

The following example shows how to delete a bypass filter:

```
user@GUARD-conf-zone-scannet# no bypass-filter 10
```

## Configuring User Filters

User filters apply the required protection level to the specified traffic flows, or drop the traffic. They define the first actions that the Guard takes when it identifies abnormal or malicious traffic.

Zone configuration includes a default set of user filters that are configured for on-demand protection, that can handle a wide range of attack types. You can modify user filters to customize the Guard protection capabilities and to set rules about how the Guard handles specific traffic flows when it suspects an attack.

The Guard continuously analyses traffic destined to the zone. When it detects abnormal traffic patterns, it begins producing dynamic filters that define how to handle the attack. The Guard, by default, adds an initial dynamic filter that directs all traffic to the user filters. Until the Guard has had enough time to analyze the attack, the user filters provide the first line of defense against the evolving DDoS attack.

The Guard examines both the user filters and the dynamic filters before deciding how to handle the specific traffic flow. It compares the first user filter that matches the flow with the dynamic filters and chooses the most severe protection measure suggested. It applies the appropriate protection level to the traffic flow to authenticate the traffic. The dynamic filters and the user filters can take actions in these descending severity levels: drop, strong, basic, and permit. Dynamic filters with actions of redirect/zombie and block-unauthenticated are applied even if a user filter to handle the same type of traffic exists because they affect the Guard authentication mechanisms and do not directly affect the traffic flow.

User filters are activated in ascending row-number order. When you add a new user filter it is important that you place it in the correct location in the list.

Table 6-9 describes the actions a User filter can take.

**Table 6-9**      *User Filter Actions*

| Action           | Description                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| permit           | Use this action to prevent statistical analysis of the flow and to prevent the anti-spoofing or anti-zombie protection functions from handling this flow. We recommend that you set a rate and burst limit to this filter because it is not handled by other protection mechanisms.                                                                                                                                                               |
| basic/redirect   | Use this action to authenticate applications over HTTP.                                                                                                                                                                                                                                                                                                                                                                                           |
| basic/reset      | Use this action to authenticate applications over TCP. We recommend that you use an action of basic/redirect for HTTP traffic flows.                                                                                                                                                                                                                                                                                                              |
| basic/default    | Use this action to authenticate non-TCP traffic flows.                                                                                                                                                                                                                                                                                                                                                                                            |
| basic/dns-proxy  | Use this action to authenticate TCP DNS traffic flows.                                                                                                                                                                                                                                                                                                                                                                                            |
| basic/safe-reset | Use this action to authenticate TCP application traffic flows that are not tolerant of TCP connection reset. We recommend that you use an action of basic/redirect for HTTP traffic flows.                                                                                                                                                                                                                                                        |
| drop             | Use this action to drop traffic flows.                                                                                                                                                                                                                                                                                                                                                                                                            |
| strong           | <p>Use this action when strong authentication for a traffic flow is required or when the previous filters do not seem suitable for the application. Authentication is performed for every connection.</p> <p>For TCP incoming connections, the Guard serves as a proxy, so we recommend that you do not use this action for these connections if the network is moderated according to IP addresses (such as using ACL-access control lists).</p> |

This section includes the following topics:

- [Adding User Filters](#)
- [Displaying User Filters](#)
- [Deleting User Filters](#)

## Adding User Filters

To add a user filter, perform the following steps:

- Step 1** Display the list of user filters and identify the location in the list in which you want to add the new filter. See the “[Displaying User Filters](#)” section on page 6-25 for more information.
- Step 2** If the current row numbers are consecutive, renumber the User filters in increments that allow you to insert the new user filters by entering the following command:

```
user-filter renumber [start [step]]
```

[Table 6-1](#) provides the arguments for the **user-filter renumber** command.

**Table 6-1** Arguments for the **user-filter renumber** Command

| Parameter    | Description                                                                                                             |
|--------------|-------------------------------------------------------------------------------------------------------------------------|
| <i>start</i> | (Optional) An integer from 1 to 10000 that denotes the new starting number of the User filter list. The default is 10.  |
| <i>step</i>  | (Optional) An integer from 1 to 1000 that defines the increment between the User filter row numbers. The default is 10. |

- Step 3** Add a new User filter by entering the following command:

```
user-filter row-num filter-action src-ip [ip-mask] protocol dest-port  
[fragments-type] [rate-limit rate burst units]
```

Table 6-11 provides the arguments for the **user-filter** command.

**Table 6-11 Arguments and Keywords for the user-filter Command**

| Parameter             | Description                                                                                                                                                                                                                                                                                                                                                             |
|-----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>row-num</i>        | A unique number from 1 to 1000. The row-number identifies the filter and defines priority among the User filters. The Guard operates the filters according to ascending row-number order.                                                                                                                                                                               |
| <i>filter-action</i>  | The action the filter performs on the specific traffic type. See <a href="#">Table 6-9</a> for more information.                                                                                                                                                                                                                                                        |
| <i>src-ip</i>         | Processes traffic coming from a specific IP address. Use an asterisk (*) to indicate any IP address.                                                                                                                                                                                                                                                                    |
| <i>ip-mask</i>        | (Optional) Processes traffic coming from a specific subnet. The subnet mask can contain only Class C values. The default subnet is 255.255.255.255.                                                                                                                                                                                                                     |
| <i>protocol</i>       | Processes traffic coming from a specific protocol. Use an asterisk (*) to indicate any protocol.<br><br>Review possible protocol numbers at the Internet Assigned Numbers Authority (IANA) website:<br><a href="http://www.iana.org/assignments/protocol-numbers">http://www.iana.org/assignments/protocol-numbers</a>                                                  |
| <i>dest-port</i>      | Processes traffic destined to a specific destination port. Use an asterisk (*) to indicate any destination port.<br><br>Review possible port numbers at the Internet Assigned Numbers Authority (IANA) website:<br><a href="http://www.iana.org/assignments/port-numbers">http://www.iana.org/assignments/port-numbers</a>                                              |
| <i>fragments-type</i> | (Optional) Specifies whether or not the filter processes fragmented traffic. There are three fragmented types: <ul style="list-style-type: none"> <li>• <b>no-fragments</b>—Non-fragmented traffic</li> <li>• <b>fragments</b>—Fragmented traffic</li> <li>• <b>any-fragments</b>—Fragmented and non-fragmented traffic</li> </ul> The default is <b>no-fragments</b> . |

**Table 6-11 Arguments and Keywords for the user-filter Command (continued)**

| Parameter    | Description                                                                                                                                                                                                                                                                                                               |
|--------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>rate</i>  | An integer greater than 64 that specifies the rate limitation. The user filter limits the traffic to this rate. The units are specified by the <i>units</i> parameter. The default is not to limit the filter traffic rate. The <i>rate</i> limit can be up to 10 times greater than the <i>burst</i> limit.              |
| <i>burst</i> | An integer greater than 64 that specifies the traffic burst limit. The units are bits, kilo-bits, kilo-packets, mega-bits, and packets that correspond to the units that are specified by the <i>units</i> parameter. The <i>burst</i> limit can be up to eight times greater than the <i>rate</i> limit.                 |
| <i>units</i> | The rate limit units. The units can be one of the following: <ul style="list-style-type: none"> <li>• <b>bps</b>—Bits per second</li> <li>• <b>kbps</b>—Kilobits per second</li> <li>• <b>kpps</b>—Kilo packets per second</li> <li>• <b>mbps</b>—Megabits per second</li> <li>• <b>pps</b>—Packets per second</li> </ul> |

The following example shows how to renumber the user filters starting from 10 in steps of 5 and how to add a user filter in row number 12, aimed at traffic coming from all source IP addresses of protocol 6 (TCP) flowing to destination port 25 (SMTP) and limits the traffic flow rate to 600 pps and the burst size to 400 packets.

```
user@GUARD-conf-zone-scannet# user-filter renumber 10 5
user@GUARD-conf-zone-scannet# user-filter 12 permit * 6 25 rate-limit
600 400 pps
```

## Displaying User Filters

User filters are part of the zone configuration. To display user filters, use the **show** command or the **show running-config** command in zone configuration mode.



### Tip

To display the user filter configuration at the beginning of the display, use the **show** command or the **show running-config** command with the **| begin USER FILTERS** option.

[Table 6-12](#) describes the user filter fields in the **show** command output

**Table 6-12** *Field Descriptions for User Filter Fields in the show Command*

| Field        | Description                                                                                                                                                                                                                                                                                                                     |
|--------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Row          | Specifies the user filter priority.                                                                                                                                                                                                                                                                                             |
| Source IP    | Specifies the source IP address of the traffic that the filter processes.                                                                                                                                                                                                                                                       |
| Source Mask  | Specifies the source address mask of the traffic that the filter processes.                                                                                                                                                                                                                                                     |
| Proto        | Specifies the protocol number of the traffic that the filter processes.                                                                                                                                                                                                                                                         |
| DPort        | Specifies the destination port of the traffic that the filter processes.                                                                                                                                                                                                                                                        |
| Frg          | Specifies whether or not the filter processes fragmented traffic: <ul style="list-style-type: none"> <li>• <b>yes</b>—The filter processes fragmented traffic</li> <li>• <b>no</b>—The filter processes non-fragmented traffic</li> <li>• <b>any</b>—The filter processes both fragmented and non-fragmented traffic</li> </ul> |
| RxRate (pps) | Specifies in pps the current traffic rate that is measured for this filter.                                                                                                                                                                                                                                                     |
| Action       | Specifies the action the filter performs on the specific traffic type. See <a href="#">Table 6-9</a> for more information.                                                                                                                                                                                                      |

**Table 6-12** Field Descriptions for User Filter Fields in the show Command

| Field | Description                                                                                                                                                                                                           |
|-------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Rate  | Specifies the limit on the traffic rate the user filter can handle. The rate is displayed in the units specified by the <i>Units</i> field.                                                                           |
| Burst | Specifies the traffic burst limit that the filter allows for the specific flow. The units are bits, kilo-bits, kilo-packets, mega-bits, and packets, and correspond to the units specified in the <i>Units</i> field. |
| Units | Specifies the units by which the rate and the burst rate are displayed.                                                                                                                                               |

The source IP address, source address mask, protocol number, and destination port may be non-specific. An asterisk (\*) indicates that the filter acts on all field values or that more than one value was matched for the filter.

## Deleting User Filters

To delete a user filter, perform the following steps:



### Caution

If you remove all user filters when the policy action is set to to-user-filter, unprotected traffic is passed to the zone. See [Chapter 7, “Configuring Policy Templates and Policies”](#) for more information on policy actions.

- Step 1** Display the list of user filters and identify the row number of the user filter that you want to delete. See the previous section, “[Displaying User Filters](#)”, for more information.
- Step 2** Delete the filter by entering the following command in zone configuration mode:

```
no user-filter row-num
```

The *row-num* argument specifies the user filter row number. Enter an asterisk (\*) to delete all User filters.

The following example shows how to delete all user filters:

```
user@GUARD-conf-zone-scannet# no user-filter *
```

## Configuring Dynamic Filters

Dynamic filters apply the required protection level to traffic flow and define how to handle the attack. The Guard creates dynamic filters when it identifies an anomaly in the zone traffic, which occurs when the flow exceeds the zone policy thresholds, and continuously adapts this set of filters to zone traffic and the type of DDoS attack. The dynamic filters have a limited life span and are erased when the attack ends.

The Guard, by default, creates an initial dynamic filter that directs all traffic to the user filters. Until the Guard has had enough time to analyze the attack, the user filters provide the first line of defense against the evolving DDoS attack.

The Guard examines both the user filters and the dynamic filters before deciding how to handle the specific traffic flow. It compares the first user filter that matches the flow with the dynamic filters and chooses the most severe protection measure suggested. It applies the appropriate protection level to the traffic flow to authenticate the traffic. The dynamic filters and the user filters can take actions in these descending severity levels: drop, strong, basic, and permit. Dynamic filters with actions of redirect/zombie and block-unauthenticated are applied even if a user filter to handle the same type of traffic exists because they affect the Guard authentication mechanisms and do not directly affect the traffic flow.

You can add dynamic filters only when zone protection is enabled.

[Table 6-13](#) describes the different actions dynamic filters can take.

**Table 6-13**      *Dynamic Filter Actions*

| Action | Description                                                                          |
|--------|--------------------------------------------------------------------------------------|
| drop   | Drops the traffic.                                                                   |
| strong | Applies the Strong protection level anti-spoofing functions to the specific traffic. |

**Table 6-13** Dynamic Filter Actions (continued)

| Action                       | Description                                                                                                                                                              |
|------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| to-user-filters              | Forwards the traffic to the user filters. If you have modified the default user filters, you must make sure that there is a user filter to handle these dynamic filters. |
| block-unauthenticated-basic  | Enhances the Basic protection level anti-spoofing functions so that they drop traffic flows that have not been authenticated.                                            |
| block-unauthenticated-strong | Enhances the Strong protection level anti-spoofing functions so that they drop traffic flows that have not been authenticated.                                           |
| block-unauthenticated-dns    | Drops traffic flows that flow to DNS UDP servers (protocol=UDP, port=53) and that the DNS anti-spoofing mechanisms defined as unauthenticated.                           |
| redirect/zombie              | Enhances authentication for all user filters with an action of <b>basic/redirect</b> .                                                                                   |

Dynamic filters are configured to remain active for a specific amount of time. Depending on how the filter was created, the dynamic filter timeout parameter is configured in one of the following ways:

- Dynamic filters created by a zone policy—The dynamic filter timeout is set to the policy timeout. To modify the timeout of additional Dynamic filters that are created by the policy, change the timeout of the policy that created the dynamic filter by entering the **timeout** command in policy configuration mode.
- User-defined dynamic filters—You define the dynamic filter timeout by configuring the *exp-time* argument of the **dynamic-filter** command.

When the dynamic filter timeout expires, the Guard determines whether or not the dynamic filter should be deactivated based on current traffic conditions. If the Guard determines that the dynamic filter should not be deactivated, the filter remains active for another time span. See the [“Deactivating Dynamic Filters” section on page 6-34](#) for more information about deactivating dynamic filters.

This section includes the following topics:

- [Adding Dynamic Filters](#)
- [Displaying Dynamic Filters](#)
- [Deleting Dynamic Filters](#)
- [Deactivating Dynamic Filters](#)

## Adding Dynamic Filters

To add a Dynamic filter, enter the following command:

```
dynamic-filter action { exp-time | forever } src-ip [ip-mask] protocol
dest-port [fragments-type]
```

You can use multiple **dynamic-filter** commands to add multiple Dynamic filters.

[Table 6-14](#) provides the arguments for the **dynamic-filter** command.

**Table 6-14 Arguments and Keywords for the dynamic-filter Command**

| Parameter       | Description                                                                                                                                         |
|-----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>action</i>   | The action the filter performs on a specific traffic flow. See <a href="#">Table 6-13</a> for more information.                                     |
| <i>exp-time</i> | An integer from 1 to 3,000,000 that specifies the time, in seconds, for the filter to be active.                                                    |
| <b>forever</b>  | The filter are active for an unlimited time. The filter are removed when protection ends.                                                           |
| <i>src-ip</i>   | Processes traffic coming from a specific IP address. Use an asterisk (*) to indicate any IP address.                                                |
| <i>ip-mask</i>  | (Optional) Processes traffic coming from a specific subnet. The subnet mask can contain only Class C values. The default subnet is 255.255.255.255. |

**Table 6-14** Arguments and Keywords for the *dynamic-filter Command (continued)*

| Parameter             | Description                                                                                                                                                                                                                                                                                                                                                             |
|-----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>protocol</i>       | Processes traffic coming from a specific protocol. Use an asterisk (*) to indicate any protocol.<br><br>Review possible protocol numbers at the Internet Assigned Numbers Authority (IANA) website:<br><br><a href="http://www.iana.org/assignments/protocol-numbers">http://www.iana.org/assignments/protocol-numbers</a>                                              |
| <i>dest-port</i>      | Processes traffic destined to a specific destination port. Use an asterisk (*) to indicate any destination port.<br><br>Review possible port numbers at the Internet Assigned Numbers Authority (IANA) website:<br><br><a href="http://www.iana.org/assignments/port-numbers">http://www.iana.org/assignments/port-numbers</a>                                          |
| <i>fragments-type</i> | (Optional) Specifies whether or not the filter processes fragmented traffic. There are three fragmented types: <ul style="list-style-type: none"> <li>• <b>no-fragments</b>—Non-fragmented traffic</li> <li>• <b>fragments</b>—Fragmented traffic</li> <li>• <b>any-fragments</b>—Fragmented and non-fragmented traffic</li> </ul> The default is <b>no-fragments</b> . |

The following example shows how to add a dynamic filter that directs the traffic to the user filters with an expiration time of 600 seconds:

```
admin@GUARD-conf-zone-scannet# dynamic-filter to-user-filters 600
192.128.30.45 255.255.255.252 6 88 no-fragments
```

## Displaying Dynamic Filters

You can display the dynamic filters that the Guard created. This command provides the following options:

- **show dynamic-filters [details]**—Displays a list of all dynamic filters.
- **show dynamic-filters *dynamic-filter-id* [details]**—Displays a single dynamic filter.

- **show dynamic-filters sort {action | exp-time | id | filter-rate}**—Displays a sorted list of all dynamic filters.

To display the pending dynamic filters, use the **show recommendations** command. See [Chapter 8, “Using Interactive Protect Mode”](#) for more information on pending dynamic filters.

[Table 6-15](#) provides the arguments for the **show dynamic-filters** command.

**Table 6-15 Arguments for the show dynamic-filters Command**

| Parameter                | Description                                                                                                                                                                               |
|--------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>dynamic-filter-id</i> | The identification number (ID) of the specific Dynamic filter to display. This integer is assigned by the Guard. To identify the filter ID, display the complete list of Dynamic filters. |
| <b>details</b>           | Displays Dynamic filter in detail. The details consist of additional information on the attack flow, the triggering rate, and the policy that produced it.                                |
| <b>action</b>            | Displays Dynamic filters by their action, ranging from the most severe (drop) to the least severe (notify).                                                                               |
| <b>exp-time</b>          | Displays Dynamic filters by their expiration time in ascending order.                                                                                                                     |
| <b>id</b>                | Displays Dynamic filters by ascending ID number.                                                                                                                                          |
| <b>filter-rate</b>       | Displays Dynamic filters by the triggering rate, measured in pps, in ascending order.                                                                                                     |



**Note**

The Guard displays a maximum of 1,000 Dynamic filters. When more than 1,000 Dynamic filters are active, examine the log file or zone report for a complete list of Dynamic filters.

The following example shows how to display a dynamic filter in detail:

```
user@GUARD-conf-zone-scannet# show dynamic-filters 876 details
```

Table 6-16 describes the fields in the **show dynamic-filters** command output.

**Table 6-16** *Field Descriptions for show dynamic-filters Command Output*

| Field        | Description                                                                                                                                                                                                                                                                                                                     |
|--------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ID           | Specifies the filter identification number.                                                                                                                                                                                                                                                                                     |
| Action       | Specifies the action that the filter performs on the traffic flow. See Table 6-13 for more information.                                                                                                                                                                                                                         |
| Exp Time     | Specifies the amount of time the filter is active. After the time expires, the filter may be deleted according to the thresholds you defined using the <b>filter-termination</b> command.                                                                                                                                       |
| Source IP    | Specifies the source IP address of the traffic that the filter processes.                                                                                                                                                                                                                                                       |
| Source Mask  | Specifies the source address mask of the traffic that the filter processes.                                                                                                                                                                                                                                                     |
| Proto        | Specifies the protocol number of the traffic that the filter processes.                                                                                                                                                                                                                                                         |
| DPort        | Specifies the destination port of the traffic that the filter processes.                                                                                                                                                                                                                                                        |
| Frg          | Specifies whether or not the filter processes fragmented traffic: <ul style="list-style-type: none"> <li>• <b>yes</b>—The filter processes fragmented traffic</li> <li>• <b>no</b>—The filter processes non-fragmented traffic</li> <li>• <b>any</b>—The filter processes both fragmented and non-fragmented traffic</li> </ul> |
| RxRate (pps) | Specifies in pps the current traffic rate that is measured for this filter.                                                                                                                                                                                                                                                     |

The source IP address, source address mask, protocol number, and destination port may be non-specific. An asterisk (\*) indicates that the filter acts on all field values or that more than one value was matched for the filter.

[Table 6-17](#) describes the additional fields in the **show dynamic-filters details** command output.

**Table 6-17** *Field Descriptions for show dynamic-filters details Command*

| Field           | Description                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|-----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Attack flow     | Specifies the mitigated attack flow characteristics. The mitigated attack flow, displayed in the dynamic Filters table, might have a wider range than the attack flow. For example, a non-spoofed attack on port 80 blocks all TCP traffic from the originating source IP address, not from port 80 only. The attack flow contains the Source IP, Source Mask, Proto, DPort, and Frg fields that are described in <a href="#">table Table 6-16</a> . |
| Triggering Rate | Specifies the rate of the attack flow that exceeded a policy threshold.                                                                                                                                                                                                                                                                                                                                                                              |
| Threshold       | Specifies the policy threshold that was exceeded by the attack flow.                                                                                                                                                                                                                                                                                                                                                                                 |
| Policy          | Specifies the policy that produced the Dynamic filter. See <a href="#">Chapter 7, “Configuring Policy Templates and Policies”</a> for more information.                                                                                                                                                                                                                                                                                              |

## Deleting Dynamic Filters

When you delete dynamic filters the deletion is effective for a limited period of time because the Guard continues to configure new dynamic filters when zone protection is enabled.

To delete a Dynamic filter, perform the following steps:

- 
- Step 1** Display the list of dynamic filters and identify the ID of the dynamic filter that you want to delete.
- See the previous section, “[Displaying Dynamic Filters](#)”, for more information.
- Step 2** Delete the relevant dynamic filter by entering the following command in zone configuration mode:

```
no dynamic-filter dynamic-filter-id
```

The *dynamic-filter-id* argument specifies the dynamic filter ID. To delete all zone dynamic filters, use an asterisk (\*).

---

The following example shows how to delete a dynamic filter:

```
user@GUARD-conf-zone-scannet# no dynamic-filter 876
```

To prevent unwanted dynamic filters from being reproduced, perform one of the following actions:

- Deactivate the policy that produces the dynamic filters (see the [“Changing the Policy State” section on page 7-20](#) for more information.) To determine which policy produced the unwanted dynamic filters, see the [“Displaying Dynamic Filters” section on page 6-30](#).
- Configure a bypass filter for the desired traffic flow. See the [“Configuring Bypass Filters” section on page 6-16](#) for more information.
- Increase the threshold of the policy that produced the undesired dynamic filter. See the [“Configuring the Policy Threshold” section on page 7-21](#) for more information.

## Deactivating Dynamic Filters

When the dynamic filter timeout expires, the Guard determines whether or not the dynamic filter should be deactivated based on current traffic conditions. If the Guard determines that the dynamic filter should not be deactivated, the filter remains active for another time span.

Dynamic filter are deactivated if one of the following conditions applies:

- The total zone malicious traffic rate, which equals the sum of the spoofed and dropped traffic, is less than or equal to the zone-malicious-rate termination threshold. See the following commands in this section.
- The dynamic filter measures the traffic rate (the filter rate counter does not display N/A) and the filter-rate termination threshold (see the following commands in this section) is equal to or greater than both of the following:
  - The dynamic filter current traffic rate.

- The dynamic filter average traffic rate during a user-configured time span. This time span is defined by the policy timeout parameter. See the [“Configuring the Policy Timeout” section on page 7-28](#) for more information.



---

**Note** Dynamic filters with an action of to-user-filters, block-unauthenticated, redirect/zombie, or notify do not measure traffic rate.

---

To configure the zone malicious traffic threshold, enter the following command in zone configuration mode:

**filter-termination zone-malicious-rate *threshold***

The *threshold* argument specifies the zone malicious traffic threshold for a zone in pps units. This traffic consists of the sum of the spoofed and the dropped traffic. The default value is 50 pps.

To configure the dynamic filter-rate termination threshold, enter the following command in zone configuration mode:

**filter-termination filter-rate *threshold***

The *threshold* argument specifies the dynamic filter traffic threshold in pps units. The default value is 2 pps.

The following example shows how to configure the dynamic filter termination rates:

```
user@GUARD-conf-zone-scannet# filter-termination zone-malicious-rate  
200  
user@GUARD-conf-zone-scannet# filter-termination filter-rate 50
```

