



INDEX

-
- A**
- AAA authentication
 - AUS and [3-7](#)
 - ACS roles, overview [1-4](#)
 - Adaptive Security Device Manager
 - See ASDM
 - adding
 - ASDM, PDM, or security appliance image files, troubleshooting [B-6](#)
 - devices
 - directly to AUS [3-5](#)
 - of auto update type to DCR [A-12](#)
 - that exist in DCR to Security Manager [A-12](#)
 - to Common Services, DCR [A-12](#)
 - to Security Manager [A-4](#)
 - software images [4-2](#)
 - administrative tasks [7-1](#)
 - NAT settings, specifying [7-1](#)
 - user roles and AUS permissions, understanding [1-6](#)
 - Cisco Secure ACS roles [C-4](#)
 - CiscoWorks Server roles [C-2](#)
 - Apache webserver [A-11](#)
 - API Reader role and AUS privileges [C-5](#)
 - API Writer role and AUS privileges [C-5](#)
 - Approver role and AUS privileges [C-3](#)
 - ASA configuration files
 - assigning
 - to a single device [5-4](#)
 - deleting [4-4](#)
 - viewing [4-4](#)
 - ASA devices
 - configuration files
 - viewing [4-4](#)
 - image files
 - adding [4-2](#)
 - deleting [4-4](#)
 - initial configuration of (bootstrapping) [D-1](#)
 - number supported [1-3](#)
 - ASA image files, troubleshooting
 - cannot add through the AUS GUI [B-6](#)
 - errors when trying to add [B-6](#)
 - ASA software images
 - assigning
 - to a single device [5-4](#)
 - to multiple devices [5-7](#)
 - deleting [4-4](#)

- ASDM **1-4**
 - browser launch, overview **1-4**
 - image files
 - adding, troubleshooting **B-6**
 - deleting **4-4**
 - updating **2-17**
 - launching
 - from AUS **3-14**
 - from Security Manager **3-14**
 - non-default HTTPS port number on the device **3-14**
- ASDM configuration files
 - assigning
 - to a single device **5-4**
 - to multiple devices **5-7**
- ASDM image files, troubleshooting
 - errors when trying to add **B-6**
- ASDM images
 - deleting **4-4**
- assigning devices to images, overview **1-3**
- assigning images to a device
 - multiple images **5-4**
 - one image **5-7**
 - overview **1-3**
 - Select Device Assignments for Image page elements (table) **5-8**
- AUS (Auto Update Server)
 - managing from DCR
 - adding **A-15**
 - deleting **A-16**
 - editing **A-15**
- AUS database **1-5**
 - back up of **1-5**
- AUS Remote Interface role and privileges **C-5**
- authentication errors, troubleshooting **B-4**
- auto update
 - configuring a schedule **3-8**
 - scheduling **3-8**
- Auto Update Feature
 - overview **1-3**
 - using **3-12**
- Auto Update Immediate feature
 - auto update credentials, and **3-7**
 - HTTPS port number
 - changing from default **3-12**
 - restriction **3-12**
 - overview **1-5**
 - TACACS user name, and **3-7**
- auto update type
 - canceling a schedule **3-10**
- auto update types
 - any time **3-8**
 - daily **3-8**
 - never **3-8**
 - one time **3-8**
 - weekly **3-8**

B

- backup
 - of AUS database [1-5](#)
- bootstrapping devices to work with AUS [D-1](#)
 - CNS devices [D-6](#)
 - security appliances [D-1](#)
- browser access to AUS, troubleshooting [B-8](#)
- browser-server security
 - enabling on the server
 - from the CiscoWorks Server GUI [2-9](#)
 - from the CLI [2-10](#)
- buttons grayed-out, troubleshooting [B-9](#)

C

- canceling
 - a scheduled auto update [3-10](#)
- cautions
 - regarding
 - ASDM and PDM image files, updating [2-17](#)
 - ASDM launching [3-14](#)
 - configuration files, deleting [4-4](#)
 - deleting an image file assigned to multiple devices [4-4](#)
 - device manager launching [3-14](#)
 - PDM launching [3-14](#)
 - security appliance image files, updating [2-17](#)
- changing
 - CNS bootstrap password in AUS [D-8](#)
 - transport protocol
 - to AUS [A-5](#)
 - changing in AUS [D-8](#)
- Cisco Secure ACS roles and AUS privileges
 - API Reader [C-5](#)
 - API Writer [C-5](#)
 - AUS Remote Interface [C-5](#)
 - GUI Reader [C-5](#)
 - GUI Writer [C-5](#)
 - Help Desk [C-5](#)
 - Network Administrator [C-4](#)
 - Network Operator [C-4](#)
 - table comparing [C-5](#)
- Cisco Security Management Suite home page
 - opening
 - normal mode (HTTP) [2-2](#)
 - SSL-enabled mode (HTTPS) [2-2](#)
- Cisco Security Management Suite server
 - logging into and exiting [2-3](#)
- Cisco Security Management Suite Server, logging in to [2-3](#)
- Cisco Security Manager
 - See Security Manager
- CiscoWorks Common Services
 - logging into and exiting [2-3](#)
- simultaneous requests to a large number of devices to contact AUS [3-12](#)

- CiscoWorks desktop, logging in to [2-3](#)
- CiscoWorks home page
 - opening
 - normal mode (HTTP) [2-2](#)
 - SSL-enabled mode (HTTPS) [2-2](#)
- CiscoWorks Server roles, and AUS privileges [C-2](#)
 - Approver [C-3](#)
 - Help Desk [C-3](#)
 - Network Administrator [C-3](#)
 - Network Operator [C-3](#)
 - System Administrator [C-3](#)
 - table comparing [C-3](#)
- CNS bootstrap password [D-8](#)
- CNS devices
 - bootstrapping [D-6](#)
 - CNS Devices report, viewing [6-12](#)
- CNS Event Gateway feature
 - overview [1-3](#)
 - Security Manager, and [D-6](#)
- CNS services
 - configuring
 - on CNS devices [D-6](#)
- Common Services
 - and AUS interoperability
 - overview of [A-11](#)
 - components for AUS [A-11](#)
- Common Services, administering
 - daemon manager, using [2-9](#)
- Common Services Backup dialog box [1-5](#)
- Configuration Engine [A-3](#)
 - configuration files
 - assigning
 - overview [1-4](#)
 - procedure [5-4, 5-7](#)
 - deleting
 - overview [1-4](#)
 - procedure [4-4](#)
 - updating [2-14](#)
 - viewing [4-4](#)
 - viewing, overview [1-4](#)
 - configuring
 - AUS settings
 - after adding devices to Security Manager [A-7](#)
 - before adding devices to AUS or Security Manager [D-1](#)
 - on CNS devices [D-6](#)
 - auto update schedule [3-8](#)
 - CNS devices [D-6](#)
 - security appliances [D-1](#)
 - security appliances to use AUS [A-2](#)
 - Security Manager and AUS
 - to communicate with PIX and ASA devices [A-2](#)
 - Security Manager to use AUS [A-3](#)
 - credentials
 - specifying
 - for device to authenticate AUS [3-7](#)
 - for device to contact AUS [3-7](#)

- ## D
- daemon manager
 - restarting on Windows [2-9](#)
 - DCR [A-12](#)
 - adding, devices to [A-12](#)
 - and AUS credentials [A-14](#)
 - cannot add a display name that exists in [A-6](#)
 - cannot add DNS hostname/domain name that exists in [A-7](#)
 - overview of [A-12](#)
 - DCR Administration
 - AUS management
 - adding devices [A-15](#)
 - deleting AUS [A-16](#)
 - editing devices [A-15](#)
 - deleting
 - ASDM image files [4-4](#)
 - AUS (Auto Update Server) [A-16](#)
 - configuration files [4-4](#)
 - devices
 - from AUS [3-12](#)
 - from DCR [3-11](#)
 - from Security Manager [3-11](#)
 - PDM image files [4-4](#)
 - security appliance image files [4-4](#)
 - deploying
 - AUS behind NAT
 - in enterprise DMZ [1-6](#)
 - in enterprise networks [1-6](#)
 - configurations
 - using non-Workflow mode [A-3](#)
 - using Workflow mode [A-3](#)
 - deployment job
 - configuring
 - Security Manager to use AUS [A-3](#)
 - Deployment Manager window [A-9](#)
 - and status of deployment [A-9](#)
 - deployment mechanism
 - overview of
 - for AUS-managed devices [A-9](#)
 - deployment method
 - and transport protocols [A-10](#), [A-11](#)
 - for IOS routers
 - added using Add Device from Network option [A-11](#)
 - for PIX and ASA devices
 - added using the Add New Device option [A-10](#)
 - Detail Device Event report, viewing [6-12](#)
 - Device Administration policy
 - configuring AUS settings, using [A-7](#)
 - Device and Credential Repository
 - See DCR
 - device import
 - understanding [A-4](#)
 - device manager, launching
 - from Security Manager [3-14](#)
 - HTTPS port number

- changing from default value [3-14](#)
- devices
 - adding
 - directly to AUS [3-5](#)
 - from Security Manager [A-4](#)
 - AUS, viewing devices that have contacted [6-3](#)
 - bootstrapping to work with AUS [D-1](#)
 - CNS devices [D-6](#)
 - security appliances [D-1](#)
 - deleting [3-11](#)
 - device summaries
 - device not appearing in, troubleshooting [B-2](#)
 - summary element descriptions (table) [3-2](#)
 - viewing [3-1](#)
 - device support
 - adding directly to AUS, overview [1-3](#)
 - deleting from AUS, overview [1-4](#)
 - HTTPS port number
 - device manager, launching [3-14](#)
 - image assignments
 - caution regarding assignment to multiple devices [4-4](#)
 - Device Assignment Summary (table) [5-3](#)
 - summaries of, viewing in AUS [5-3](#)
 - initial configuration (bootstrapping) [D-1](#)
 - CNS devices [D-6](#)
 - security appliances [D-1](#)
 - IOS devices with dynamically assigned addresses, managing [1-3](#)
 - rebooting after assignment [B-8](#)
 - summary information on, viewing [3-1](#)
 - troubleshooting
 - downloading the same file repeatedly [B-8](#)
 - not appearing in device summaries [B-2](#)
 - not contacting AUS [B-2](#)
 - two images of the same type assigned [B-7](#)
 - DHCP support feature [1-3](#)
 - discovery
 - of a device [A-5](#)
 - discovery mechanism
 - overview of
 - for AUS-managed devices [A-8](#)
 - discovery method
 - and transport protocols [A-10, A-11](#)
 - for IOS routers
 - added using Add Device from Network option [A-11](#)
 - for PIX and ASA devices
 - added using the Add New Device option [A-10](#)
 - DMZ
 - AUS deployment and [1-6](#)

E

editing

- AUS (Auto Update Server) [A-15](#)

- polling interval [3-9](#)

enable password

- specifying

- for device to authenticate AUS [3-7](#)

- error messages, understanding [B-12](#)

- Event Failure Summary report, viewing [6-8](#)

- Event report, viewing [6-3](#)

- element descriptions (table) [6-4](#)

- Event Type Descriptions (table) [6-6](#)

exiting

- Cisco Security Management Suite Server [2-3](#)

- CiscoWorks Common Services [2-3](#)

F

- Firewall Services Module [1-5](#)

FWSM

- See Firewall Services Module

G

- getting started [2-1](#)

- navigating in AUS [2-1](#)

- CiscoWorks Login Window (figure) [2-6](#)

- CiscoWorks server desktop (figure) [2-8](#)

- logging in to the CiscoWorks desktop [2-3](#)

- starting AUS [2-6](#)

- GUI Reader role and AUS privileges [C-5](#)

- GUI Writer role and AUS privileges [C-5](#)

H

- Help Desk role and AUS privileges

- Cisco Secure ACS [C-5](#)

- CiscoWorks Server [C-3](#)

- HTTPS port number

- changing from default

- device manager, launching [3-14](#)

- requesting auto update [3-12](#)

I

- image (file) management [1-3](#)

- image assignments

- summary information for, viewing [5-6](#)

- to devices

- Assign an Image to Devices (table) [5-8](#)

- Device Assignment Summary (table) [5-3](#)

- multiple images [5-4](#)

- one image [5-7](#)

- summary information, viewing [5-3](#)

troubleshooting

cannot apply two images of the same type [B-7](#)

devices not current after assignment [B-7](#)

IOS devices

and CNS Event Gateway [1-2](#)

L

logging into

Cisco Security Management Suite [2-3](#)

M

managed devices

bootstrapping [D-1](#)

list of [1-3](#)

modifying

polling interval

for AUS-device contact [3-9](#)

N

NAT

and AUS deployment [1-6](#)

settings, specifying [7-1](#)

support feature [1-3](#)

navigating in AUS [2-1](#)

Network Administrator role and AUS privileges

Cisco Secure ACS [C-4](#)

CiscoWorks Server [C-3](#)

Network Operator role and AUS privileges

Cisco Secure ACS [C-4](#)

CiscoWorks Server [C-3](#)

No Contact Since report, viewing [6-11](#)

non-Workflow mode

overview of [A-3](#)

O

overview of AUS [1-1](#)

administrative tasks

NAT settings, specifying [7-1](#)

user roles and permissions, understanding [1-6](#)

deploying AUS in your network [1-6](#)

features in this release [1-3](#)

ACS roles consistent with CiscoWorks format [1-4](#)

ASDM browser launch [1-4](#)

ASDM file management [1-3](#)

Auto Update Feature [1-3](#)

backup of AUS database [1-5](#)

canceling an auto update [1-5](#)

configuration files, deleting [1-4](#)

device assignment to configuration files [1-4](#)

- device assignment to images [1-3](#)
- devices, adding directly in AUS [1-3](#)
- devices, deleting [1-4](#)
- DHCP support [1-3](#)
- disabling auto updates [1-5](#)
- image (file) management [1-3](#)
- integration with Security Manager [1-5](#)
- IOS devices, managing [1-3](#)
- managed devices list [1-3](#)
- NAT support [1-3](#)
- PDM browser launch [1-4](#)
- PDM file management [1-3](#)
- reports [1-4](#)
- restore of AUS database [1-5](#)
- scheduling an auto update [1-5](#)
- security appliance configuration file assignment [1-3](#)
- security appliances, number supported [1-3](#)
- Solaris support [1-5](#)
- support for ASA [1-5](#)
- support for PIX software version 7.0 [1-5](#)
- PDM [1-4](#)
 - browser launch, overview [1-4](#)
 - image files
 - adding, troubleshooting [B-6](#)
 - deleting [4-4](#)
 - updating [2-17](#)
 - launching
 - from AUS [3-14](#)
 - from Security Manager [3-14](#)
 - non-default HTTP port number on the device [3-14](#)
 - PDM configuration files
 - assigning
 - to a single device [5-4](#)
 - to multiple devices [5-7](#)
 - PDM image files, troubleshooting
 - cannot add through the AUS GUI [B-6](#)
 - errors when trying to add [B-6](#)
 - PDM images
 - deleting [4-4](#)
 - PIX configuration files
 - assigning
 - to a single device [5-4](#)
 - deleting [4-4](#)
 - viewing [4-4](#)
 - PIX Device Manager
 - See PDM
 - PIX image files, troubleshooting
 - cannot add through the AUS GUI [B-6](#)
 - errors when trying to add [B-6](#)

P

- password
 - changing for CNS services [D-8](#)
 - specifying
 - for device to contact AUS [3-7](#)

PIX security appliances

- number supported [1-3](#)

- See security appliances

PIX software images

- assigning

- to a single device [5-4](#)

- to multiple devices [5-7](#)

- deleting [4-4](#)

policies

- assigning to device [A-4](#)

- deploying [A-3](#)

- discovery of [A-8](#)

policies, factory-default [A-7](#)

polling interval

- default value [3-8](#)

- for devices to contact AUS

- modifying [3-9](#)

- modifying

- from Security Manager [3-9](#)

- from the Device view [3-10](#)

- from the Policy view [3-10](#)

- on the device [D-3](#)

- setting

- on the device [D-3](#)

R

rebooting, cannot start AUS after,
troubleshooting [B-9](#)

reports

- report types in this release [1-4](#)

- viewing

- CNS Devices report [6-12](#)

- Detail Device Event report [6-12](#)

- Event Failure Summary report [6-8](#)

- Event report [6-3](#)

- Event Success Summary report [6-10](#)

- No Contact Since report [6-11](#)

- System Info report [6-1](#)

- troubleshooting reports [B-8](#)

- restoring [1-5](#)

- AUS database [1-5](#)

S

security, setting up

- SSL

- enabling from the CiscoWorks
Server [2-9](#)

- enabling from the CLI [2-10](#)

- security appliances [4-4](#)

- configuration files

- viewing [4-4](#)

- image files

- adding [4-2](#)

- deleting [4-4](#)

- updating [2-17](#)

- initial configuration of (bootstrapping) [D-1](#)

- number supported [1-3](#)

- Security Manager [A-2](#)

- and CNS Event Gateway feature [D-6](#)
 - configuration
 - for using AUS [A-2](#)
 - device manager, launching [3-14](#)
 - interoperation with AUS [1-5](#)
 - overview of [A-1](#)
 - Security Manager menu options
 - not supported for AUS-managed devices
 - Add Device from Config File [A-5](#)
 - Add Device from Network [A-5](#)
 - supported for AUS-managed devices
 - Add Device from DCR [A-5](#)
 - Add New Device [A-5](#)
 - software files, managing [4-1](#)
 - adding [4-2](#)
 - deleting [4-4](#)
 - image assignment
 - device assignment summary, viewing [5-3](#)
 - image assignment summary, viewing [5-6](#)
 - viewing [4-1](#)
 - SQL database [A-11](#)
 - SSL, enabling on the server
 - from the CiscoWorks Server [2-9](#)
 - from the CLI [2-10](#)
 - starting
 - ASDM [3-14](#)
 - AUS [2-6](#)
 - auto updates in AUS [3-12](#)
 - PDM [3-14](#)
 - System Administrator role and AUS privileges
 - Cisco Secure ACS [C-4](#)
 - CiscoWorks Server [C-3](#)
 - System Info report, viewing [6-1](#)
-
- ## T
- TACACS credentials
 - AUS and [3-7](#)
 - TMS [A-3](#)
 - Token Management Server
 - See TMS
 - Tomcat servlet engine [A-11](#)
 - transport protocol
 - AUS [A-5](#)
 - changing to AUS [A-5](#)
 - CNS [A-5](#)
 - TMS [A-5](#)
 - transport protocols
 - for discovery and deployment
 - using Add Device from Network option [A-11](#)
 - using Add new Device option [A-10](#)
 - troubleshooting
 - FAQs
 - adding a file that is not a PIX image, ASA image, ASDM file, or PDM file [B-6](#)

ASDM or ASA image files, errors when trying to add **B-6**

authentication errors **B-4**

browser access to **B-8**

buttons grayed-out **B-9**

configuration errors, handling **B-10**

configuration file, stopping a device from downloading **B-9**

connection between AUS and a security appliance, checking **B-10**

device has not contacted AUS **B-2**

device not appearing in the device summary **B-2**

device not current after auto update request **B-5**

device rebooting after assignment of a new image **B-8**

device repeatedly downloading the same file **B-8**

error messages, understanding **B-12**

failure to start after reboot **B-9**

image assigned to a device not appearing **B-7**

image files, assigning two of the same type **B-7**

PDM or PIX image files, errors when trying to add **B-6**

reports older than seven days not displayed **B-8**

Security Manager, uninstalling with devices still in AUS **B-9**

image file, missing references between devices and **4-4**

performance issues when requesting multiple devices contact AUS **3-12**

U

user interface, understanding **2-10**

 GUI **2-10**

 table elements **2-12**

username

 specifying

 for device to contact AUS **3-7**

user roles and AUS privileges

 Cisco Secure ACS roles, and **C-4**

 API Reader **C-5**

 API Writer **C-5**

 AUS Remote Interface **C-5**

 GUI Reader **C-5**

 GUI Writer **C-5**

 Help Desk **C-5**

 Network Administrator **C-4**

 Network Operator **C-4**

 System Administrator **C-4**

 table comparing **C-5**

 CiscoWorks Server roles, and **C-2**

 Approver **C-3**

 Help Desk **C-3**

 Network Administrator **C-3**

 Network Operator **C-3**

 System Administrator **C-3**

 table comparing **C-3**

defining, overview of [1-6](#)
using AUS to manage file assignments [5-1](#)

V

viewing

configuration files [4-4](#)

reports

CNS Devices report [6-12](#)

Detail Device Event report [6-12](#)

Event Failure Summary report [6-8](#)

Event Report [6-3](#)

Event Success Summary report [6-10](#)

Event Success Summary report,
viewing [6-10](#)

No Contact Since report [6-11](#)

System Info report [6-1](#)

troubleshooting [B-8](#)

software files [4-1](#)

VPN Acceleration Services Module [1-5](#)

See VPNSM

VPNSM [1-5](#)

W

Workflow mode

overview of [A-3](#)

