



## INDEX

- 
- A**
- AAA authentication
    - AUS and [3-7](#)
  - ACS roles, overview [1-4](#)
  - Adaptive Security Device Manager
    - See ASDM
  - adding
    - ASDM, PDM, or security appliance image files, troubleshooting [B-6](#)
    - devices
      - directly to AUS [3-6](#)
      - of auto update type to DCR [A-12](#)
      - that exist in DCR to Security Manager [A-12](#)
      - to Common Services, DCR [A-12](#)
      - to Security Manager [A-4](#)
    - software images [4-3](#)
  - administrative tasks [7-1](#)
  - NAT settings, specifying [7-1](#)
  - user roles and AUS permissions, understanding [1-6](#)
    - Cisco Secure ACS roles [C-4](#)
    - CiscoWorks Server roles [C-2](#)
  - Apache webserver [A-11](#)
  - API Reader role and AUS privileges [C-5](#)
  - API Writer role and AUS privileges [C-5](#)
  - Approver role and AUS privileges [C-3](#)
  - ASA configuration files
    - assigning
      - to a single device [5-4](#)
    - deleting [4-4](#)
    - viewing [4-4](#)
  - ASA devices
    - configuration files
      - viewing [4-4](#)
    - image files
      - adding [4-3](#)
      - deleting [4-4](#)
    - initial configuration of (bootstrapping) [D-1](#)
    - number supported [1-3](#)
  - ASA image files, troubleshooting
    - cannot add through the AUS GUI [B-6](#)
    - errors when trying to add [B-6](#)
  - ASA software images
    - assigning
      - to a single device [5-4](#)
      - to multiple devices [5-7](#)
    - deleting [4-4](#)

- ASDM **1-4**
  - browser launch, overview **1-4**
  - image files
    - adding, troubleshooting **B-6**
    - deleting **4-4**
    - updating **2-17**
  - launching
    - from AUS **3-14**
    - from Security Manager **3-14**
    - non-default HTTPS port number on the device **3-14**
- ASDM configuration files
  - assigning
    - to a single device **5-4**
    - to multiple devices **5-7**
- ASDM image files, troubleshooting
  - errors when trying to add **B-6**
- ASDM images
  - deleting **4-4**
- assigning devices to images, overview **1-3**
- assigning images to a device
  - multiple images **5-4**
  - one image **5-7**
  - overview **1-3**
  - Select Device Assignments for Image page elements (table) **5-8**
- audience for this document **1-ix**
- AUS (Auto Update Server)
  - managing from DCR
    - adding **A-15**
    - deleting **A-16**
    - editing **A-15**
- AUS database **1-6**
  - back up of **1-6**
- AUS Remote Interface role and privileges **C-5**
- authentication errors, troubleshooting **B-4**
- auto update
  - configuring a schedule **3-8**
  - scheduling **3-8**
- Auto Update Feature
  - overview **1-3**
  - using **3-12**
- Auto Update Immediate feature
  - auto update credentials, and **3-7**
  - HTTPS port number
    - changing from default **3-12**
    - restriction **3-12**
  - overview **1-5**
  - TACACS user name, and **3-7**
- auto update type
  - canceling a schedule **3-10**
- auto update types
  - any time **3-8**
  - daily **3-8**
  - never **3-8**
  - one time **3-8**
  - weekly **3-8**

**B**

## backup

- of AUS database [1-6](#)

bootstrapping devices to work with AUS [D-1](#)

- CNS devices [D-6](#)

- security appliances [D-1](#)

browser access to AUS, troubleshooting [B-8](#)

## browser-server security

- enabling on the server

- from the CiscoWorks Server GUI [2-9](#)

- from the CLI [2-10](#)

buttons grayed-out, troubleshooting [B-9](#)**C**

## canceling

- a scheduled auto update [3-10](#)

## cautions

- regarding

- ASDM and PDM image files, updating [2-17](#)

- ASDM launching [3-14](#)

- configuration files, deleting [4-4](#)

- deleting an image file assigned to multiple devices [4-4](#)

- device manager launching [3-14](#)

- PDM launching [3-14](#)

- security appliance image files, updating [2-17](#)

- simultaneous requests to a large number of devices to contact AUS [3-12](#)

## changing

- CNS bootstrap password in AUS [D-9](#)

- transport protocol

- to AUS [A-5](#)

- changing in AUS [D-9](#)

- Cisco Marketplace [1-xii](#)

- Cisco Press [1-xii](#)

- Cisco Product Quick Reference Guide, obtaining [1-xii](#)

- Cisco product security

- vulnerability policy portal [1-xii](#)

- Cisco Secure ACS roles and AUS privileges

- API Reader [C-5](#)

- API Writer [C-5](#)

- AUS Remote Interface [C-5](#)

- GUI Reader [C-5](#)

- GUI Writer [C-5](#)

- Help Desk [C-5](#)

- Network Administrator [C-4](#)

- Network Operator [C-4](#)

- table comparing [C-5](#)

- Cisco Security Management Suite home page

- opening

- normal mode (HTTP) [2-2](#)

- SSL-enabled mode (HTTPS) [2-2](#)

- Cisco Security Management Suite server

- logging into and exiting [2-3](#)

- Cisco Security Management Suite Server, logging in to [2-3](#)
- Cisco Security Manager
  - See Security Manager
- CiscoWorks Common Services
  - logging into and exiting [2-3](#)
- CiscoWorks desktop, logging in to [2-3](#)
- CiscoWorks home page
  - opening
    - normal mode (HTTP) [2-2](#)
    - SSL-enabled mode (HTTPS) [2-2](#)
- CiscoWorks Server roles, and AUS privileges [C-2](#)
  - Approver [C-3](#)
  - Help Desk [C-3](#)
  - Network Administrator [C-3](#)
  - Network Operator [C-3](#)
  - System Administrator [C-3](#)
  - table comparing [C-3](#)
- CNS bootstrap password [D-9](#)
- CNS devices
  - bootstrapping [D-6](#)
  - CNS Devices report, viewing [6-12](#)
- CNS Event Gateway feature
  - overview [1-3](#)
  - registering
    - using perl scripts [D-10](#)
  - Security Manager, and [D-6](#)
  - unregistering
    - using perl scripts [D-11](#)
- CNS services
  - configuring
    - on CNS devices [D-6](#)
- Common Services
  - and AUS interoperability
    - overview of [A-11](#)
  - components for AUS [A-11](#)
- Common Services, administering
  - daemon manager, using [2-9](#)
- Common Services Backup dialog box [1-6](#)
- Configuration Engine [A-3](#)
- configuration files
  - assigning
    - overview [1-4](#)
    - procedure [5-4, 5-7](#)
  - deleting
    - overview [1-4](#)
    - procedure [4-4](#)
  - updating [2-14](#)
  - viewing [4-4](#)
  - viewing, overview [1-4](#)
- configuring
  - AUS settings
    - after adding devices to Security Manager [A-7](#)
    - before adding devices to AUS or Security Manager [D-1](#)
    - on CNS devices [D-6](#)
  - auto update schedule [3-8](#)
  - CNS devices [D-6](#)

- CNS Event Gateway
    - using perl scripts [D-10](#)
  - security appliances [D-1](#)
  - security appliances to use AUS [A-2](#)
  - Security Manager and AUS
    - to communicate with PIX and ASA devices [A-2](#)
  - Security Manager to use AUS [A-3](#)
  - credentials
    - specifying
      - for device to authenticate AUS [3-7](#)
      - for device to contact AUS [3-7](#)
- 
- D**
  - daemon manager
    - restarting on Windows [2-9](#)
  - DCR [A-12](#)
    - adding, devices to [A-13](#)
    - and AUS credentials [A-14](#)
    - overview of [A-12](#)
  - DCR Administration
    - AUS management
      - adding devices [A-15](#)
      - deleting AUS [A-16](#)
      - editing devices [A-15](#)
  - deleting
    - ASDM image files [4-4](#)
    - AUS (Auto Update Server) [A-16](#)
    - configuration files [4-4](#)
    - devices
      - from AUS [3-11](#)
      - from Security Manager [3-11](#)
    - PDM image files [4-4](#)
    - security appliance image files [4-4](#)
  - deploying
    - AUS behind NAT
      - in enterprise DMZ [1-6](#)
      - in enterprise networks [1-6](#)
    - configurations
      - using non-Workflow mode [A-3](#)
      - using Workflow mode [A-3](#)
  - deployment job
    - configuring
      - Security Manager to use AUS [A-3](#)
  - Deployment Manager window [A-9](#)
    - and status of deployment [A-9](#)
  - deployment mechanism
    - overview of
      - for AUS-managed devices [A-8](#)
  - deployment method
    - and transport protocols [A-10](#), [A-11](#)
    - for IOS routers
      - added using Add Device from Network option [A-11](#)
    - for PIX and ASA devices
      - added using the Add New Device option [A-10](#)
  - Detail Device Event report, viewing [6-12](#)
  - Device Administration policy

- configuring AUS settings, using [A-7](#)
- Device and Credential Repository
  - See DCR
- device import
  - understanding [A-4](#)
- device manager, launching
  - from Security Manager [3-14](#)
  - HTTPS port number
    - changing from default value [3-14](#)
- devices
  - adding
    - directly to AUS [3-6](#)
    - from Security Manager [A-4](#)
  - AUS, viewing devices that have contacted [6-3](#)
  - bootstrapping to work with AUS [D-1](#)
    - CNS devices [D-6](#)
    - security appliances [D-1](#)
  - deleting [3-11](#)
  - device summaries
    - device not appearing in, troubleshooting [B-2](#)
    - summary element descriptions (table) [3-2](#)
    - viewing [3-1](#)
  - device support
    - adding directly to AUS, overview [1-3](#)
    - deleting from AUS, overview [1-4](#)
  - HTTPS port number
    - device manager, launching [3-14](#)
  - image assignments
    - caution regarding assignment to multiple devices [4-4](#)
    - Device Assignment Summary (table) [5-3](#)
    - summaries of, viewing in AUS [5-3](#)
  - initial configuration (bootstrapping) [D-1](#)
    - CNS devices [D-6](#)
    - security appliances [D-1](#)
  - IOS devices with dynamically assigned addresses, managing [1-3](#)
  - rebooting after assignment [B-8](#)
  - summary information on, viewing [3-1](#)
  - troubleshooting
    - downloading the same file repeatedly [B-8](#)
    - not appearing in device summaries [B-2](#)
    - not contacting AUS [B-2](#)
    - two images of the same type assigned [B-7](#)
- DHCP support feature [1-3](#)
- discovery
  - of a device [A-5](#)
- discovery mechanism
  - overview of
    - for AUS-managed devices [A-7](#)
- discovery method
  - and transport protocols [A-10](#), [A-11](#)
  - for IOS routers

added using Add Device from Network option [A-11](#)

for PIX and ASA devices

added using the Add New Device option [A-10](#)

## DMZ

AUS deployment and [1-6](#)

## documentation

audience for this [1-ix](#)

on Cisco.com [1-xii](#)

ordering [1-xii](#)

related to this product [1-xi](#)

specific to this product [1-x](#)

typographical conventions in [1-ix](#)

documentation feedback, sending to Cisco [1-xii](#)

---

## E

### editing

AUS (Auto Update Server) [A-15](#)

polling interval [3-9](#)

### enable password

specifying

for device to authenticate AUS [3-7](#)

error messages, understanding [B-12](#)

Event Failure Summary report, viewing [6-8](#)

Event report, viewing [6-3](#)

element descriptions (table) [6-4](#)

Event Type Descriptions (table) [6-6](#)

### exiting

Cisco Security Management Suite Server [2-3](#)

CiscoWorks Common Services [2-3](#)

---

## F

Firewall Services Module [1-5](#)

### FWSM

See Firewall Services Module

---

## G

getting started [2-1](#)

navigating in AUS [2-1](#)

CiscoWorks Login Window (figure) [2-6](#)

CiscoWorks server desktop (figure) [2-8](#)

logging in to the CiscoWorks desktop [2-3](#)

starting AUS [2-6](#)

GUI Reader role and AUS privileges [C-5](#)

GUI Writer role and AUS privileges [C-5](#)

---

## H

Help Desk role and AUS privileges

Cisco Secure ACS [C-5](#)

CiscoWorks Server [C-3](#)

HTTPS port number

changing from default

device manager, launching [3-14](#)

requesting auto update [3-12](#)

---

## I

image (file) management [1-3](#)

image assignments

summary information for, viewing [5-6](#)

to devices

Assign an Image to Devices (table) [5-8](#)

Device Assignment Summary  
(table) [5-3](#)

multiple images [5-4](#)

one image [5-7](#)

summary information, viewing [5-3](#)

troubleshooting

cannot apply two images of the same  
type [B-7](#)

devices not current after  
assignment [B-7](#)

IOS devices

and CNS Event Gateway [1-2](#)

managing

using additional event gateways [D-10](#)

---

## L

logging into

Cisco Security Management Suite [2-3](#)

---

## M

managed devices

bootstrapping [D-1](#)

list of [1-3](#)

modifying

polling interval

for AUS-device contact [3-9](#)

---

## N

NAT

and AUS deployment [1-6](#)

settings, specifying [7-1](#)

support feature [1-3](#)

navigating in AUS [2-1](#)

Network Administrator role and AUS  
privileges

Cisco Secure ACS [C-4](#)

CiscoWorks Server [C-3](#)

Networking Professionals Connection [1-xii](#)

Network Operator role and AUS privileges

Cisco Secure ACS [C-4](#)

CiscoWorks Server [C-3](#)

No Contact Since report, viewing [6-11](#)

non-Workflow mode

overview of [A-3](#)

**O**

overview of AUS [1-1](#)

- administrative tasks
  - NAT settings, specifying [7-1](#)
  - user roles and permissions, understanding [1-6](#)
- deploying AUS in your network [1-6](#)
- features in this release [1-3](#)
  - ACS roles consistent with CiscoWorks format [1-4](#)
  - ASDM browser launch [1-4](#)
  - ASDM file management [1-3](#)
  - Auto Update Feature [1-3](#)
  - backup of AUS database [1-6](#)
  - canceling an auto update [1-5](#)
  - configuration files, deleting [1-4](#)
  - device assignment to configuration files [1-4](#)
  - device assignment to images [1-3](#)
  - devices, adding directly in AUS [1-3](#)
  - devices, deleting [1-4](#)
  - DHCP support [1-3](#)
  - disabling auto updates [1-5](#)
  - image (file) management [1-3](#)
  - integration with Security Manager [1-5](#)
  - IOS devices, managing [1-3](#)
  - managed devices list [1-3](#)
  - NAT support [1-3](#)
  - PDM browser launch [1-4](#)

- PDM file management [1-3](#)
- reports [1-4](#)
- restore of AUS database [1-6](#)
- scheduling an auto update [1-5](#)
- security appliance configuration file assignment [1-3](#)
- security appliances, number supported [1-3](#)
- support for ASA [1-5](#)
- support for PIX software version 7.0 [1-5](#)

**P**

password

- changing for CNS services [D-9](#)
- specifying
  - for device to contact AUS [3-7](#)

PDM [1-4](#)

- browser launch, overview [1-4](#)
- image files
  - adding, troubleshooting [B-6](#)
  - deleting [4-4](#)
  - updating [2-17](#)
- launching
  - from AUS [3-14](#)
  - from Security Manager [3-14](#)
  - non-default HTTP port number on the device [3-14](#)

PDM configuration files

- assigning
    - to a single device [5-4](#)
    - to multiple devices [5-7](#)
  - PDM image files, troubleshooting
    - cannot add through the AUS GUI [B-6](#)
    - errors when trying to add [B-6](#)
  - PDM images
    - deleting [4-4](#)
  - peer support, Networking Professionals Connection [1-xii](#)
  - perl scripts
    - registering
      - additional event gateways [D-10](#)
      - supported releases of AUS [D-10](#)
    - unregistering
      - additional event gateways [D-11](#)
  - PIX configuration files
    - assigning
      - to a single device [5-4](#)
    - deleting [4-4](#)
    - viewing [4-4](#)
  - PIX Device Manager
    - See PDM
  - PIX image files, troubleshooting
    - cannot add through the AUS GUI [B-6](#)
    - errors when trying to add [B-6](#)
  - PIX security appliances
    - number supported [1-3](#)
    - See security appliances
  - PIX software images
    - assigning
      - to a single device [5-4](#)
      - to multiple devices [5-7](#)
    - deleting [4-4](#)
  - policies
    - assigning to device [A-4](#)
    - deploying [A-3](#)
    - discovery of [A-8](#)
  - policies, factory-default [A-7](#)
  - polling interval
    - default value [3-8](#)
    - for devices to contact AUS
      - modifying [3-9](#)
    - modifying
      - from Security Manager [3-9](#)
      - from the Device view [3-10](#)
      - from the Policy view [3-10](#)
      - on the device [D-3](#)
    - setting
      - on the device [D-3](#)
  - PSIRT [1-xii](#)
  - publications, obtaining additional [1-xii](#)
- 
- R**
- rebooting, cannot start AUS after, troubleshooting [B-9](#)
  - registering
    - CNS Event Gateway
      - configuring routers [D-10](#)

- using perl scripts [D-10](#)
  - reports
    - report types in this release [1-4](#)
    - viewing
      - CNS Devices report [6-12](#)
      - Detail Device Event report [6-12](#)
      - Event Failure Summary report [6-8](#)
      - Event report [6-3](#)
      - Event Success Summary report [6-10](#)
      - No Contact Since report [6-11](#)
      - System Info report [6-1](#)
      - troubleshooting reports [B-8](#)
  - restoring [1-6](#)
    - AUS database [1-6](#)
- 
- S**
- security
    - advisories [1-xii](#)
    - incidents, obtaining assistance [1-xii](#)
    - news from Cisco
      - registering to receive [1-xii](#)
      - RSS feed URL [1-xii](#)
    - notices [1-xii](#)
    - PSIRT [1-xii](#)
    - vulnerabilities, reporting [1-xii](#)
  - security, setting up
    - SSL
      - enabling from the CiscoWorks Server [2-9](#)
      - enabling from the CLI [2-10](#)
  - security appliances [4-4](#)
    - configuration files
      - viewing [4-4](#)
    - image files
      - adding [4-3](#)
      - deleting [4-4](#)
      - updating [2-17](#)
    - initial configuration of (bootstrapping) [D-1](#)
    - number supported [1-3](#)
  - Security Manager [A-2](#)
    - additional CNS Event Gateways [D-10](#)
    - and CNS Event Gateway feature [D-6](#)
    - configuration
      - for using AUS [A-2](#)
    - device manager, launching [3-14](#)
    - interoperation with AUS [1-5](#)
    - overview of [A-1](#)
    - unregistering CNS Event Gateways [D-11](#)
  - Security Manager menu options
    - not supported for AUS-managed devices
      - Add Device from Config File [A-5](#)
      - Add Device from Network [A-5](#)
    - supported for AUS-managed devices
      - Add Device from DCR [A-5](#)
      - Add New Device [A-5](#)
  - service requests
    - submitting [1-xii](#)
  - software files, managing [4-1](#)

- adding [4-3](#)
- deleting [4-4](#)
- image assignment
  - device assignment summary, viewing [5-3](#)
  - image assignment summary, viewing [5-6](#)
- viewing [4-1](#)
- SQL database [A-11](#)
- SSL, enabling on the server
  - from the CiscoWorks Server [2-9](#)
  - from the CLI [2-10](#)
- starting
  - ASDM [3-14](#)
  - AUS [2-6](#)
  - auto updates in AUS [3-12](#)
  - PDM [3-14](#)
- support
  - Networking Professionals Connection [1-xii](#)
  - obtaining from Cisco [1-xii](#)
- System Administrator role and AUS privileges
  - Cisco Secure ACS [C-4](#)
  - CiscoWorks Server [C-3](#)
- System Info report, viewing [6-1](#)

---

## T

- TACACS credentials
  - AUS and [3-7](#)

- technical support (TAC)
  - obtaining [1-xii](#)
  - URL for service requests [1-xii](#)
- TMS [A-3](#)
- Token Management Server
  - See TMS
- Tomcat servlet engine [A-11](#)
- training, obtaining [1-xii](#)
- transport protocol
  - AUS [A-5](#)
  - changing to AUS [A-5](#)
  - CNS [A-5](#)
  - TMS [A-5](#)
- transport protocols
  - for discovery and deployment
    - using Add Device from Network option [A-11](#)
    - using Add new Device option [A-10](#)
- troubleshooting
  - FAQs
    - adding a file that is not a PIX image, ASA image, ASDM file, or PDM file [B-6](#)
    - ASDM or ASA image files, errors when trying to add [B-6](#)
    - authentication errors [B-4](#)
    - browser access to [B-8](#)
    - buttons grayed-out [B-9](#)
    - configuration errors, handling [B-10](#)
    - configuration file, stopping a device from downloading [B-9](#)

- connection between AUS and a security appliance, checking **B-10**
  - device has not contacted AUS **B-2**
  - device not appearing in the device summary **B-2**
  - device not current after auto update request **B-5**
  - device rebooting after assignment of a new image **B-8**
  - device repeatedly downloading the same file **B-8**
  - error messages, understanding **B-12**
  - failure to start after reboot **B-9**
  - image assigned to a device not appearing **B-7**
  - image files, assigning two of the same type **B-7**
  - PDM or PIX image files, errors when trying to add **B-6**
  - reports older than seven days not displayed **B-8**
  - Security Manager, uninstalling with devices still in AUS **B-9**
  - image file, missing references between devices and **4-4**
  - performance issues when requesting multiple devices contact AUS **3-12**
  - typographical conventions used in this document **1-ix**
- 
- U**
- unregistering
    - CNS Event Gateway
      - using perl scripts **D-11**
    - user interface, understanding **2-10**
    - GUI **2-10**
    - table elements **2-13**
    - username
      - specifying
        - for device to contact AUS **3-7**
    - user roles and AUS privileges
      - Cisco Secure ACS roles, and **C-4**
        - API Reader **C-5**
        - API Writer **C-5**
        - AUS Remote Interface **C-5**
        - GUI Reader **C-5**
        - GUI Writer **C-5**
        - Help Desk **C-5**
        - Network Administrator **C-4**
        - Network Operator **C-4**
        - System Administrator **C-4**
        - table comparing **C-5**
      - CiscoWorks Server roles, and **C-2**
        - Approver **C-3**
        - Help Desk **C-3**
        - Network Administrator **C-3**
        - Network Operator **C-3**
        - System Administrator **C-3**
        - table comparing **C-3**
      - defining, overview of **1-6**
      - using AUS to manage file assignments **5-1**

---

## V

### viewing

configuration files [4-4](#)

#### reports

CNS Devices report [6-12](#)

Detail Device Event report [6-12](#)

Event Failure Summary report [6-8](#)

Event Report [6-3](#)

Event Success Summary report [6-10](#)

Event Success Summary report,  
viewing [6-10](#)

No Contact Since report [6-11](#)

System Info report [6-1](#)

troubleshooting [B-8](#)

software files [4-1](#)

VPN Acceleration Services Module [1-5](#)

See VPNSM

VPNSM [1-5](#)

---

## W

### Workflow mode

overview of [A-3](#)