



# INDEX

---

## A

- AC power [3-8](#)
  - connecting to [4-9](#)
- alert
  - hard drive [5-11](#)
- appliance
  - turning on power [4-10](#)
- Appliance Recovery DVD [3-10](#)

---

## B

- beep code [5-22](#)

---

## C

- cables
  - Cat 5 crossover [3-10](#)
  - connect order [4-10](#)
  - serial [3-10](#)
  - telephone [3-10](#)
- cabling [3-8](#)
  - connecting a console [4-10](#)
  - connecting during installation [4-10](#)
- cautions
  - significance of [i-viii](#)
- cords
  - connect order [4-10](#)
  - power [3-10](#)
- creating a safe environment [3-7](#)

---

## D

- diagnostics
  - beep codes [5-22](#)
- documentation
  - related to this product [i-xiii](#)
  - typographical conventions in [i-viii](#)
- DVD [3-10](#)

---

## E

- electrostatic discharge
  - protecting against [3-5](#)
- Ethernet connectors [1-24, 2-11](#)

---

## F

- filter
  - modem [3-8, 4-10, 5-22](#)

---

## H

- hard drive
  - failure alert [5-11](#)
  - hotswap procedure for MARS 55, 110R, 110, 210, GC2R, and GC2 [5-16](#)
  - raidstatus command [5-10](#)
  - replacing in carrier [5-20](#)
  - slot number diagram, MARS 55, 110R, 110, 210, GC2R, and GC2 [5-15](#)
- hardware
  - Cat 5 crossover cable [3-10](#)
  - status [4-11](#)
- hardware maintenance

MARS 100, 100E, 200, GCM, GC [5-1, 6-1](#)

MARS 55, 110, 110R, 210, GC2R, GC2 [5-8](#)

## hotswap

hard drives [5-10](#)

power supply [5-21](#)

procedure for MARS 55, 110R, 110, 210, GC2R, and GC2 [5-16](#)

humidity, operating [1-4, 1-6, 3-6](#)

## I

### installation

cables, connecting [4-10](#)

creating a safe environment [3-7](#)

installing in a rack [4-2](#)

network, setting up [3-9](#)

power source, connecting to [4-10](#)

precautions for rack-mounting [3-8](#)

preparation [3-1](#)

preparing for

LAN options, precautions for [3-9](#)

modems, precautions for [3-9](#)

telecommunications, precautions for [3-9](#)

safety [3-1](#)

site preparation [3-5](#)

tools and equipment required [3-9](#)

## L

### LAN options

precautions for [3-9](#)

### license key

locating on chassis [2-2](#)

## M

### Modems

line impedance matching filter [3-8, 4-10, 5-22](#)

### modems

precautions for [3-9](#)

## O

### operating ranges

environmentals [3-6](#)

## P

### packaging

contents [3-9](#)

personnel qualifications warning [i-vii](#)

personnel training warning [i-vii](#)

power cords [3-10](#)

powering up [4-10](#)

## R

### rack-mounting

precautions for [3-8](#)

rack rails [3-10](#)

### rail kit

AXXBASICRAIL13 [4-2](#)

AXXHERAIL2 [4-2](#)

### rail-kit

two-post installation [4-2](#)

## S

### safety

electrostatic discharge [3-5](#)

general precautions [3-3](#)

installation [3-1](#)

preventing EMI [3-5](#)

warnings and cautions [3-1](#)

with electricity [3-4](#)

serial cable [3-10](#)

site preparation [3-5](#)

---

**T**

- telecommunications, precautions for [3-9](#)
- telephone cable [3-10](#)
- temperature, operating [1-4, 1-6, 2-4, 3-6](#)
- turning on
  - appliance [4-10](#)
- typographical conventions in this document [i-viii](#)

---

**W**

- warnings
  - regarding
    - batteries and explosion danger [3-3](#)
    - chassis, opening [3-3](#)
    - chassis, working on [3-2](#)
    - disposal of unit [3-3](#)
    - explosion [3-3](#)
    - faceplates and cover panels, removing [3-3](#)
    - ground conductor, defeating [3-3, 3-7](#)
    - installation area [3-7](#)
    - instructions, reading [3-2](#)
    - lightning activity [3-2, 4-10](#)
    - On/Off switch [3-2](#)
    - power cords, more than one [3-2](#)
    - rack-mounting equipment [3-2, 3-8](#)
    - safety cover [3-2](#)
    - short circuits [3-3, 3-8](#)
    - training and qualifications of personnel working on unit [i-vii](#)
- translations of [3-2](#)

